

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Magnetic Clutch	90980-11271	C 2	Cigarette Lighter	90980-10760
A 3	Alternator	90980-09373	C 3	Combination Meter	90980-11114
A 4	Automatic Door Control ECU (Gliding Door Type)	90980-10897	C 4	Combination Meter	90980-11113
A 5	Automatic Door Control ECU (Gliding Door Type)	90980-11022	C 5	Combination Meter	90980-11115
A 7	A/C Amplifier	90980-10801	C 6	Combination SW	90980-11224
A 8	A/C Control SW	90980-10807	C 7	Combination SW	90980-11225
A14	Air Cleaner Warning Sensor	90980-11025	C 8	Center Door Courtesy SW (Folding Type)	90980-11146
A15	Automatic Door Control SW	90980-11013	C 9	Center Door Courtesy SW Front (Gliding Door Type)	90980-11189
A17	A/C Condenser Fan Motor No.1	90980-10928	C10	Center Door Courtesy SW Rear (Gliding Door Type)	90980-11146
A18	A/C Condenser Fan Motor No.2		C11	Clock	90980-10795
A20	A/C Dual Pressure SW	90980-10943	C17	Crankshaft Position Sensor (2TR-FE)	90980-11016
A21	A/C Thermistor	90980-10498		Crankshaft Position Sensor (N04C-TY)	90980-11162
A22	Air Inlet Control Servo Motor	90980-10399	C18	Center Side Marker Light LH	90980-11149
A23	Air Vent Mode Control Servo Motor	90980-10825	C19	Center Side Marker Light RH	
A24	Automatic Door Control ECU (Folding Door Type)	90980-11240	C20	Camshaft Position Sensor	90980-11143
A28	Automatic Door Warning Buzzer	90980-10887	C21	Camshaft Position Sensor	90980-10947
A31	ABS Speed Sensor Front LH	90980-11075	C22	Camshaft Timing Oil Control Valve	90980-11162
A32	ABS Speed Sensor Front RH		C23	Clearance Light (LH)	90980-11290
A33	ABS Actuator	90980-11698		Front Turn Signal Light (LH)	
A34	ABS Actuator	90980-11413		Headlight (LH)	
A41	ABS Speed Sensor Rear	90980-10942	C24	Clearance Light (RH)	
A44	ABS ECU	90980-11390		Front Turn Signal Light (RH)	
A45	ABS ECU	90980-11391		Headlight (RH)	
A46	ABS ECU	90980-11408	D 8	Diode (Step Light)	90980-11071
A47	ABS ECU	90980-11392	D10	Door Lock Opener Motor	90980-10795
A48	Alternator	90980-11964	D18	Diode (Surge)	90980-10962
A49	Air Flow Meter	90980-12292	D19	DLC3	90080-98012
A50	Air Fuel Ratio Sensor (Bank1 Sensor1)	90980-10869	D20	Diode (DMLP)	90980-11071
A51	Accel Position Sensor	90980-11232	E 2	Engine Oil Level Sensor	90980-11235
B 1	Back-Up Light SW	90980-11250	E18	EFI Water Temp. Sensor	90980-10735
B 3	Brake Oil Level SW	90980-10825	E29	Engine ECU	90980-12529
B 4	Brake Vacuum Warning Buzzer		E30	Engine ECU	90980-12525
B 8	Blower Mode Relay No.1	90980-10171	E31	Engine ECU	90980-12527
B 9	Blower Mode Relay No.1		E32	Engine ECU	90980-12528
B10	Blower Mode Relay No.2		E33	Engine ECU	90980-12529
B11	Blower Mode Relay No.2		E34	Engine ECU	90980-12525
B12	Blower Mode Relay No.3		E35	Engine ECU	90980-12527
B13	Blower Mode Relay No.3		E36	Engine ECU	90980-12528
B14	Blower Motor No.1	90980-10214	E37	Exhaust Neutral SW	90980-11142
B15	Blower Motor No.2		E38	EDU	90980-11593
B16	Blower Motor No.3		E39	EDU	90980-11592
B17	Blower Resistor No.1	90980-10171	E40	Exhaust Brake Clutch SW	90980-10906
B18	Blower Resistor No.2		E41	Exhaust Brake Retarder Solenoid	90980-10887
B19	Blower Resistor No.3		F 3	Front Heater	90980-10214

Note: Not all of the above part numbers of the connector are established for the supply.

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
F 4	Front Heater Blower Resistor	90980-10173	J17	Junction Connector	90980-11542
F 7	Front Washer Motor	90980-10214	J18	Junction Connector	
F 8	Front Wiper Motor	90980-10173	K 1	Knock Sensor	90980-11875
F10	Fuel Sedimentary Warning Buzzer	90980-10056	L 1	License Plate Light (Luggage Room Type)	90980-11148
F11	Front Speaker LH	90980-10935	L 2	License Plate Light LH (Double-Leaf Door Type)	90980-10825
F12	Front Speaker RH		L 3	License Plate Light RH (Double-Leaf Door Type)	
F15	Fuel Sender	90980-11245	L 5	Light Failure Relay (2TR-FE)	90980-10848
F16	Fuse Block	—		Light Failure Relay (N04C-TY)	90980-10799
F20	Front Fog Light LH	82824-60460	L 6	Lamp Cut SW	90980-10860
F21	Front Fog Light RH		M 2	Max Warm SW	90980-10825
F23	Fuel Pump	90980-11410	M 3	Master Cylinder Pressure Sensor	90980-10845
F24	Front Side Marker Light LH	90980-11149	M 4	Microphone Amplifier Assembly	90980-10996
F25	Front Side Marker Light RH		M 5	Microphone Amplifier Assembly	90980-10997
F27	Fuel Sedimentary SW	90980-11003	N 1	Noise Filter (Ignition)	90980-10843
F28	Fuel Temp. Sensor	90980-10737	O 1	Oil Pressure SW	90980-11156
F29	Fuel Pressure Sensor	90980-10845	O 5	Oil Pressure SW	90980-11363
F30	Fuel Filter Clog Sensor	90980-12416	O 6	Oxygen Sensor (Bank1 Sensor2)	90980-11028
G 7	Glow Plug Relay	90980-11569	P 1	Parking Brake SW (2TR-FE)	90980-10860
G 8	Glow Plug	90980-11184		Parking Brake SW (N04C-TY)	90980-10795
H 1	Hazard SW	90980-10801	P 7	Power Steering Oil Pressure SW	90980-11428
H 6	Heater Blower SW	90980-10714	R 2	Rear Heater SW	90980-10463
H 7	Horn	90980-10619	R 3	Rear Window Defogger SW	90980-10797
H 8	Heater Pump	90980-11410	R 5	Room Light SW No.1	
H 9	High Mounted Stop Light	90980-11159	R 6	Room Light SW No.2	90980-10799
H11	Horn	90980-10619	R 7	Rear Combination Light LH	90980-11011
I 3	Ignition SW	90980-10873	R 8	Rear Combination Light RH	
I 9	Injector No.1	90980-11875	R 9	Rear Heater Motor No.1	90980-11022
I10	Injector No.2		R10	Rear Heater Motor No.2	
I11	Injector No.3		R11	Rear Speaker LH	90980-10935
I12	Injector No.4		R12	Rear Spesker RH	
I13	Intake Air Temp. Sensor	90980-11025	R13	Rear Washer Motor	90980-10980
I15	Ignition Coil No.1	90980-11885	R14	Rear Window Defogger (Except Luggage Room Type)	—
I16	Ignition Coil No.2			Rear Window Defogger (Luggage Room Type)	90980-09042
I17	Ignition Coil No.3		R15	Rear Window Defogger (Except Luggage Room Type)	—
I18	Ignition Coil No.4			Rear Window Defogger (Luggage Room Type)	90980-09042
I19	ISC Valve	90980-10695	R16	Rear Wiper Motor	90980-10795
I20	Injector No.1	90980-11875	R17	Rear Wiper Relay	90980-10173
I21	Injector No.2		R18	Reverse Warning Buzzer	90980-10887
I22	Injector No.3		R19	Room Light No.1	90980-10906
I23	Injector No.4		R20	Room Light No.2 (Fluorescent Light Type)	90980-11013
J 7	Junction Connector	90980-11398		Room Light No.2 (Incandescent Light Type)	90980-10906
J 8	Junction Connector	90980-11398	R21	Room Light No.3	
J10	Junction Connector				
J11	Junction Connector				
J12	Junction Connector		90980-11720		
J13	Junction Connector	90980-10799			

Note: Not all of the above part numbers of the connector are established for the supply.

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
R22	Rear Fog Light SW	90980-11533	S17	Side Turn Light LH	90980-10825
R23	Rear Side Marker Light LH	90980-11149	S18	Side Turn Light RH	
R24	Rear Side Marker Light RH		S19	Suction Control Valve No.1	90980-10720
R25	Radio and Player	90980-10996	T 1	Throttle Position Sensor (2TR-FE)	90980-11858
R26	Radio and Player	90980-10997		Throttle Position Sensor (N04C-TY)	90980-11261
S 1	Speed Sensor (Combination Meter)	90980-11143	T 4	Turbo Pressure Sensor	90980-10845
S 3	Starter (2TR-FE)	90980-11400	V 1	Vacuum SW	90980-11252
	Starter (N04C-TY)	90980-11184	V 2	Vacuum SW	99141-11006
S 4	Starter (2TR-FE)	90980-09552	V13	Vacuum Sensor 1 (Brake)	90980-10845
	Starter (N04C-TY)	90980-09A61	V14	Vacuum Sensor 2 (Brake)	
S 6	Step Light	90980-11142	V17	VSV (EVAP)	90980-11156
S10	Stop Light SW	90980-11118	W 6	Water Temp. Sensor	90980-11016

Note: Not all of the above part numbers of the connector are established for the supply.