

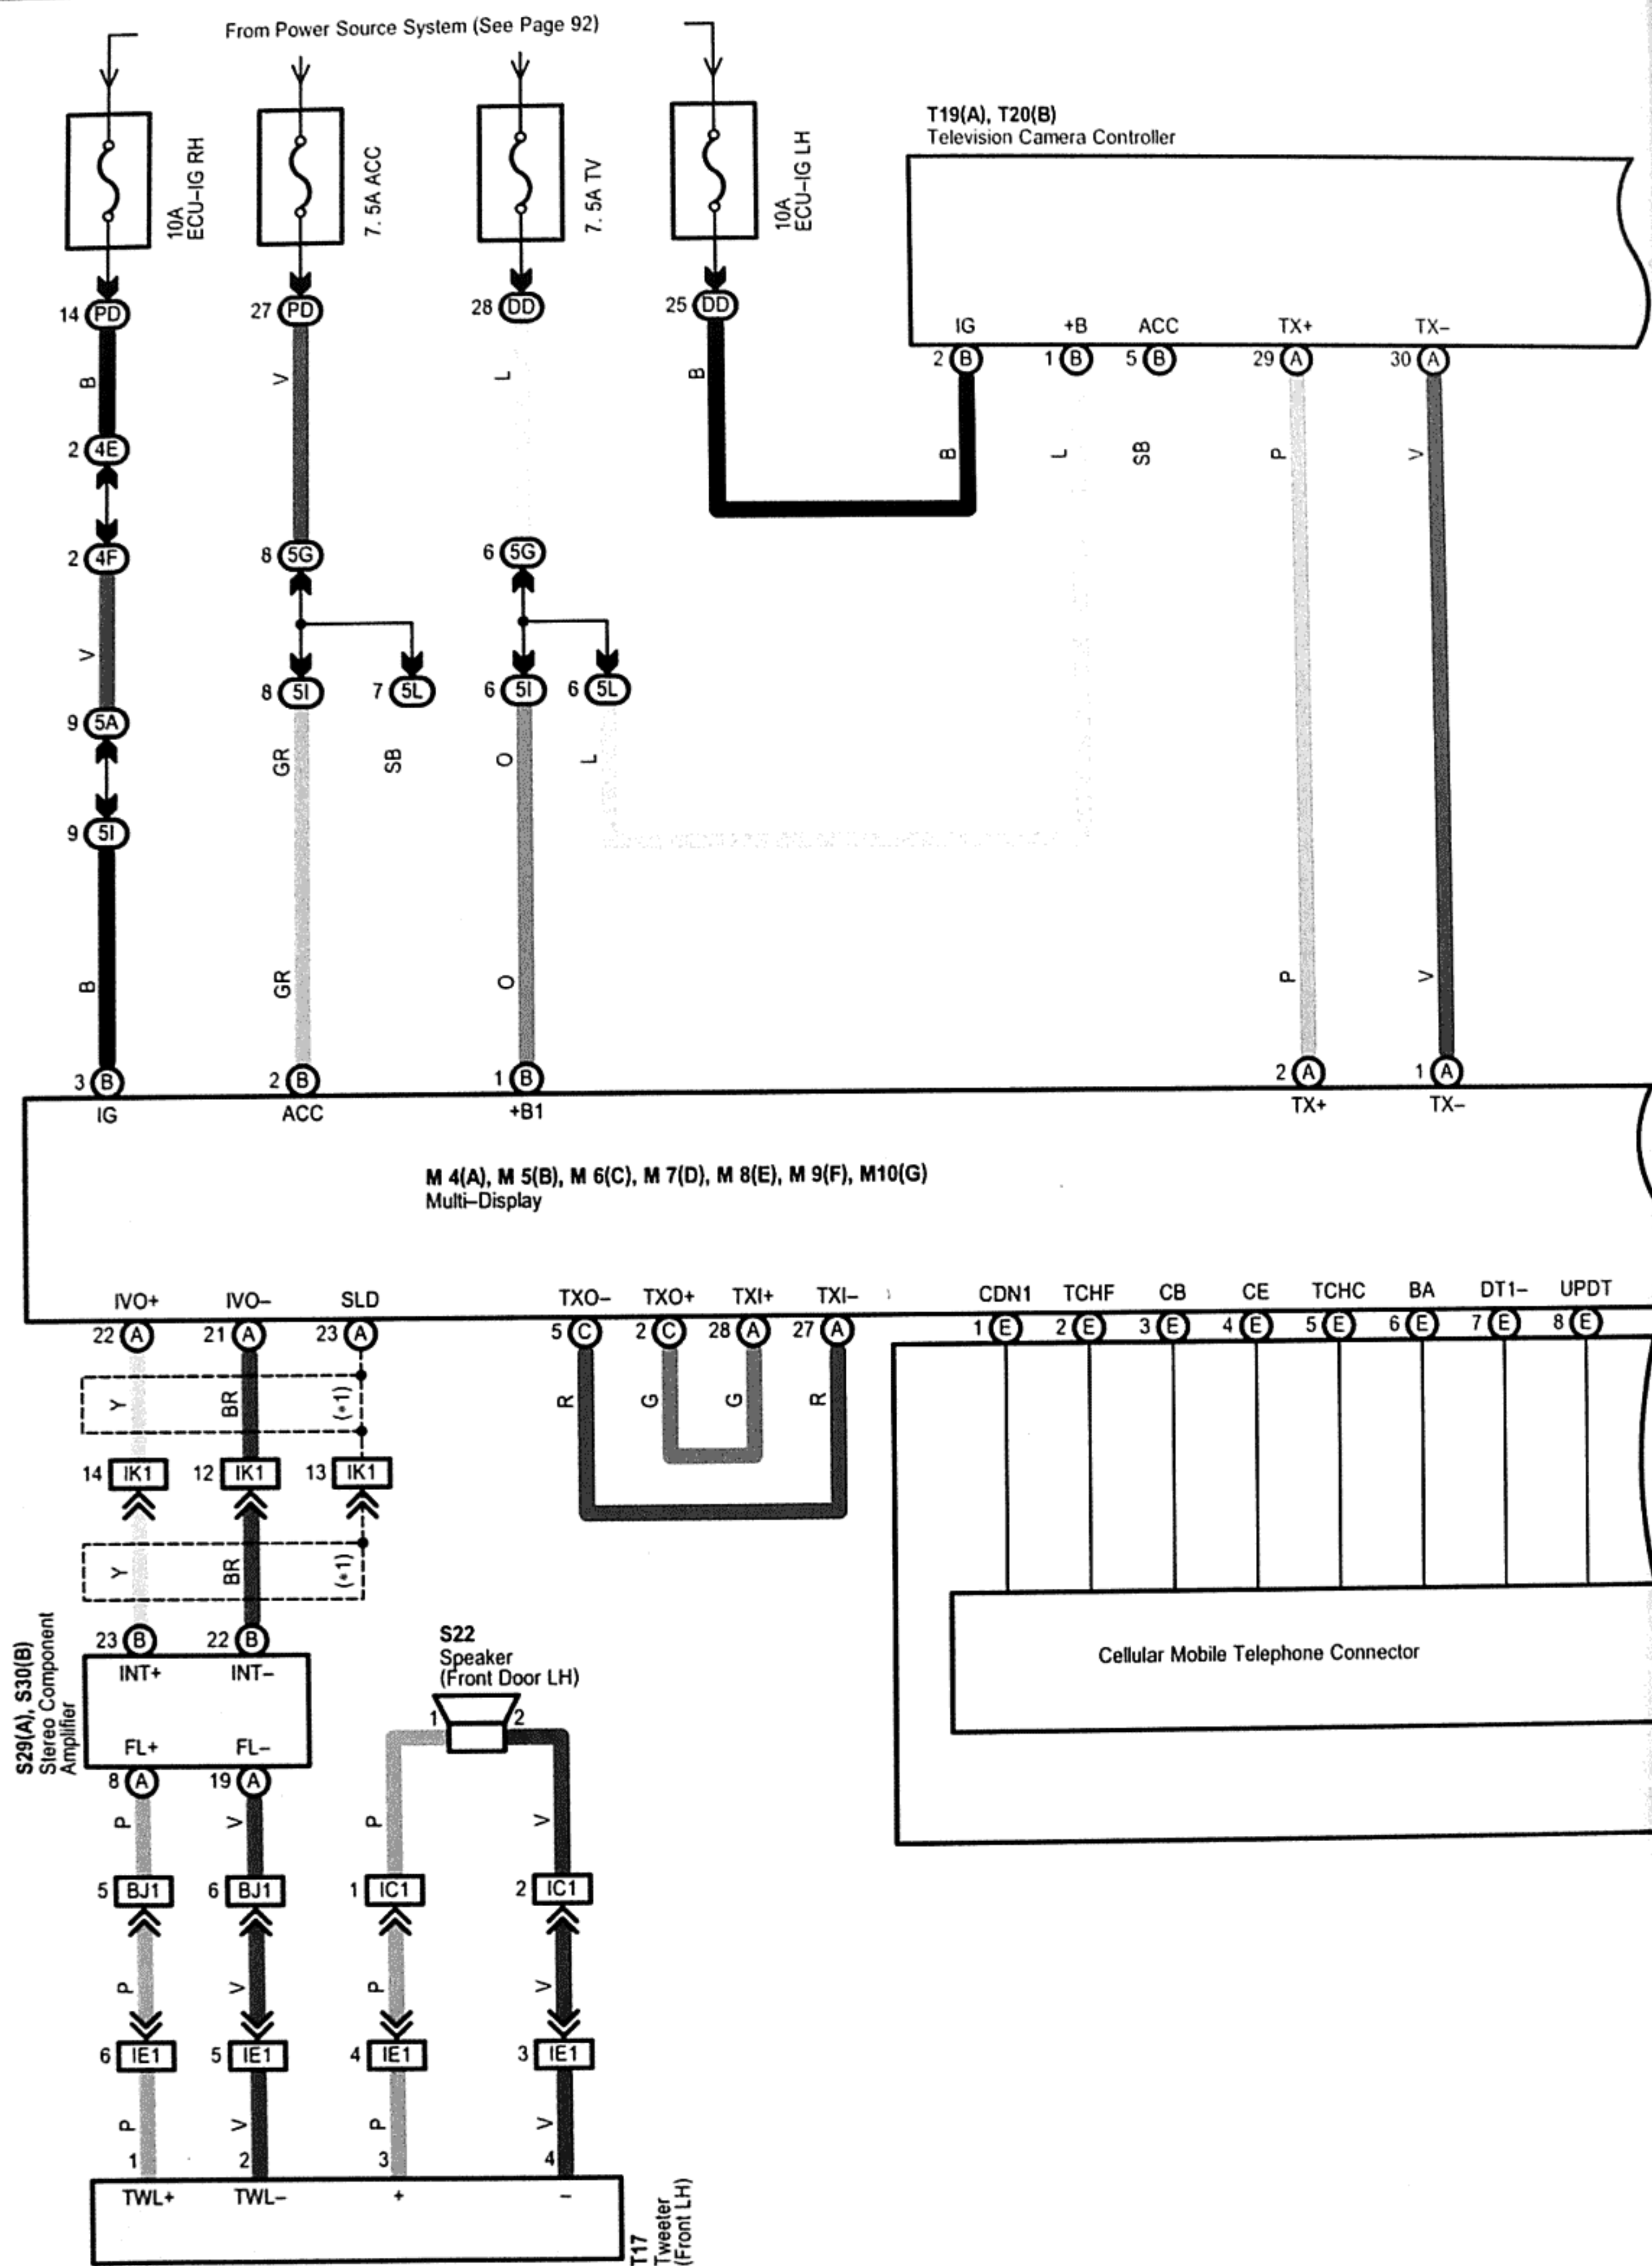


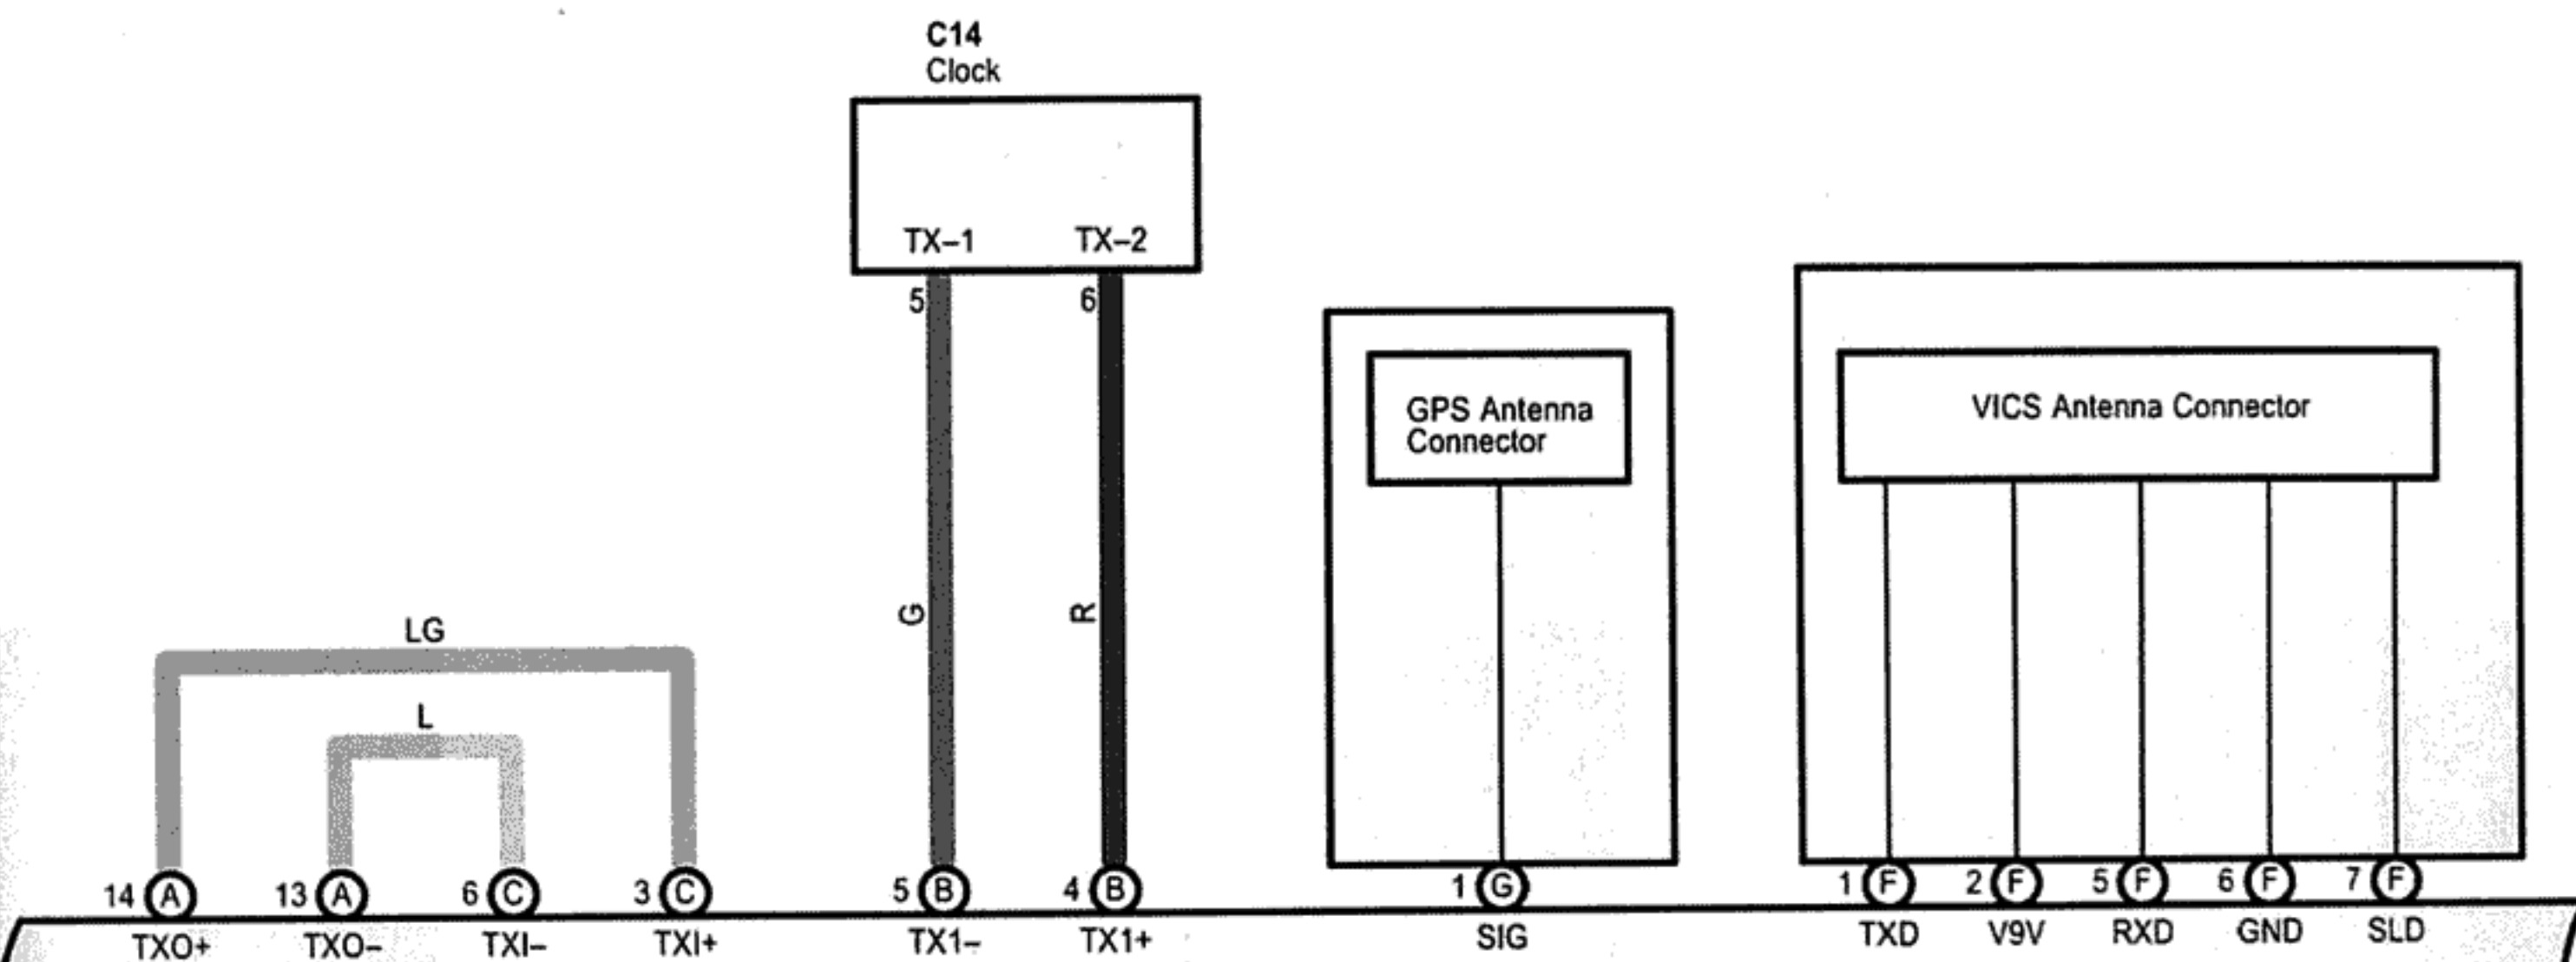


• 1 : Shielded


T19(A), T20(B)
Television Camera Controller

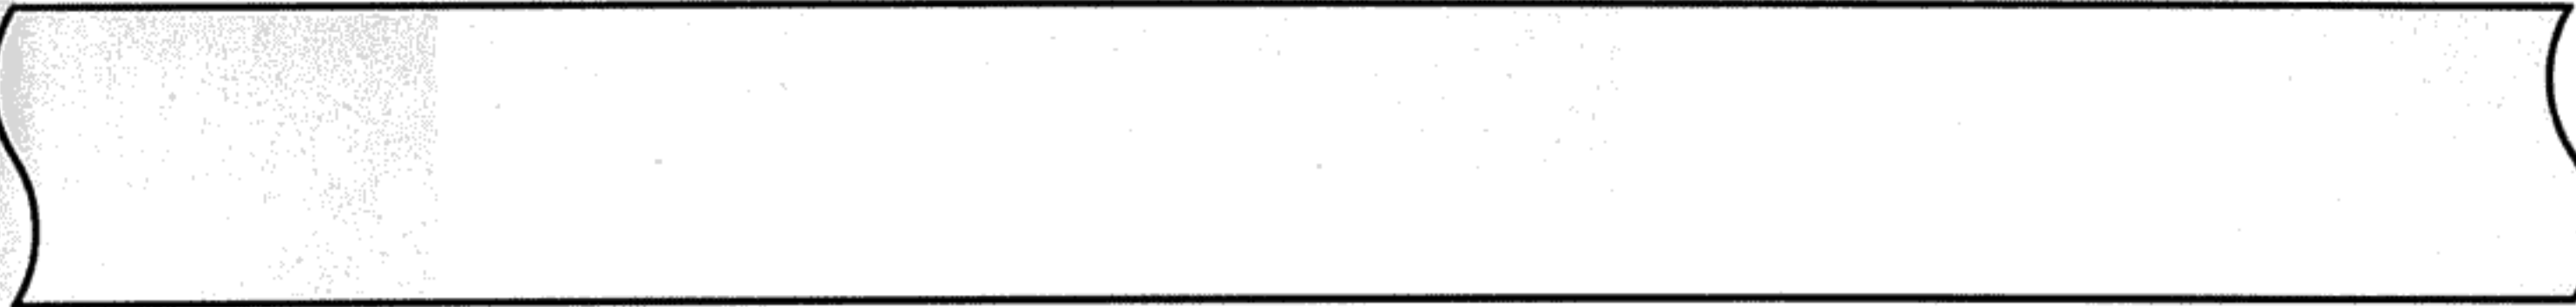


M 4(A), M 5(B), M 6(C), M 7(D), M 8(E), M 9(F), M10(G)
Multi-Display

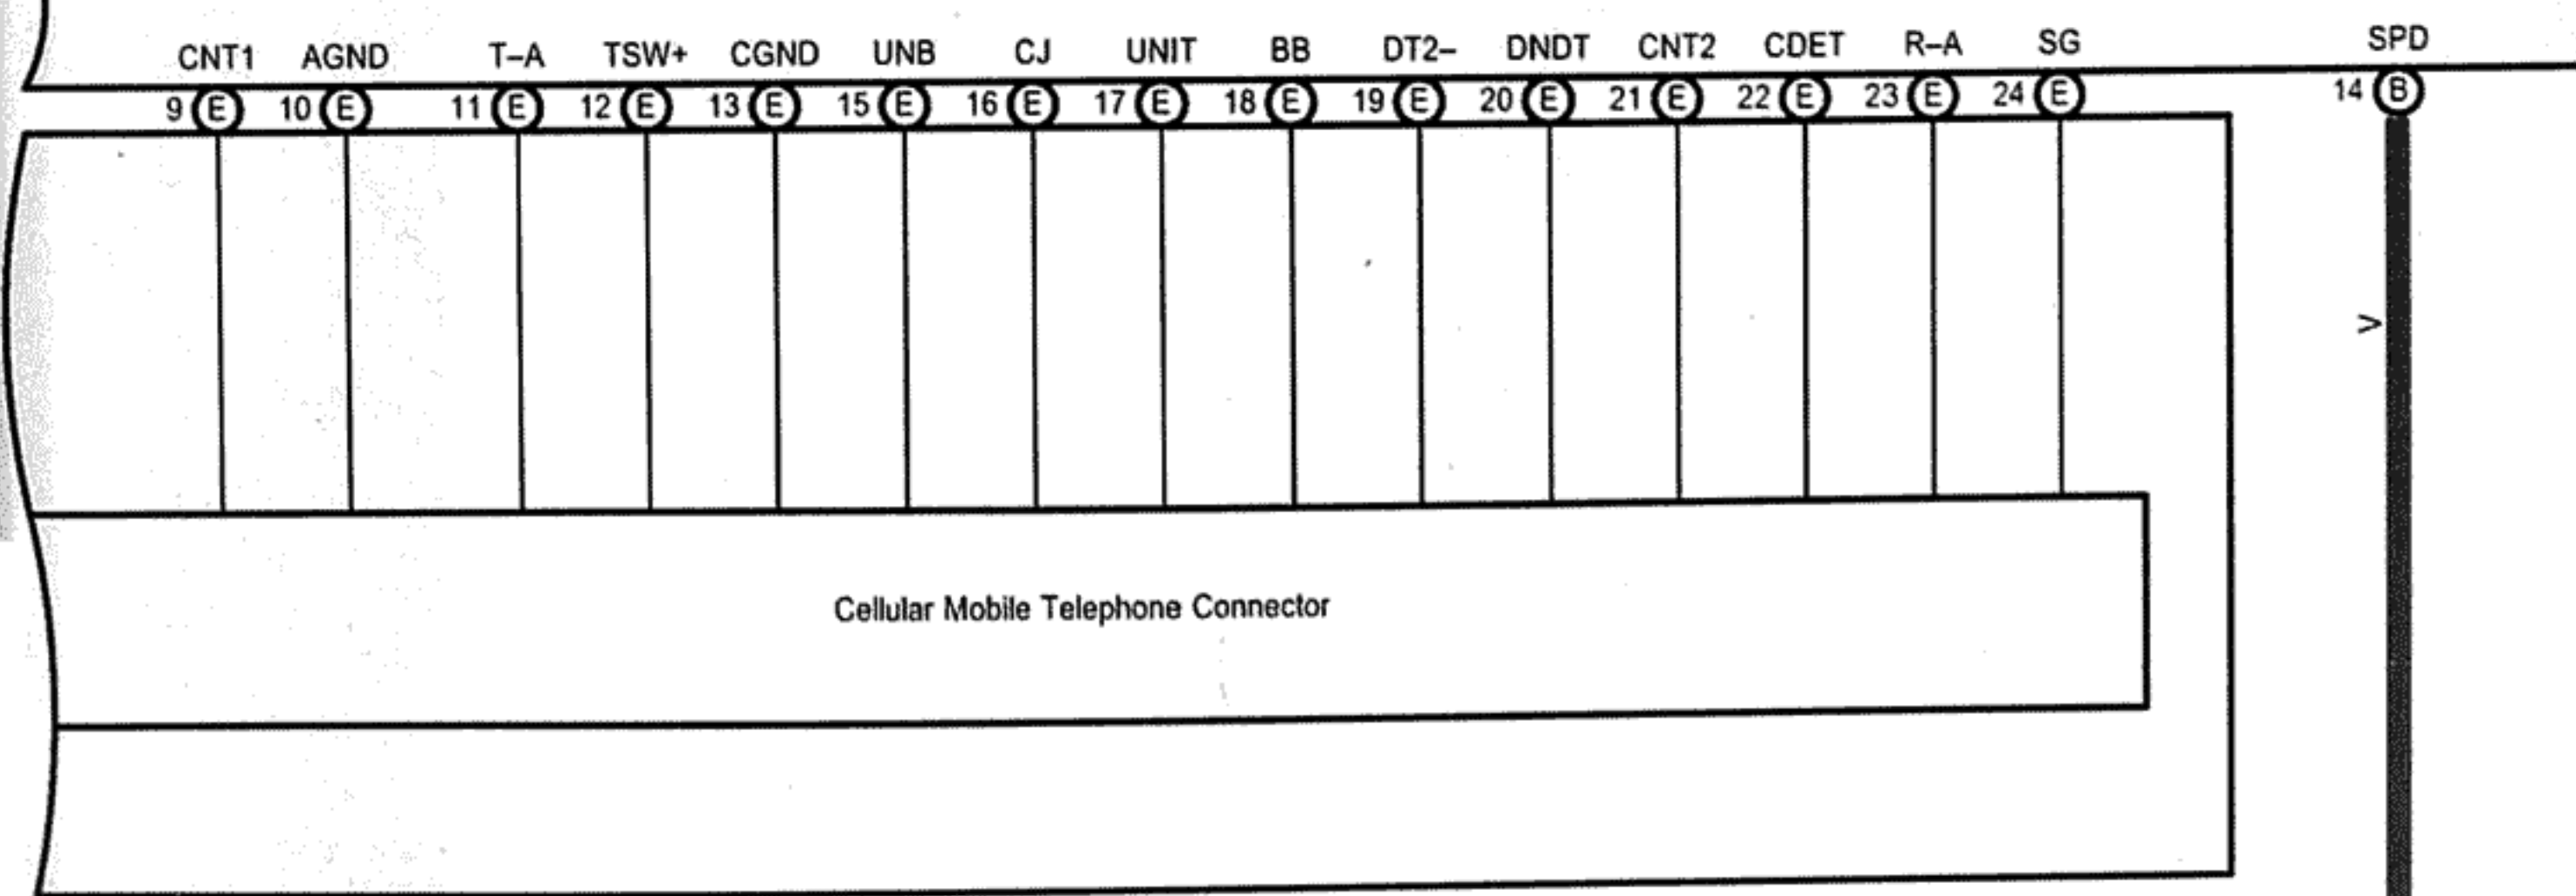

* 1 : Shielded

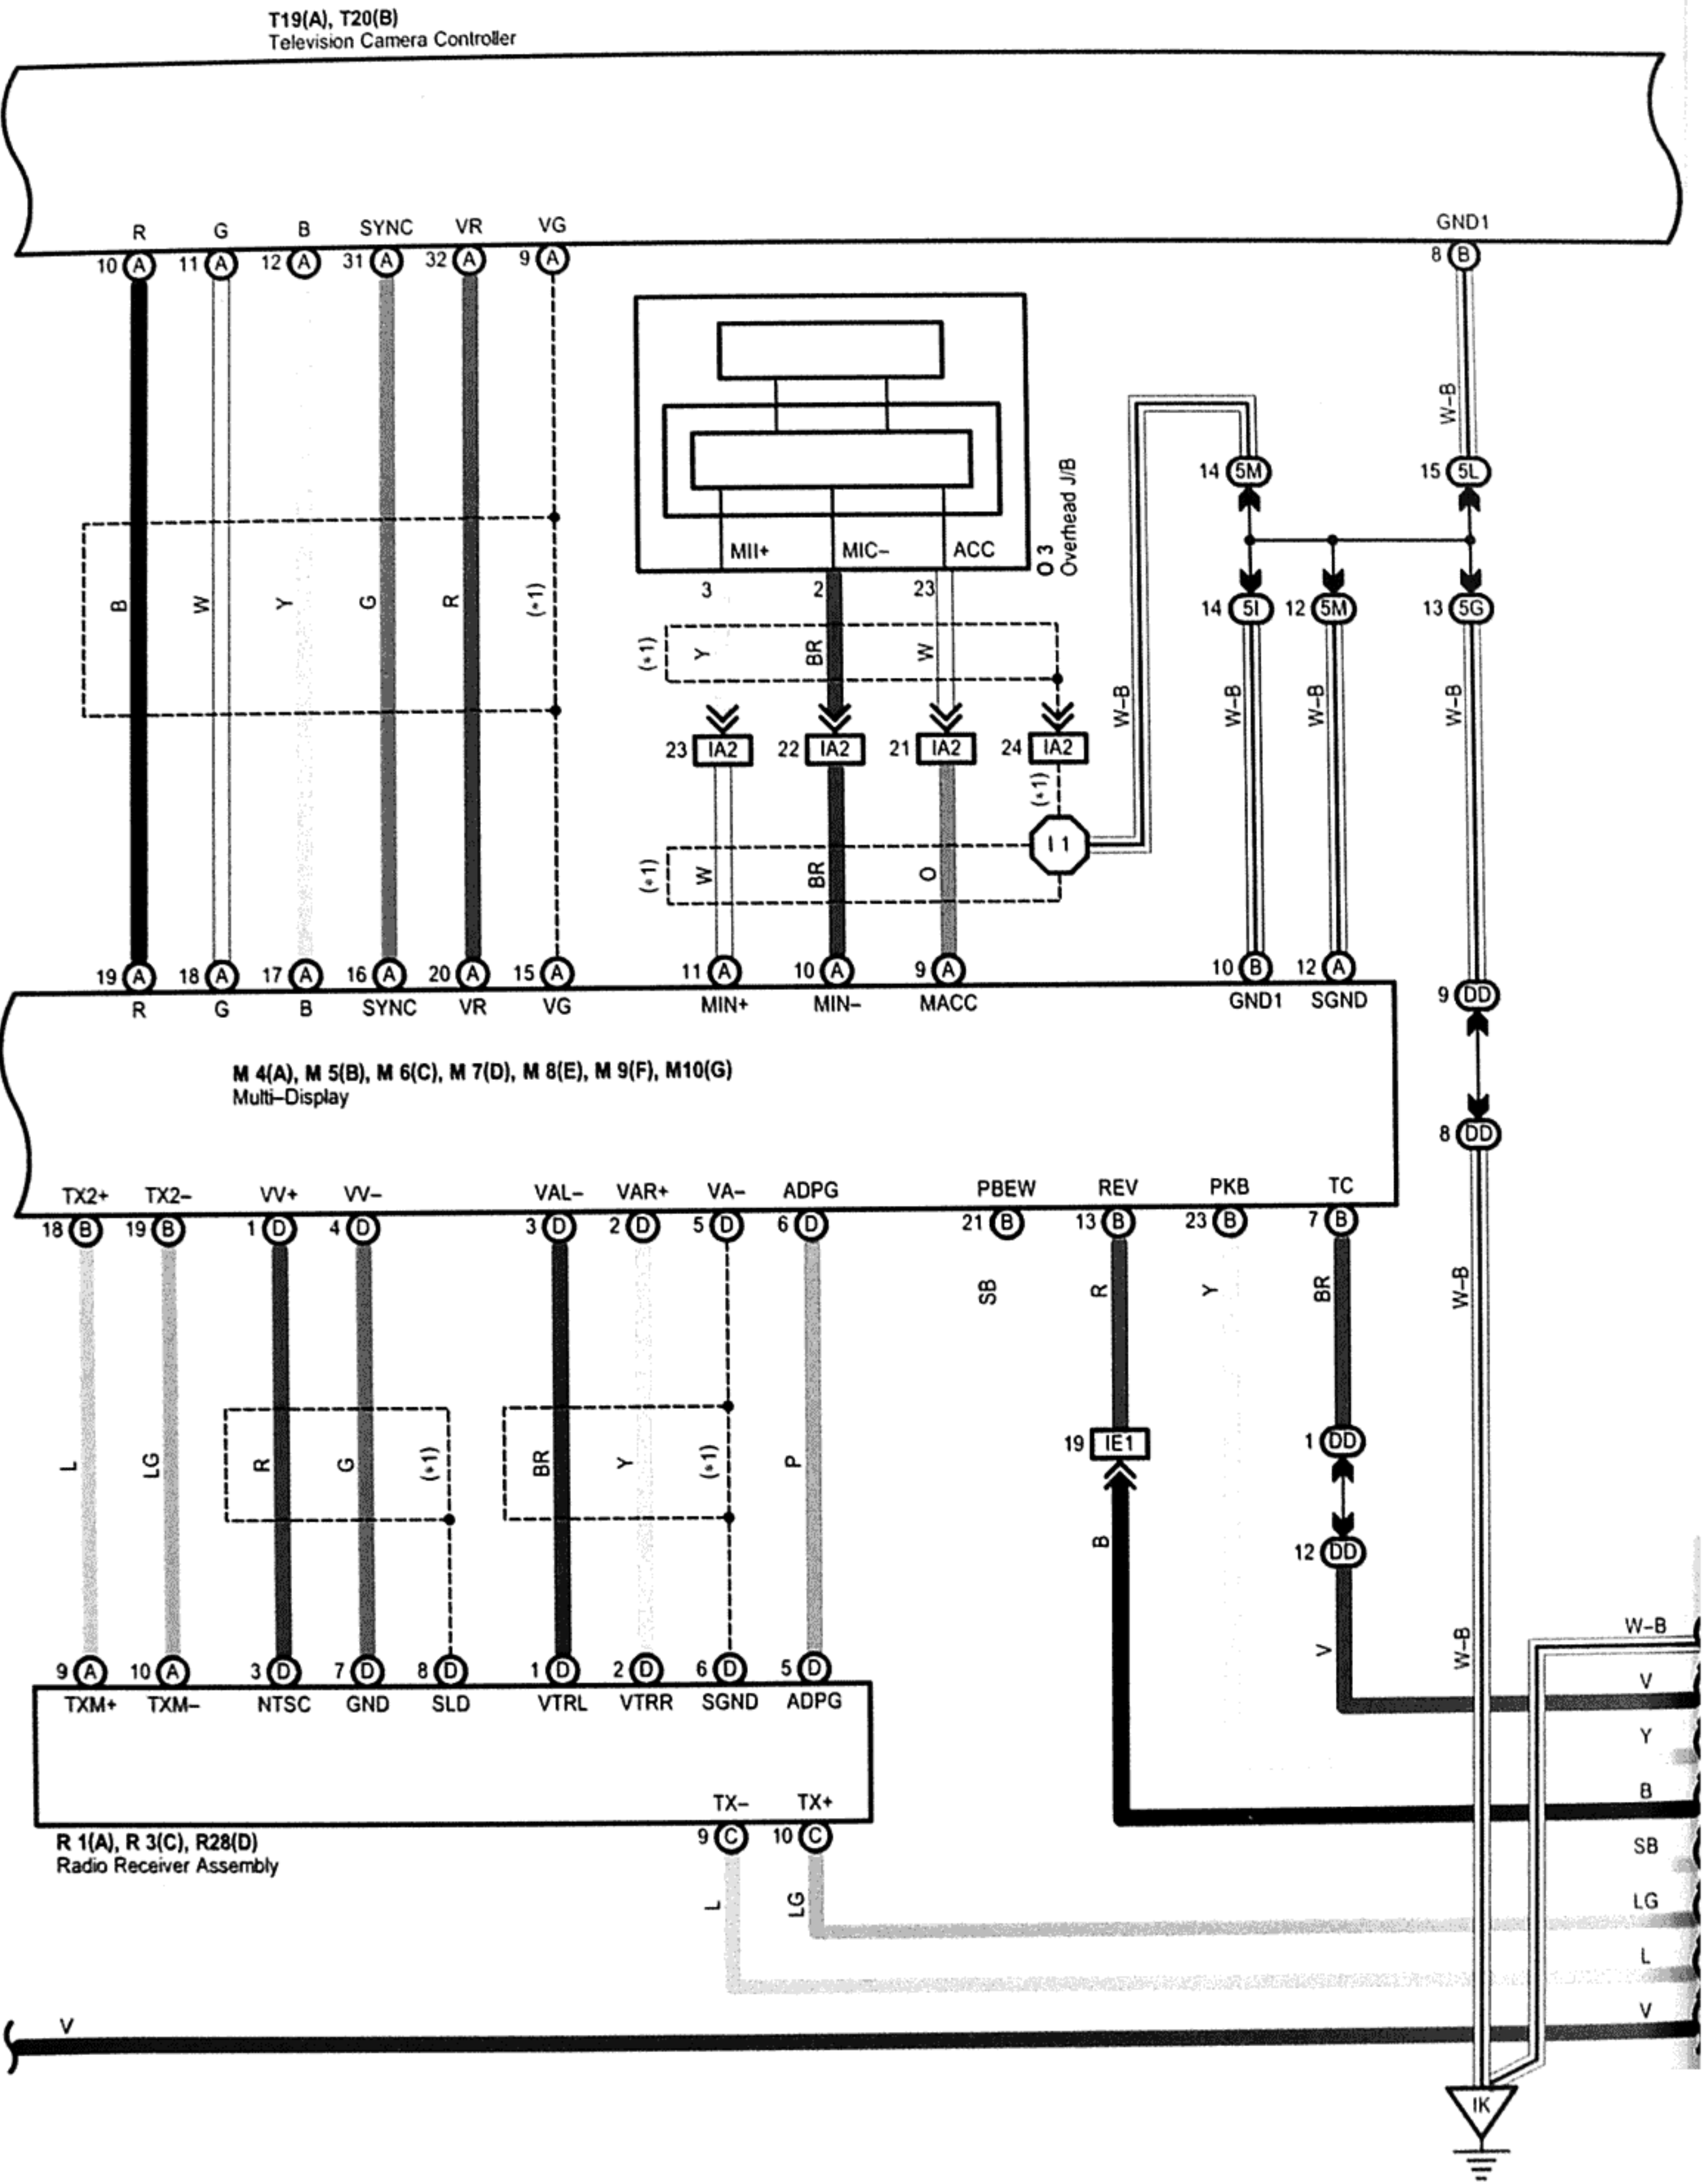



T19(A), T20(B)
Television Camera Controller

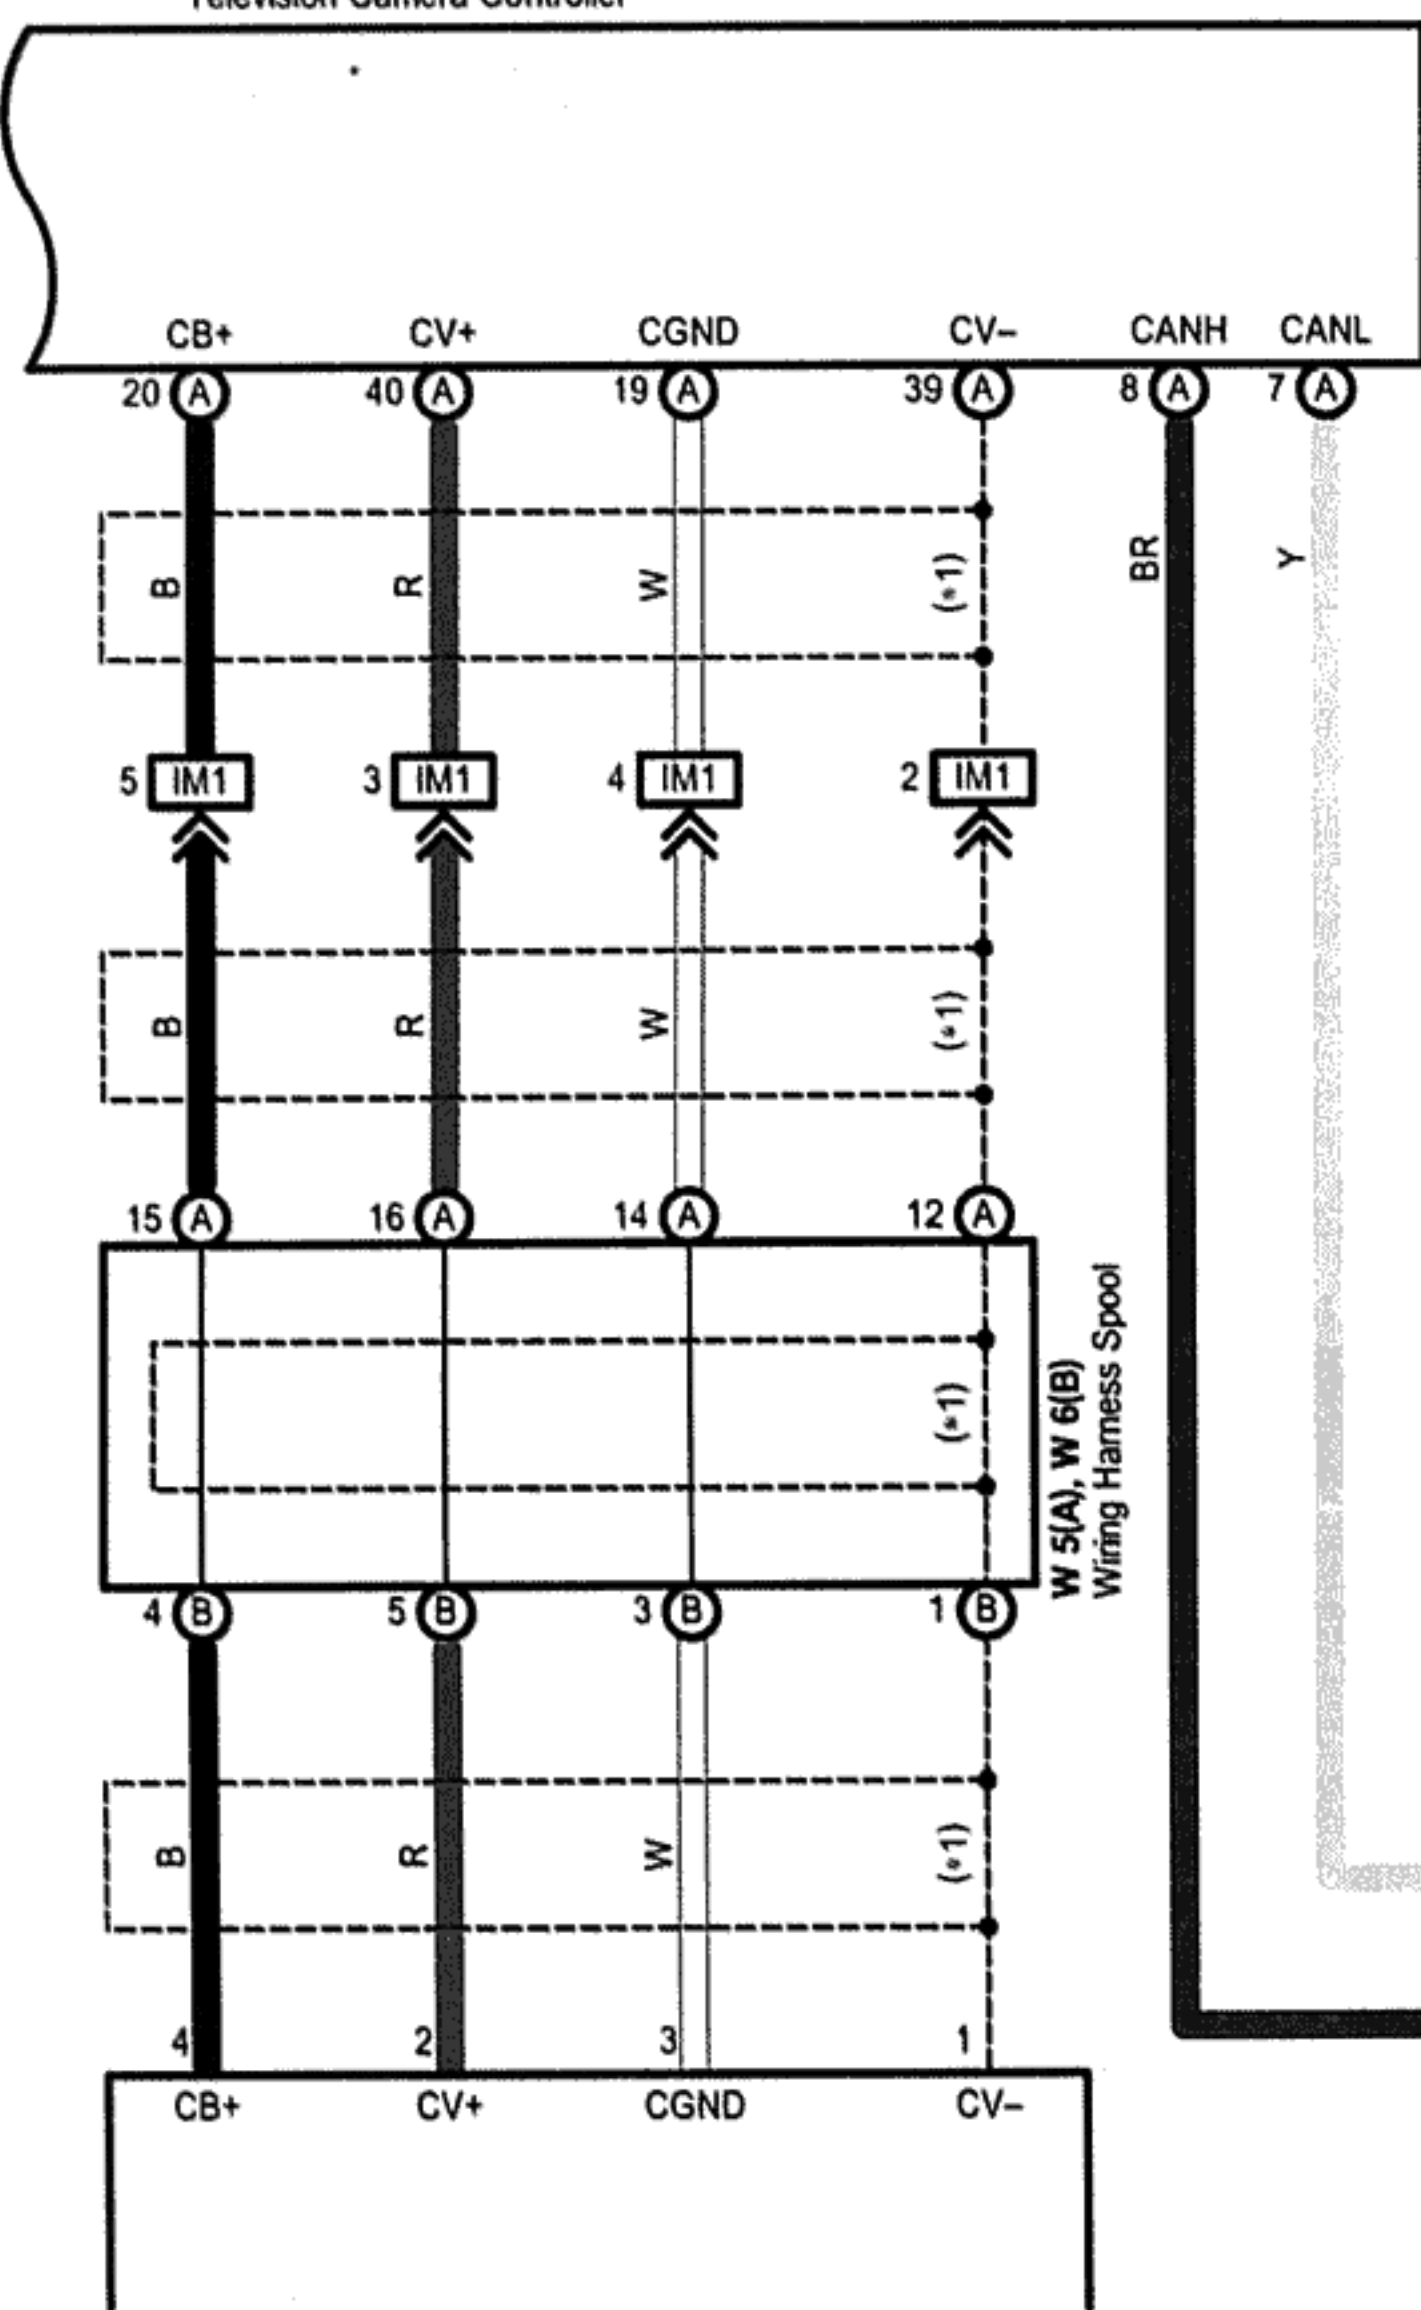



T21
Television Camera (Rear)

* 1 : Shielded

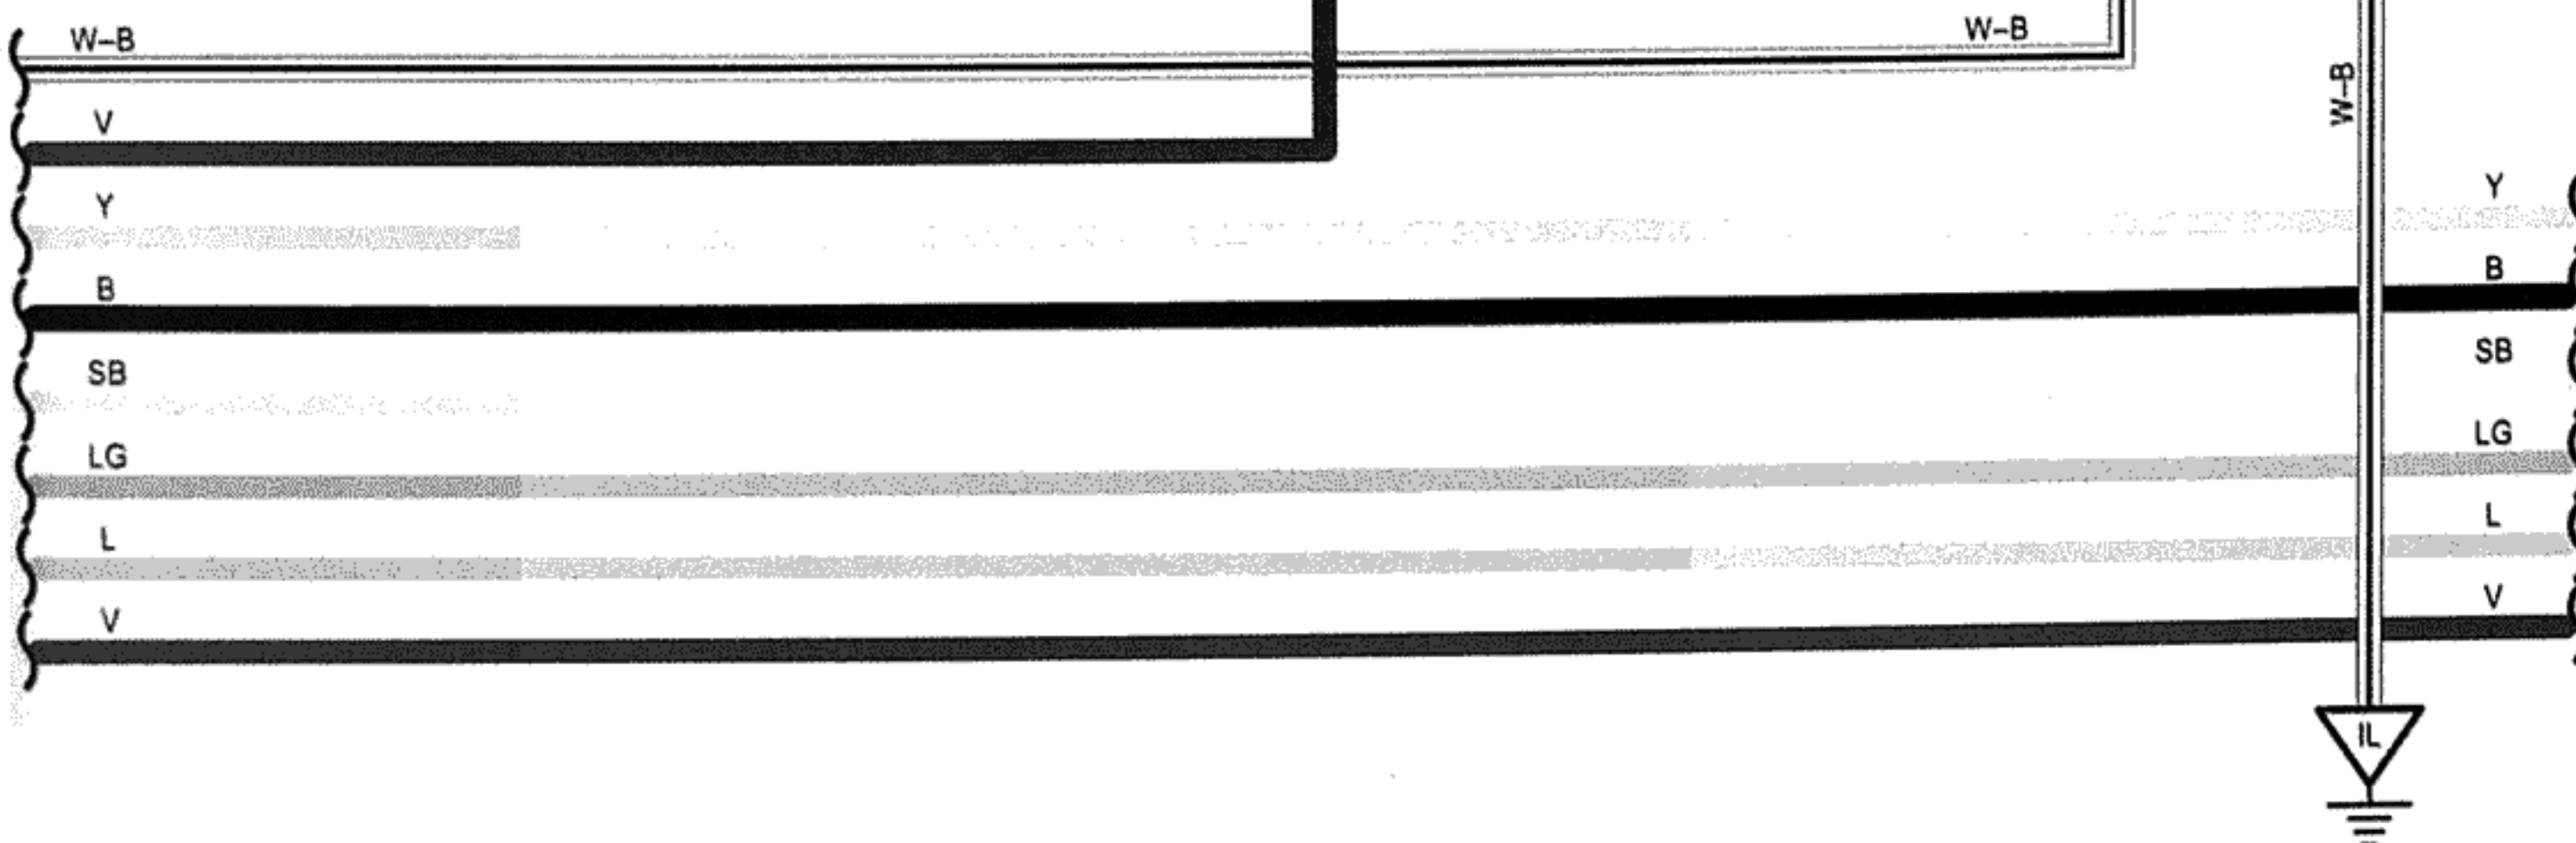

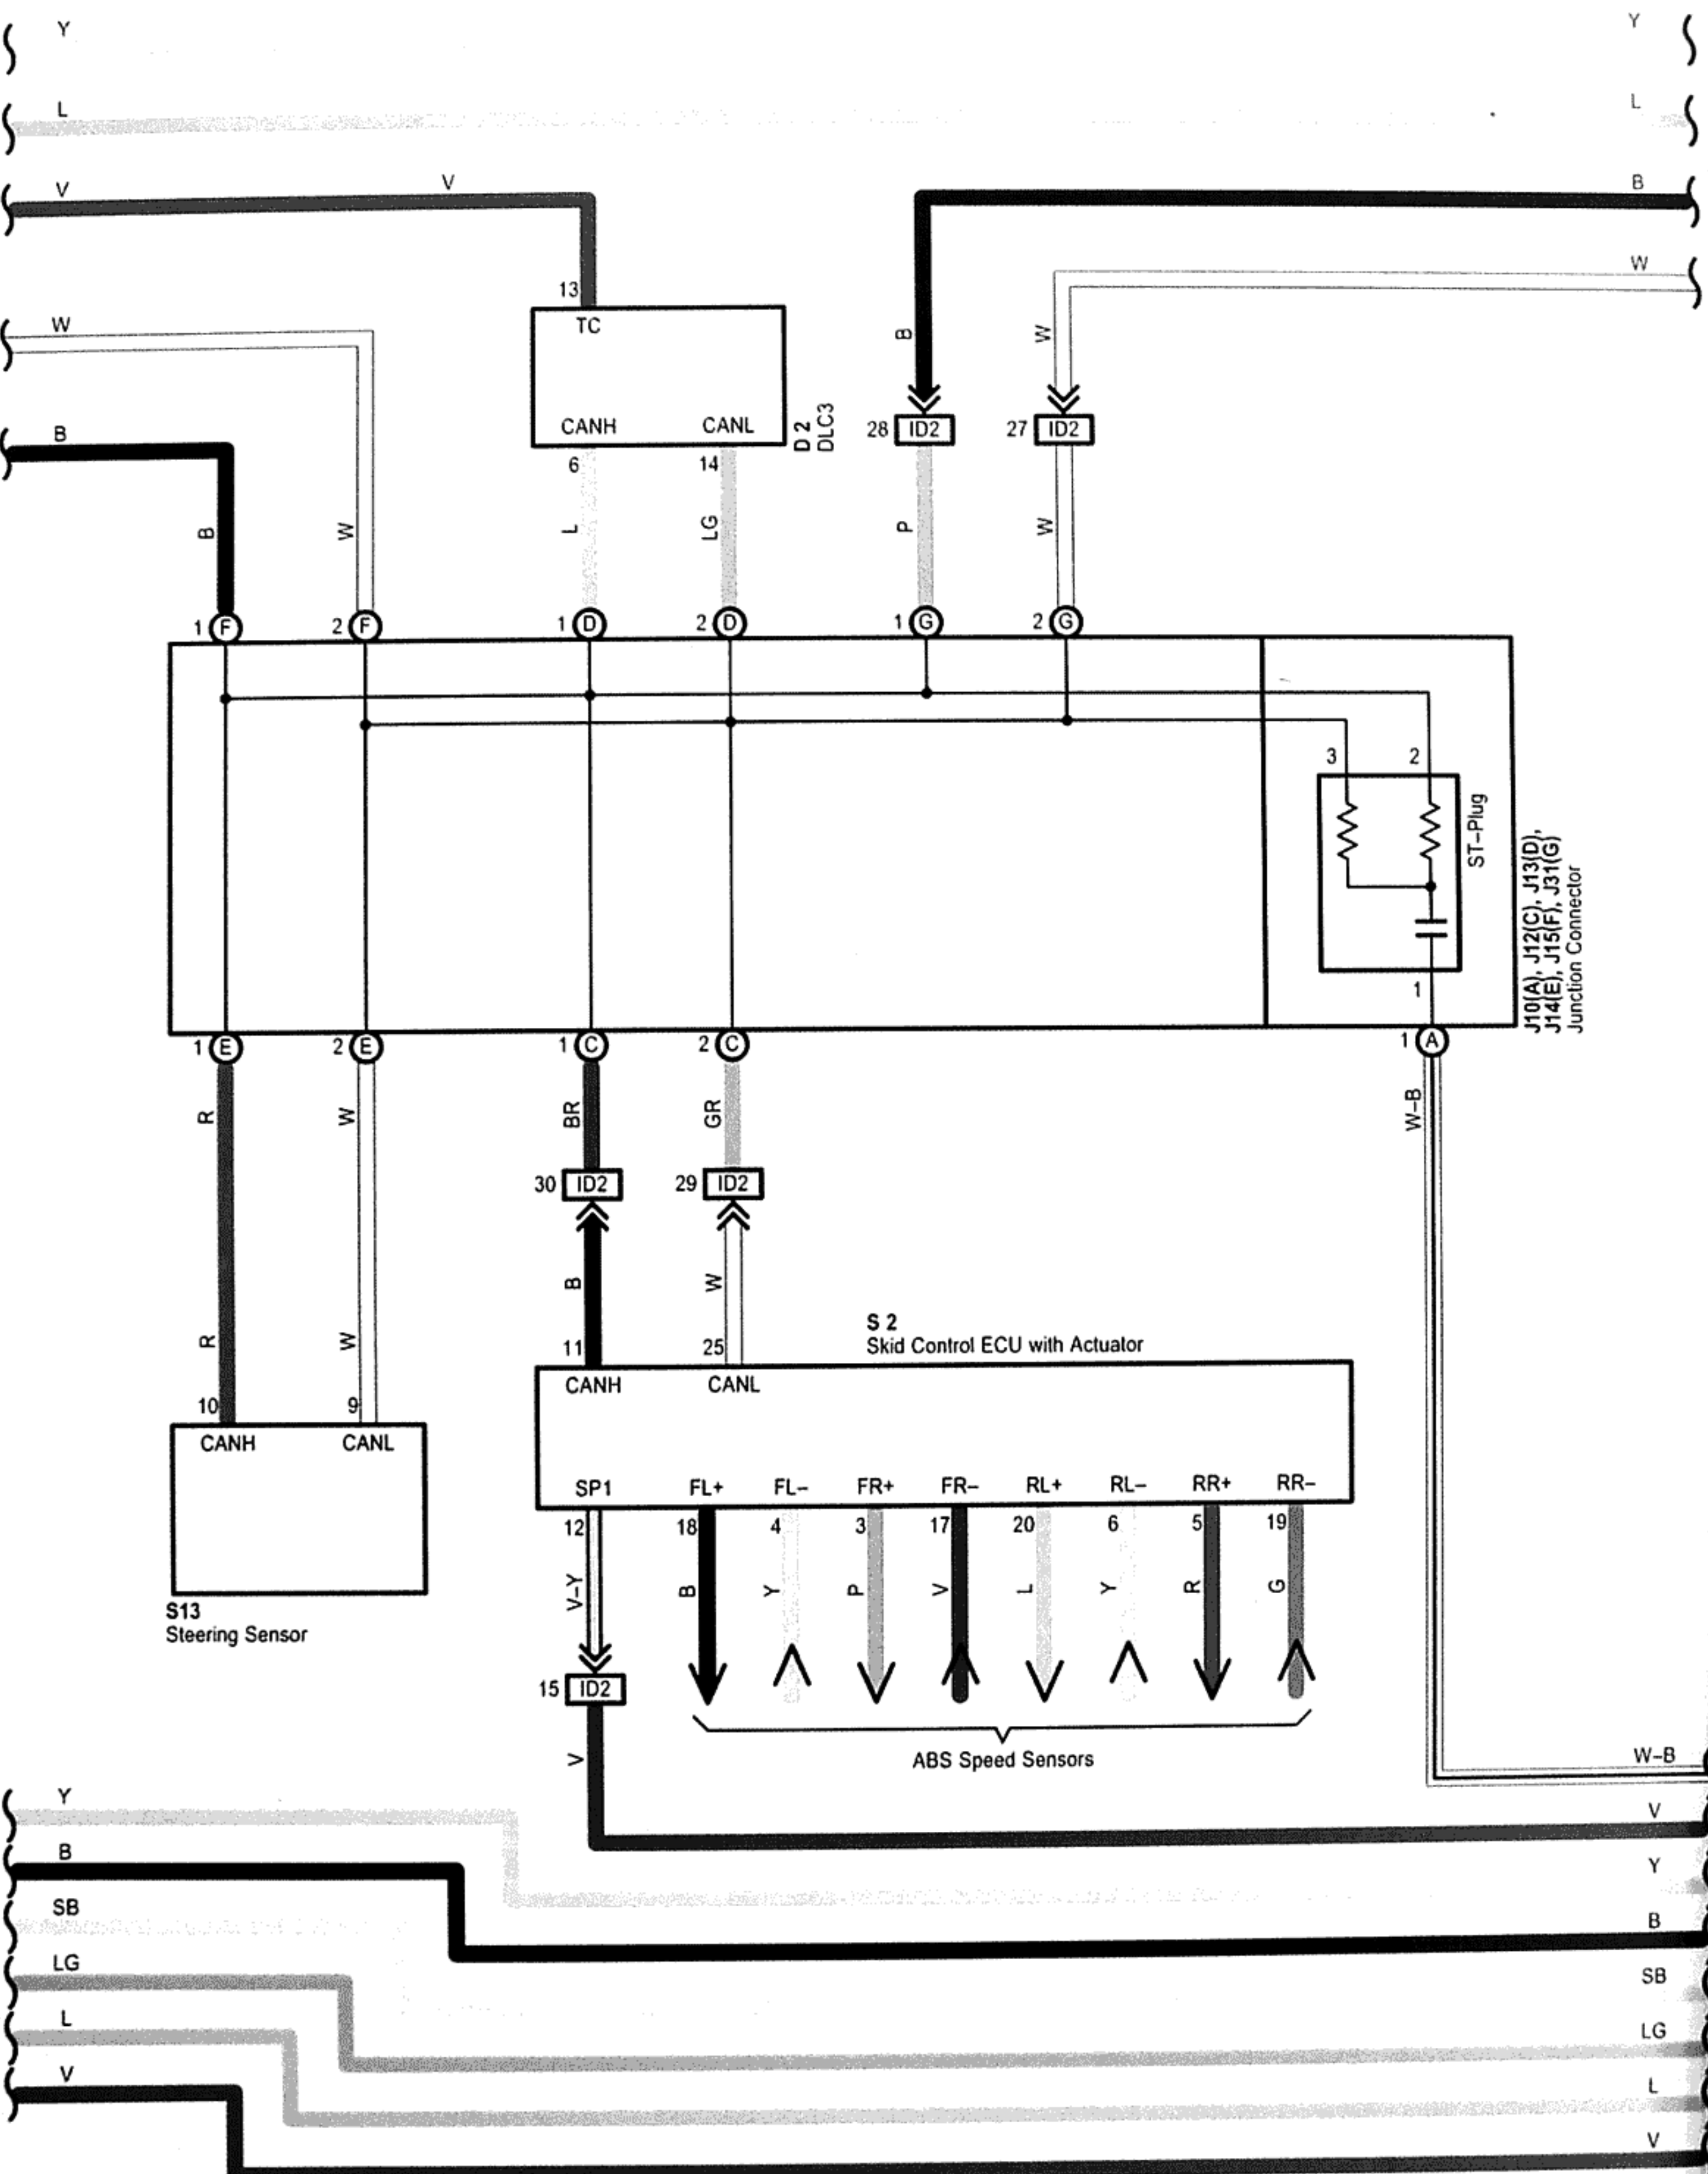

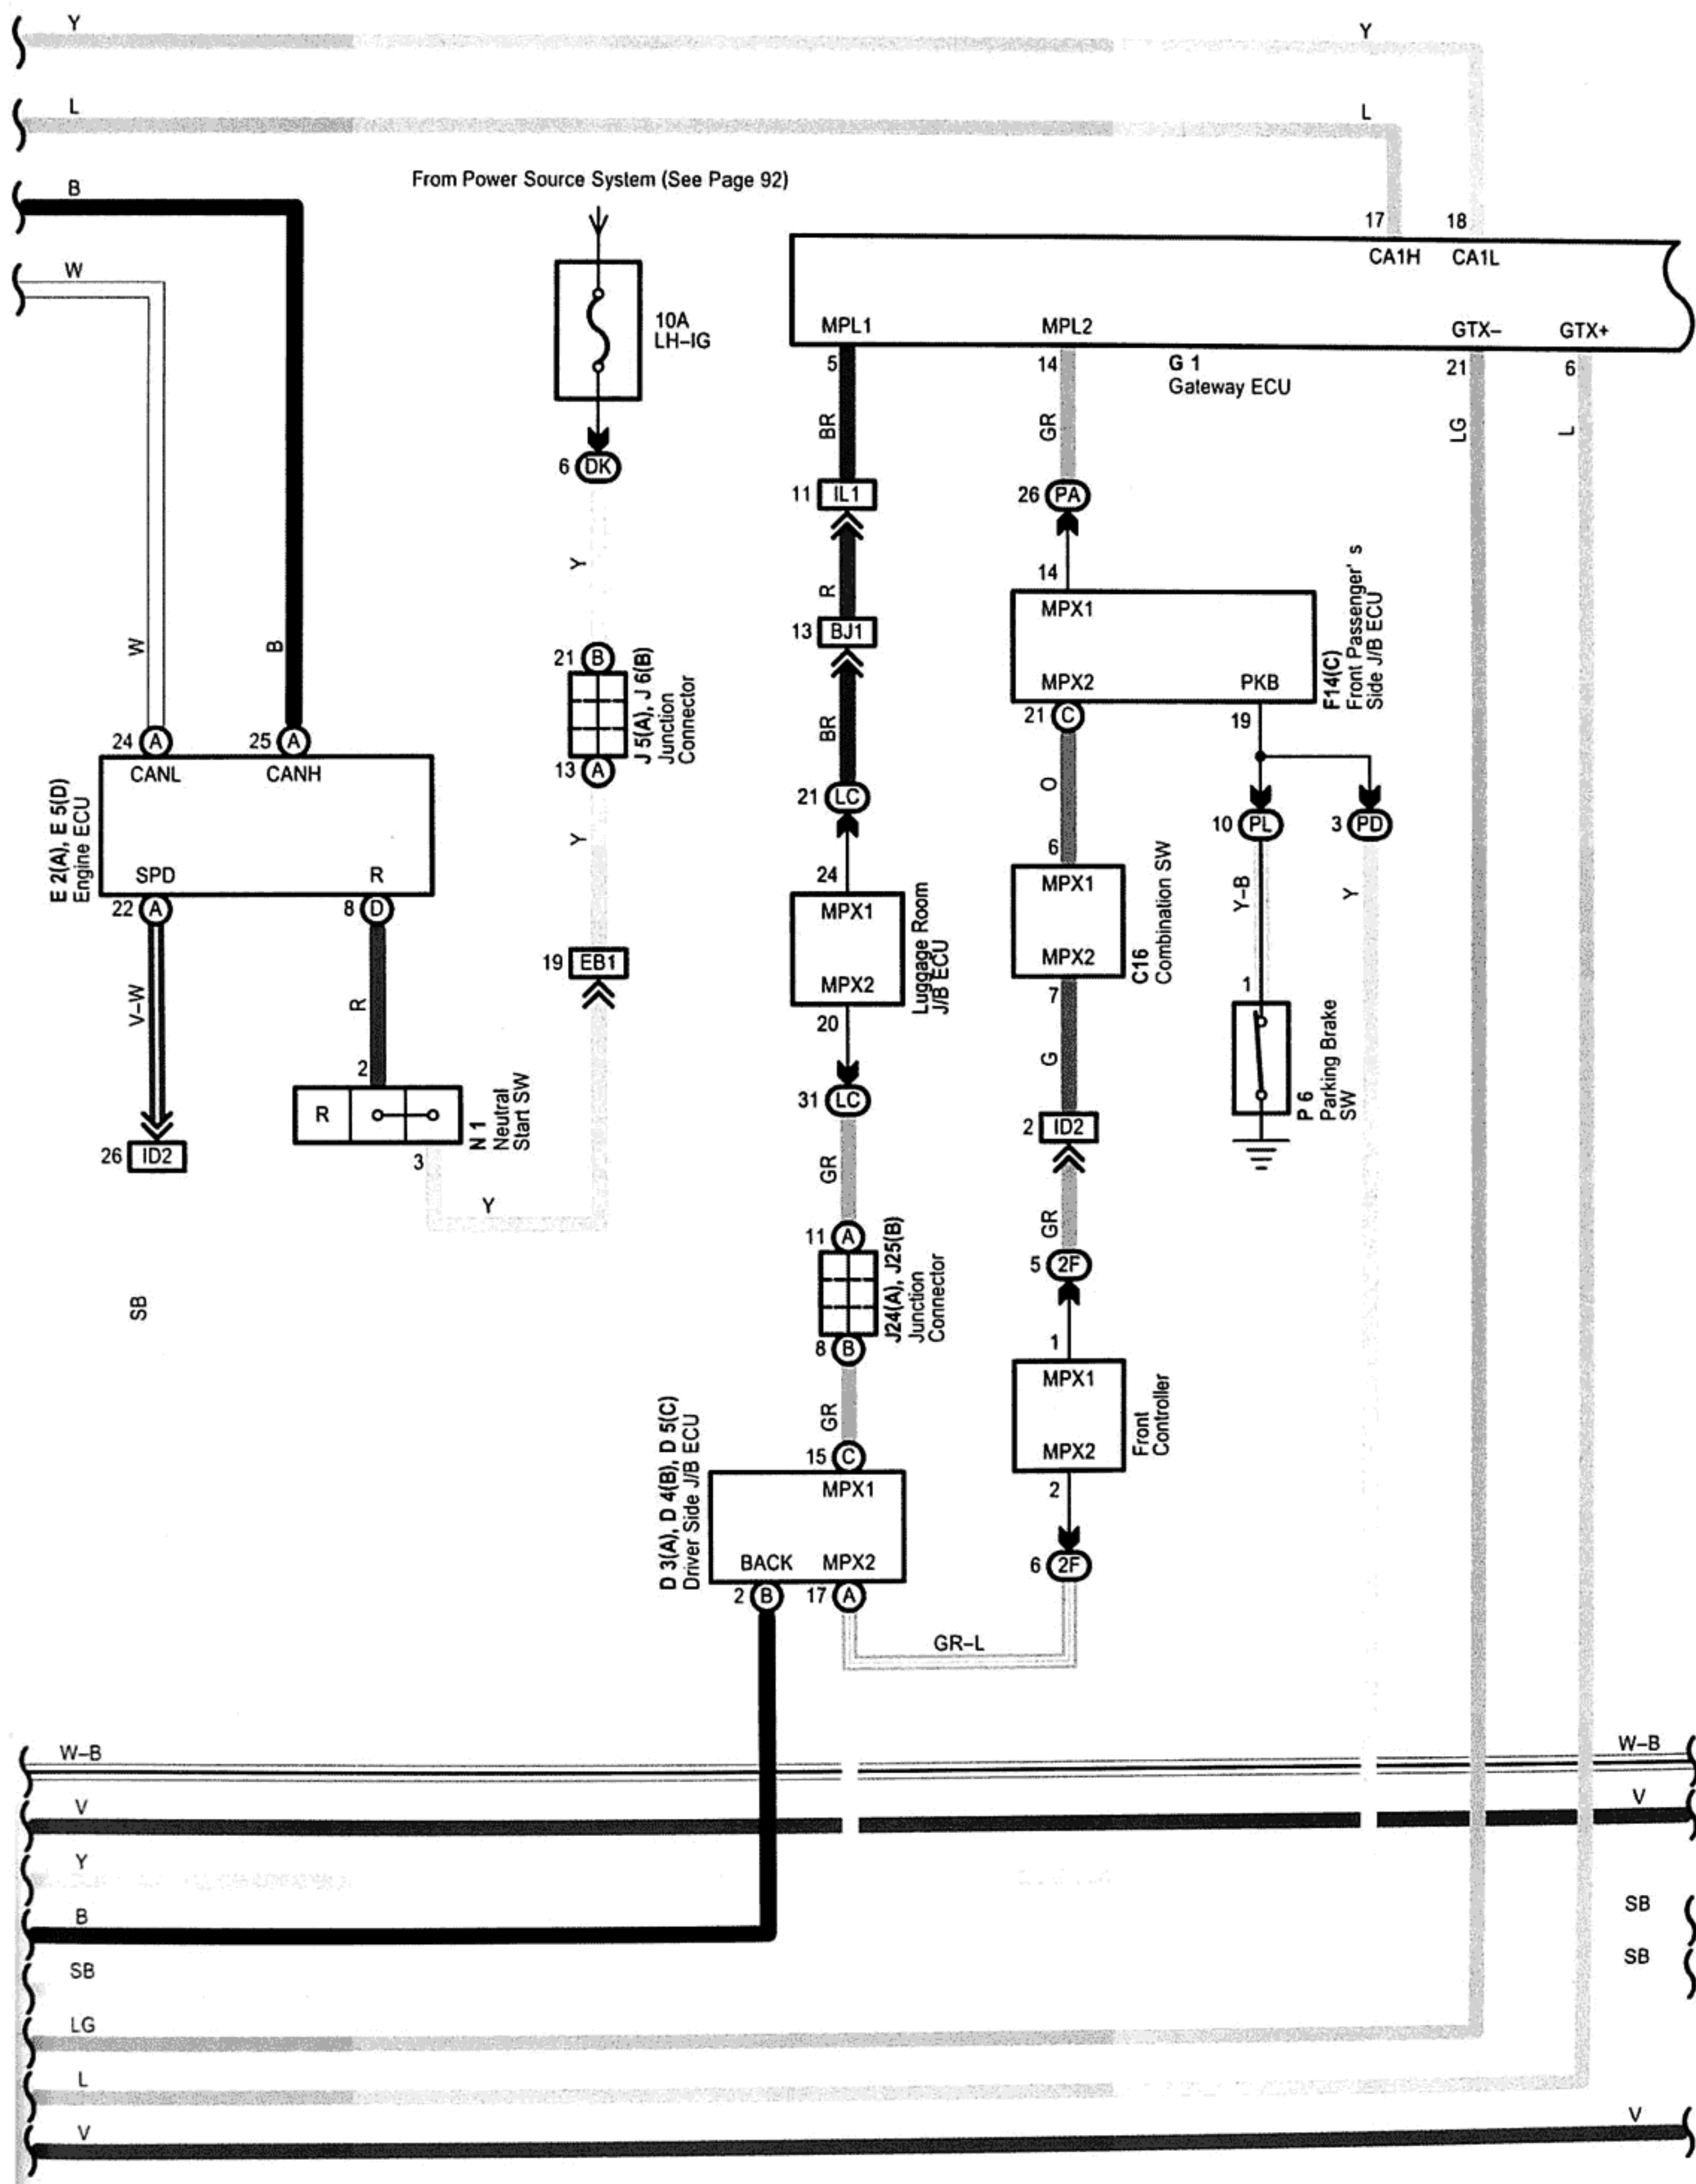

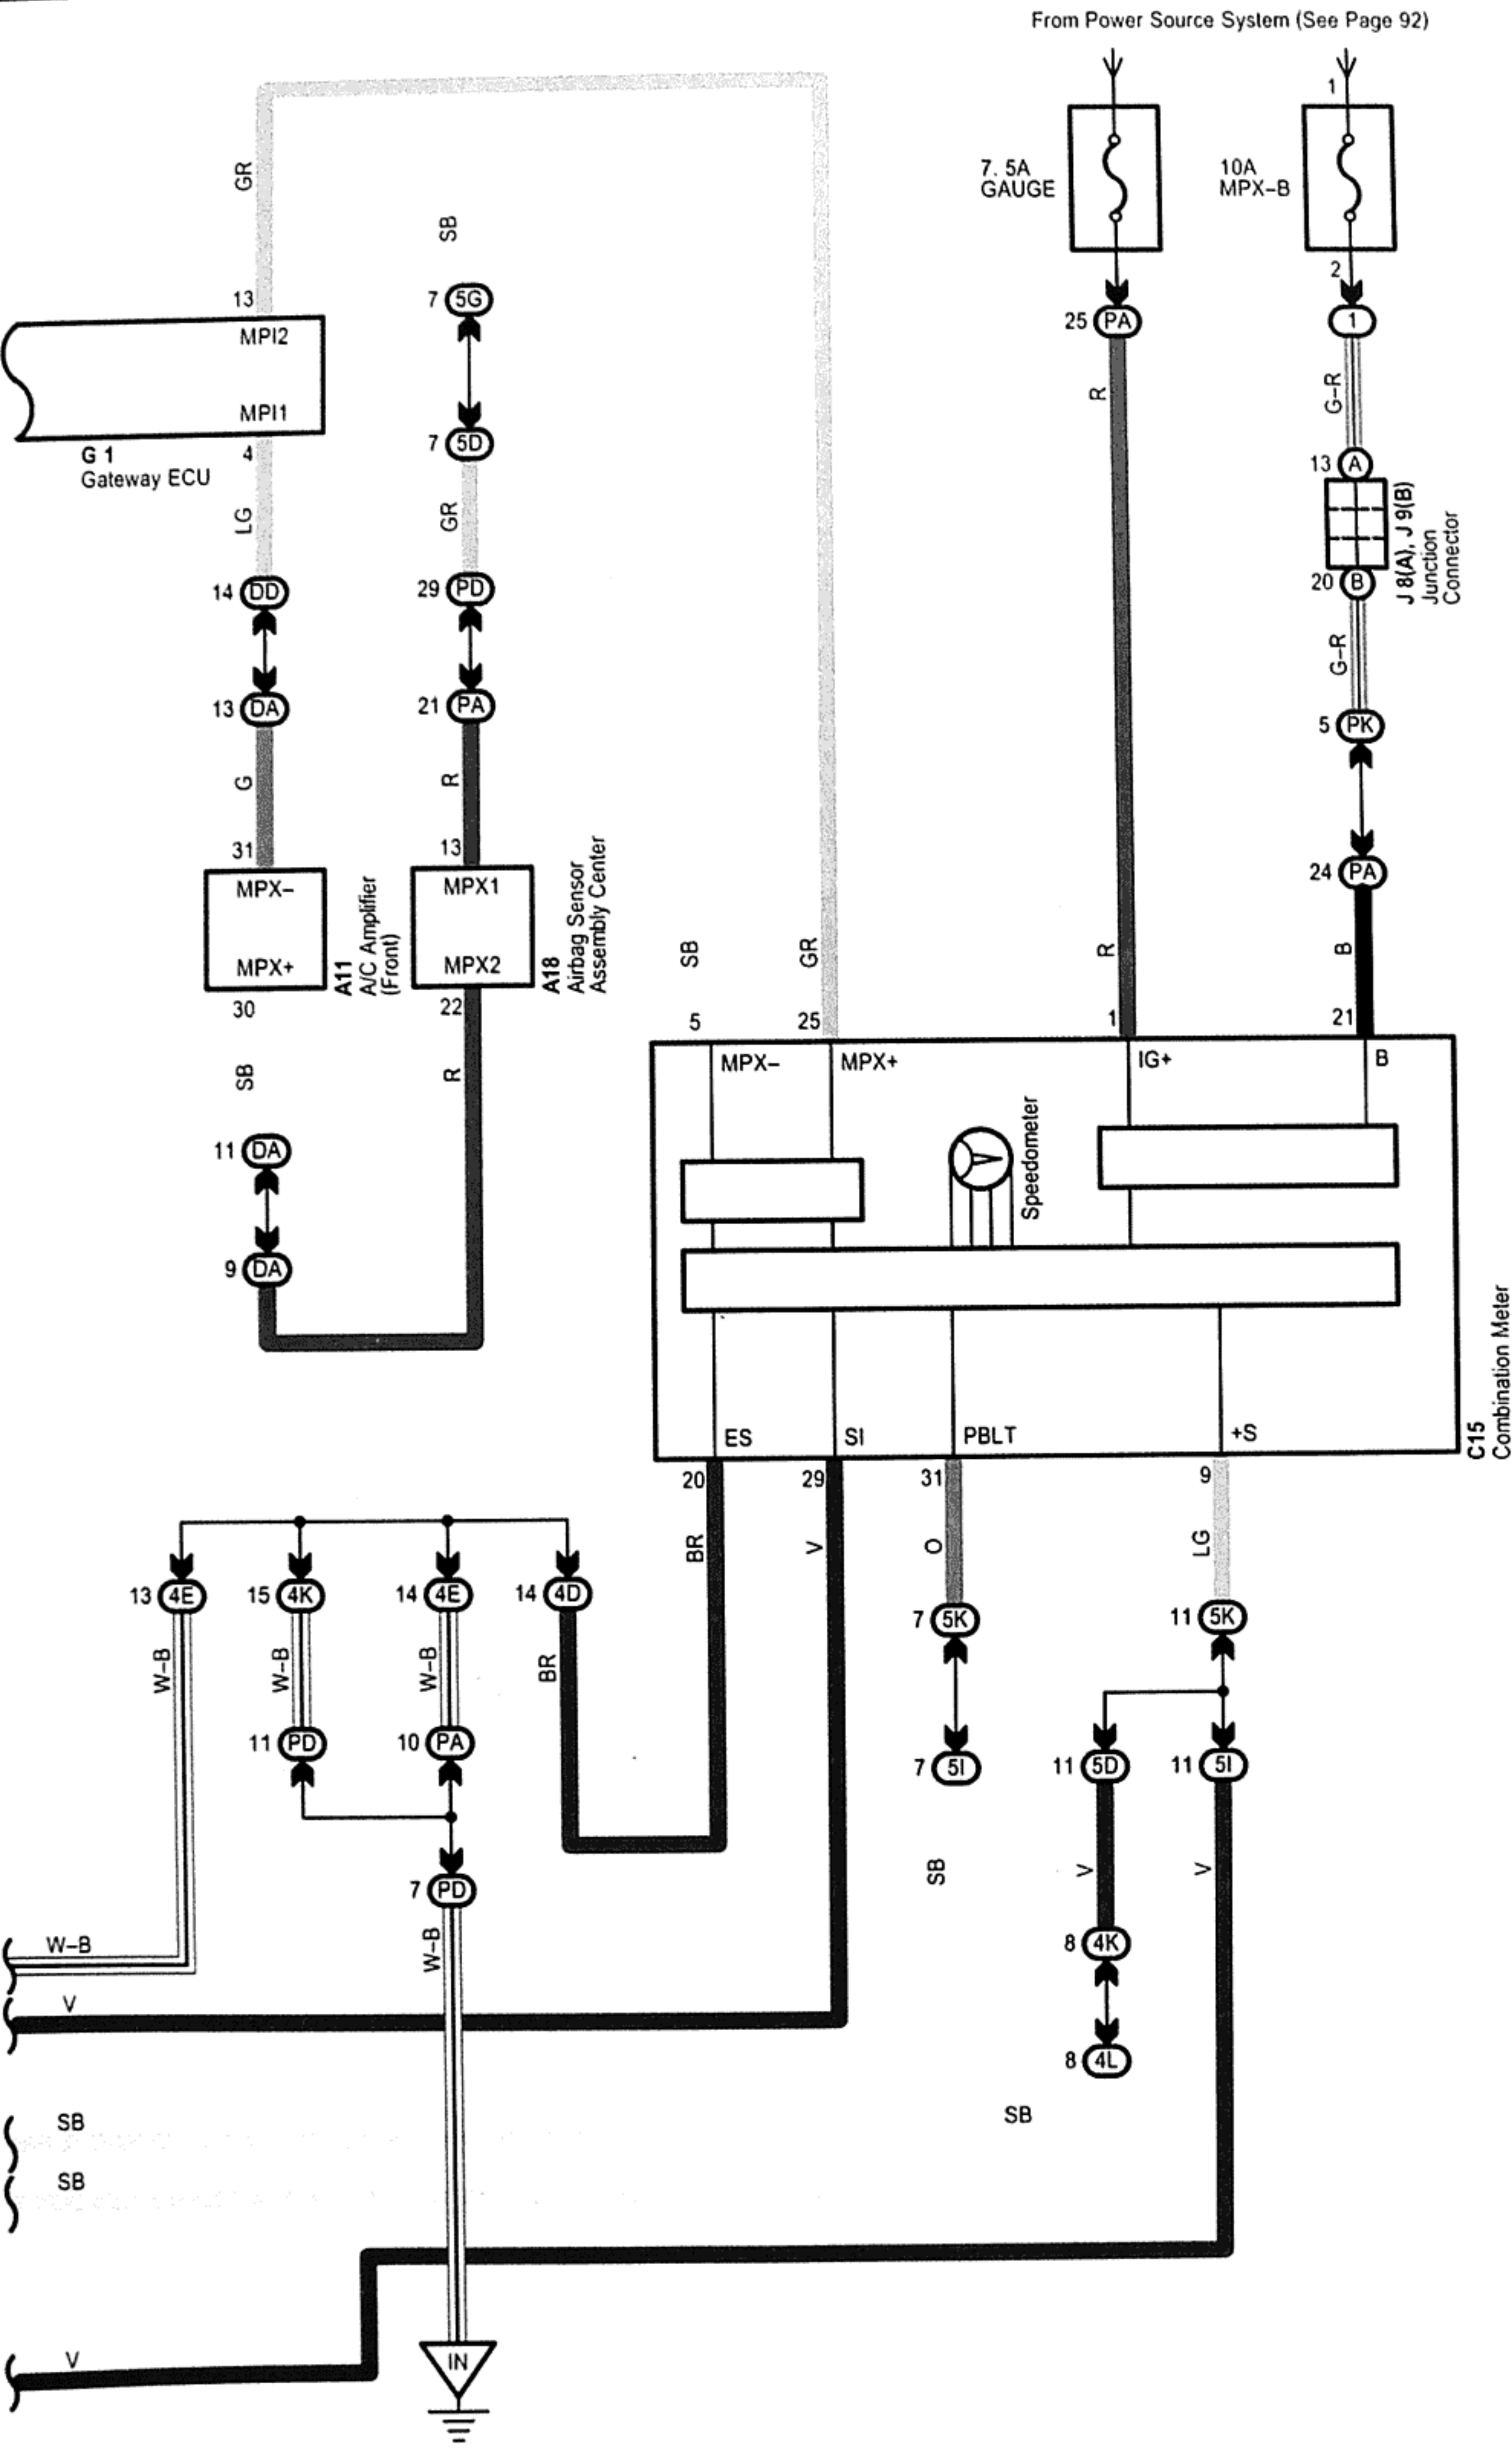

Service Hints

M4 (A), M5 (B) Multi-Display

- (B) 1-Ground : Always approx. 12 volts
- (B) 3-Ground : Approx. 12 volts with the ignition SW at ON position (Ignition SW type) or with the power SW at IG ON position (Power SW type)
- (B) 2-Ground : Approx. 12 volts with the ignition SW at ON or ACC position (Ignition SW type) or with the power SW at IG ON or ACC ON position (Power SW type)
- (A) 12, (B) 10-Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A11		66	J12	C	58, 68	N1		64
A18		66	J13	D	58, 68	O3		71
C14		66	J14	E	58, 68	P6		68
C15		66	J15	F	58, 68	R1	A	68
C16		66	J16	A	60, 68	R3	C	68
D2		67	J18	C	60, 68	R28		68
D3	A	67	J24	A	71	S2		65
D4	B	67	J25	B	71	S13		69
D5	C	67	J31	G	58, 68	S22		73
E2	A	63	J32	D	60, 68	S29	A	73
E5	D	63	J33	E	60, 68	S30	B	73
F14	C	67	M4	A	68	T17		69
G1		67	M5	B	68	T19	A	69
J5	A	64	M6	C	68	T20	B	69
J6	B	64	M7	D	68	T21		73
J8	A	68	M8	E	68	W5	A	73
J9	B	68	M9	F	68	W6	B	73
J10	A	58, 68	M10	G	68			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B No.1 (Near the Front Right Suspension Tower)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	27	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
4D	44	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4E		
4F		
4K		
4L		
5A	48	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5D		
5G		
5I		
5K		
5L		
5M		
DA	33	Instrument Panel Wire and Driver Side J/B (Cowl Side Left)
DD		
DK	34	Engine Room Main Wire and Driver Side J/B (Cowl Side Left)
LC	55	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PA	39	Instrument Panel Wire and Front Passenger's Side J/B (Cowl Side Right)
PD		
PK	40	Engine Room Main Wire and Front Passenger's Side J/B (Cowl Side Right)
PL		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Room Main Wire and Engine Wire (Inside of the ECU Box)
IA2	78	Instrument Panel Wire and Roof Wire (Left Side of the Instrument Panel)
IC1	78	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
ID2	78	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	78	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
II2	80	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
IK1	80	Instrument Panel Wire and Floor Wire (Under the Rear Console)
IL1	80	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IM1	80	Instrument Panel Wire and Floor No.2 Wire (Under the Rear Console)
BJ1	84	Floor Wire and Floor No.2 Wire (Rear Floor Partition Panel RH)

 : Ground Points

Code	See Page	Ground Points Location
IK	78	Cowl Side Panel LH
IL	78	Left Side of Shift Lever
IN	78	Cowl Side Panel RH