





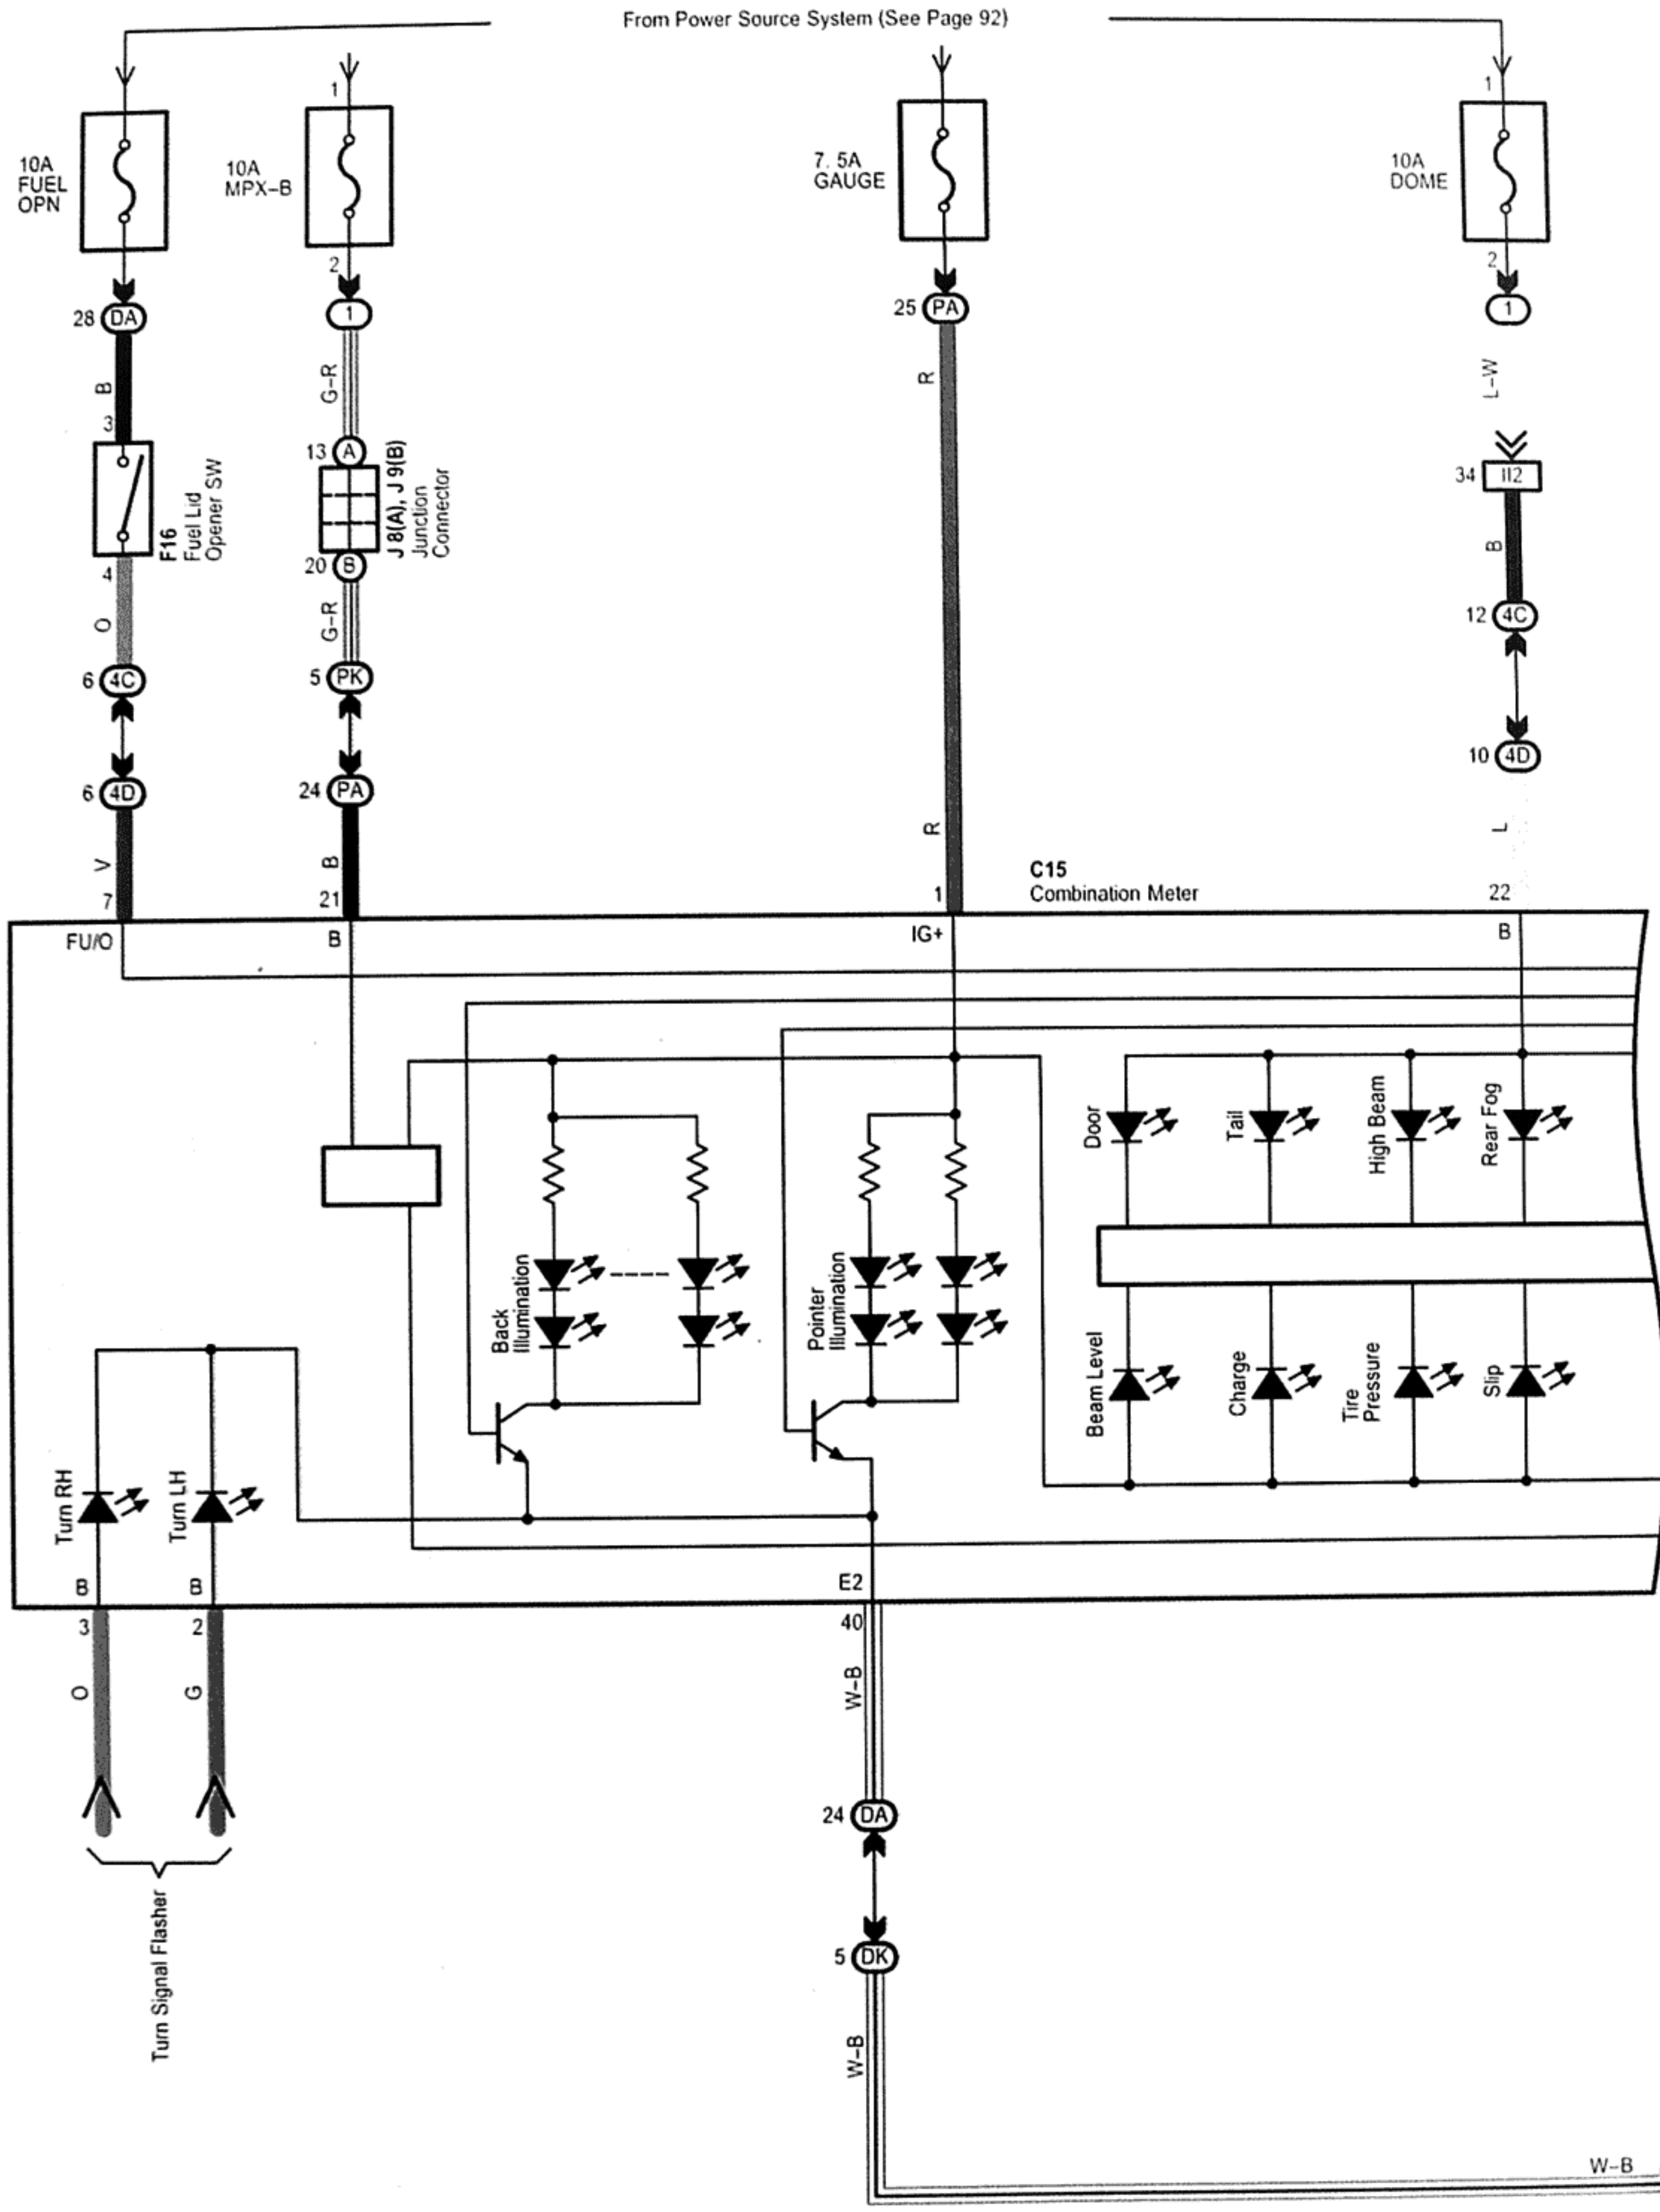



C15
Combination Meter

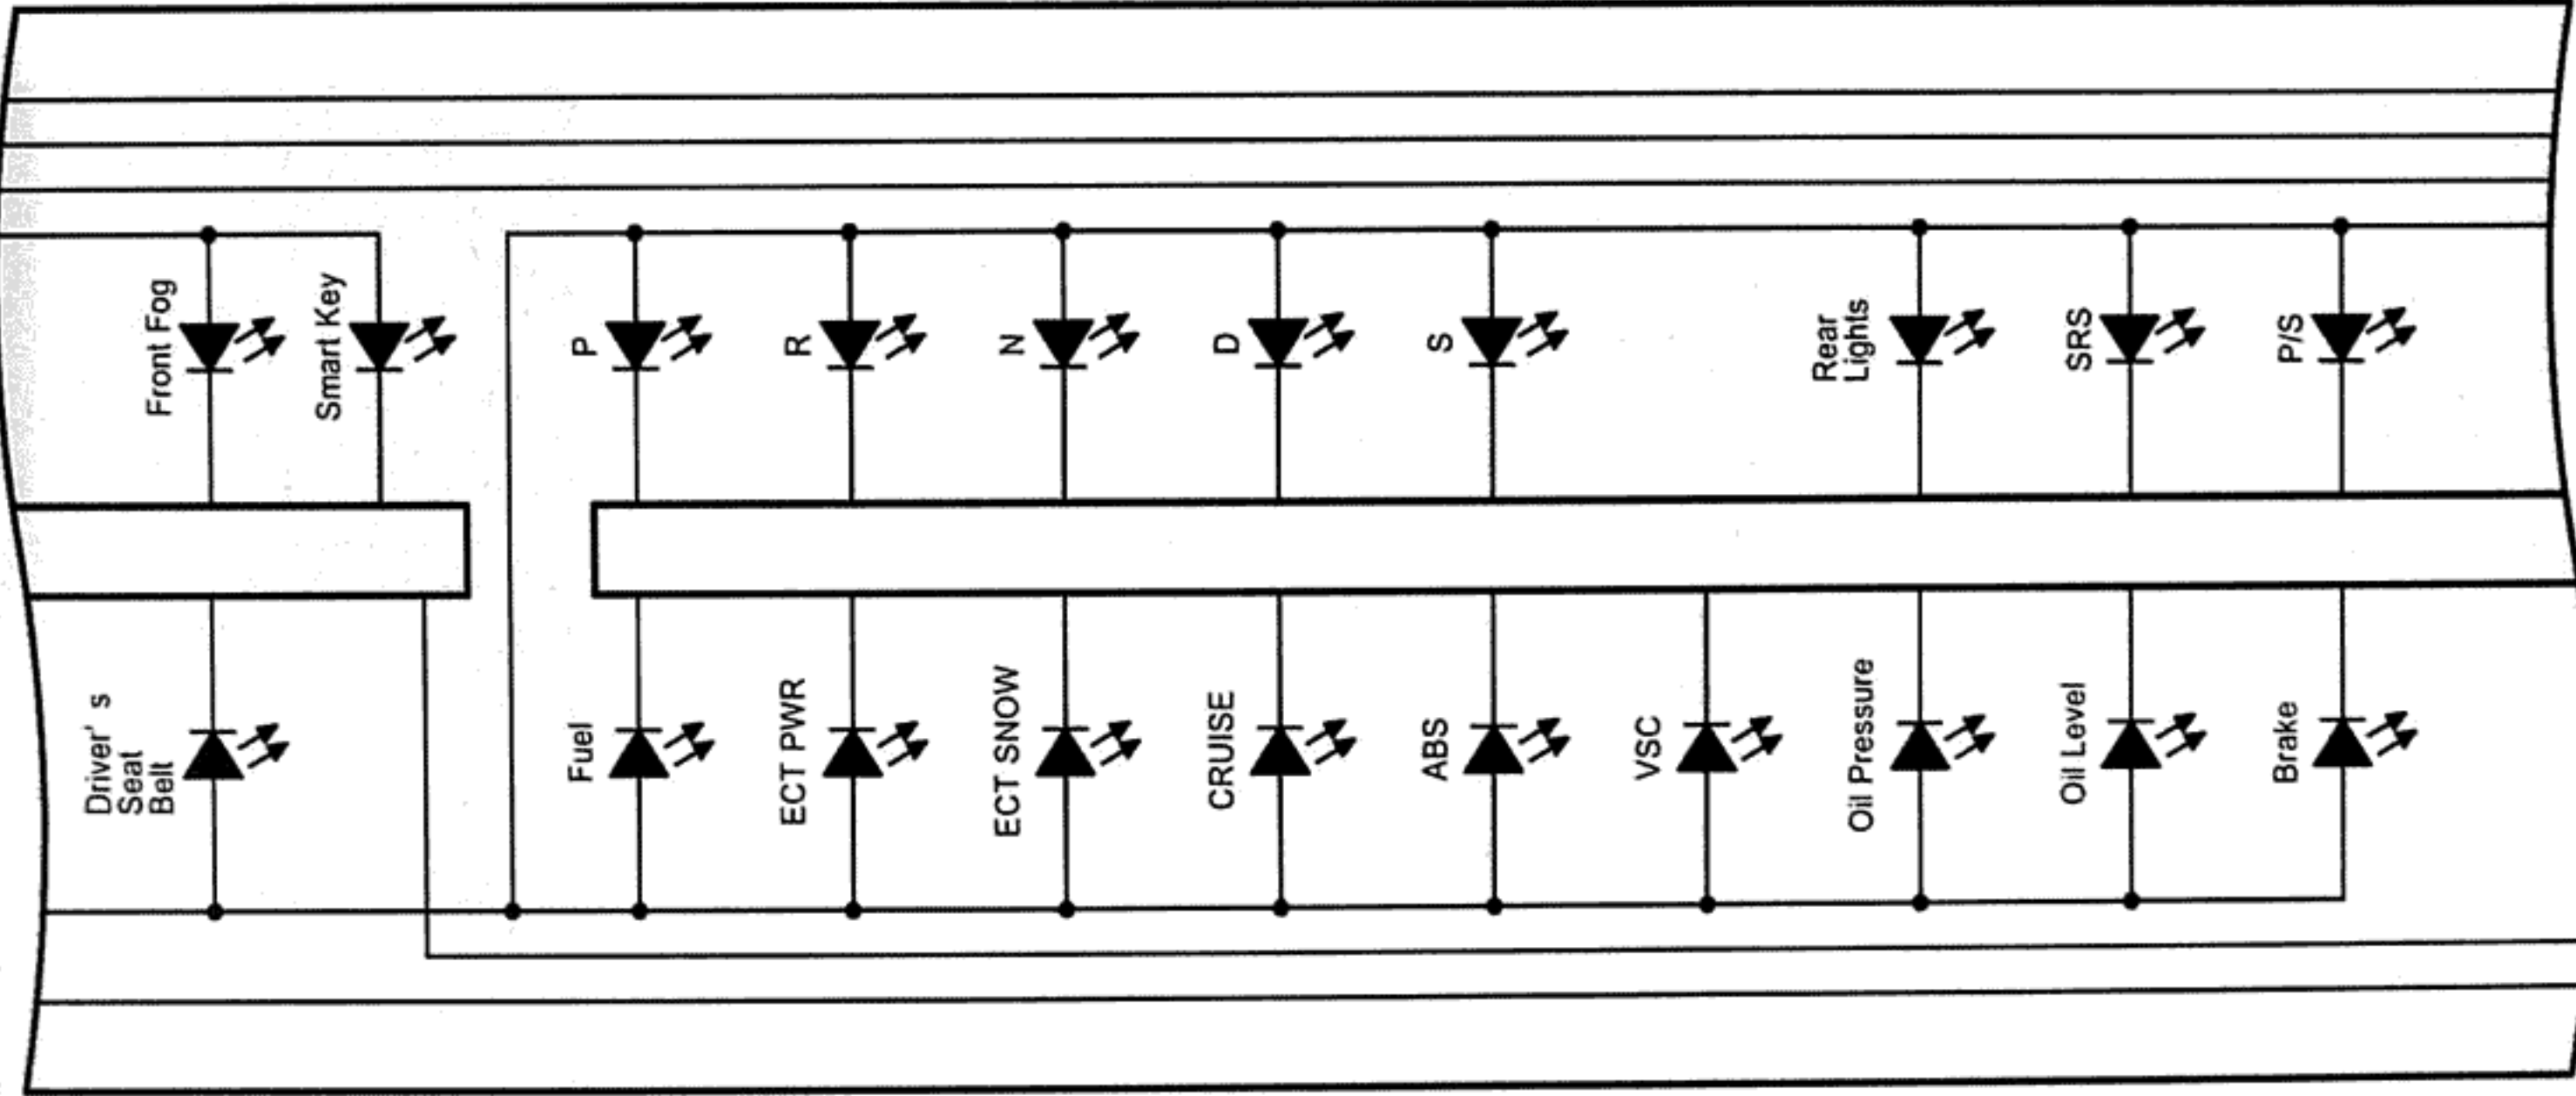

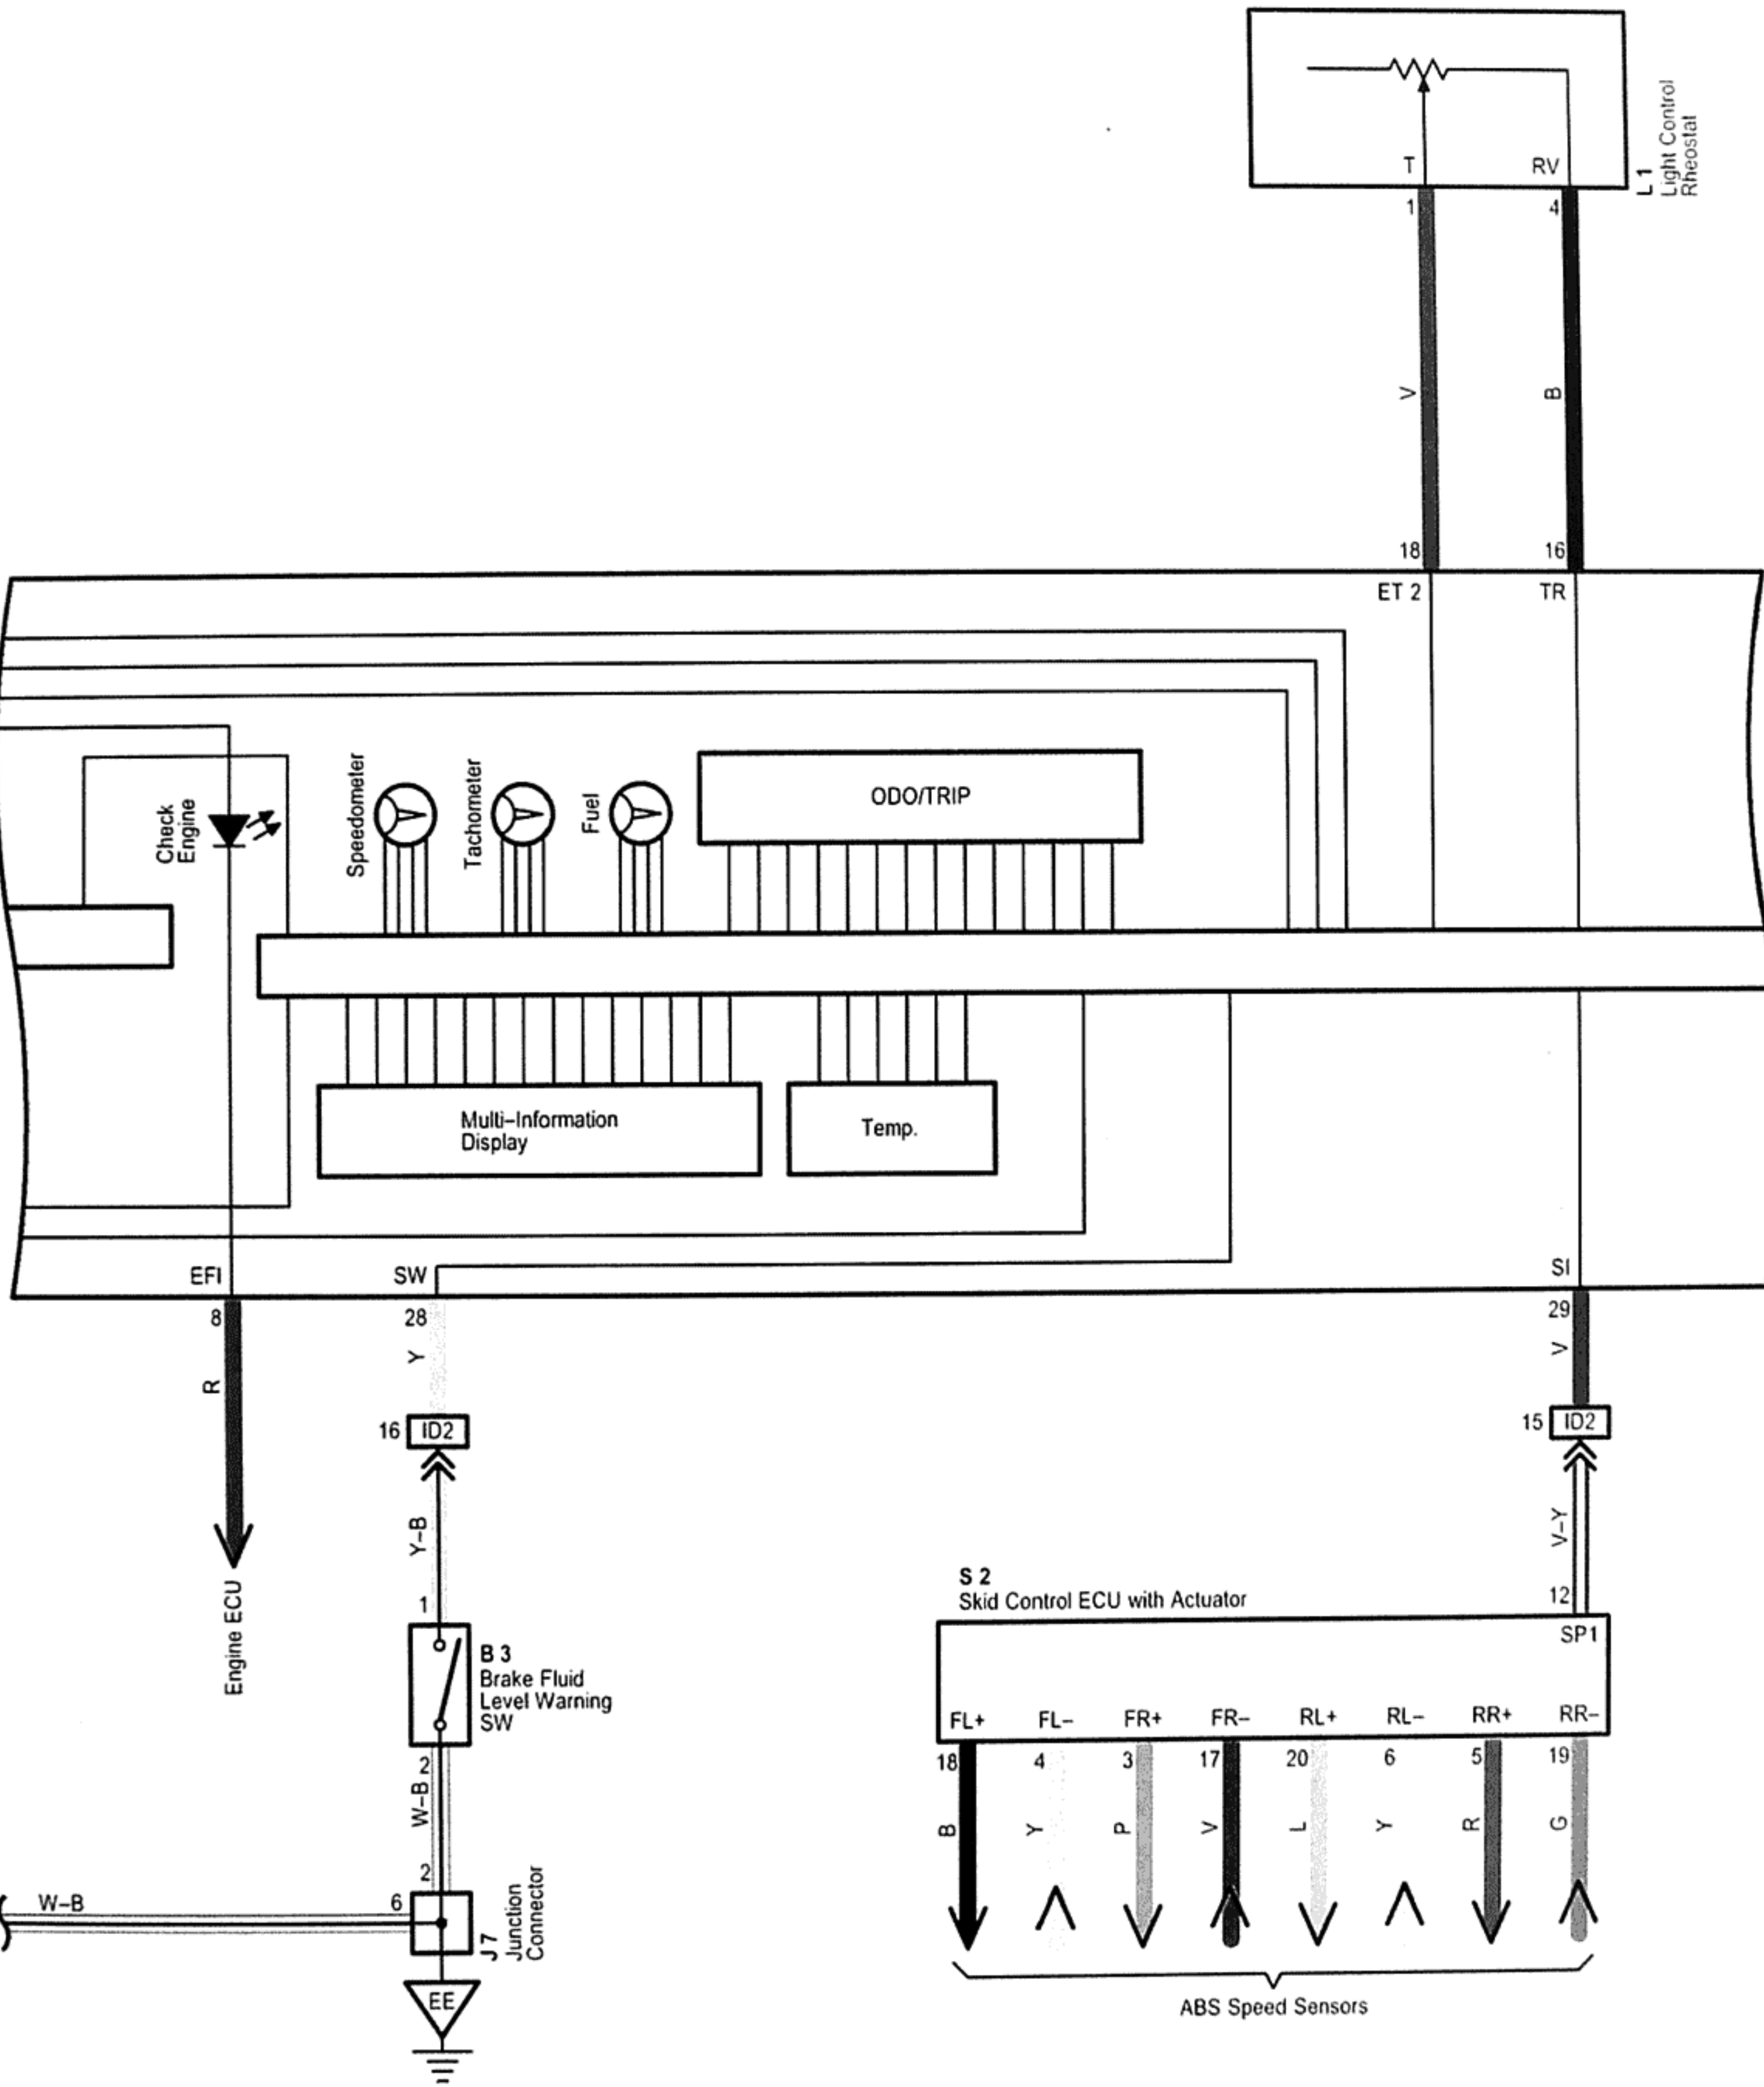

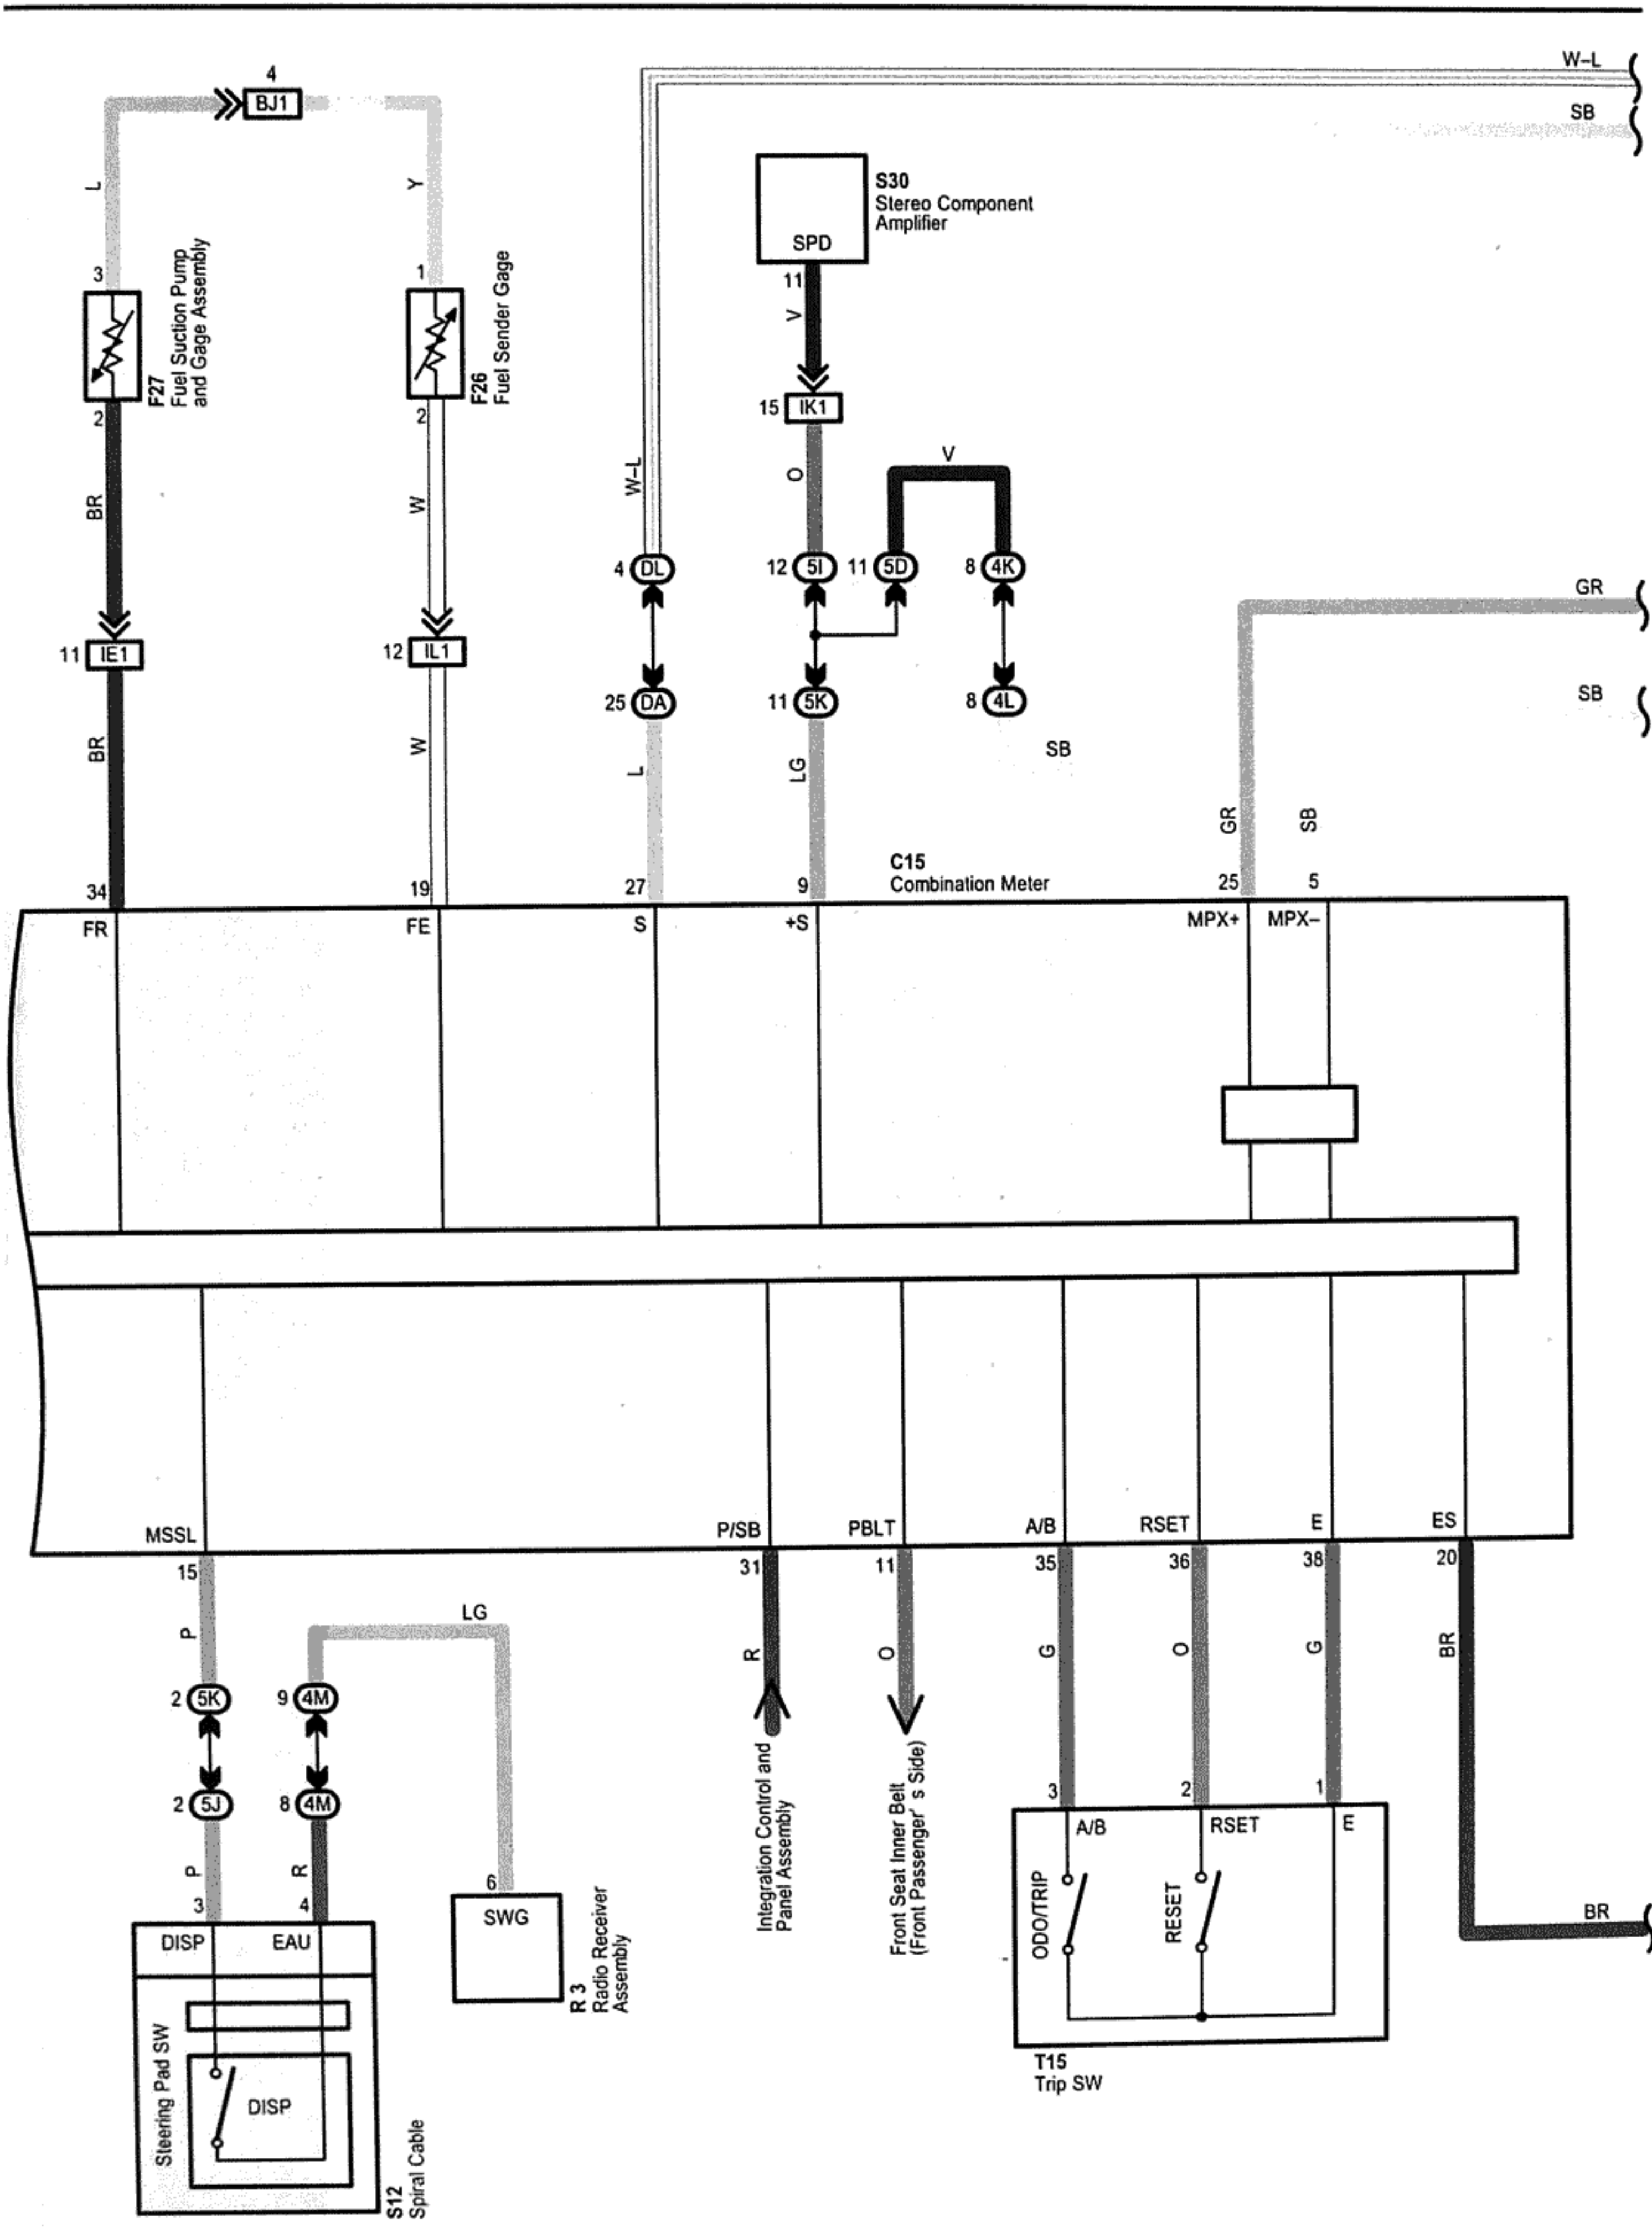

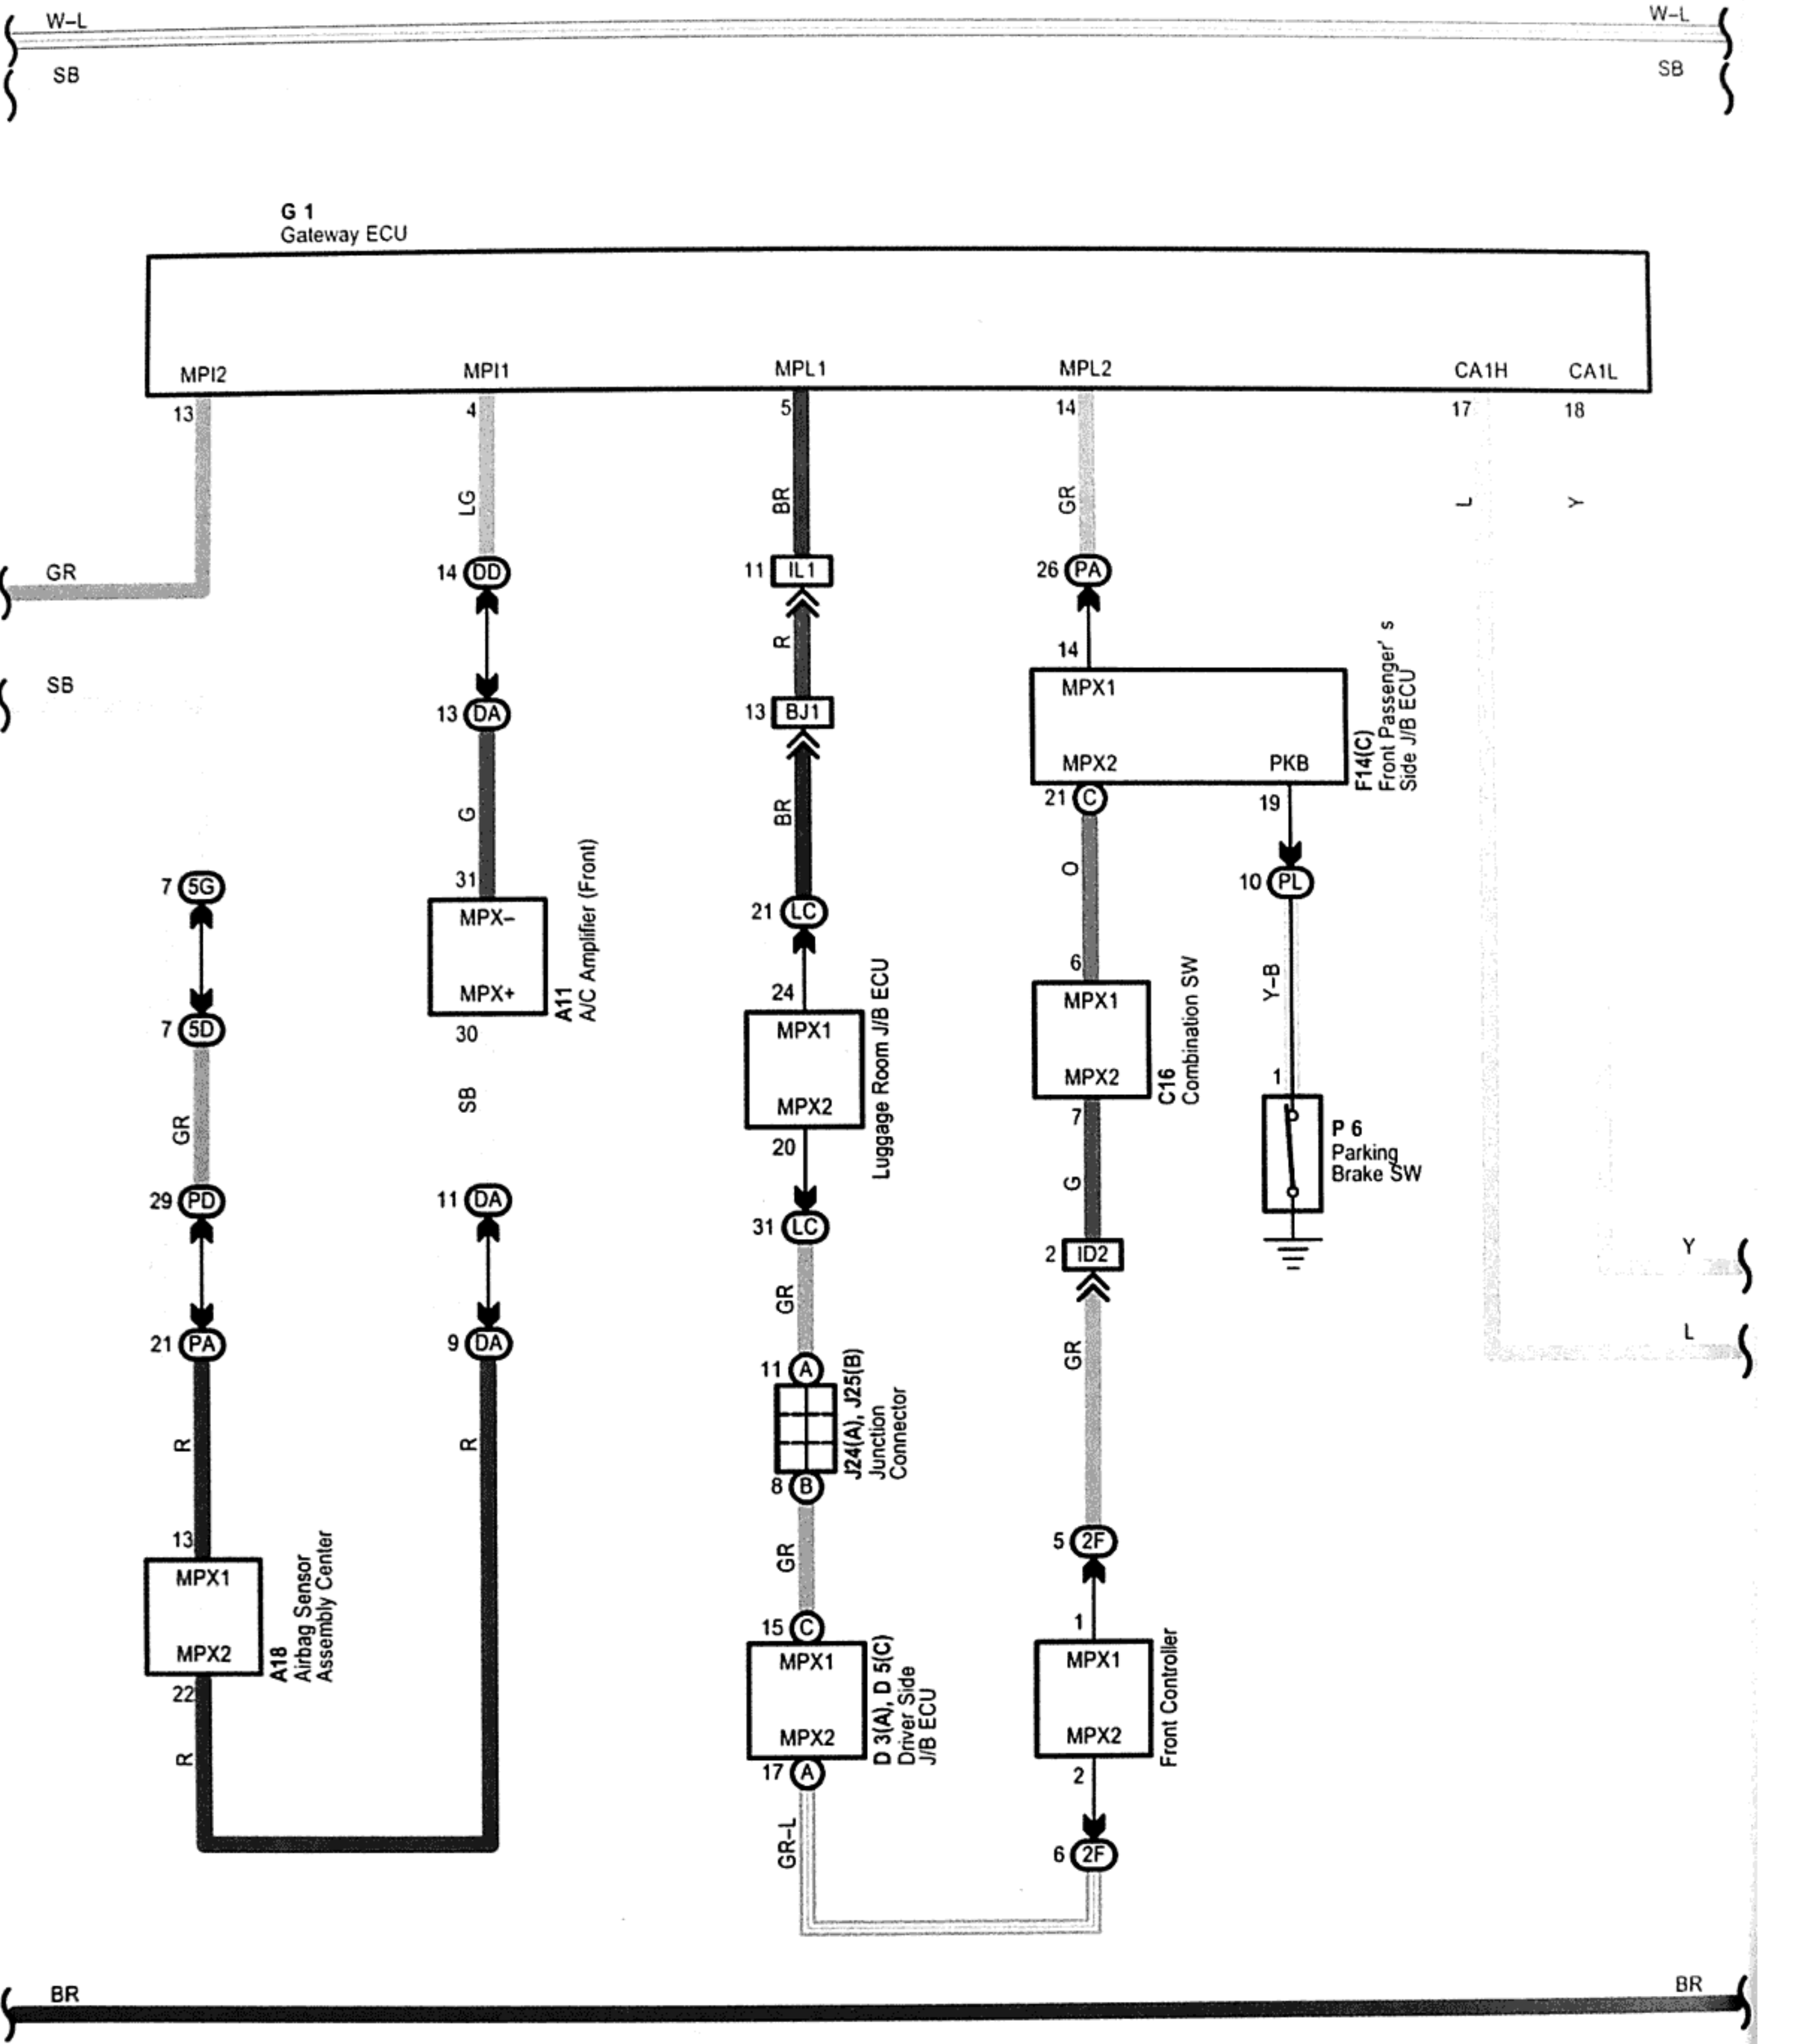

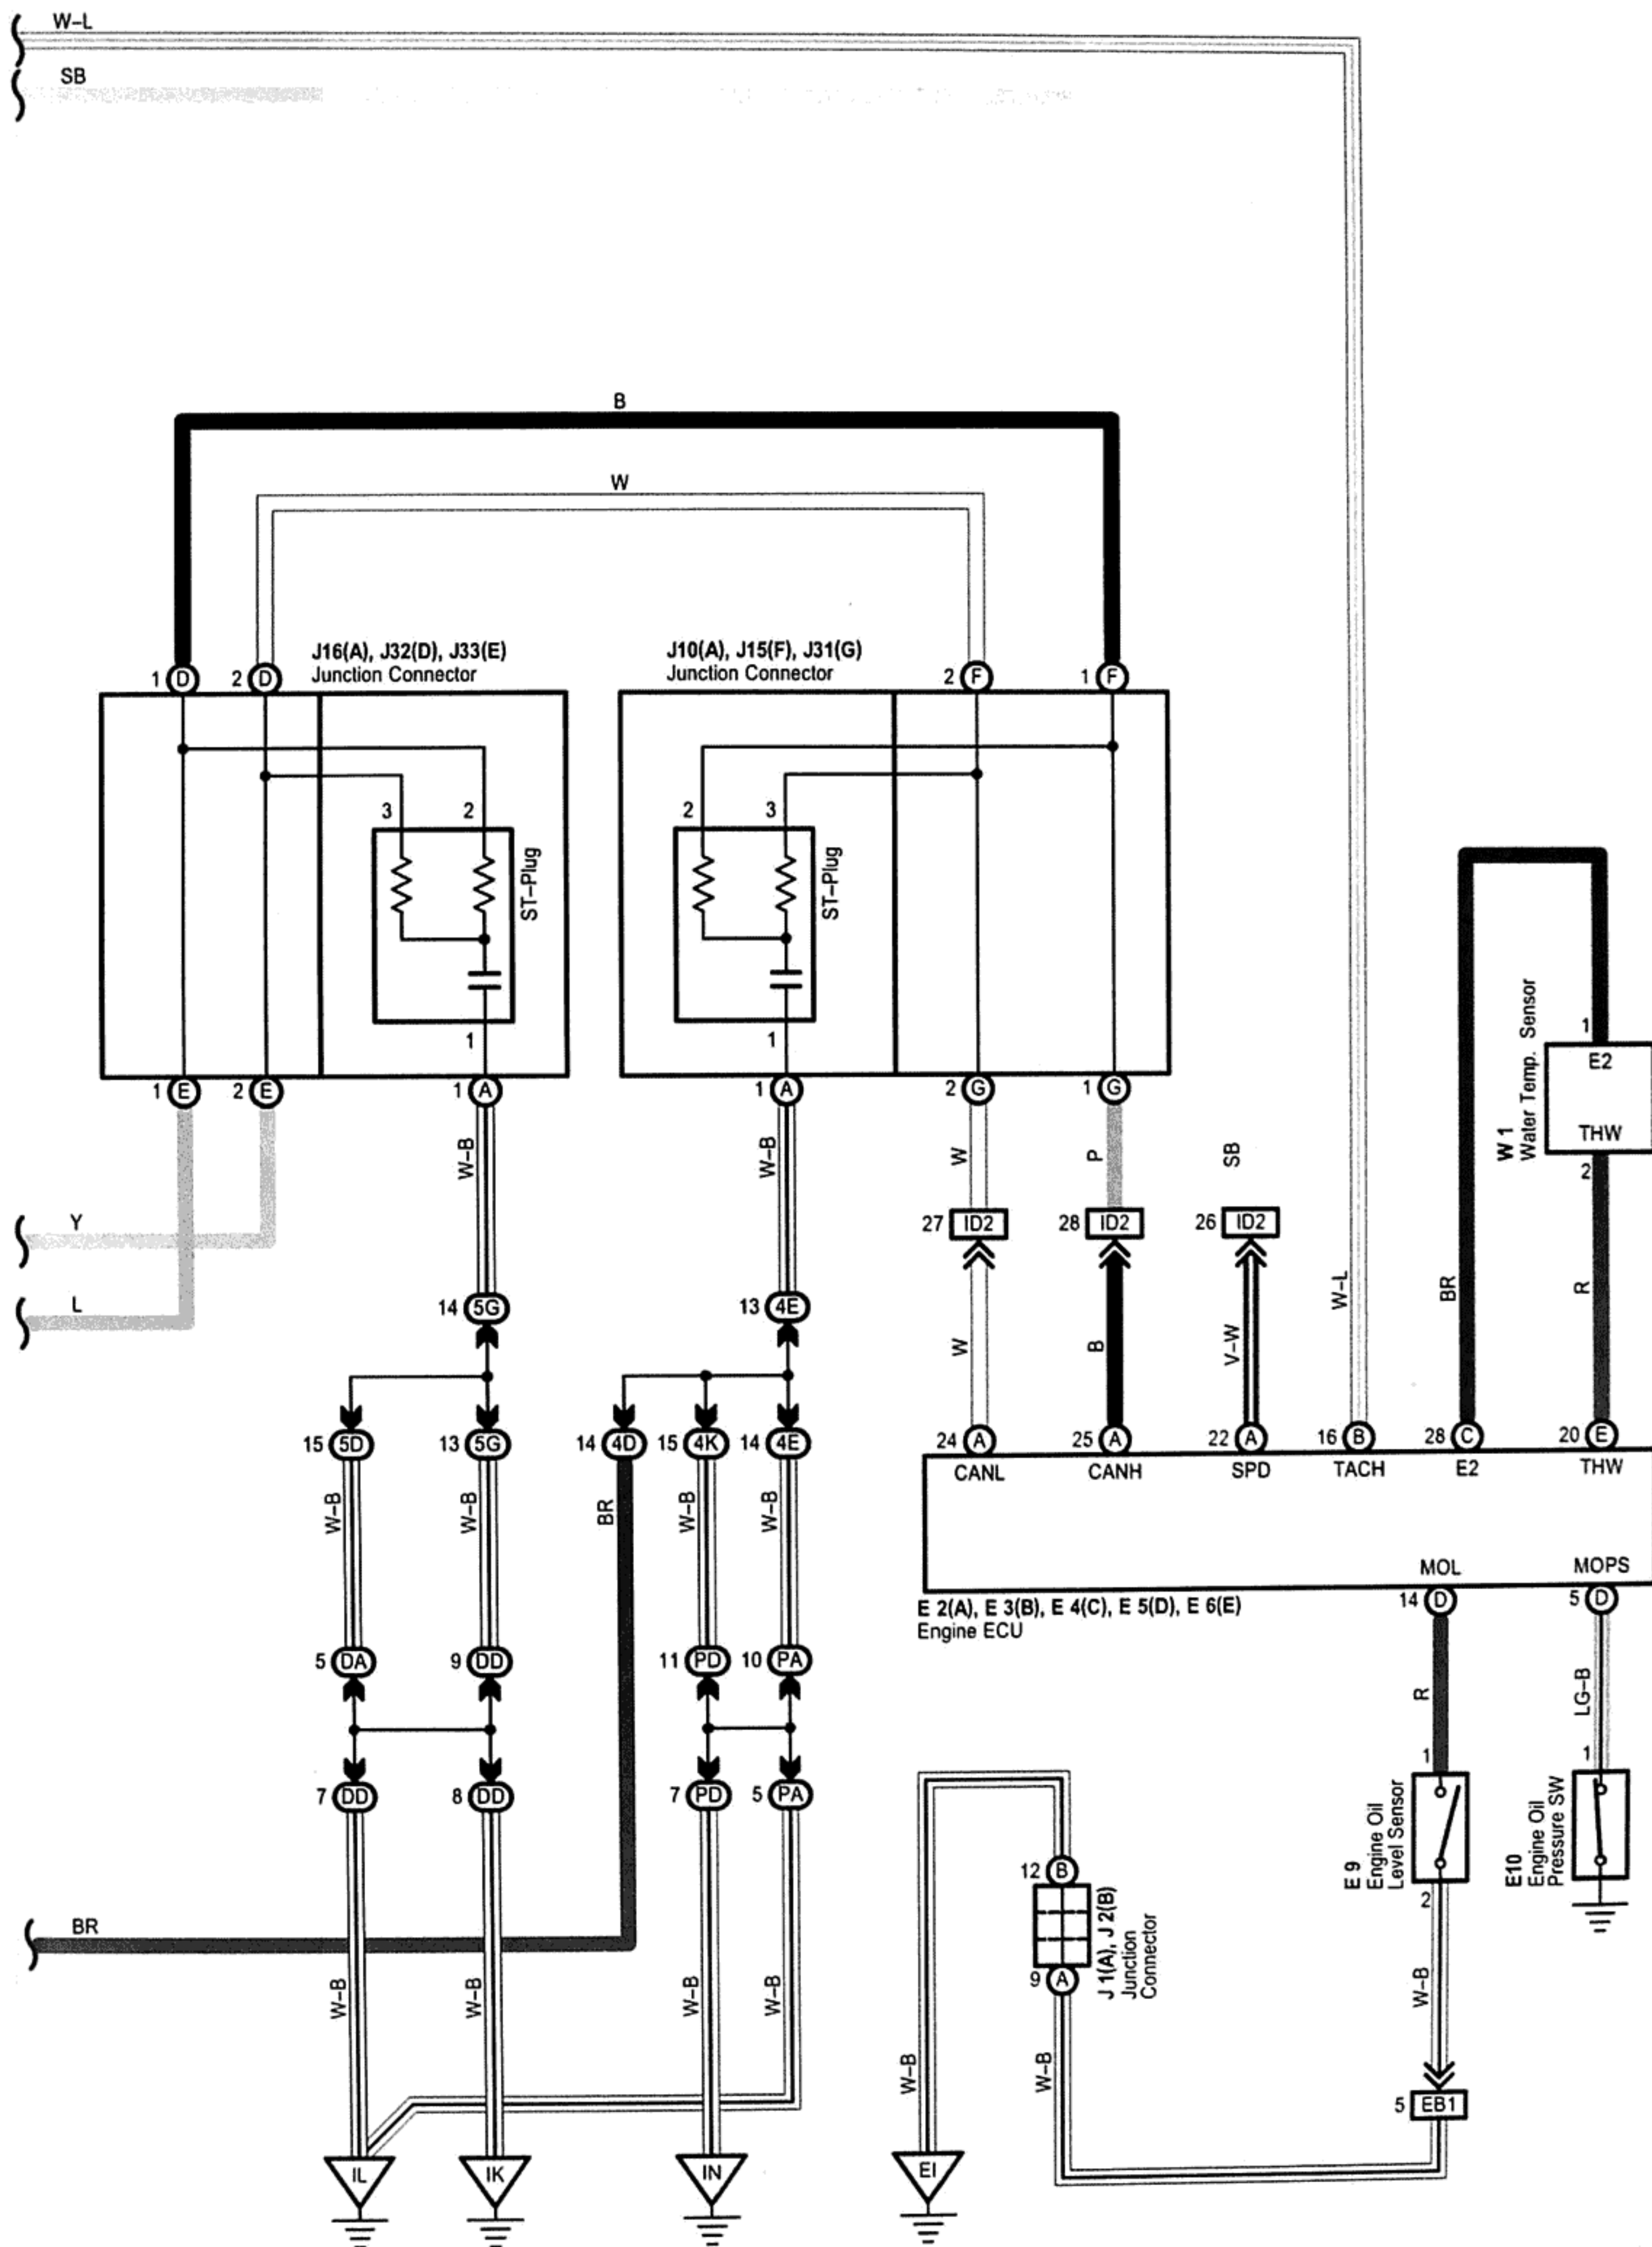

Service Hints

C15 Combination Meter

1–Ground : Approx. 12 volts with the ignition SW at ON position (Ignition SW type) or with the power SW at IG ON position (Power SW type)

21, 22–Ground : Always approx. 12 volts

20, 40–Ground : Always continuity

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A11		66	F14	C	67	J25	B	71
A18		66	F16		67	J31	G	58, 68
B3		62	F26		71	J32	D	60, 68
C15		66	F27		71	J33	E	60, 68
C16		66	G1		67	L1		68
D3	A	67	J1	A	64	P6		68
D5	C	67	J2	B	64	R3		68
E2	A	63	J7		64	S2		65
E3	B	63	J8	A	68	S12		69
E4	C	63	J9	B	68	S30		73
E5	D	63	J10	A	58, 68	T15		69
E6	E	63	J15	F	58, 68	W1		65
E9		63	J16	A	60, 68			
E10		63	J24	A	71			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B No.1 (Near the Front Right Suspension Tower)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	27	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
4C	44	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4K		
4L		
4M		
5D	48	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5G		
5I		
5J		
5K		
DA	33	Instrument Panel Wire and Driver Side J/B (Cowl Side Left)
DD		
DK	34	Engine Room Main Wire and Driver Side J/B (Cowl Side Left)
DL		
LC	55	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PA	39	Instrument Panel Wire and Front Passenger's Side J/B (Cowl Side Right)
PD		
PK	40	Engine Room Main Wire and Front Passenger's Side J/B (Cowl Side Right)
PL		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Room Main Wire and Engine Wire (Inside of the ECU Box)
ID2	78	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	78	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
II2	80	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
IK1	80	Instrument Panel Wire and Floor Wire (Under the Rear Console)
IL1	80	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BJ1	84	Floor Wire and Floor No.2 Wire (Rear Floor Partition Panel RH)

 : Ground Points

Code	See Page	Ground Points Location
EE	76	Rear Side of the Front Left Fender Apron
EI	76	Left Side of Cylinder Head
IK	78	Cowl Side Panel LH
IL	78	Left Side of Shift Lever
IN	78	Cowl Side Panel RH