



Starting and Ignition

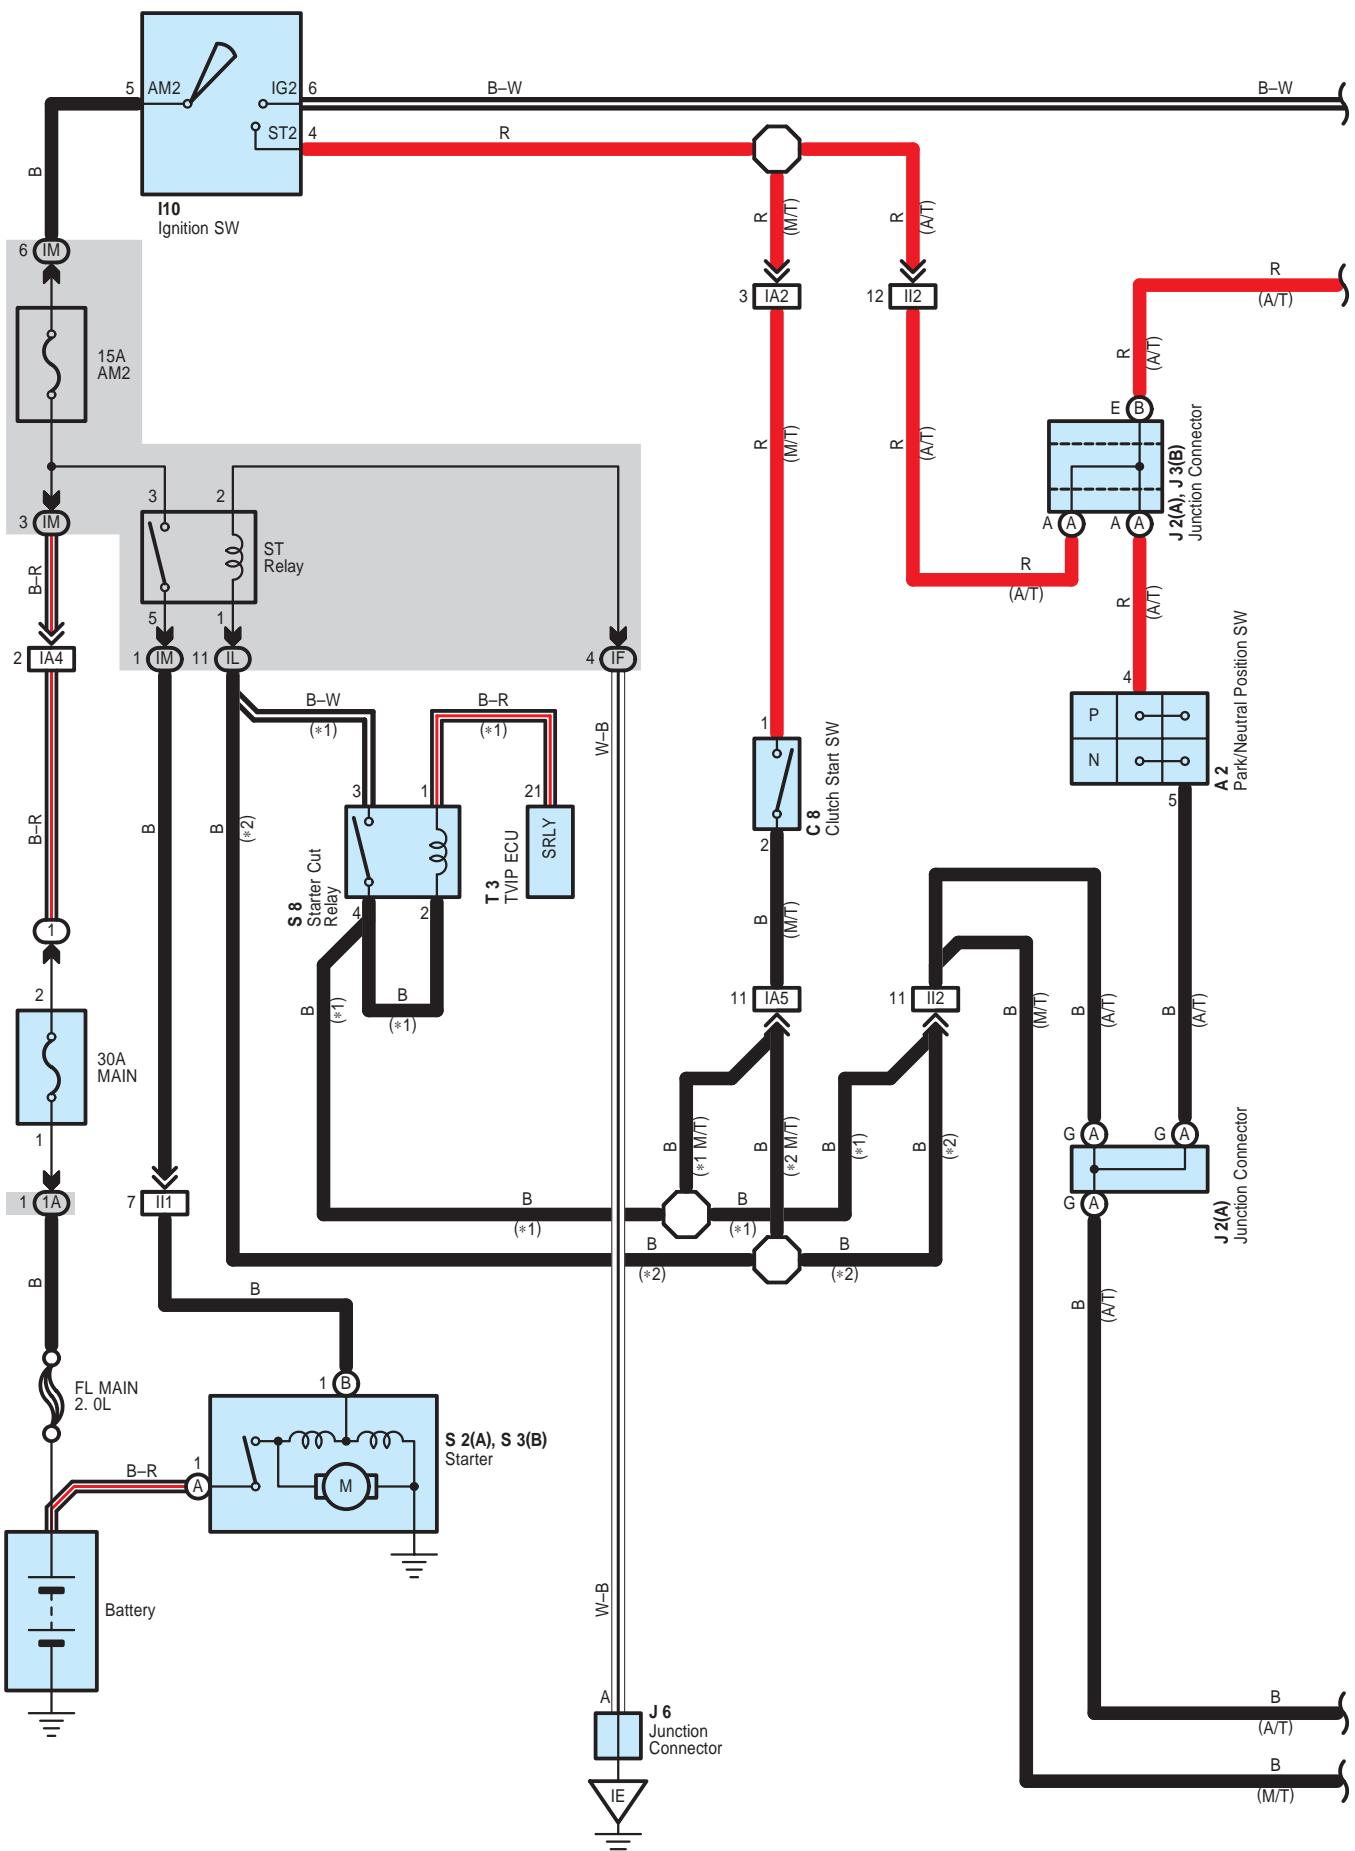

* 1 : w/ TVIP System
 * 2 : w/o TVIP System
 * 3 : 1ZZ-FE
 * 4 : 2ZZ-GE

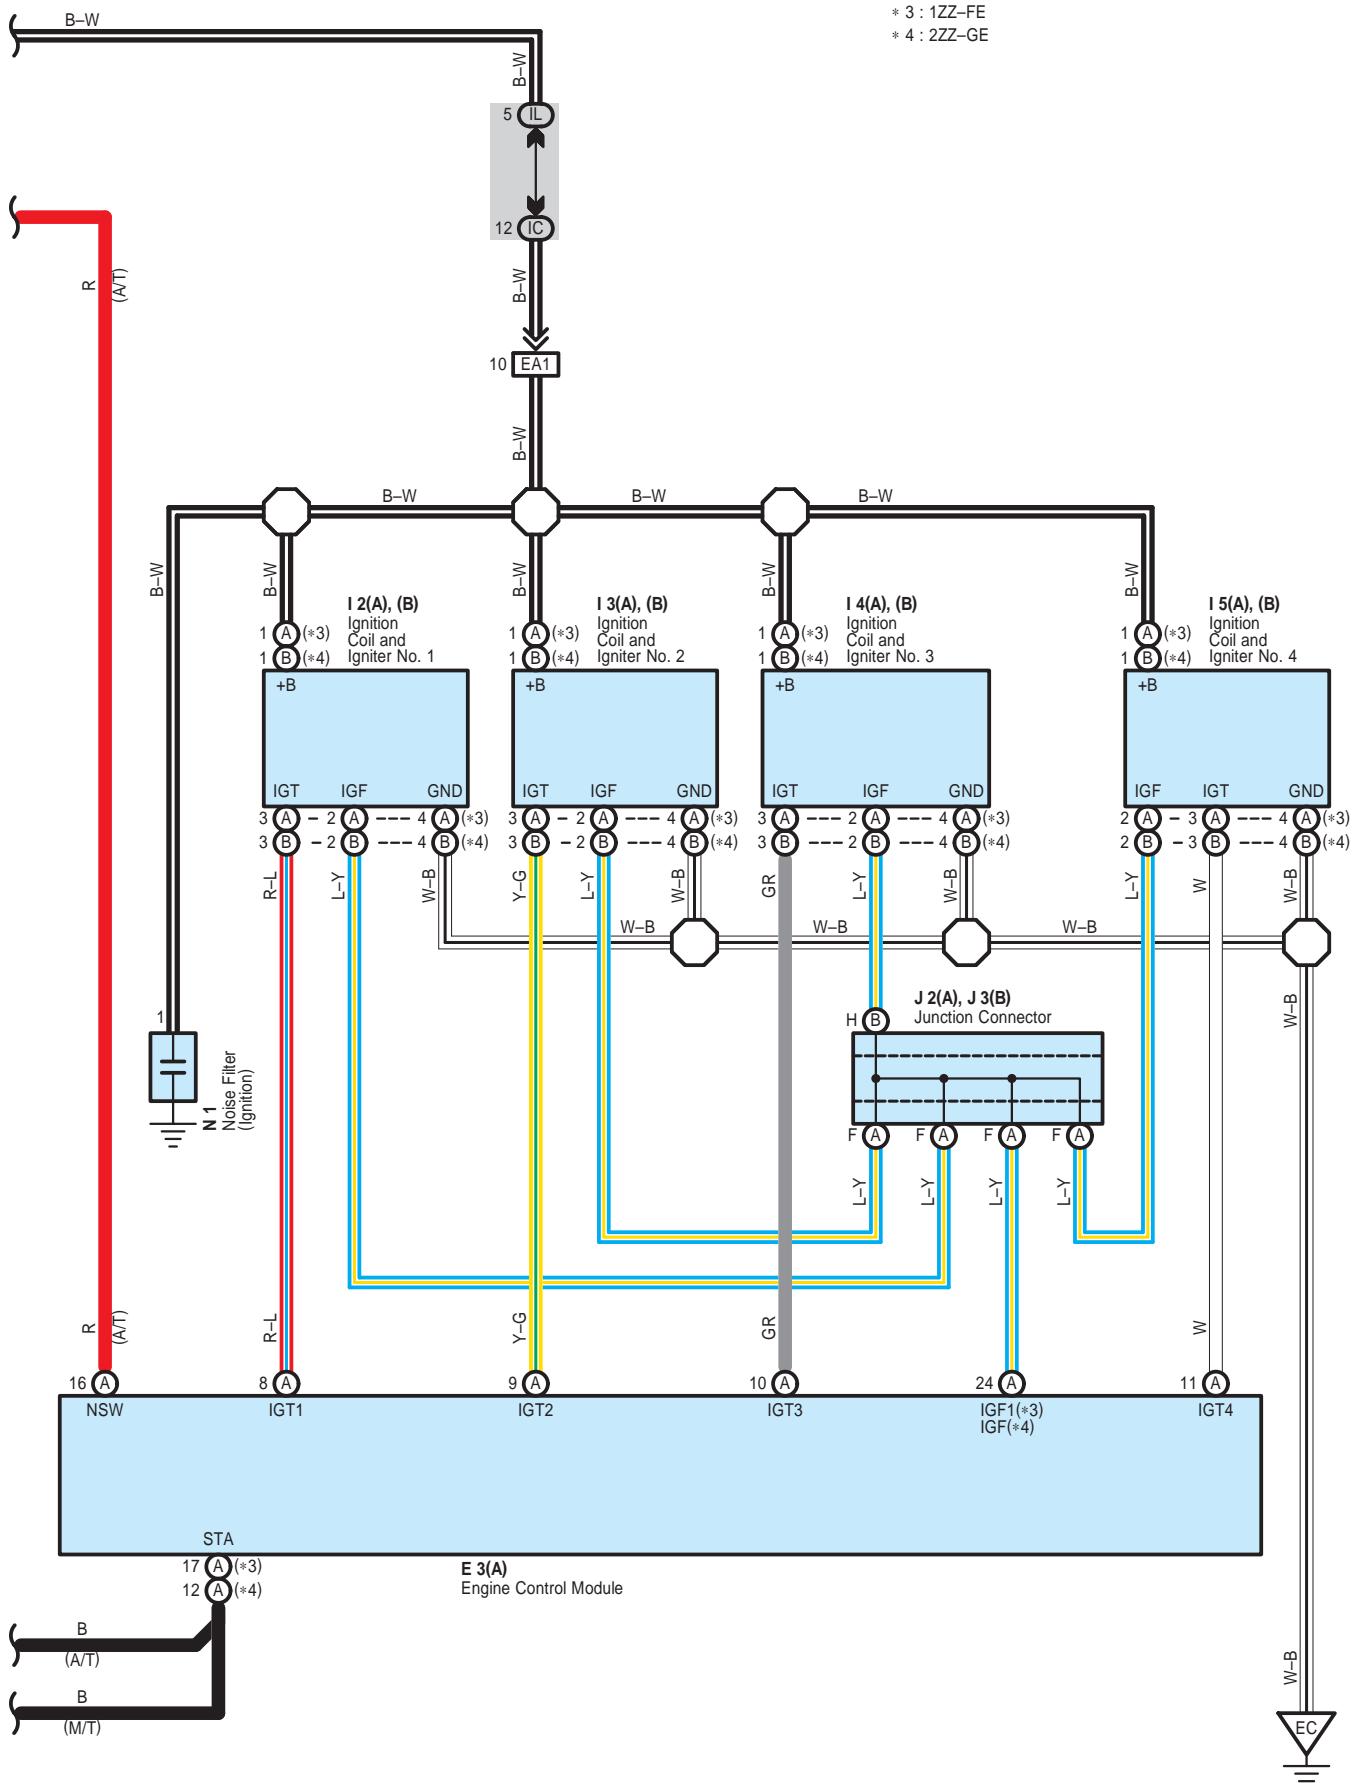

Starting and Ignition

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A2		32 (1ZZ-FE)		I4	A	33 (1ZZ-FE)		J6	37		
C8		36				35 (2ZZ-GE)				33 (1ZZ-FE)	
E3	A	36		I5	B	33 (1ZZ-FE)		N1	35 (2ZZ-GE)		
I2	A	33 (1ZZ-FE)				35 (2ZZ-GE)				33 (1ZZ-FE)	
	B	35 (2ZZ-GE)		I5	A	33 (1ZZ-FE)		S2	A	35 (2ZZ-GE)	
I3	A	33 (1ZZ-FE)				35 (2ZZ-GE)		S3	B	33 (1ZZ-FE)	
	A	35 (2ZZ-GE)		I10	B	33 (1ZZ-FE)				35 (2ZZ-GE)	
	B	35 (2ZZ-GE)				35 (2ZZ-GE)		S8	37		
		J2 A 37		J3 B 37				T3	37		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
IM		
1A	22	Engine Wire and Engine Room J/B (Engine Compartment Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	43 (2ZZ-GE)	
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)
IA4		
IA5		
II1	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
II2		

▽ : Ground Points

Code	See Page	Ground Points Location
EC	42 (1ZZ-FE)	Left Side of the Cylinder Head
	43 (2ZZ-GE)	
IE	44	Behind the Combination Meter

