

LAND CRUISER Station Wagon
ELECTRICAL WIRING DIAGRAM

(English)

INTRODUCTION	A	5
HOW TO USE THIS MANUAL	B	6
ABBREVIATIONS	C	8
RELAY LOCATIONS	D	22
ELECTRICAL WIRING ROUTING	E	26
CONNECTOR LIST	F	132
OVERALL ELECTRICAL WIRING DIAGRAM	G	143

	Location
ABS	40 2
ACCESSORY METER	22 3
AIR CONDITIONER, COOLER AND HEATER (AUTO A/C)	42 2
AIR CONDITIONER, COOLER AND HEATER (MANUAL A/C PUSH SW TYPE)	43 2
AIR CONDITIONER, COOLER AND HEATER (MANUAL DUAL A/C LEVER SW TYPE)	44 2
AIR CONDITIONER, COOLER AND HEATER (MANUAL SINGLE A/C LEVER SW TYPE)	45 2
AUTO ANTENNA (AUSTRALIA)	15 2
AUTO ANTENNA (EXCEPT AUSTRALIA)	15 4
AUTOMATIC TRANSMISSION INDICATOR	23 2
BACK-UP LIGHT	23 5
CHARGING	2 2
CIGARETTE LIGHTER	26 4
CLOCK	26 2
COMBINATION METER (AUSTRALIA)	34 2
COMBINATION METER (DIESEL FOR GENERAL, G.C.C., CIS AND COLD AREA)	33 2
COMBINATION METER (EUROPE EXCEPT CIS)	31 2
COMBINATION METER (GASOLINE FOR GENERAL, G.C.C.)	32 2
COOL/ICE BOX	46 2
CRUISE CONTROL	25 2
DOOR LOCK CONTROL	18 2
ECT (1FZ-FE)	37 2
ECT (DIESEL)	38 2
EMISSION CONTROL (1FZ-F G.C.C.)	35 2
EMISSION CONTROL (1FZ-F GENERAL)	35 3
ENGINE CONTROL (1FZ-FE)	30 2
ENGINE IMMOBILISER SYSTEM	3 3
4WD	24 2
FRONT WIPER AND WASHER (1FZ-FE, 1FZ-F)	36 2
FRONT WIPER AND WASHER (1HZ, 1HD-T, 1HD-FT)	19 2
FUEL HEATER	21 4
FUEL TANK CHANGEOVER (1FZ-FE)	39 2
FUEL TANK CHANGEOVER (EXCEPT 1FZ-FE)	39 3
GLOW PLUG	4 2
HEADLIGHT (EXCEPT EUROPE)	12 2
HEADLIGHT (LHD IN EUROPE w/o DAYTIME RUNNING LIGHT)	10 2
HEADLIGHT (U.K.)	11 2
HEADLIGHT (w/ DAYTIME RUNNING LIGHT)	9 2
HEADLIGHT BEAM LEVEL CONTROL	8 2
HEADLIGHT CLEANER	3 2
HORN	14 4
IGNITION (1FZ-F)	35 4
INTAKE HEATER (1HD-FT FOR AUSTRALIA)	5 2
INTAKE HEATER (1HD-FT FOR EUROPE)	6 2
INTERIOR LIGHT	13 2
LIGHT AUTO TURN OFF	39 4
LIGHT REMINDER	26 5
MOON ROOF	21 1
POWER SEAT	21 2
POWER WINDOW	17 2
PPS	7 2
RADIO AND PLAYER	29 2
REAR AIR CONDITIONER (AUTO)	47 2
REAR AIR CONDITIONER (MANUAL)	44 11
REAR FOG LIGHT	16 2
REAR WINDOW DEFOGGER	20 2
REAR WIPER AND WASHER (1FZ-FE, 1FZ-F)	36 3
REAR WIPER AND WASHER (1HZ, 1HD-T, 1HD-FT)	19 3
REMOTE CONTROL MIRROR	22 2
SEAT HEATER	20 3
SRS	41 2
STARTING	1 3
STOP LIGHT	26 6
12-24 VOLTS SWITCHOVER SYSTEM	1 2
TAILLIGHT AND ILLUMINATION (LHD)	27 2
TAILLIGHT AND ILLUMINATION (RHD)	28 2
TURN SIGNAL AND HAZARD WARNING LIGHT	14 2
UNLOCK AND SEAT BELT WARNING	23 7
WINCH	7 3

This manual consists of the following 7 sections:

No.	Section	Description
A	INDEX	Index of the contents of this manual.
	INTRODUCTION	Brief explanation of each section.
B	HOW TO USE THIS MANUAL	Instructions on how to use this manual.
C	ABBREVIATIONS	Defines the abbreviations used in this manual.
D	RELAY LOCATIONS	Shows position of the Electronic Control Unit, Relays, Relay Block, etc. This section is closely related to the wiring diagram.
E	ELECTRICAL WIRING ROUTING	Describes position of the Parts Connectors, Ground points, etc. This section is closely related to the wiring diagram.
F	CONNECTOR LIST	Describes the form of the connectors for the parts Appeared in this book. This section is closely related to the wiring diagram.
G	OVERALL ELECTRICAL WIRING DIAGRAM	Provides circuit diagrams showing the circuit connections.