


Light Auto Turn Off

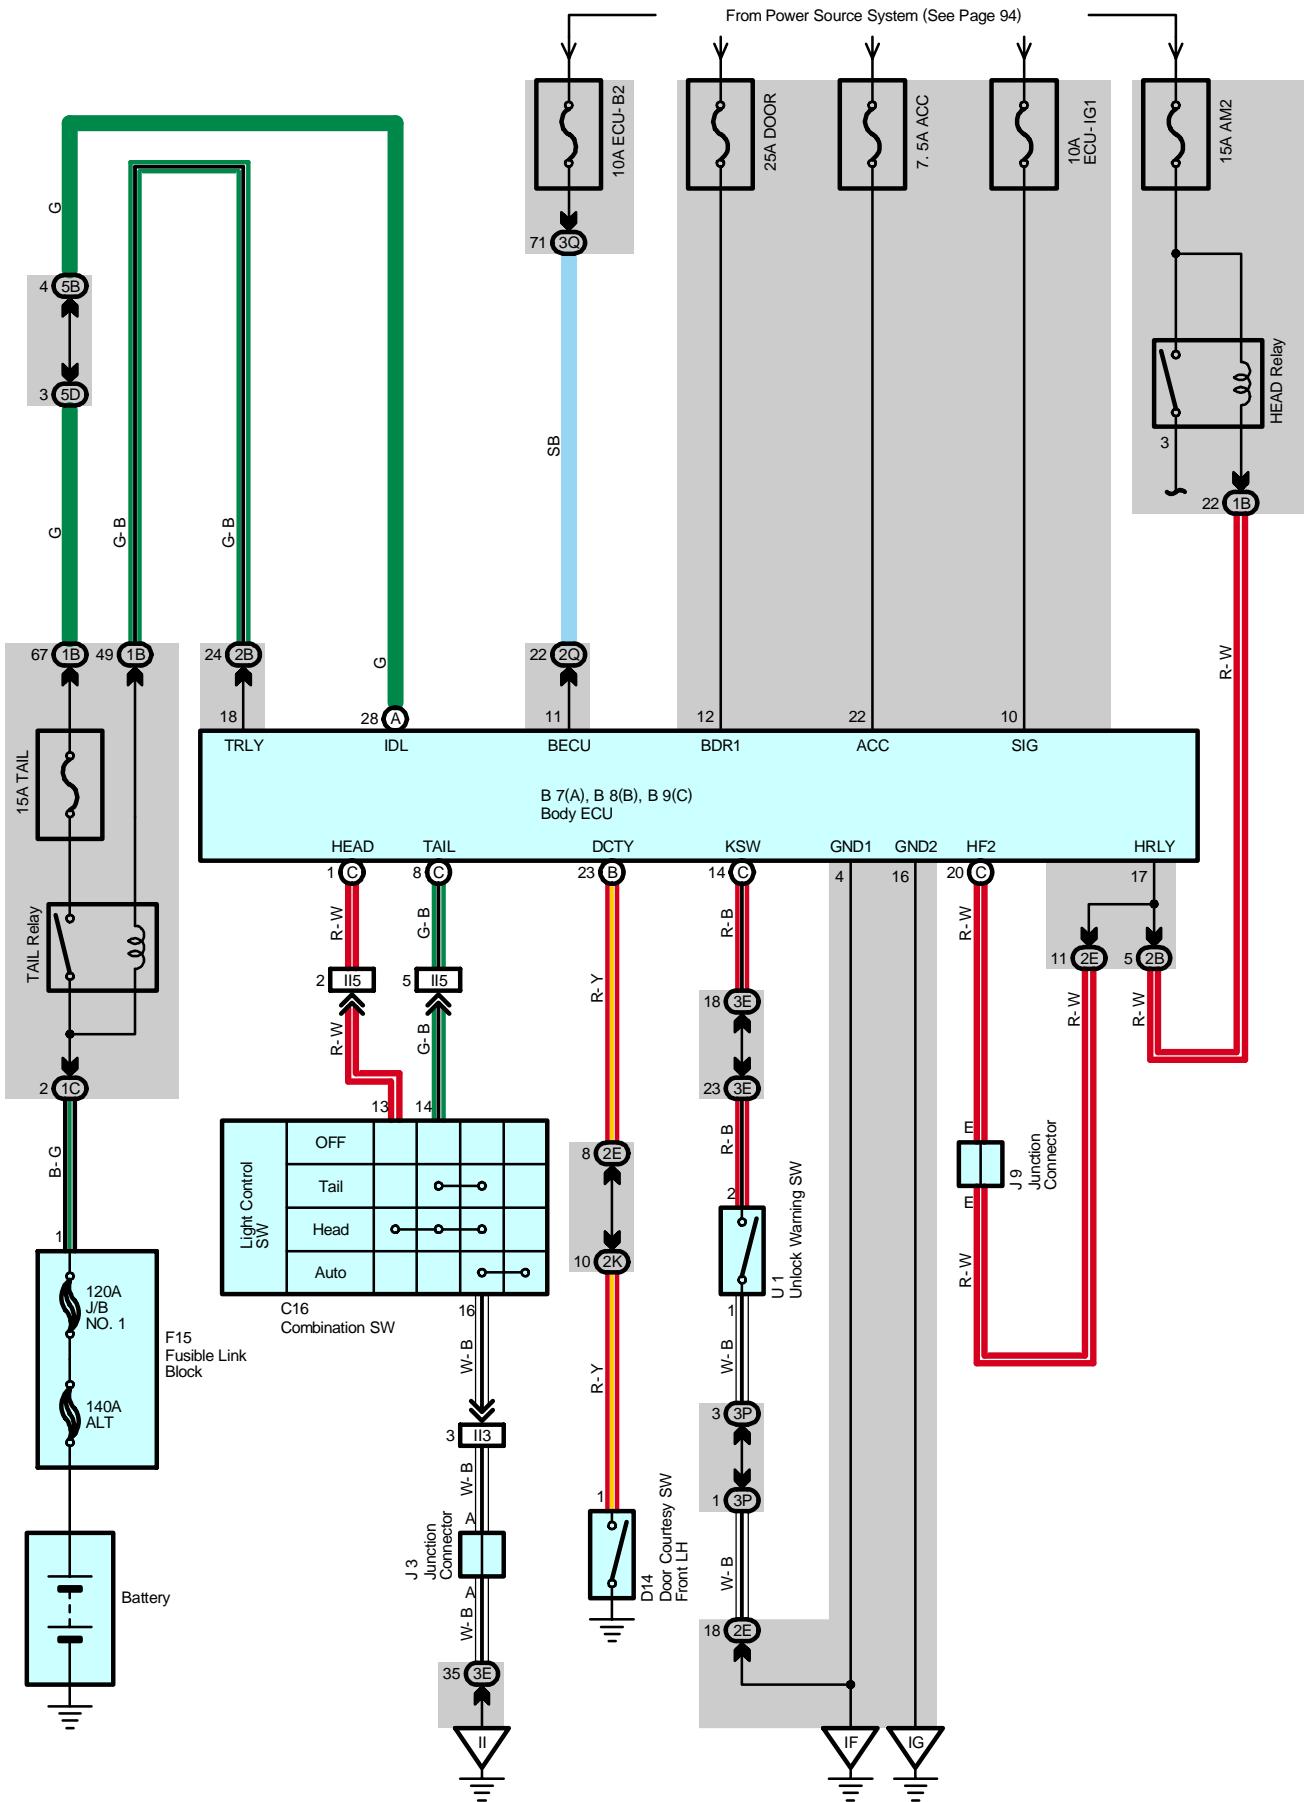

System Outline

The light auto turn off system automatically turns the taillight or headlight off according to the door open or close on the driver's side, and prevent failing to turn off the lights.

If the ignition switch is turned to OFF from ON with the headlight or taillight is on, the signal is input in the TERMINAL SIG of the body ECU. If the driver's side door is opened at that time, the signal from the door courtesy SW front LH is sent to the TERMINAL DCTY of the body ECU. The signal turns the headlight or taillight off.

Delayed turn off control

In the case of that some doors are opened, the headlight or taillight is left on for about 30 seconds after the all the doors was closed. However, if the doors are locked using the wireless door lock, the headlight or taillight is immediately turn off.

Service Hints

Body ECU

11, 12-Ground : Always approx. 12 volts

10-Ground : Approx. 12 volts with ignition SW at ON or ST position

4, 16-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B7	A	70	C16	70	J3
B8	B	70	D14	72	J9
B9	C	70	F15	68	U1

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3P	43	
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
II5		

▽ : Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
IG		
II	78	Set Bolt of Cowl Side J/B RH