























Position of Parts in Body

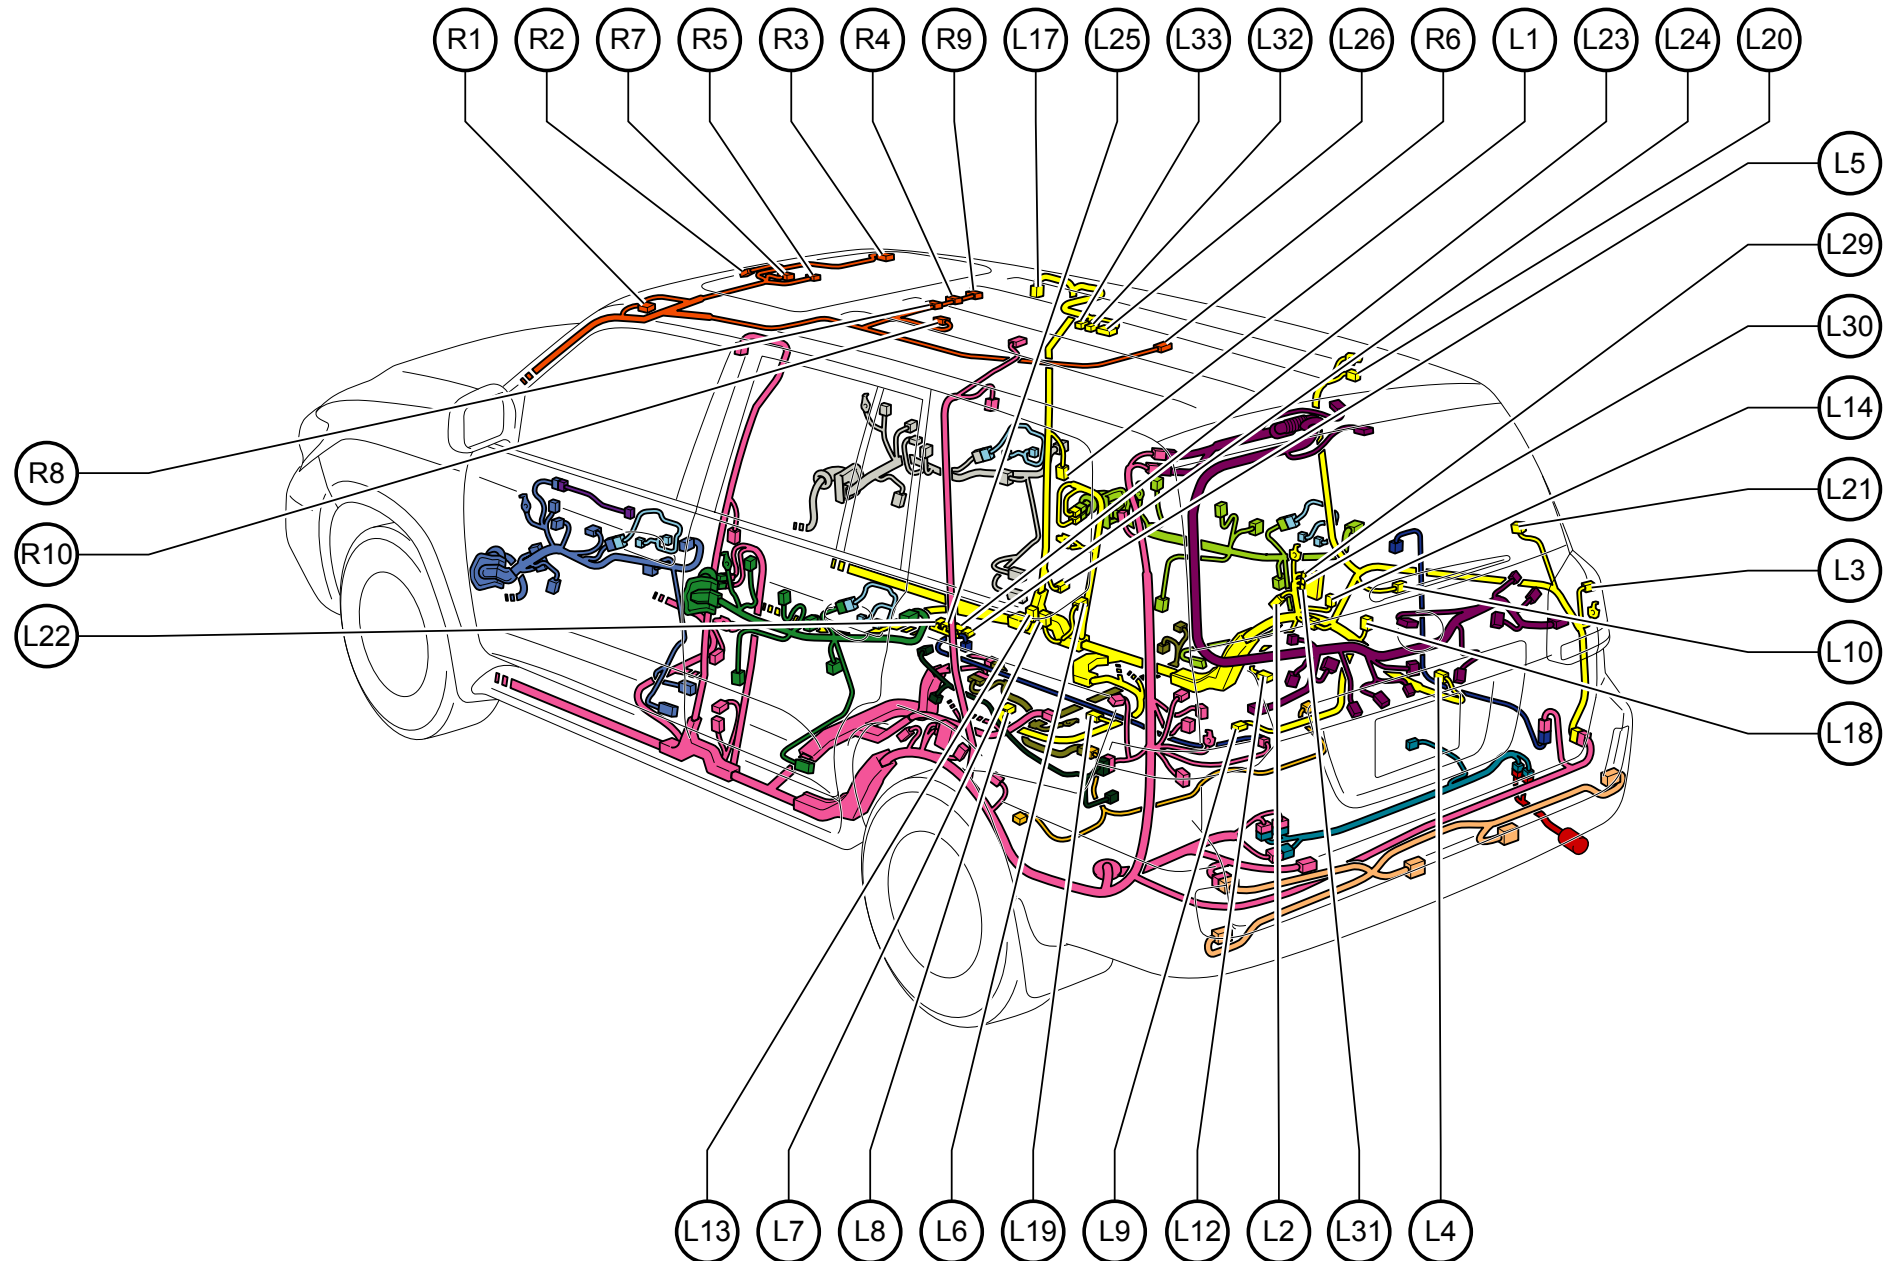

- L 1 Front Door Courtesy Light Switch Assembly RH
- L 2 Rear Door Courtesy Light Switch Assembly RH
- L 3 Rear Combination Light Assembly RH
- L 4 No.1 with Box Speaker Assembly
- L 5 Front Pre-Collision Seat Belt Motor RH
- L 6 Front Tension Reducer RH
- L 7 Seat Belt Tension Sensor
- L 8 Rear Indoor Electrical Key Oscillator
- L 9 Indoor Luggage Compartment Electrical Key Oscillator
- L 10 Tire Pressure Warning ECU
- L 12 Cooler Thermistor RH
- L 13 Front Pretensioner RH
- L 14 Rear Pretensioner RH
- L 17 Curtain Shield Airbag Assembly RH
- L 18 Rear Side Airbag Sensor Assembly RH
- L 19 Rear Floor Side Airbag Sensor
- L 20 Curtain Shield Airbag Assembly RH
- L 21 Door Control Receiver
- L 22 Multi-Display Selector
- L 23 Multi-Display Selector
- L 24 Multi-Display Selector
- L 25 Multi-Display Selector
- L 26 Television Display Assembly
- L 29 Junction Connector
- L 30 Junction Connector
- L 31 Junction Connector
- L 32 Television Display Assembly
- L 33 Television Display Assembly

- R 1 Visor Assembly □ H
- R 2 Inner Rear View Mirror Assembly
- R 3 Visor Assembly RH
- R 4 No.2 Room Light Assembly
- R 5 Sliding Roof Control ECU
- R 6 No.3 Room Light Assembly
- R 7 Overhead Module
- R 8 No.2 Room Light Assembly
- R 9 No.2 Room Light Assembly
- R 10 No.1 Room Light Assembly

    Position of Parts in Body

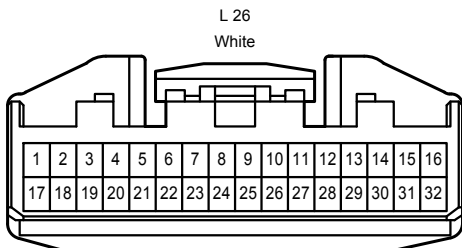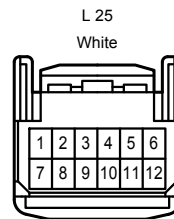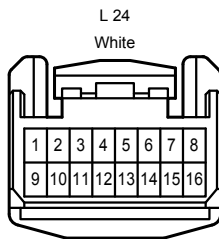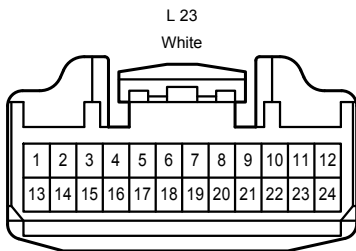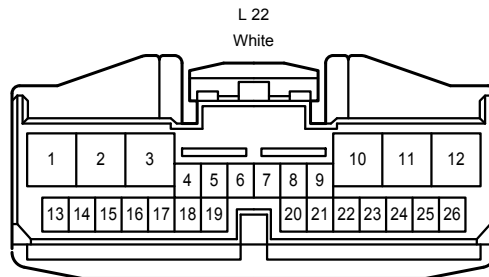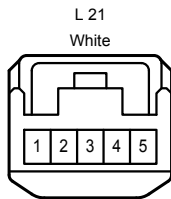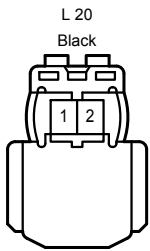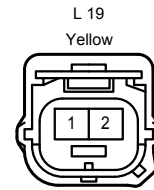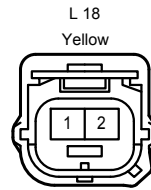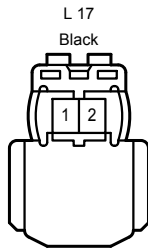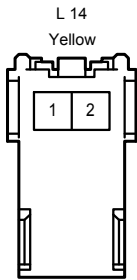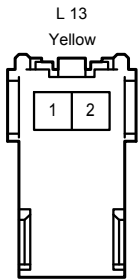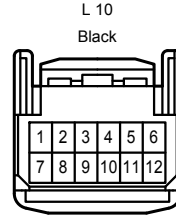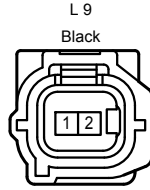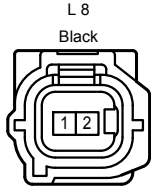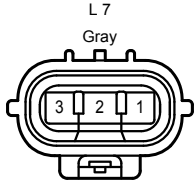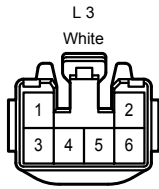

Position of Parts in Body

