
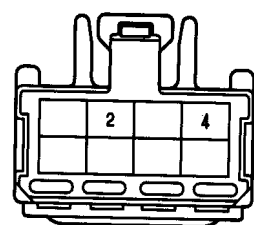
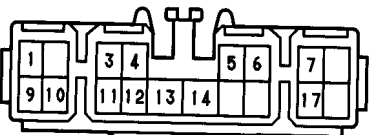
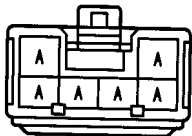

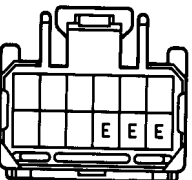
 
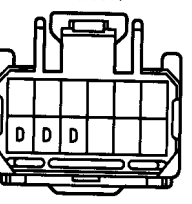
 
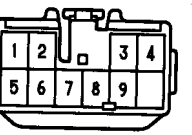
 
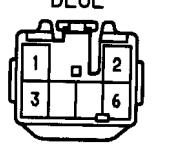
 
 


SYSTEM CIRCUIT CONNECTORS

| PARTS CODE | PARTS & CONNECTOR TYPE | LOCATION | PARTS CODE | PARTS & CONNECTOR TYPE | LOCATION |
|------------|--|----------------|------------|--|----------------|
| A16 | AUTO ANTENNA MOTOR GRAY  | 324-1 324-2 | I19 | IGNITION SW  | 324-1 |
| A28 | AUTO ANTENNA CONTROL RELAY DARK GRAY  | 324-1 324-2 | J 3 | JUNCTION CONNECTOR  | 324-2 |
| A29 | AUTO ANTENNA SW BLACK  | 324-2 | J 9 | Ⓐ JUNCTION CONNECTOR BLACK  | 324-2 |
| F12 | FRONT SPEAKER (Instrument panel)  | 325-4 | J10 | Ⓑ JUNCTION CONNECTOR BLACK  | 324-2 |
| F16 | FRONT SPEAKER LH  | 325-3 | R 1 | Ⓐ RADIO AND PLAYER BLUE  | 325-3 325-4 |
| F17 | FRONT SPEAKER RH  | 325-4 | R 2 | Ⓑ RADIO AND PLAYER BLUE  | 325-3 325-4 |

| PARTS CODE | PARTS & CONNECTOR TYPE | LOCATION | PARTS CODE | PARTS & CONNECTOR TYPE | LOCATION |
|------------|--|----------|------------|------------------------|----------|
| R26 | REAR SPEAKER LH  | 325-3 | | | |
| R27 | REAR SPEAKER RH  | 325-4 | | | |
| | | | | | |
| | | | | | |

| | Relays, Fuses and J/B etc. | Parts connector position | Joint connectors and Ground points |
|---------------|--|---|---|
| See page | 26 to 39 | 40 to 123 | 124 to 169 |
| | <i>Relais, fusibles, blocs de jonction, etc.</i> | <i>Implanation de bloc raccord de câblage d'ornages</i> | <i>Blocs raccord de câblage contacts de masse</i> |
| Voir page | 26 à 39 | 40 à 123 | 124 à 169 |
| | <i>Relés, fusibles, bloques de unión etc.</i> | <i>Posición del conector de partes</i> | <i>Conectores de unión y puntos de tierra</i> |
| Vea la página | 26 a 39 | 40 a 123 | 124 a 169 |
| | <i>Relais, Sicherungen, Anschlußkasten usw.</i> | <i>Steckerpositionen</i> | <i>Verbindungsstecker und Masseanschlüsse</i> |
| Seite | 26 bis 39 | 40 bis 123 | 124 bis 169 |

LHD

LHD