

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	A34	Air Vent Mode Control Servo Motor	90980-11909
A 2	A/C Condenser Fan Motor	90980-11237	A35	Airbag Sensor Assembly (w/ Side Airbag)	82824-50160
A 3	A/C Lock Sensor	90980-11016		Airbag Sensor Assembly (w/o Side Airbag)	90980-11869
	A/C Magnetic Clutch		A36	Airbag Sensor Assembly	90980-11872
A 4	A/C Magnetic Clutch	90980-11271	A37	Airbag Sensor Assembly (w/ Side Airbag)	82824-50150
A 5	A/C Magnetic Valve	90980-11075		Airbag Sensor Assembly (w/o Side Airbag)	90980-11867
A 6	A/T Oil Temp. Sensor (1GR-FE)	90980-11025	A38	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160
	A/T Oil Temp. Sensor (1KD-FTV, 1KZ-TE)		A39	Airbag Squib (Steering Wheel Pad)	
		A/T Oil Temp. Sensor (3RZ-FE)	90980-10706	A40	Antenna Amplifier
A 7	ABS & BA & TRC & VSC Actuator	90980-11413	A41	Ashtray Illumination	90980-10825
A 8	ABS & BA & TRC & VSC Actuator	90980-10895	A42	ABS Speed Sensor Rear (3-Door)	90980-10941
A 9	ABS & BA & TRC & VSC Actuator	90980-11151		ABS Speed Sensor Rear (5-Door)	90980-10942
A10	ABS Speed Sensor Front LH	90980-11003	A43	Absorber Control Actuator Rear LH	90980-11930
A11	ABS Speed Sensor Front RH		A44	Absorber Control Actuator Rear RH	
A12	Absorber Control Actuator Front LH	90980-11929	A45	Acceleration Control Sensor Rear	90980-10845
A13	Absorber Control Actuator Front RH		A46	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178
A14	Air Flow Meter (1KD-FTV, 1GR-FE)	90980-11317	A47	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	
	Air Flow Meter (3RZ-FE Unleaded Gasoline)	90980-12292	B 1	Back-Up Light SW	90980-11250
A15	Air Vent Control Servo Motor	90980-11144	B 2	Brake Fluid Level Warning SW (w/ VSC)	90980-11009
A16	Airbag Sensor Front LH	90980-11856		Brake Fluid Level Warning SW (w/o VSC)	90980-11207
A17	Airbag Sensor Front RH		B 3	Brake Vacuum Warning SW	90980-11252
A18	Alternator (1GR-FE)	90980-09372	B 4	Blower Motor Linear Controller	90980-11676
	Alternator (1KD-FTV)	90980-09213	B 5	Blower Resistor	90980-11136
	Alternator (3RZ-FE, 1KZ-TE, 5L-E)	90980-09212	B 6	Blower SW	90980-10877
A19	Alternator (1KD-FTV)	90980-11964	B 7	Body ECU	90980-12151
	Alternator (1KZ-TE, 5L-E)	90980-11349	B 8	Body ECU	90980-12149
	Alternator (3RZ-FE, 1GR-FE)	90980-11964	B 9	Body ECU	90980-12150
A20	A/C Amplifier	90980-10803	B10	Back Door Courtesy SW	90980-10871
A21	A/C Control Assembly (w/o Navigation System)	90980-12151	B11	Back Door Key Lock and Unlock SW	90980-12226
	A/C ECU (w/ Navigation System)			Back Door Lock Motor	
A22	A/C Control Assembly (w/o Navigation System)	90980-12149		Back Door Unlock Detection SW	
	A/C ECU (w/ Navigation System)		B12	Buckle SW LH	90980-10795
A23	A/C Control Assembly (w/o Navigation System)	90980-12150	Occupant Detection Sensor		
	A/C ECU (w/ Navigation System)		B13	Buckle SW LH	90980-12257
A24	A/C Room Temp. Sensor	90980-11918	Seat Position Sensor		
A25	A/C Solar Sensor	90980-12056	B14	Buckle SW RH	90980-10795
A26	A/C Thermistor	90980-11918		Occupant Detection Sensor	
A27	A/T Shift Indicator	90980-11911	B15	Buckle SW RH	90980-12257
A28	Accel Position Sensor	90980-11858		Seat Position Sensor	
A29	Acceleration Control Sensor Front	90980-10845	C 1	Camshaft Position Sensor	90980-10947
A30	Accessory Meter	90980-11911	C 2	Check Connector	90980-11323
A31	Air Inlet Control Servo Motor	90980-11909	C 3	Crankshaft Position Sensor (1GR-FE)	90980-12028
A32	Air Mix Control Servo Motor LH			Crankshaft Position Sensor (1KD-FTV)	90980-11016
A33	Air Mix Control Servo Motor RH			Crankshaft Position Sensor (1KZ-TE, 5L-E)	90980-11162
				Crankshaft Position Sensor (3RZ-FE)	90980-11016

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number	
C 4	CD Automatic Changer	90980-12262	D20	Door Key Lock and Unlock SW Front RH	90980-12226	
C 5	Center Diff. Lock Control SW	90980-11013		Door Lock Motor Front RH		
C 6	Center Diff. Lock ECU	90980-10801		Door Unlock Detection SW Front RH		
C 7	Cigarette Lighter	90980-10760		Double Door Lock Motor Front RH		
C 8	Cigarette Lighter Illumination	90980-11148		Position SW Front RH		
C 9	Combination Meter	82824-35040	D21	Door Lock Control SW (LHD 3-Door w/o Jam Protection)	90980-10997	
C10	Combination Meter	82824-35030		Door Lock Control SW (w/ Jam Protection)	90980-12166	
C11	Combination Meter	82824-35040		Door Lock Control SW (w/o Jam Protection Except LHD 3-Door)	90980-12122	
C12	Combination Meter	82824-35030		Power Window Master SW (LHD 3-Door w/o Jam Protection)	90980-10997	
C13	Combination SW	90980-12183		Power Window Master SW (w/ Jam Protection)	90980-12166	
C14	Combination SW (LH Turn Lever Type)	90980-11672		Power Window Master SW (w/o Jam Protection Except LHD 3-Door)	90980-12122	
	Combination SW (RH Turn Lever Type)	90980-11671				
C15	Combination SW	90980-11594				
C16	Cool Box Amplifier	90980-10801	D22	Door Lock Motor Rear LH	90980-12226	
C17	Cool Box Motor	90980-10825		Door Unlock Detection SW Rear LH		
C18	Cool Box SW	90980-10933		Double Door Lock Motor Rear LH		
C19	Cool Box Thermistor	90980-10216		Position SW Rear LH		
C20	Cruise Control Clutch SW	90980-10906	D23	Door Lock Motor Rear RH		
C21	Curtain Shield Airbag Squib LH	90980-12219		Door Unlock Detection SW Rear RH		
C22	Curtain Shield Airbag Squib RH			Double Door Lock Motor Rear RH		
C23	Camshaft Timing Oil Control Valve LH	90980-11162		Position SW Rear RH		
C24	Camshaft Timing Oil Control Valve RH					
D 1	Detection SW (Transfer 4WD Position)	90980-11156	D24	Diode (Back-Up Light)	90980-11071	
D 2	Detection SW (Transfer L4 Position)					
D 3	Detection SW (Transfer Neutral Position)	90980-10923	E 1	ECT Solenoid (1KD-FTV, 1KZ-TE, 1GR-FE)	90980-10891	
D 4	Deceleration Sensor	90980-10845		ECT Solenoid (3RZ-FE)	90980-10919	
D 5	Diode (Front Fog Light)	90980-10962	E 2	EGR Valve Position Sensor	90980-11143	
D 6	DLC3	90980-11978	E 3	Electronic Driver Unit	90980-11592	
D 7	Double Door Lock Control Relay	90980-10807	E 4	Electronic Driver Unit	90980-11024	
D 8	Downhill Assist Control SW	90980-11013	E 5	Engine Hood Courtesy SW	90980-10942	
D 9	Detection SW (Rear Diff. Lock)	90980-11250	E 6	Engine Oil Level Sensor	90980-11235	
D10	Door Control Receiver	90980-11909	E 7	Engine Speed Sensor	90980-11250	
D11	Door Courtesy Light Front LH	90980-11148	E 8	ECT Pattern Select SW	90980-11013	
D12	Door Courtesy Light Front RH		E 9	Engine and ECT ECU (A/T) (1GR-FE)	90980-12146	
D13	Door Courtesy Light Rear LH			Engine and ECT ECU (A/T) (1KD-FTV)	90980-11637	
D14	Door Courtesy Light Rear RH			Engine and ECT ECU (A/T) (1KZ-TE, 3RZ-FE Unleaded Gasoline)	90980-11638	
D15	Door Courtesy SW Front LH	Engine and ECT ECU (A/T) (5L-E)		90980-11408		
D16	Door Courtesy SW Front RH	Engine ECU (M/T) (1GR-FE)		90980-12146		
D17	Door Courtesy SW Rear LH	Engine ECU (M/T) (1KD-FTV)		90980-11637		
D18	Door Courtesy SW Rear RH	Engine ECU (M/T) (1KZ-TE, 3RZ-FE Unleaded Gasoline)		90980-11638		
D19	Door Key Lock and Unlock SW Front LH	90980-12226		Engine ECU (M/T) (5L-E)	90980-11408	
	Door Lock Motor Front LH					
	Door Unlock Detection SW Front LH					
	Double Door Lock Motor Front LH					
	Position SW Front LH					

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
E10	Engine and ECT ECU (A/T) (1GR-FE)	90980-12142	E13	Engine and ECT ECU (A/T) (1GR-FE)	90980-12143
	Engine and ECT ECU (A/T) (1KD-FTV)	90980-11638		Engine and ECT ECU (A/T) (1KD-FTV)	90980-11421
	Engine and ECT ECU (A/T) (1KZ-TE)	90980-11637		Engine ECU (M/T) (1GR-FE)	90980-12143
	Engine and ECT ECU (A/T) (3RZ-FE Leaded Gasoline)	90980-10765		Engine ECU (M/T) (1KD-FTV)	90980-11421
	Engine and ECT ECU (A/T) (3RZ-FE Unleaded Gasoline)	90980-11637	F 1	Front Clearance Light LH	90980-10942
	Engine and ECT ECU (A/T) (5L-E)	90980-10765		Front Turn Signal Light LH	
	Engine ECU (M/T) (1GR-FE)	90980-12142	F 2	Front Clearance Light RH	90980-11096
	Engine ECU (M/T) (1KD-FTV)	90980-11638		Front Turn Signal Light RH	
	Engine ECU (M/T) (1KZ-TE)	90980-11637	F 3	Front Fog Light LH	90980-11096
	Engine ECU (M/T) (3RZ-FE Leaded Gasoline)	90980-10765	F 4	Front Fog Light RH	
	Engine ECU (M/T) (3RZ-FE Unleaded Gasoline)	90980-11637	F 5	Front Side Turn Signal Light LH	90980-11162
	Engine ECU (M/T) (5L-E)	90980-10765	F 6	Front Side Turn Signal Light RH	
E11	Engine and ECT ECU (A/T) (1GR-FE)	90980-12144	F 7	Front Wiper Motor	90980-11599
	Engine and ECT ECU (A/T) (1KD-FTV)	90980-11586	F 8	Fuel Heater	90980-10928
	Engine and ECT ECU (A/T) (1KZ-TE)	90980-11476	F 9	Fuel Pressure Sensor	90980-10845
	Engine and ECT ECU (A/T) (3RZ-FE Leaded Gasoline)	90980-11391	F10	Fuel Sedimentary SW	90980-11003
	Engine and ECT ECU (A/T) (3RZ-FE Unleaded Gasoline)	90980-11476	F11	Fuel Temp. Sensor	90980-10737
	Engine and ECT ECU (A/T) (5L-E)	90980-11391	F12	Front Blower Motor	90980-10385
	Engine ECU (M/T) (1GR-FE)	90980-12144	F13	Front Passenger's Seat Belt Warning Light	90980-11296
	Engine ECU (M/T) (1KD-FTV)	90980-11586	F14	Front Door Speaker LH	90980-10935
	Engine ECU (M/T) (1KZ-TE)	90980-11476	F15	Front Door Speaker RH	
	Engine ECU (M/T) (3RZ-FE Leaded Gasoline)	90980-11391	F16	Front Door Squawker LH	90980-10860
	Engine ECU (M/T) (3RZ-FE Unleaded Gasoline)	90980-11476	F17	Front Door Squawker RH	
	Engine ECU (M/T) (5L-E)	90980-11391	F18	Front Door Tweeter Speaker LH	90980-11013
E12	Engine and ECT ECU (A/T) (1GR-FE)	90980-12145	F19	Front Door Tweeter Speaker RH	
	Engine and ECT ECU (A/T) (1KD-FTV)	90980-11476	F20	Fuel Pump	90980-11038
	Engine and ECT ECU (A/T) (1KZ-TE)	90980-11421	F21	Fuel Pump and Sender (Gasoline)	90980-11077
	Engine and ECT ECU (A/T) (3RZ-FE Leaded Gasoline)	90980-11390		Fuel Sender (Diesel)	
	Engine and ECT ECU (A/T) (3RZ-FE Unleaded Gasoline)	90980-11421	F22	Fuel Sender	82890-32030
	Engine and ECT ECU (A/T) (5L-E)	90980-11390	F23	Fuel Sender (Sub)	90980-11038
	Engine ECU (M/T) (1GR-FE)	90980-12145	F24	Fuel Sender (Sub)	82890-32030
	Engine ECU (M/T) (1KD-FTV)	90980-11476	F25	Fuel Pump Resistor	90980-11156
	Engine ECU (M/T) (1KZ-TE)	90980-11421	G 1	Glow Plug (1KD-FTV, 1KZ-TE)	99141-13004
	Engine ECU (M/T) (3RZ-FE Leaded Gasoline)	90980-11390		Glow Plug (5L-E)	90980-09318
	Engine ECU (M/T) (3RZ-FE Unleaded Gasoline)	90980-11421	G 2	Gateway ECU	90980-11911
	Engine ECU (M/T) (5L-E)	90980-11390	G 3	Glove Box Light	90980-11148
E13			G 4	Glove Box Light SW	90980-11098
			H 1	Headlight Beam Level Control Actuator LH	90980-11016
			H 2	Headlight Beam Level Control Actuator RH	
			H 3	Headlight Cleaner Motor	90980-11410
			H 4	Headlight Cleaner Relay	90980-10939
			H 5	Headlight LH	90980-11314
			H 6	Headlight RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
H 7	Heated Oxygen Sensor	90980-11028	I16	Ignition Coil and Igniter No.5	90980-11885
H 8	Horn (High)	90980-10619	I17	Ignition Coil and Igniter No.6	
H 9	Horn (Low)		I18	Injector No.5	90980-11875
H10	Hazard SW	90980-10789	I19	Injector No.6	
H11	Headlight Beam Level Control SW	90980-10996	J 1	Junction Connector	90980-11915
H12	Heater Control SW (w/ Navigation System)	90980-11915	J 2	Junction Connector	90980-11661
	Heater Control SW (w/o Navigation System)	90980-11923	J 3	Junction Connector	
H13	Height Control and Suspension SW	90980-11923	J 4	Junction Connector	90980-10891
H14	Height Control Compressor	90980-10990	J 5	Junction Connector	
H15	Height Control Exhaust Valve	90980-11156	J 6	Junction Connector	
H17	Height Control Sensor Rear LH	90980-11016	J 7	Junction Connector	90980-11661
H18	Height Control Sensor Rear RH		J 8	Junction Connector	
H19	High Mounted Stop Light	90980-11003	J 9	Junction Connector	90980-10803
H20	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J10	Junction Connector (1KD-FTV, 1KZ-TE)	90980-11915
H21	Heated Oxygen Sensor (Bank 2 Sensor 2)			Junction Connector (3RZ-FE Leaded Gasoline, 1GR-FE)	90980-11542
I 1	Ignition Coil and Igniter No.1 (3RZ-FE Leaded Gasoline)	90980-11150		Junction Connector (3RZ-FE Unleaded Gasoline)	
	Ignition Coil and Igniter No.1 (3RZ-FE Unleaded Gasoline, 1GR-FE)	90980-11885		Junction Connector (5L-E)	
I 2	Ignition Coil and Igniter No.2 (3RZ-FE Leaded Gasoline)	90980-11150	J11	Junction Connector (1KD-FTV)	90980-11542
	Ignition Coil and Igniter No.2 (3RZ-FE Unleaded Gasoline, 1GR-FE)	90980-11885		Junction Connector (1KZ-TE)	90980-11915
I 3	Ignition Coil and Igniter No.3	90980-10885		Junction Connector (3RZ-FE Leaded Gasoline, 1GR-FE)	
I 4	Ignition Coil and Igniter No.4	90980-11885		Junction Connector (3RZ-FE Unleaded Gasoline, 5L-E)	
I 5	Injection Pump	90980-11028	J12	Junction Connector	90980-10976
I 6	Injector No.1 (1GR-FE)	90980-11875	J13	Junction Connector	90980-11542
	Injector No.1 (1KD-FTV)	90980-12005	J14	Junction Connector	90980-11915
	Injector No.1 (3RZ-FE)	90980-11153	J15	Junction Connector	90980-10976
I 7	Injector No.2 (1GR-FE)	90980-11875	J16	Junction Connector	90980-11542
	Injector No.2 (1KD-FTV)	90980-12005	J17	Junction Connector	90980-11915
	Injector No.2 (3RZ-FE)	90980-11153	J18	Junction Connector	
I 8	Injector No.3 (1GR-FE)	90980-11875	J19	Junction Connector	
	Injector No.3 (1KD-FTV)	90980-12005	J20	Junction Connector	
	Injector No.3 (3RZ-FE)	90980-11153	J21	Junction Connector	
I 9	Injector No.4 (1GR-FE)	90980-11875	J22	Junction Connector	90980-11542
	Injector No.4 (1KD-FTV)	90980-12005	J23	Junction Connector (LHD)	90980-11915
	Injector No.4 (3RZ-FE)	90980-11153		Junction Connector (RHD)	90980-11542
I10	Intake Air Temp. Sensor (1KD-FTV, 1KZ-TE)	90980-11025	J24	Junction Connector	90980-10976
	Intake Air Temp. Sensor (3RZ-FE, 5L-E)	90980-11163	J25	Junction Connector	90980-11915
I11	ISC Valve	90980-11145	J26	Junction Connector	90980-11542
I12	Idle-Up SW	90980-10933	J27	Junction Connector	
I13	Ignition Key Cylinder Light	90980-12092	J28	Junction Connector	
	Transponder Key Amplifier		J29	Junction Connector	90980-11238
I14	Ignition SW	90980-11615	J30	Junction Connector	
I15	Interior Light	90980-12321	J31	Junction Connector	90980-11686

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J33	Junction Connector	90980-11542	P10	Power Window Control SW Front LH (w/ Jam Protection)	90980-11947
J34	Junction Connector			90980-10789	
J35	Junction Connector				
J36	Junction Connector	90980-11661	P11	Power Window Control SW Front RH (w/ Jam Protection)	90980-11947
J37	Junction Connector			90980-10789	
J38	Junction Connector				
K 1	Knock Sensor	90980-11166	P12	Power Window Control SW Rear LH (w/ Jam Protection)	90980-11947
K 2	Key Interlock Solenoid	90980-10795		Power Window Control SW Rear LH (w/o Jam Protection)	90980-10789
	Unlock Warning SW				
K 3	Knock Sensor LH	90980-11875	P13	Power Window Control SW Rear RH (w/ Jam Protection)	90980-11947
K 4	Knock Sensor RH			Power Window Control SW Rear RH (w/o Jam Protection)	90980-10789
L 1	License Plate Light	90980-11002			
L 2	License Plate Light LH	90980-11148	P14	Power Window Motor Front LH	90980-10797
L 3	License Plate Light RH		P15	Power Window Motor Front RH	
L 4	Luggage Compartment Light	90980-12321	P16	Power Window Motor Rear LH	
L 5	Low Pressure Tank Valve	90980-11156	P17	Power Window Motor Rear RH	
M 1	Magnetic Spill Valve	90980-11284	P18	Pretensioner LH	90980-12253
M 2	Master Cylinder Pressure Sensor	90980-11451	P19	Pretensioner RH	
M 3	Mirror Heater SW	90980-10789	P20	Power Seat Control SW (Driver's Seat Lumbar Support Control)	90980-10789
M 4	Multi-Display	90980-10799	P21	Power Seat Control SW (Driver's Seat)	90980-10997
M 5	Multi-Display	90980-11911	P22	Power Seat Control SW (Front Passenger's Seat)	
M 6	Multi-Display	90980-11923	P23	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
M 7	Mirror Heater LH	90980-12059	P24	Power Seat Motor (Driver's Seat Lifter Control)	
	Remote Control Mirror LH		P25	Power Seat Motor (Driver's Seat Lumbar Support Control)	
M 8	Mirror Heater RH		P26	Power Seat Motor (Driver's Seat Reclining Control)	
	Remote Control Mirror RH		P27	Power Seat Motor (Driver's Seat Slide Control)	
M 9	Moon Roof Control ECU and Motor	90980-10997	P28	Power Seat Motor (Front Passenger's Seat Reclining Control)	
N 1	Neutral Start SW	90980-11784	P29	Power Seat Motor (Front Passenger's Seat Slide Control)	
N 2	Noise Filter	90980-10843	R 1	Radio and Player	90980-10997
N 3	Navigation ECU	90980-11923	R 2	Radio and Player	90980-12183
N 4	Navigation ECU	90980-11973	R 3	Radio and Player	90980-12038
N 5	Noise Filter (Condenser Fan)	90980-10843	R 4	Radio and Player	90980-10996
O 1	Oil Pressure SW (Except 5L-E)	90980-11363	R 5	Radio and Player	90980-12259
	Oil Pressure SW (5L-E)	90980-10703	R 6	Rear Blower SW	90980-11118
O 2	Option Connector (Keyless Buzzer)	90980-11051	R 7	Rear Cooler Control SW (Automatic A/C)	90980-11923
O 3	Option Connector (Door Control Receiver)	90980-10803		Rear Cooler Control SW (Manual A/C)	90980-12012
O 4	Overhead J/B	90980-12155	R 8	Rear Diff. Lock Control ECU	90980-11541
P 1	Power Steering Oil Pressure SW	90980-11428	R 9	Rear Diff. Lock SW	90980-10631
P 2	Pressure SW	90980-11149			
P 3	Pressure SW	90980-10943			
P 4	Parking Brake SW	90980-10871			
P 5	Power Outlet (Front)	90980-10760			
P 6	PTC Heater	90980-11385			
P 7	PTC Heater	90980-10958			
P 8	Personal Light	90980-11923			
P 9	Power Outlet (Rear)	90980-10760			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
R10	Rear Fog Light SW	90980-12113	S18	Stop Light SW	90980-11118
R11	Remote Control Mirror SW	90980-11657	S19	Suspension Control ECU	90980-12150
R12	Rheostat	90980-11989	S20	Suspension Control ECU	90980-12149
R13	Rear Combination Light LH	90980-10797	S21	Suspension Control ECU	90980-12151
R14	Rear Combination Light LH	90980-11292	S22	Side Airbag Sensor Front LH	90980-12225
R15	Rear Combination Light RH	90980-10797	S23	Side Airbag Sensor Front RH	
R16	Rear Combination Light RH	90980-11292	S24	Side Airbag Sensor Rear LH	
R17	Rear Cooler Amplifier	90980-10879	S25	Side Airbag Sensor Rear RH	
R18	Rear Cooler Blower Motor	90980-10214	S26	Seat Heater (Driver's Seat)	90980-10797
R19	Rear Cooler Blower Resistor	90980-10976	S27	Seat Heater (Front Passenger's Seat)	
R20	Rear Cooler Magnetic Valve	90980-10860	S28	Side Airbag Squib LH	90980-11864
R21	Rear Cooler Power Transistor	90980-10171	S29	Side Airbag Squib RH	
R22	Rear Cooler Relay	-	T 1	Theft Deterrent Horn	90980-10619
R23	Rear Cooler Thermistor	90980-10825	T 2	Throttle Control Motor	90980-11144
R24	Rear Diff. Lock Motor	90980-10897	T 3	Throttle Open SW	90980-11156
R25	Rear Door Speaker LH	90980-10935	T 4	Throttle Position Sensor	90980-11261
R26	Rear Door Speaker RH		T 5	Timing Control Valve	90980-11285
R27	Rear Fog Light LH	90980-11019	T 6	Transfer Actuator	90980-11664
R28	Rear Fog Light RH		T 7	Turbo Pressure Sensor	90980-10845
R29	Rear Height Control Valve	90980-11143	T 8	Theft Deterrent ECU	90980-12169
R30	Rear Speaker LH	90980-10935	T 9	Transponder Key Computer (Except 3RZ-FE Unleaded Gasoline)	90980-11911
R31	Rear Speaker RH			Transponder Key Computer (3RZ-FE Unleaded Gasoline)	90980-12094
R32	Rear Window Defogger	90980-10870	T10	Turn Signal Flasher	90980-10799
R33	Rear Wiper Motor (Spare Tire-Back Door Mounted)	90980-10908	T11	Theft Deterrent Siren (LHD)	90980-11349
	Rear Wiper Motor (Spare Tire-Under Floor Mounted)	90980-10795		Theft Deterrent Siren (RHD)	90980-10799
S 1	Skid Control ECU with Actuator	90980-12020	T12	Trailer Socket	90980-10797
S 2	Speed Sensor (Combination Meter)	90980-11143	T13	Turbo Charger Compensate Resistor	90980-11163
S 3	Speed Sensor (ECT)	90980-11156	T14	Throttle Control Motor	90980-11858
S 4	Starter (Diesel)	90980-09529		Throttle Position Sensor	
	Starter (3RZ-FE, 1GR-FE)	90980-09463	T15	Turbine Speed Sensor	90980-11156
S 5	Starter (1KD-FTV, 5L-E)	90980-11184	V 1	Vacuum Sensor	90980-10845
	Starter (1KZ-TE)		V 2	Variable Resistor	90980-10902
	Starter (3RZ-FE, 1GR-FE)	90980-11400	V 3	Viscous Heater Magnetic Clutch	90980-11271
S 6	Suction Control Valve No.1	90980-11285	V 5	VRV (EGR)	90980-11162
S 7	Suction Control Valve No.2	90980-11284	V 6	VSC Check Connector	90980-11609
S 8	Seat Heater SW Front LH	90980-10964	V 7	VSC Check Connector	90980-11612
S 9	Seat Heater SW Front RH	90980-10933	V 8	VSV (EGR Cut) (1KD-FTV)	90980-11156
S10	Shift Lock Control ECU	90980-12183		VSV (EGR Cut) (1KZ-TE)	90980-11149
S11	Skid Control ECU	90980-11638	V 9	VSV (Engine Mount)	90980-11149
S12	Skid Control ECU	90980-11476	V10	VSV (EVAP)	90980-11156
S13	Skid Control ECU	90980-11637	V11	VSV (Pressure Charge Valve)	90980-11149
S14	Skid Control ECU	90980-11935	V12	Viscous Heater Amplifier	90980-11913
S15	Steering Sensor	90980-12155	V13	VSC Warning Buzzer	90980-10906
S16	Stereo Component Amplifier	90980-10848	V14	Vanity Light LH	90980-12322
S17	Stereo Component Amplifier	90980-11877	V15	Vanity Light RH	

L PART NUMBER OF CONNECTORS

[illegible]

Note: Not all of the above part numbers of the connector are established for the supply.

