 
 


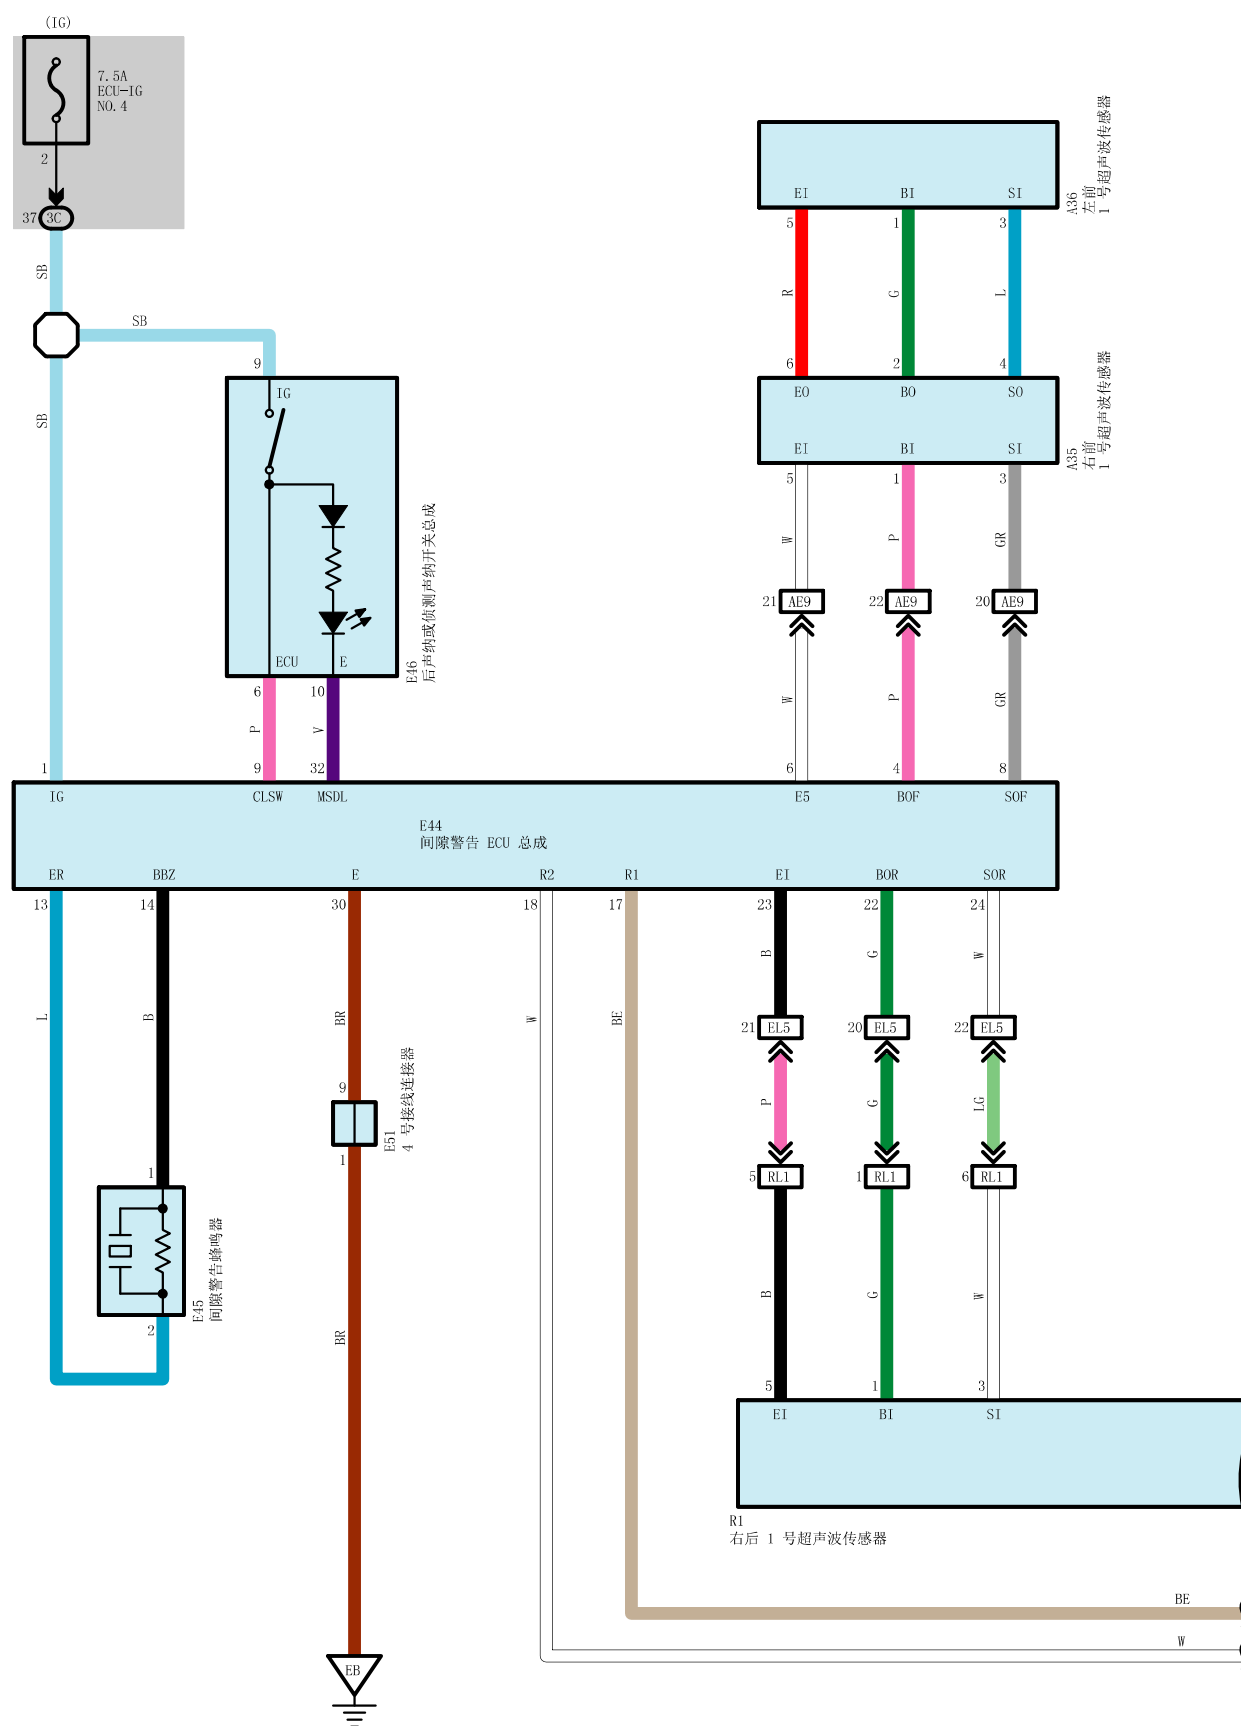


丰田驻车辅助传感器系统

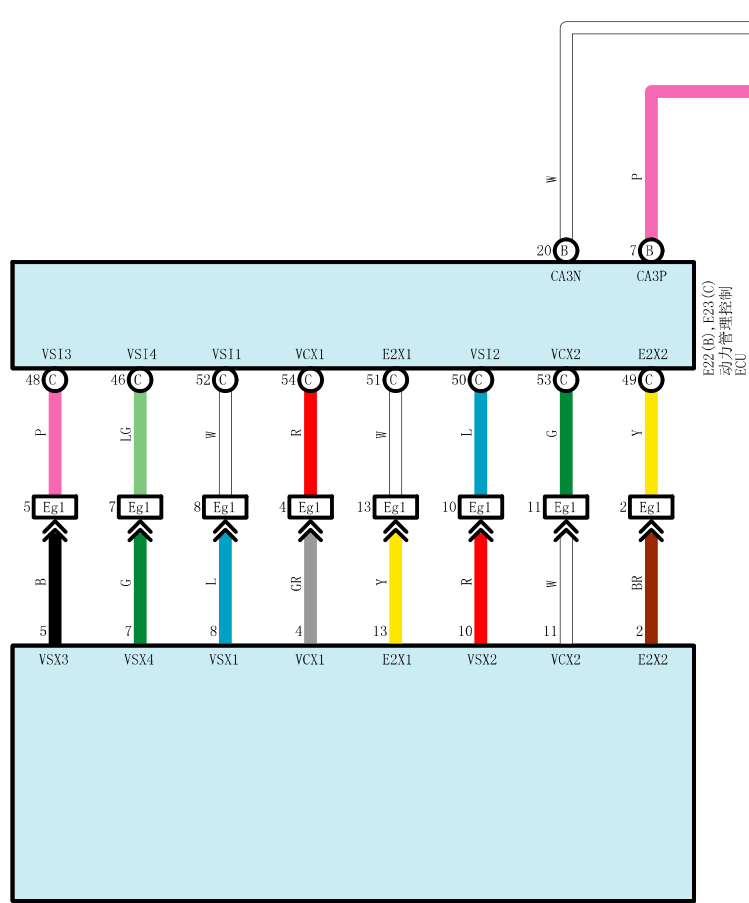


g1
换挡杆位置传感器

 R2
右后中央 1 号超声波传感器

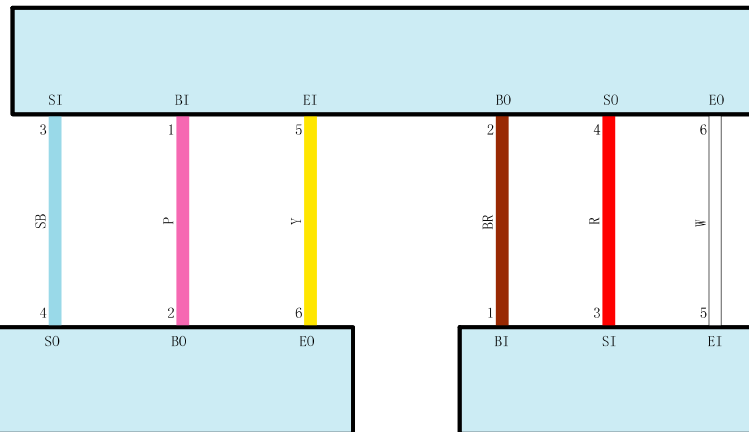



R1
右后 1 号超声波传感器





 
R4
左后 1 号超声波传感器

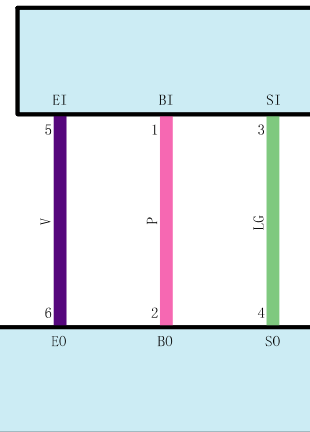


R3
左后中央 1 号超声波传感器

 

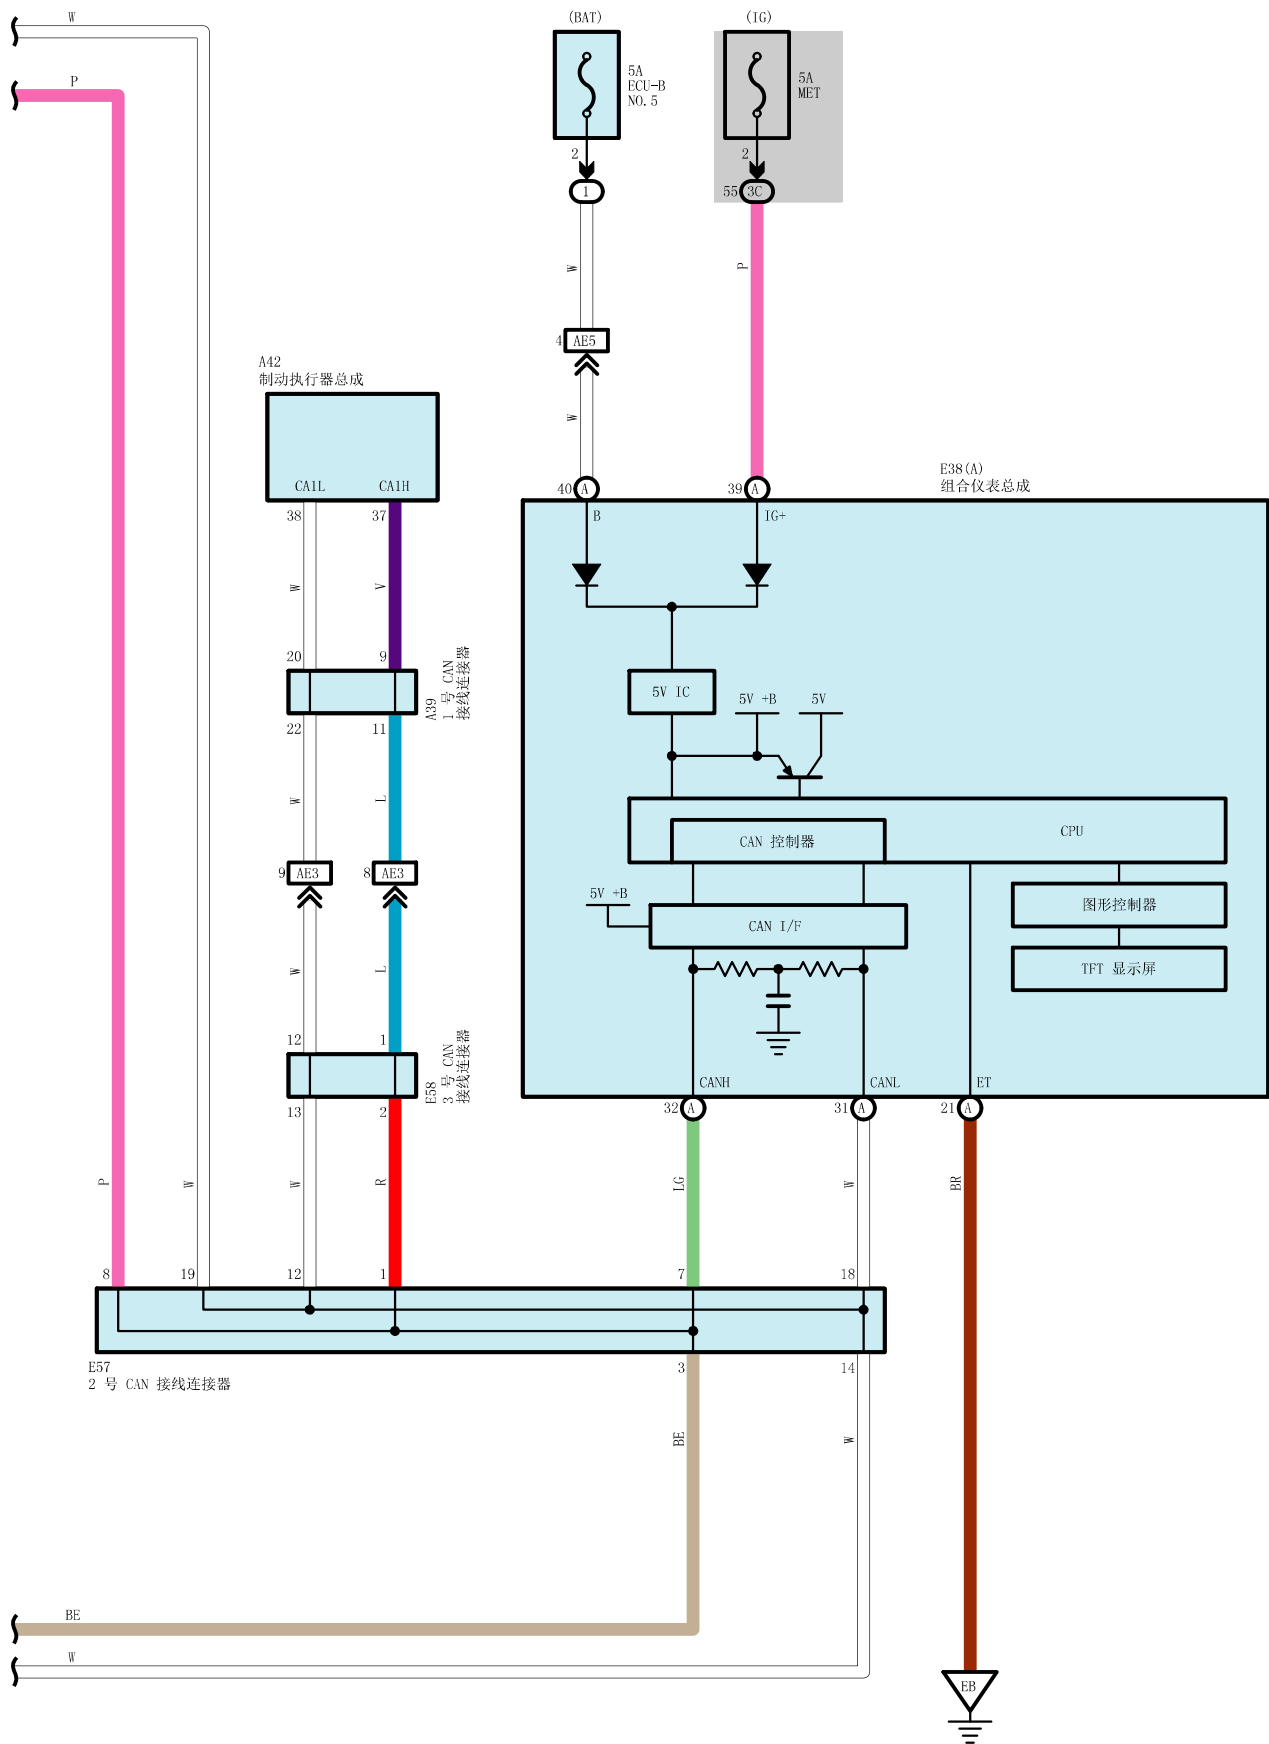 

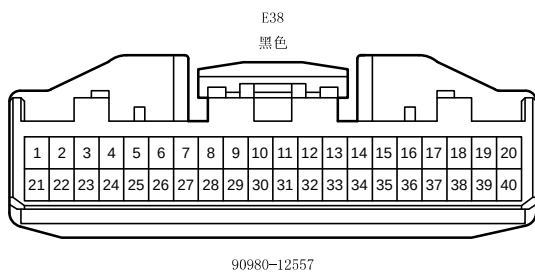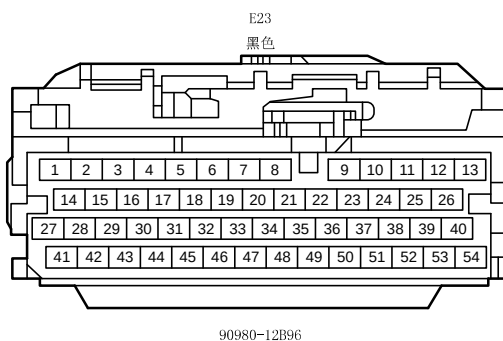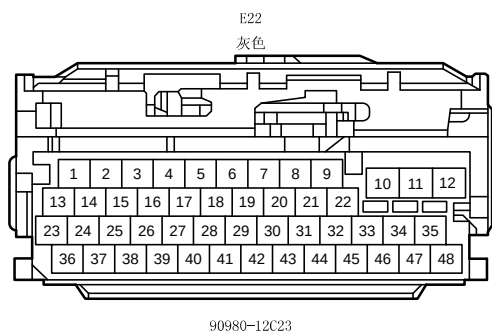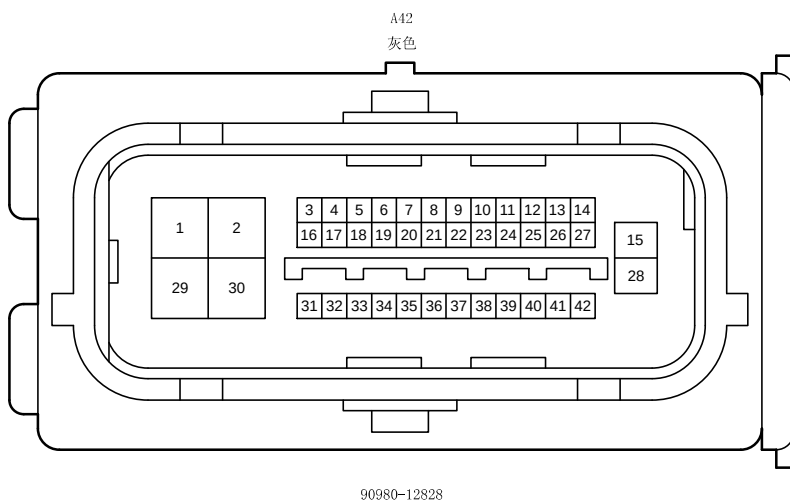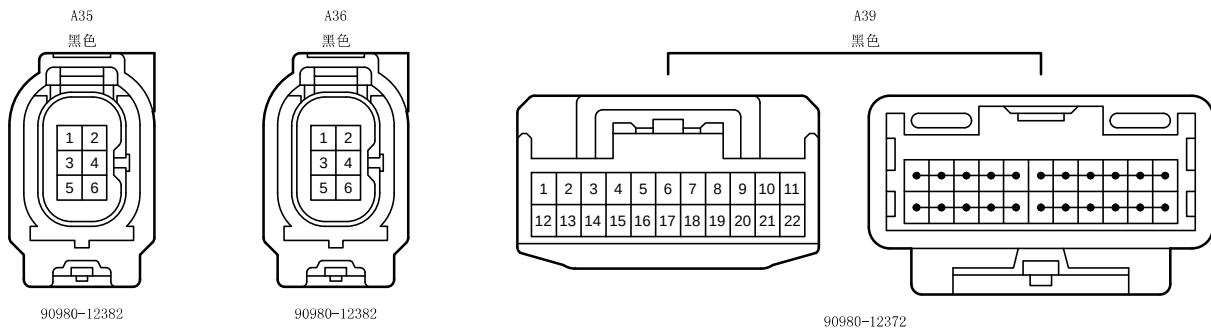     


E44
黑色

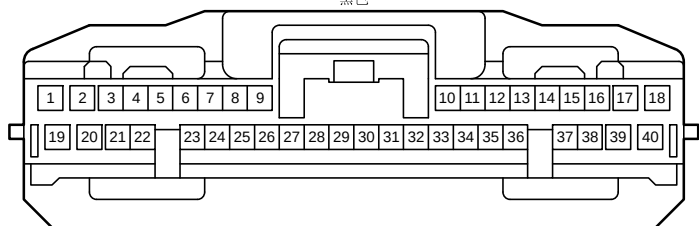 


90980-12924

 E45
黑色




90980-10825

 E46
黑色

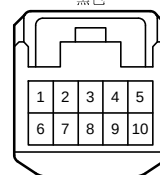


90980-12368

 E51
灰色

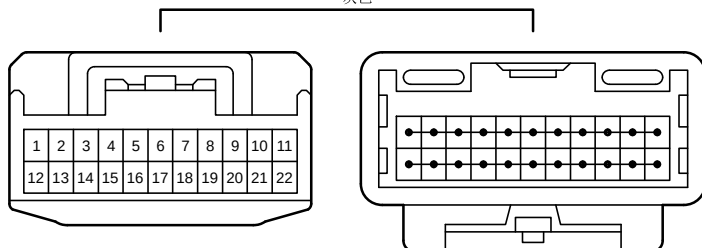


90980-12372

 E57
灰色

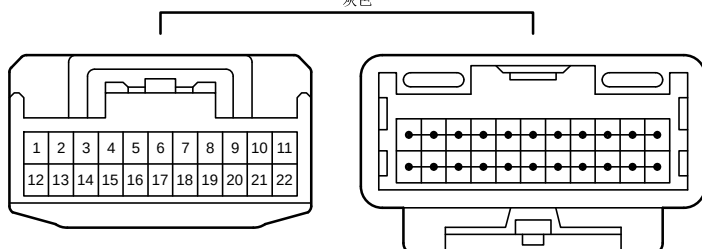


90980-12372

 E58
黑色

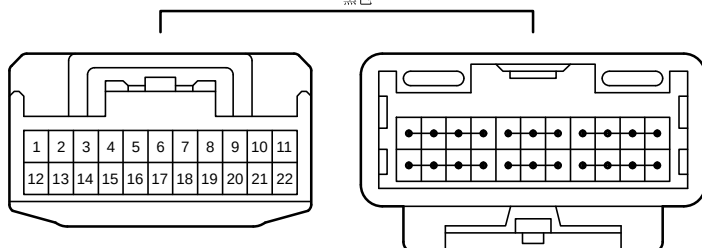


90980-12372

 R1
黑色

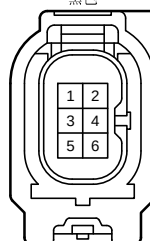


90980-12382

 
R2
黑色

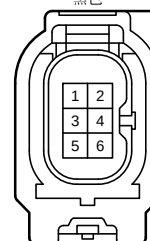


90980-12382

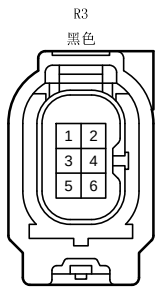 


90980-12382

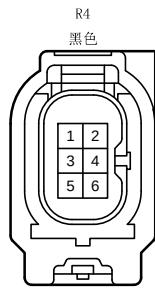 


90980-12382

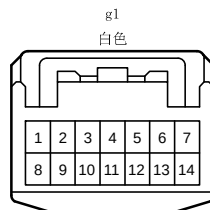 

90980-12370

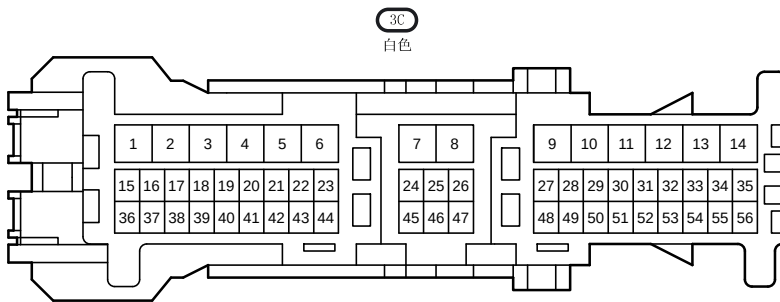 


90980-12890

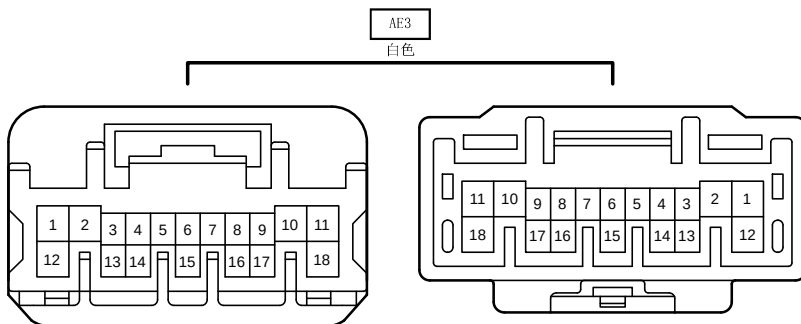 

90980-12743

 
90980-12742

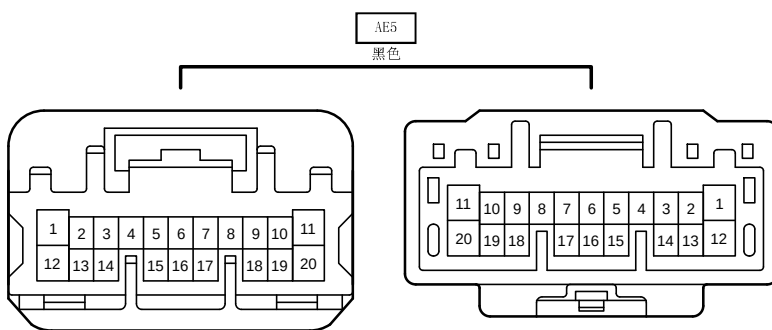


90980-12741

90980-12740

 AE9
灰色

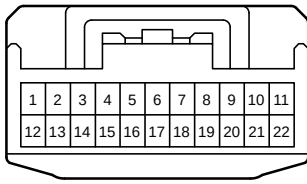


90980-12372

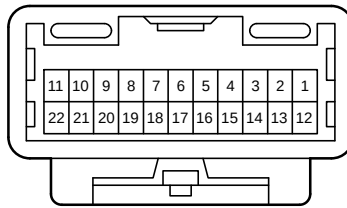 


90980-12371

 EL5
灰色

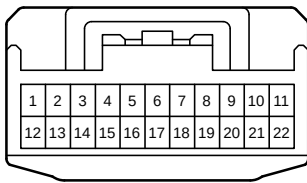


90980-12372

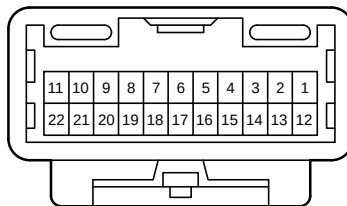 


90980-12371

 Eg1
白色

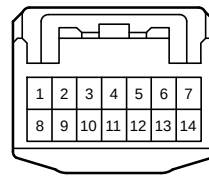


90980-12370

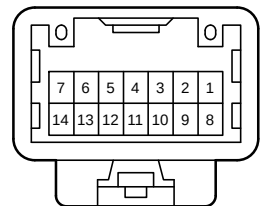 

90980-12369

 RL1
灰色

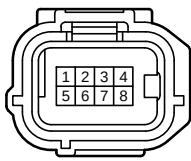

90980-12520



90980-12519