



FD0002 01 P00 - 接地分布

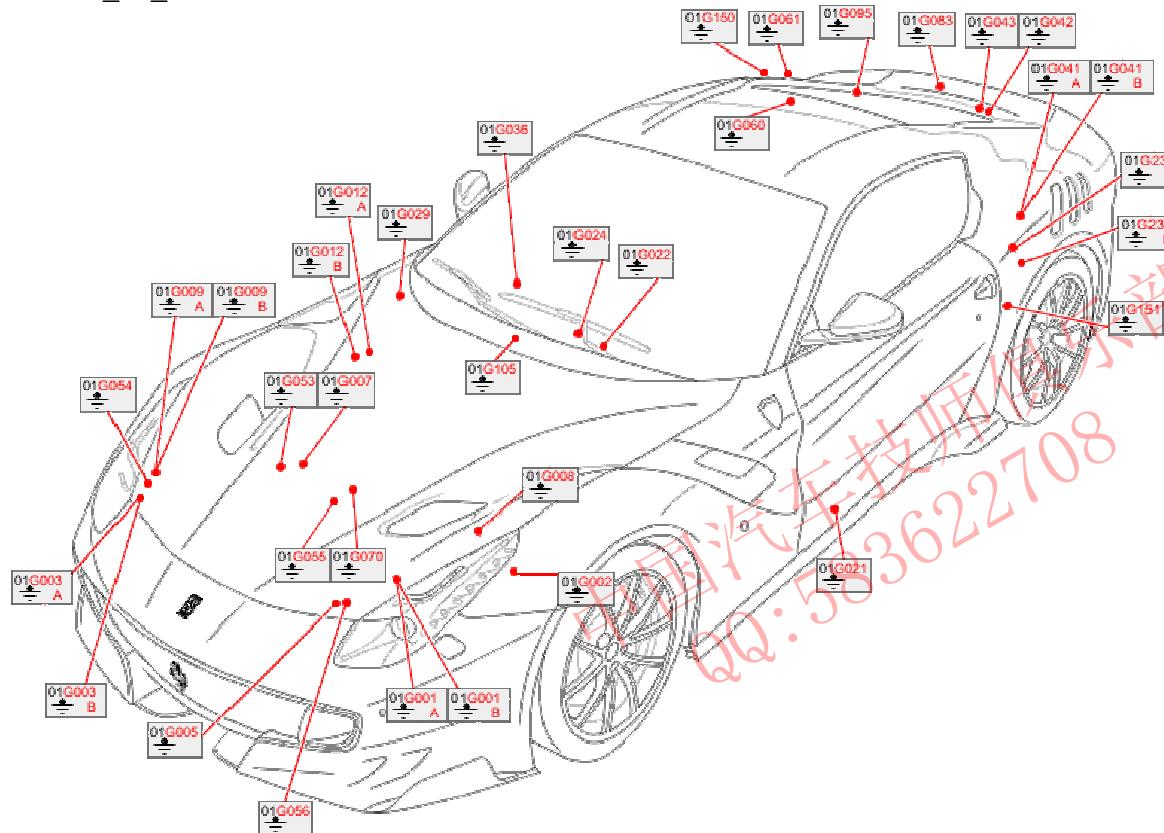

零件号	说明	电缆
G001-A	发动机舱接地 - 前部 - 左侧	C31102_0
G001-B	发动机舱接地 - 前部 - 左侧	C31102_0
G003-A	发动机舱接地 - 前部 - 右侧	C31102_0
G003-B	发动机舱接地 - 前部 - 右侧	C31102_0
G009-A	用于发动机冷却系统的底盘上的接地	C31102_0
G009-B	用于发动机冷却系统的底盘上的接地	C31102_0
G230-A	PWM 燃油泵接地 (ESD)	C49001_0
G230-B	PWM 燃油泵接地 (ESD)	C31102_0
G041-A	尾灯部位接地 - 左侧	C21201_0
G041-B	尾灯部位接地 - 左侧	C21201_0
G036	乘客舱中的接地 - 右后	C21201_0
G151	4WS 左侧执行器 接地	C31102_0
G056	底盘上用于喷射系统的接地 - 左侧	C31102_0
G029	发动机冷却电风扇接地	C31102_0
G054	底盘上用于喷射系统的接地 - 右侧	C31102_0
G021	乘客舱左后侧接地	C21201_0
G105	空气泵接地	C31102_0
G095	升降系统泵接地	C53101_0
G005	制动系统接地	C31102_0
G022	仪表板部位接地 - 右侧	C20001_0
G024	安全气囊系统接地	C20001_0
G060	燃油箱接地	C21201_0
G042	尾灯部位接地 - 右侧	C21201_0
G002	发动机上用于蓄电池的接地	C06001_0
G008	底盘上用于发动机的接地	C06001_0
G053	发动机上的接地 - 右侧	C12001_0
G007	发动机接地 - 右侧	C12001_0
G055	发动机上的接地 - 左侧	C11002_0
G070	发动机接地	C11002_0
G061	燃油加注口接地	C31102_0
G150	4WS 右侧执行器 接地	C31102_0
G083	Brembo EPB 接地	C21201_0
G012-A	蓄电池接地	C01002_0

中国汽车技术研究会
QQ:58361208

C31102_0 - 前部电缆和乘客舱电缆

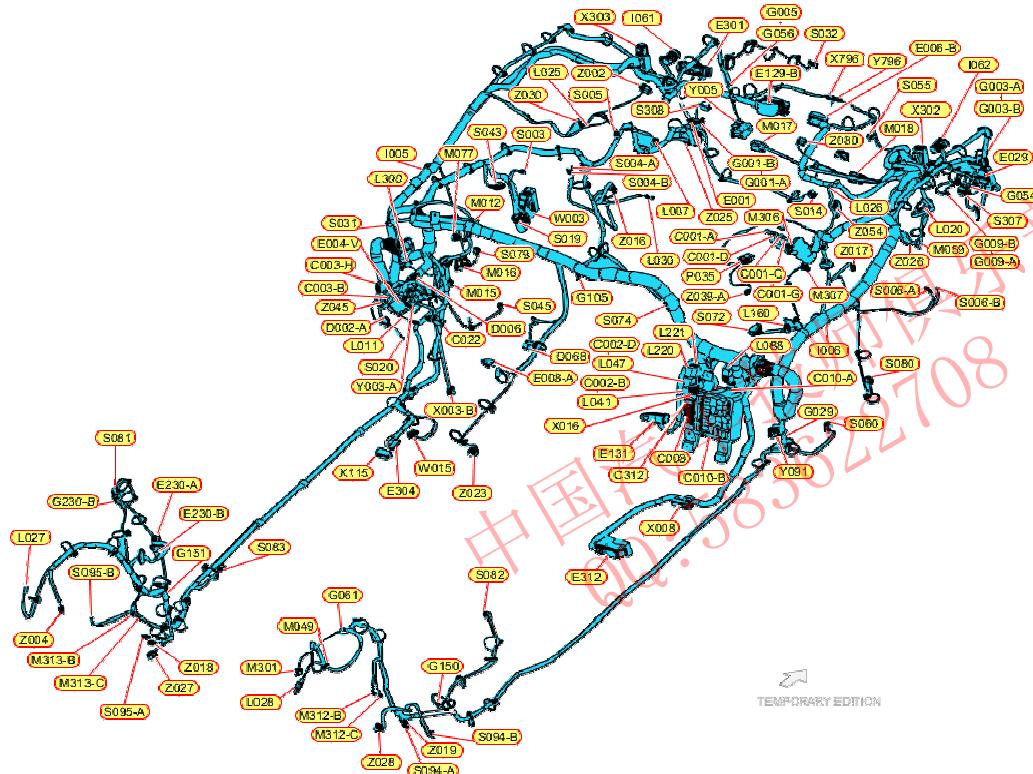


TEMPORARY EDITION

零件号	说明	电缆
G061	燃油加注口接地	C31102_0
G151	4WS 左侧执行器 接地	C31102_0
G105	空气泵接地	C31102_0
G150	4WS 右侧执行器 接地	C31102_0
G230-B	PWM 燃油泵接地 (ESD)	C31102_0
G003-A	发动机舱接地 - 前部 - 右侧	C31102_0
G056	底盘上用于喷射系统的接地 - 左侧	C31102_0
G001-B	发动机舱接地 - 前部 - 左侧	C31102_0
G003-B	发动机舱接地 - 前部 - 右侧	C31102_0

G005	制动系统接地	C31102_0
G009-A	用于发动机冷却系统的底盘上的接地	C31102_0
G009-B	用于发动机冷却系统的底盘上的接地	C31102_0
G029	发动机冷却电风扇接地	C31102_0
G054	底盘上用于喷射系统的接地 - 右侧	C31102_0
G001-A	发动机舱接地 - 前部 - 左侧	C31102_0

中国汽车技师俱乐部
QQ:583622708

C49001_0 - 燃油箱电缆

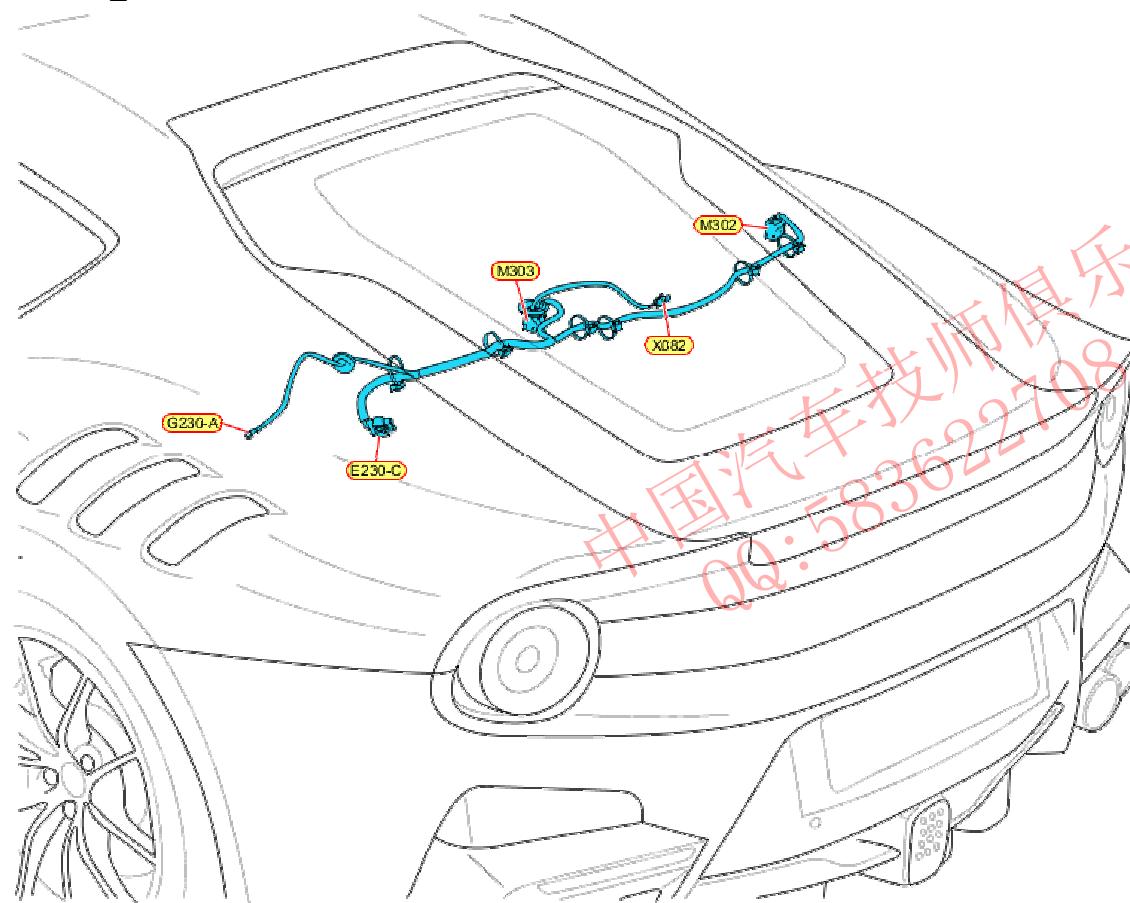


零件号
G230-A

说明
PWM 燃油泵接地 (ESD)


电缆
C49001_0

C21201 0 - 乘客舱电缆和后部电缆

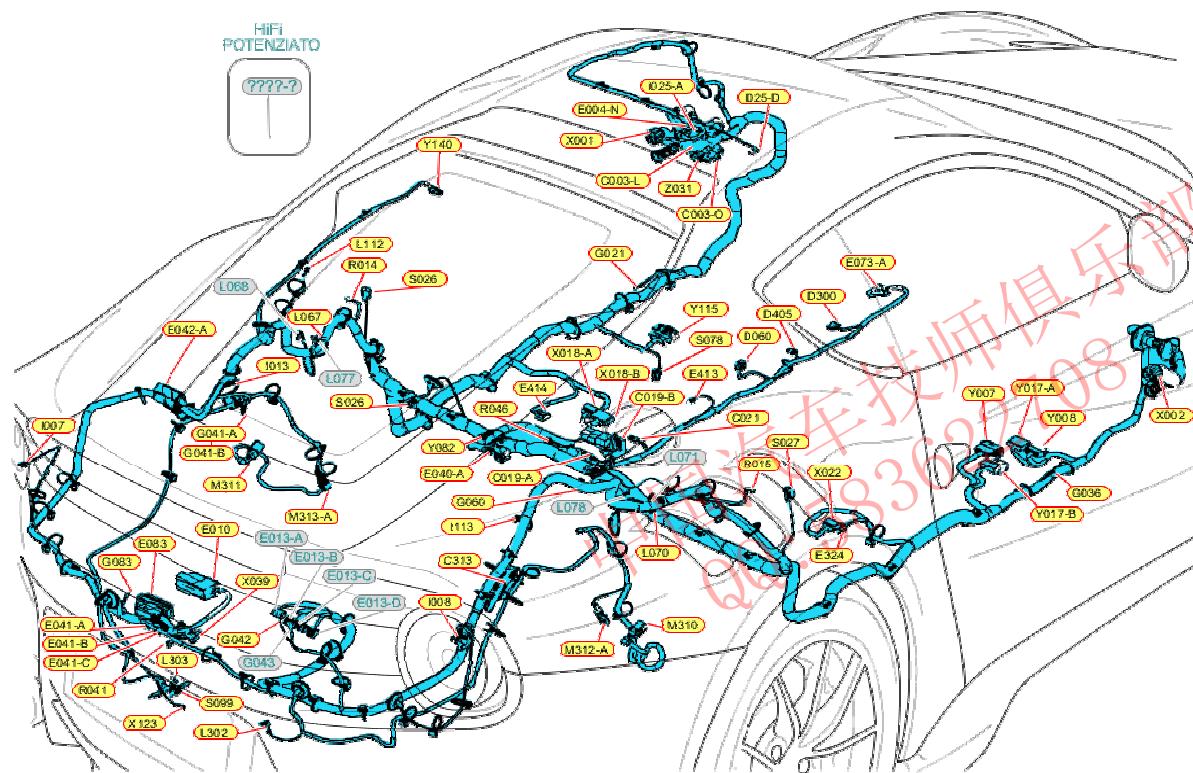

零件号	说明	电缆
G041-B	尾灯部位接地 - 左侧	C21201_0
G021	乘客舱左后侧接地	C21201_0
G041-A	尾灯部位接地 - 左侧	C21201_0
G042	尾灯部位接地 - 右侧	C21201_0
G060	燃油箱接地	C21201_0
G083	Brembo EPB 接地	C21201_0
G036	乘客舱中的接地 - 右后	C21201_0

C53101_0 - 升降系统电缆

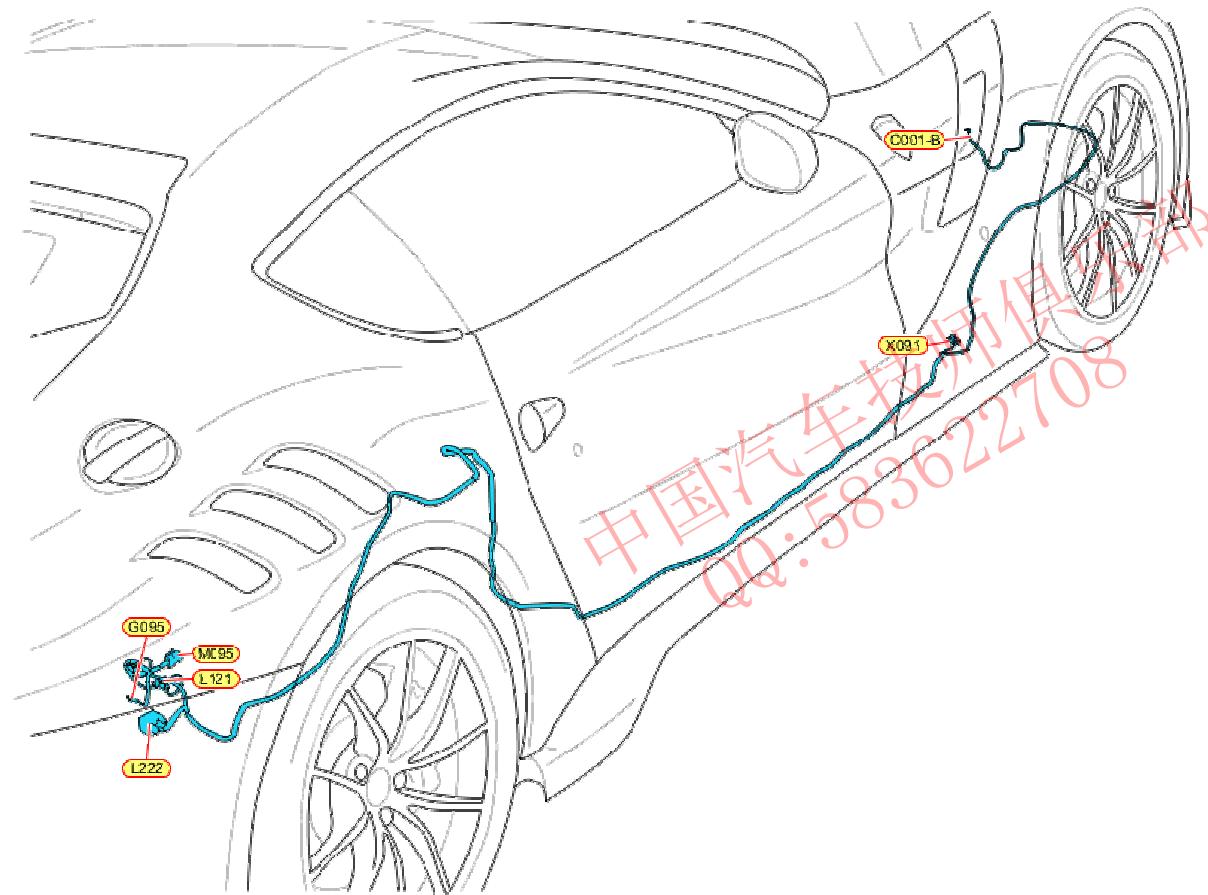


零件号
G095

说明
升降系统泵接地


电缆
C53101_0

C20001_0 - 仪表板电缆

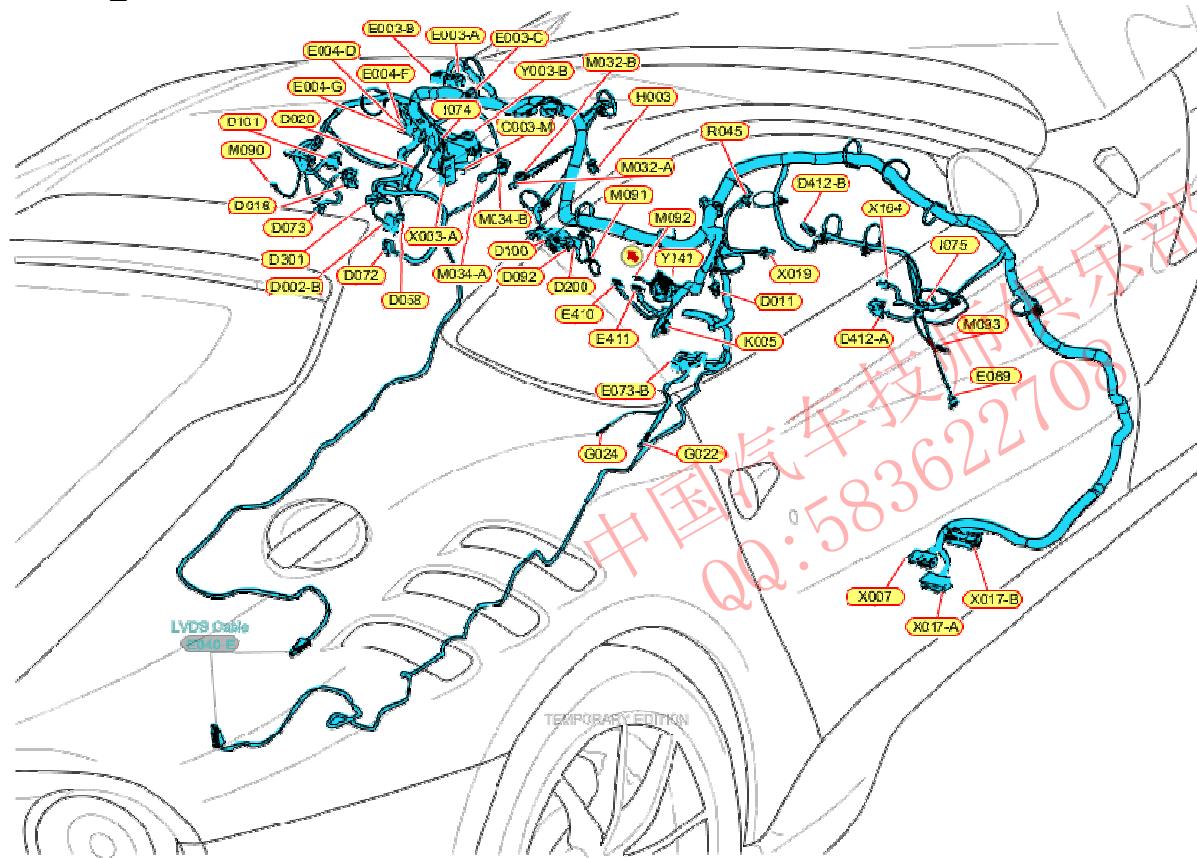


零件号	说明	电缆
G022	仪表板部位接地 - 右侧	C20001_0
G024	安全气囊系统接地	C20001_0

C06001_0 - 发动机编织接地线

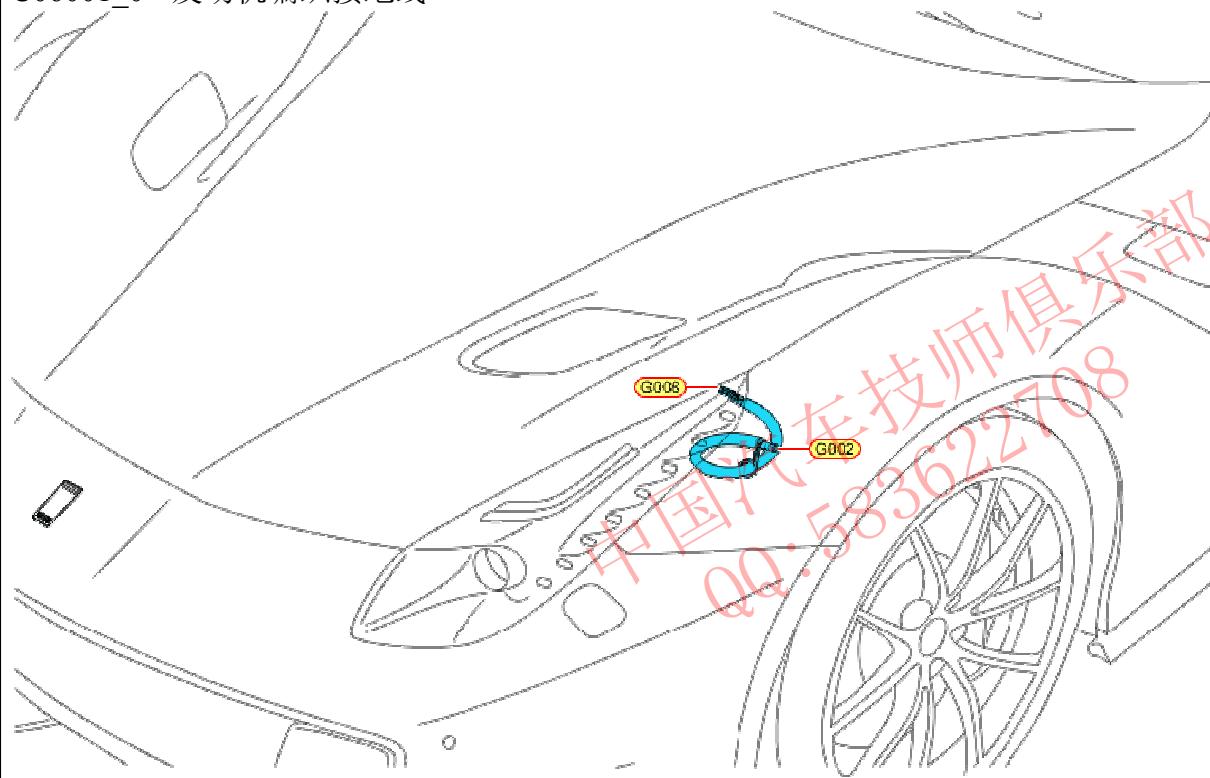


零件号	说明	电缆
G002	发动机上用于蓄电池的接地	C06001_0
G008	底盘上用于发动机的接地	C06001_0

C12001_0 - 右侧气缸列喷射电缆

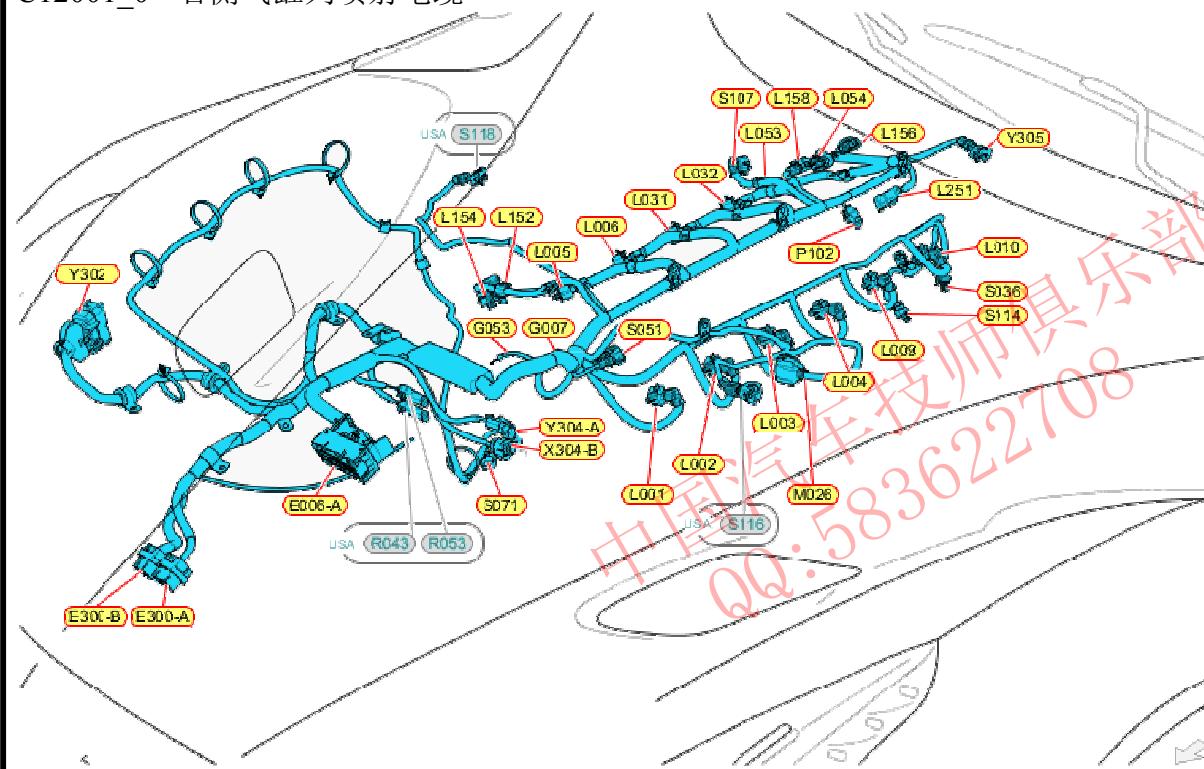


零件号	说明	电缆
G007	发动机接地 - 右侧	C12001_0
G053	发动机上的接地 - 右侧	C12001_0

C11002_0 - 左侧气缸列喷射电缆

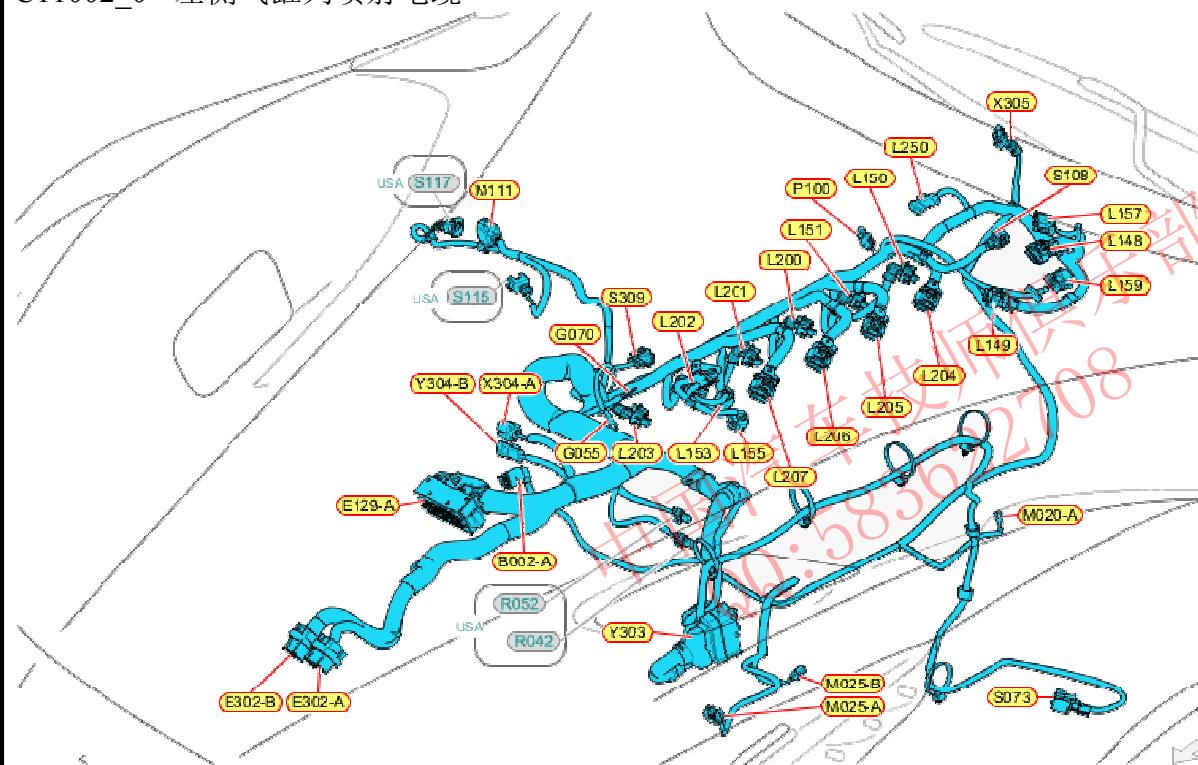

零件号	说明	电缆
G070	发动机接地	C11002_0
G055	发动机上的接地 - 左侧	C11002_0

C01002_0 - 蓄电池主开关电缆线束

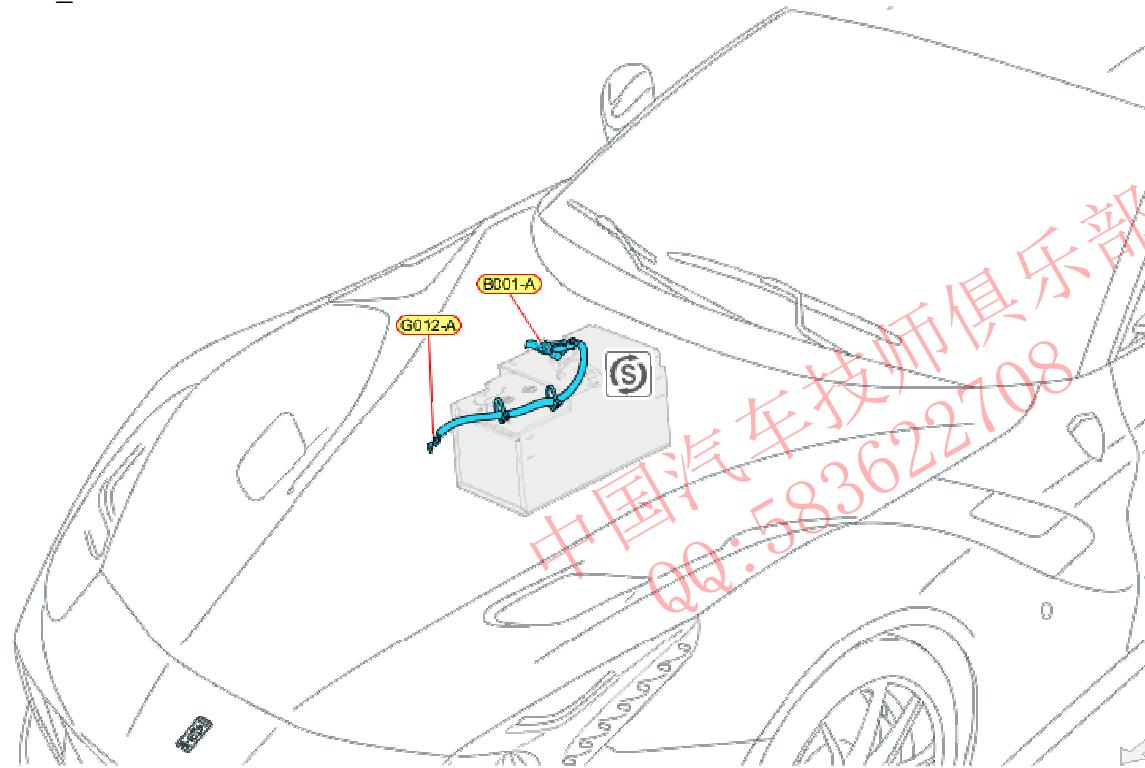

零件号	说明	电缆
G012-A	蓄电池接地	C01002_0

FD0002 - 接地分布

 
Europe




0 - 99999

F12 tdf

G001-A




G001-B

 


G003-A



 
G003-B



G009-A

 


G009-B

 


中国汽车技师俱乐部
QQ:583622708

 G230-A




N

 G230-B



N

 G041-A



N

中国汽车技师俱乐部
QQ:583622708

FD0002 - 接地分布


Europe



0 - 99999


F12 tdf

G041-B

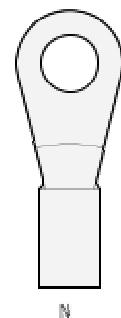

N

G036

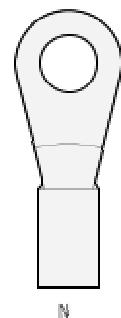


N

G151




N

G056

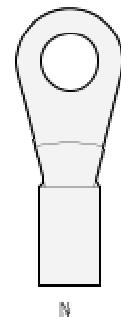


N

 G029



N


G054

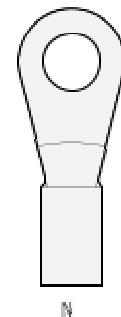


N

中国汽车技师俱乐部
QQ:583622708


G021

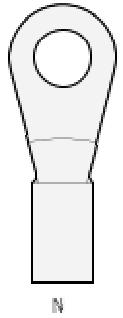

G105

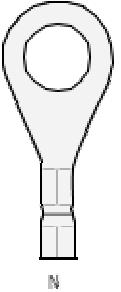

G095

 

中国汽车技师俱乐部
QQ:583622708

FD0002 - 接地分布

 
Europe



0 - 99999


F12 tdf

G005




N

 G022




N

 G024




N

 G060




N

 G042



N


G002

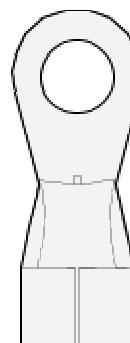


N

中国汽车技师俱乐部
QQ:583622708


G008

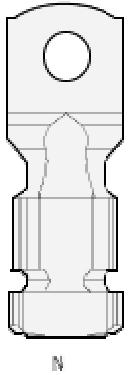

G053

 

G007

 

中国汽车技师俱乐部
QQ:583622708

FD0002 - 接地分布


Europe



0 - 99999


F12 tdf

G055

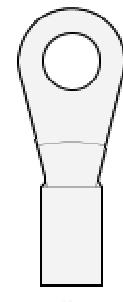


N

G070

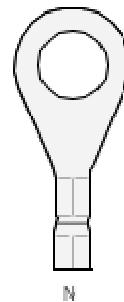

N

G061

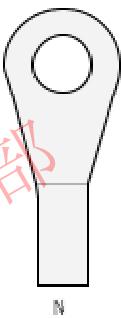


N

G150




N

 G083



N

G012-A

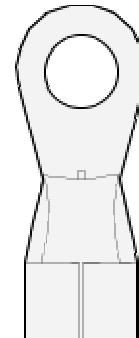

N

中国汽车技师俱乐部
QQ:583622708

