


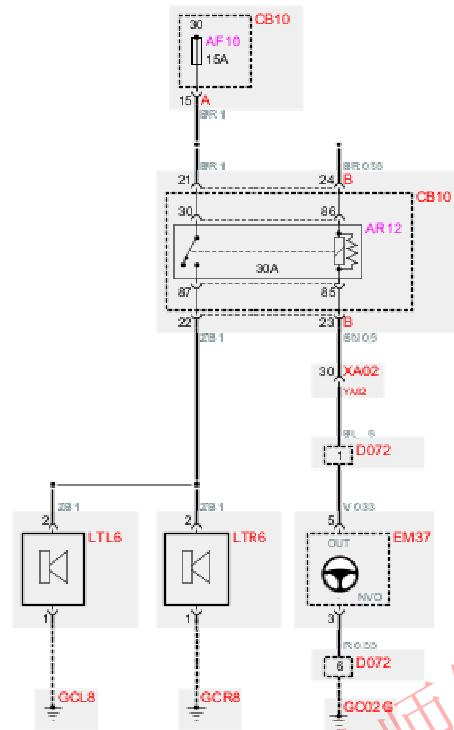

FD0426_01_P00 - 蜂鸣器



FD0426 - 蜂鸣器

Europe


0 -
99999

零件号	说明	电缆
CB10-A	前部线路分支 ECU	C31701_0
LTR6	喇叭 - 右侧	C31701_0
LTL6	喇叭 - 左侧	C31701_0
CB10-B	前部线路分支 ECU	C31701_0
YA02	仪表板/前部导线接头	C31701_0
XA02	仪表板/前部导线接头	C20001_1
GCL8	前部接地电缆 - 左侧	C31701_0
GCR8	前部接地电缆 - 右侧	C31701_0
D072	转向盘节点 - 驾驶员侧安全气囊 (NVO)	C20001_4
GC02-G	仪表板电缆接地节点	C20001_5
EM37	车轮节点 (NVO)	C20001_4
D072	转向盘节点 - 驾驶员侧安全气囊 (NVO)	C20001_4

中国汽车技师俱乐部
QQ:583622708




C31701_0 - 行李箱 - 前箱电缆

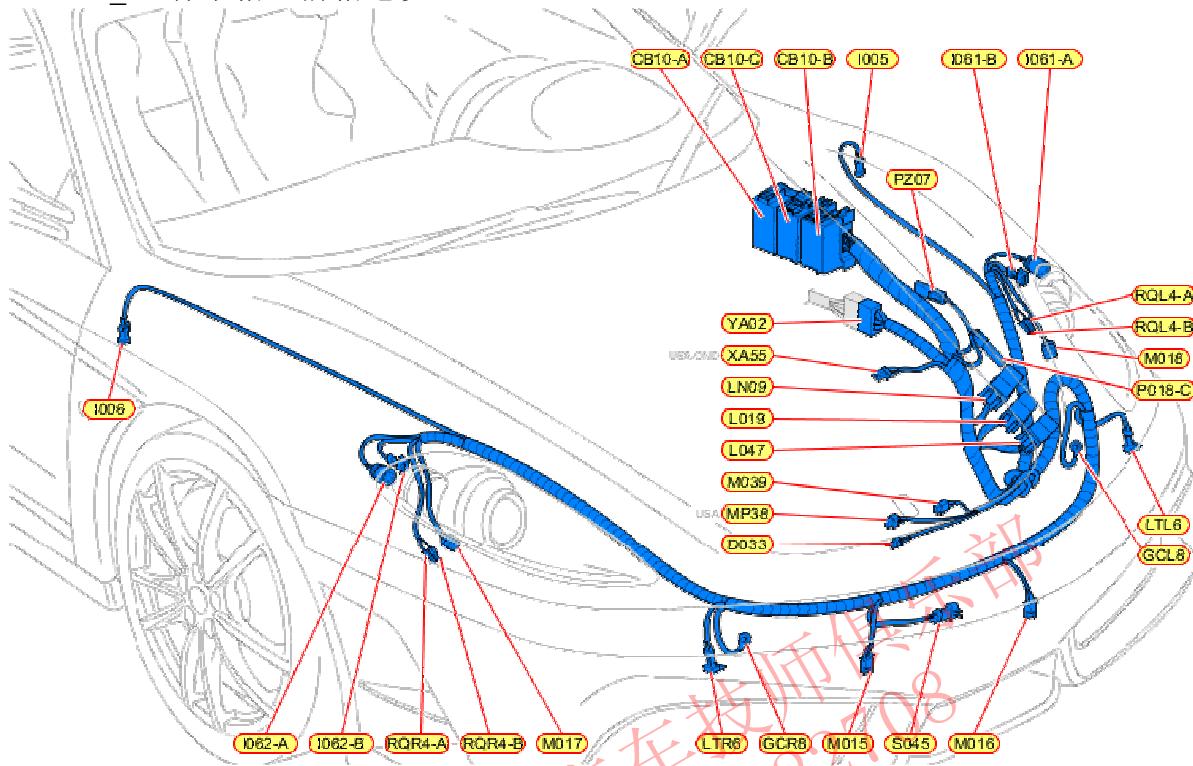

零件号	说明	电缆
LTL6	喇叭 - 左侧	C31701_0
LTR6	喇叭 - 右侧	C31701_0
CB10-A	前部线路分支 ECU	C31701_0
CB10-B	前部线路分支 ECU	C31701_0
GCL8	前部接地电缆 - 左侧	C31701_0
GCR8	前部接地电缆 - 右侧	C31701_0
YA02	仪表板/前部导线接头	C31701_0




C20001_1 - 仪表板电缆

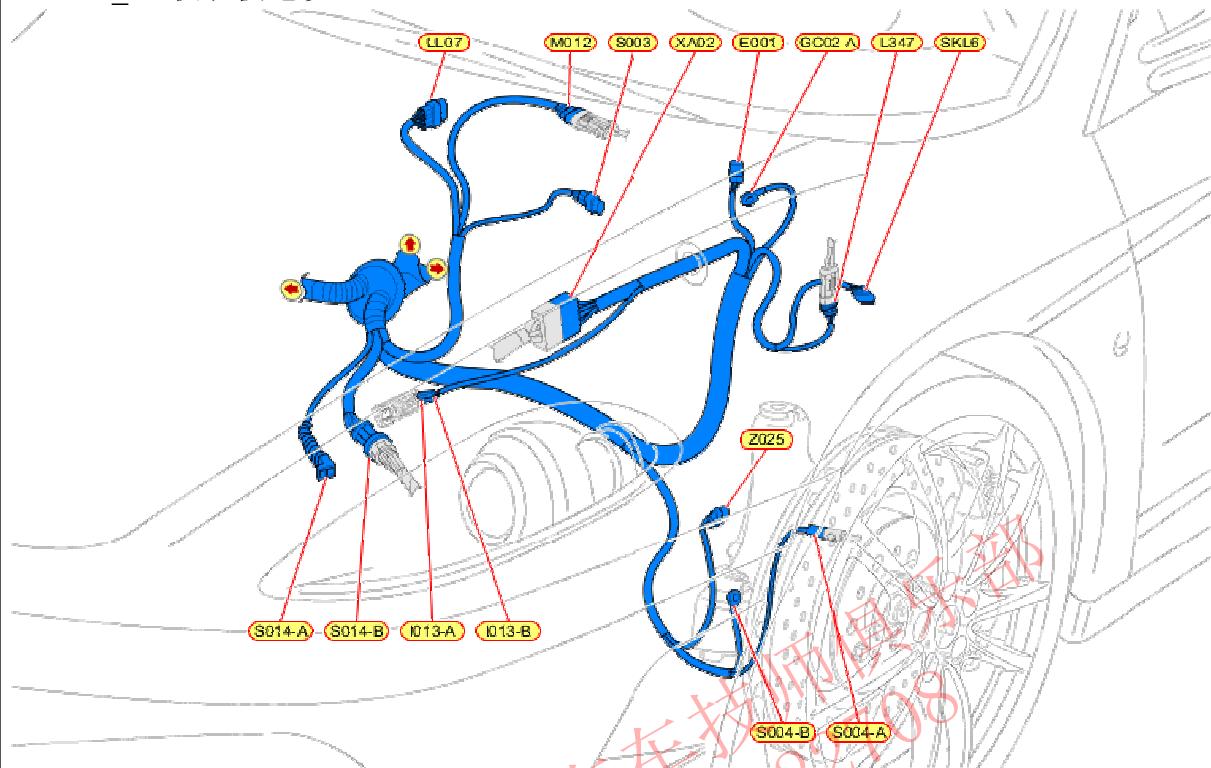

零件号	说明	电缆
XA02	仪表板/前部导线接头	C20001_1




C20001_4 - 仪表板电缆

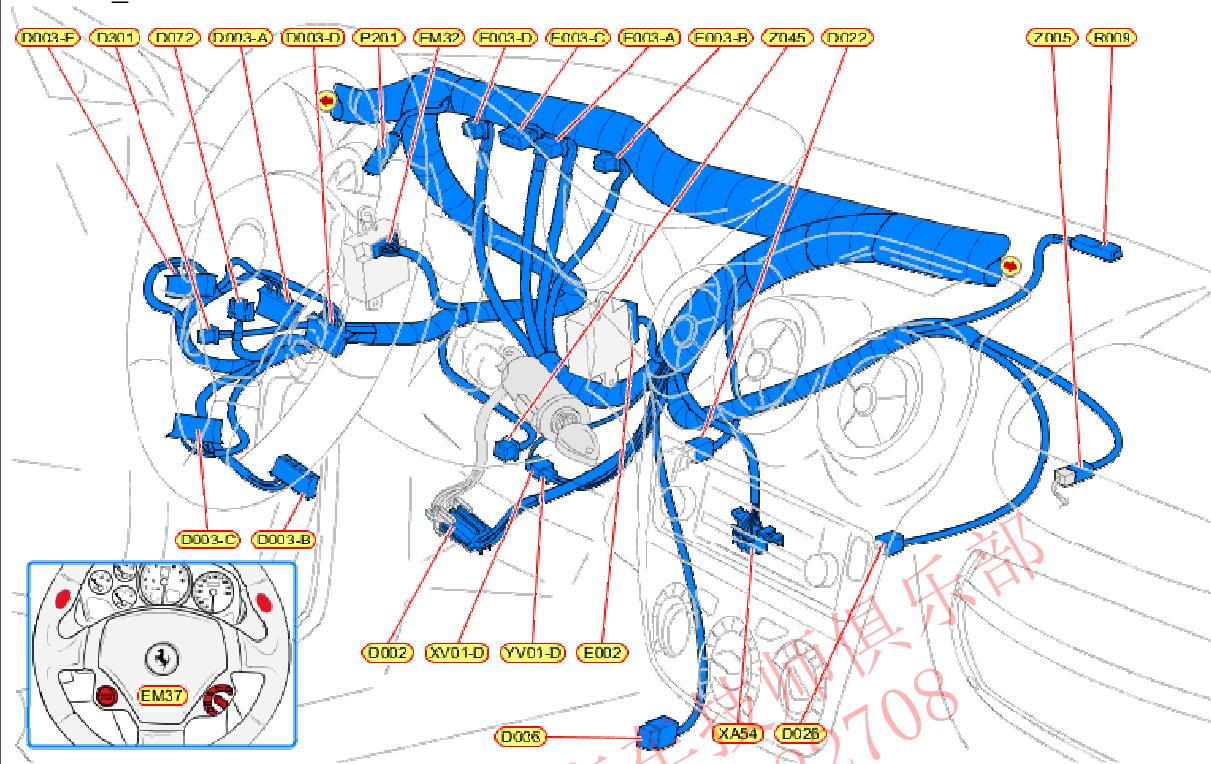

零件号	说明	电缆
EM37	车轮节点 (NVO)	C20001_4
D072	方向盘节点 - 驾驶员侧安全气囊 (NVO)	C20001_4



C20001_5 - 仪表板电缆

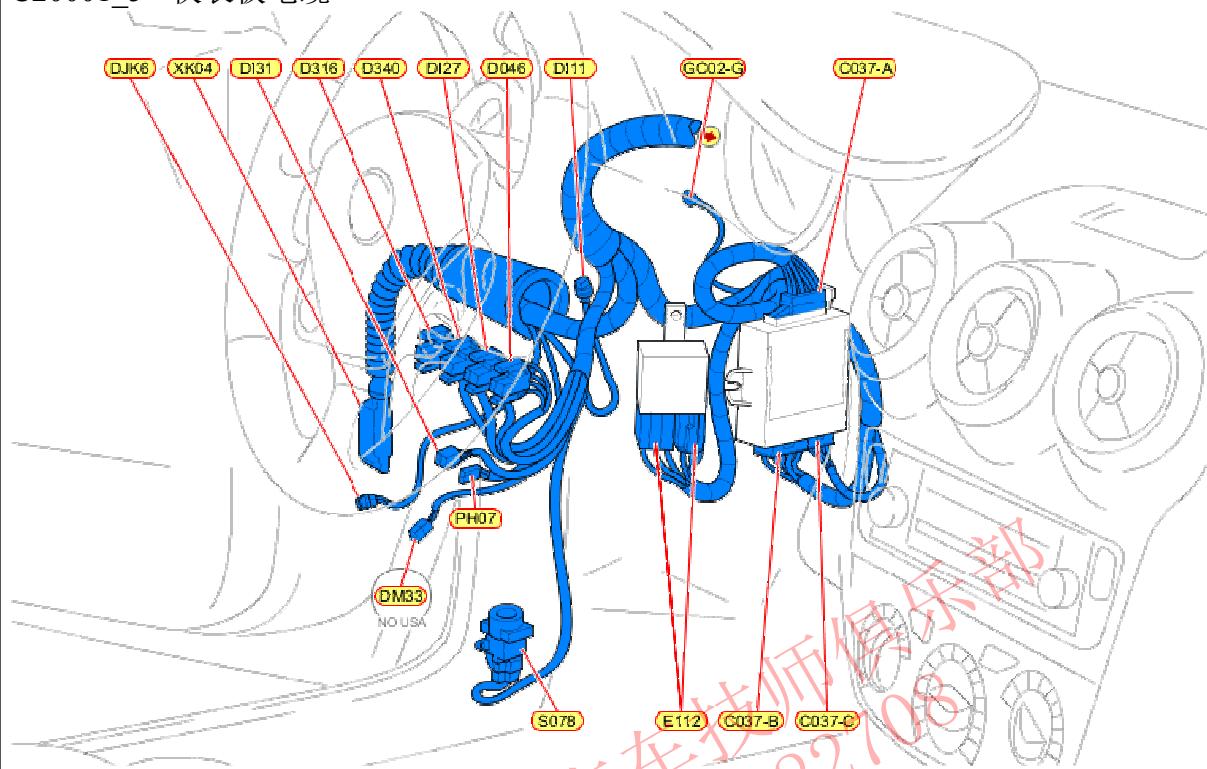

零件号 说明


GC02-G 仪表板电缆接地节点

电缆


C20001_5




CB10-A

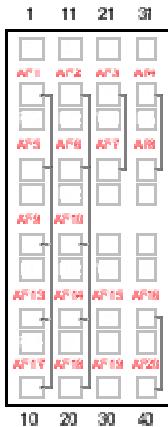

LTR6

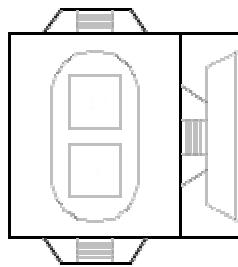


LTL6

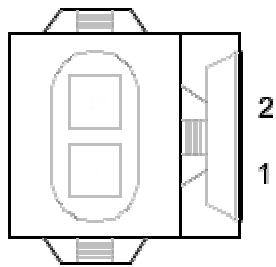


CB10-B




YA02

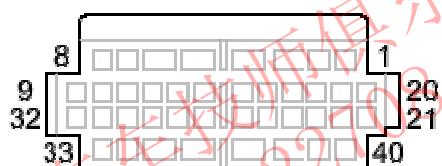


XA02

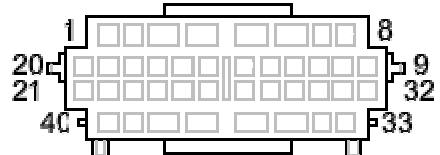


GCL8

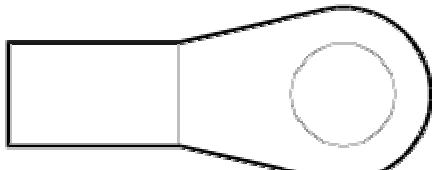

GCR8

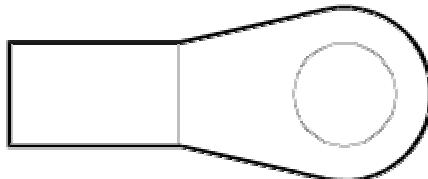

D072

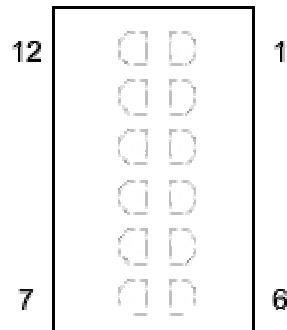


FD0426 - 蜂鸣器

Europe


0 -
99999




GC02-G

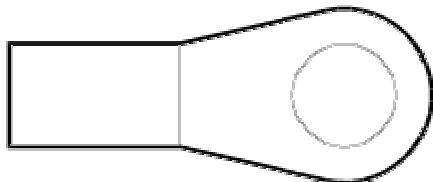

EM37

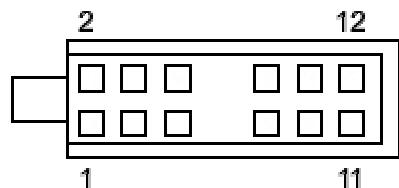

D072

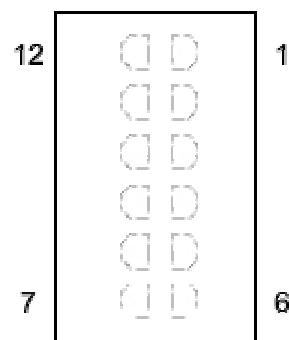

中国汽车技师俱乐部
QQ:583622708



EM37 - 车轮节点 (NVO)

NVO



中国汽车技师俱乐部
QQ:583622708

- | | |
|---|----------|
| 1 | B CAN-A |
| 2 | B CAN-B |
| 3 | 接地 |
| 4 | +15 |
| 5 | 喇叭 |
| 6 | 交流发电机警告灯 |
| 7 | |
| 8 | 起动重复防止 |

