

节 501-09 后视镜

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

电动车外后视镜.....	501-09-2
--------------	----------

连接器


车外后视镜控制开关.....	501-09-4
车外后视镜LH.....	501-09-5
车外后视镜RH.....	501-09-6

501-09-2 电动车外后视镜

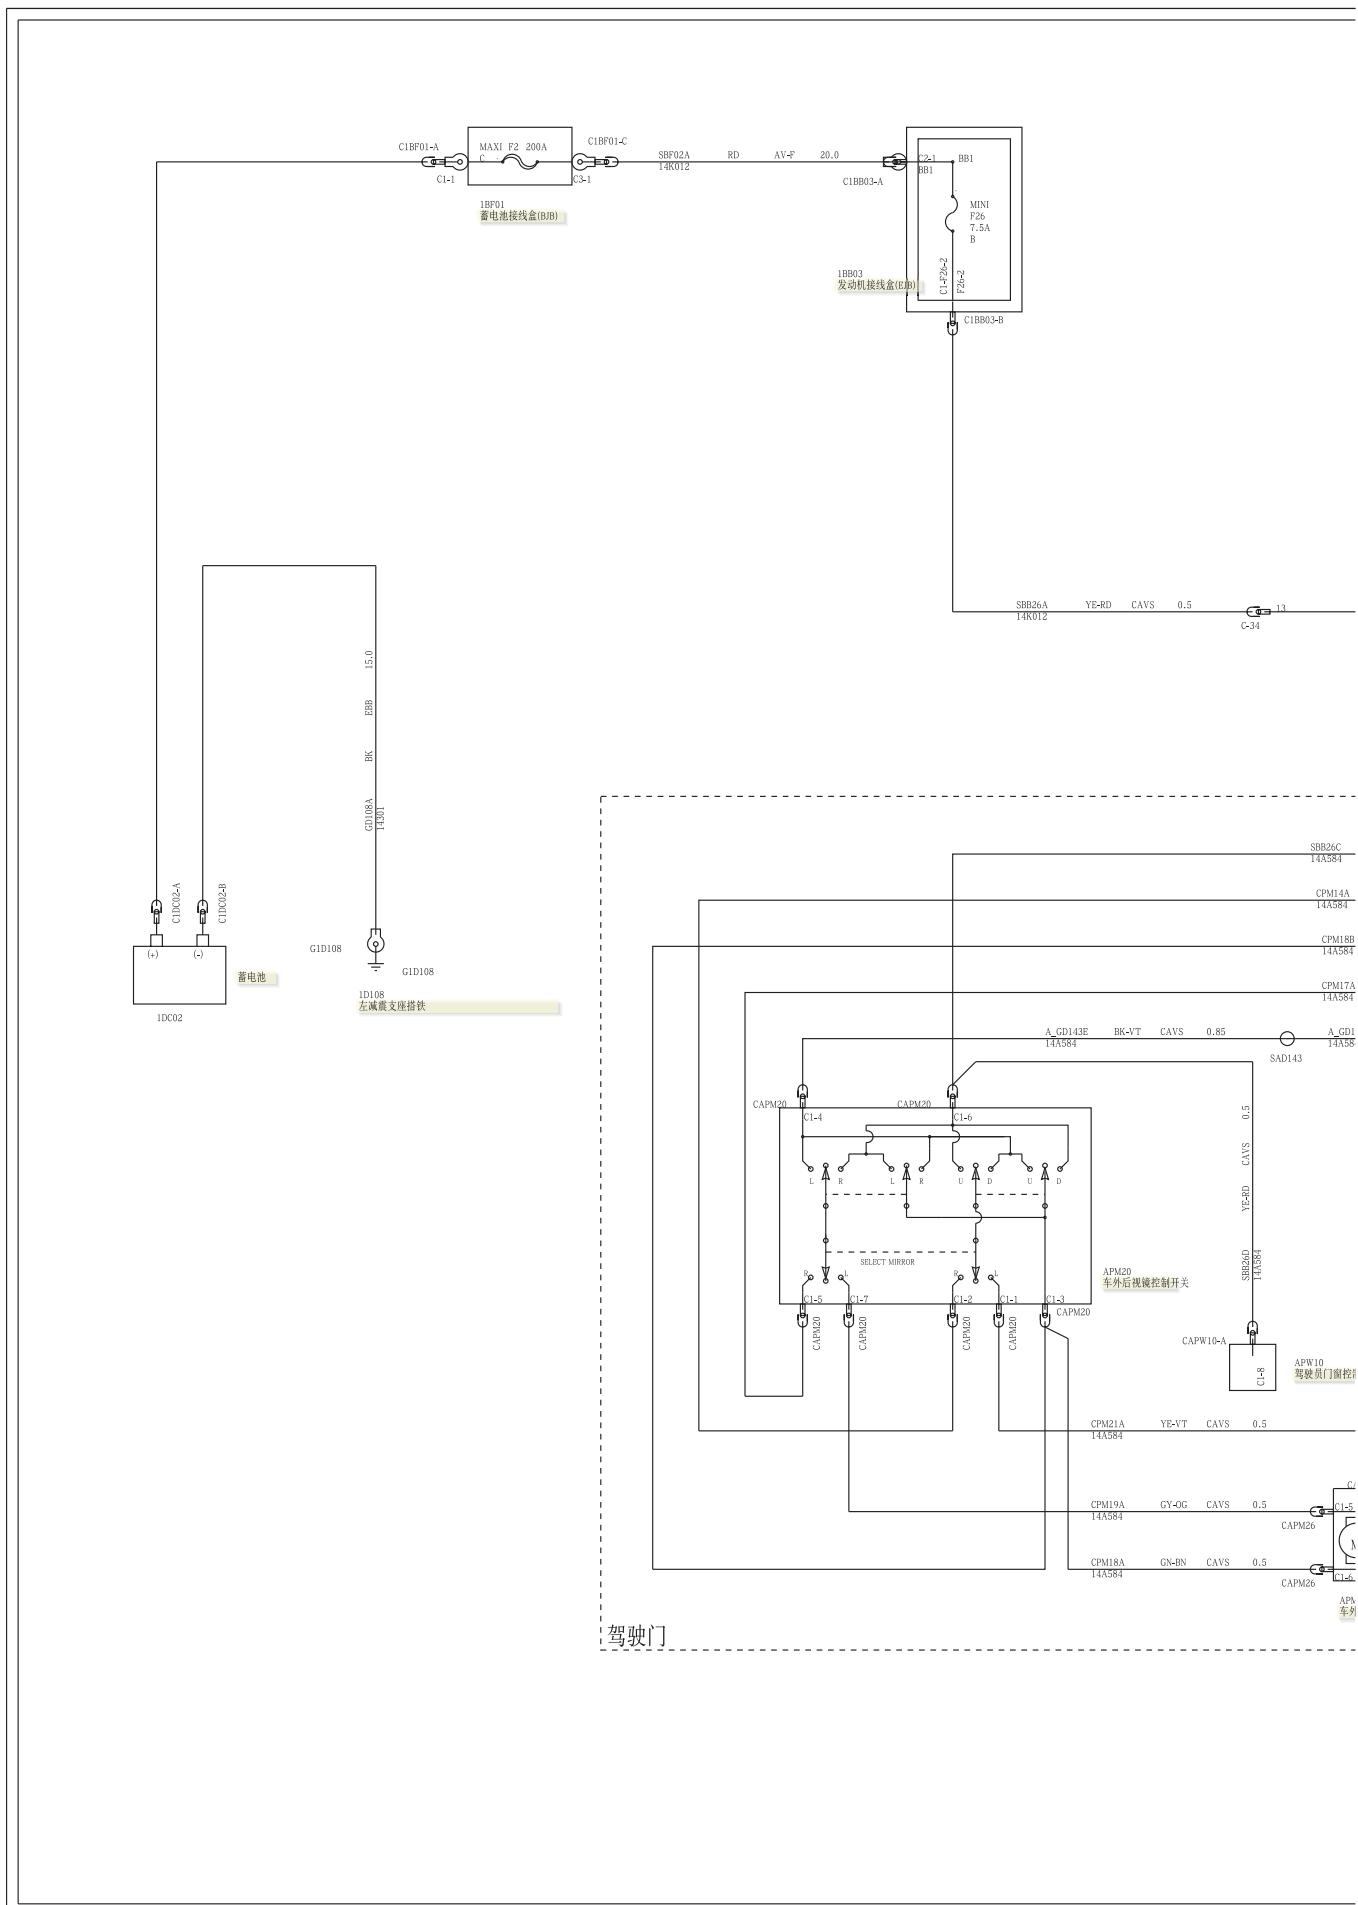


2008.75 Fiesta (G1102880)

501-09-3 电动车外后视镜

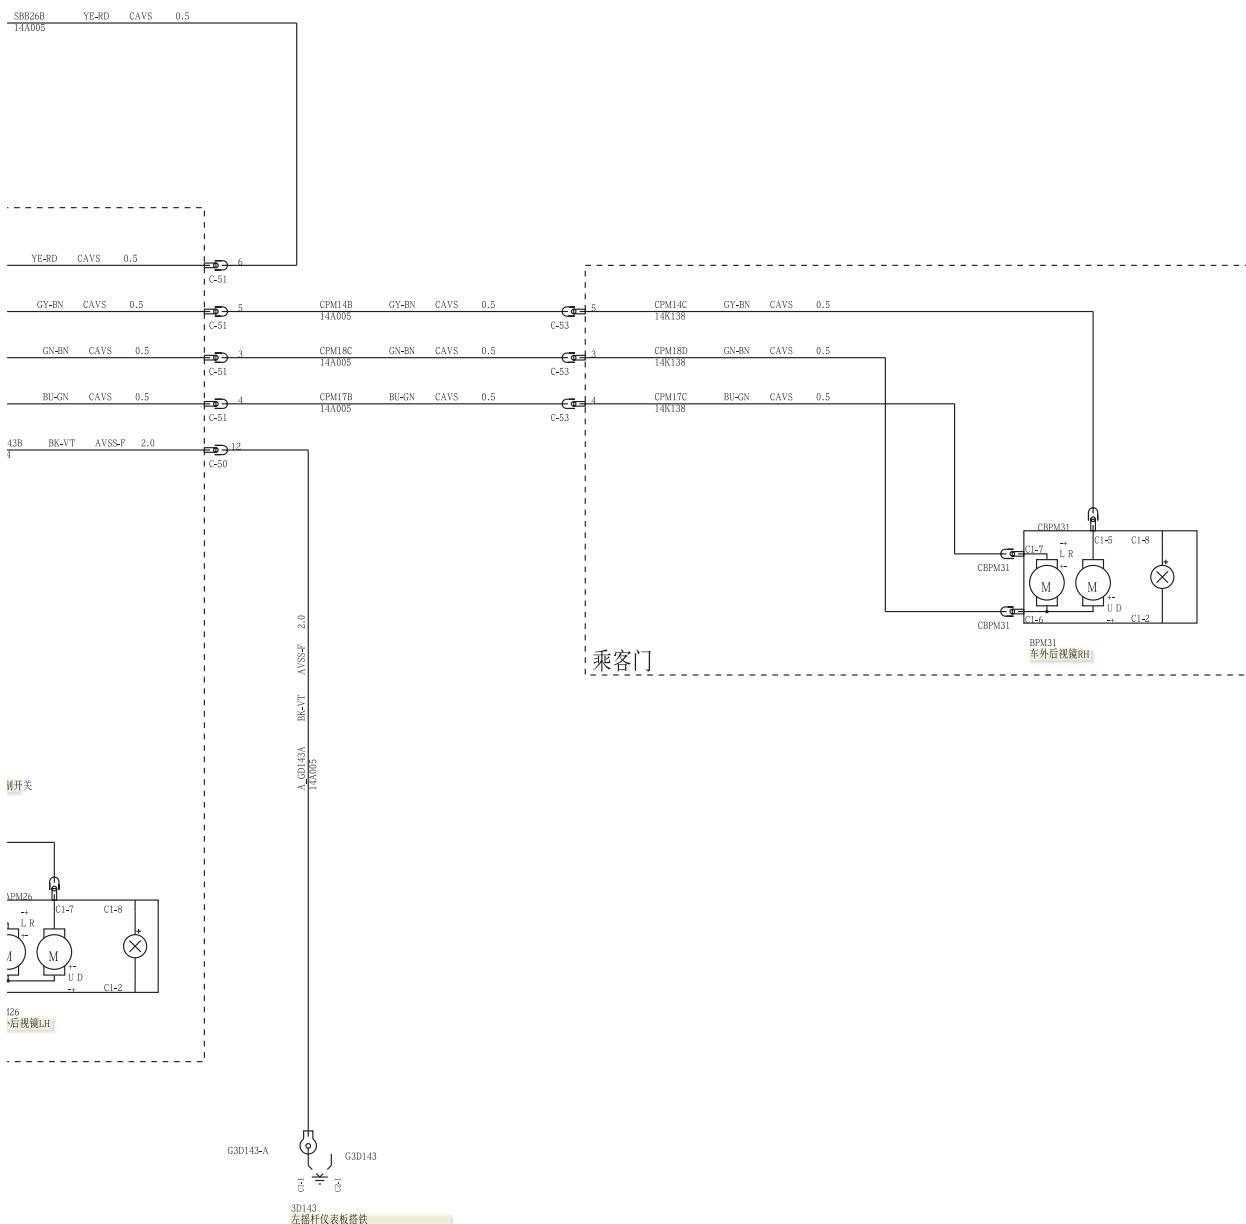

501-09-4 车外后视镜控制开关

PIN 6 => SBB26D YE-RD 0.5 CAVS + SBB26C YE-RD 0.5 CAVS

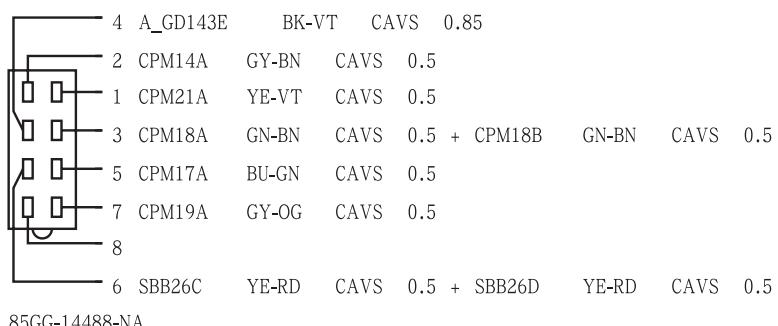


85GG-14488-NA

CAPM20

线束 14A584

501-09-5 车外后视镜LH

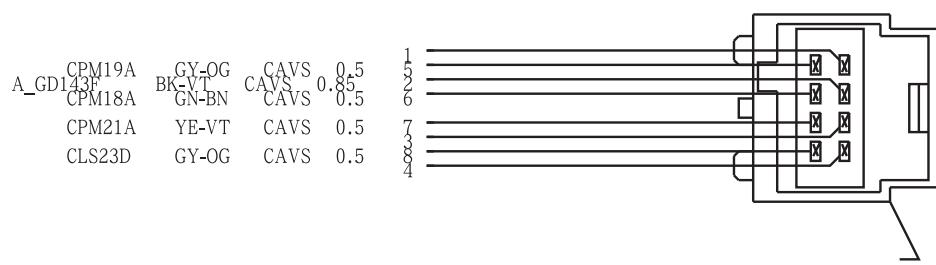


2L1T-14A624-SA

CAPM26

线束 14A584

501-09-6 车外后视镜RH

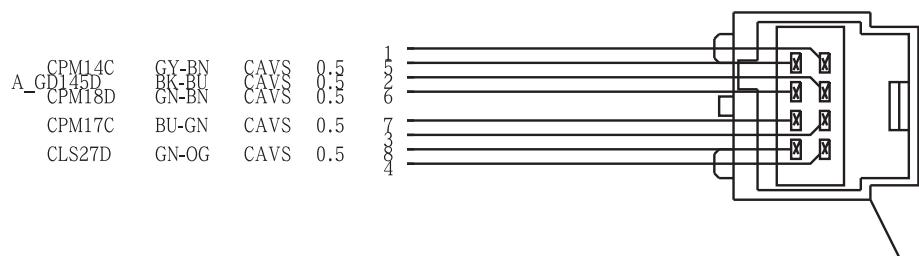

2L1T-14A624-SA

CBPM31

线束 14K138

节 501-10 座椅


车辆应用：2008.75 Fiesta

内容	页码
----	----

连接器

驾驶员座椅	501-10-2
-------------	----------

501-10-2 驾驶员座椅

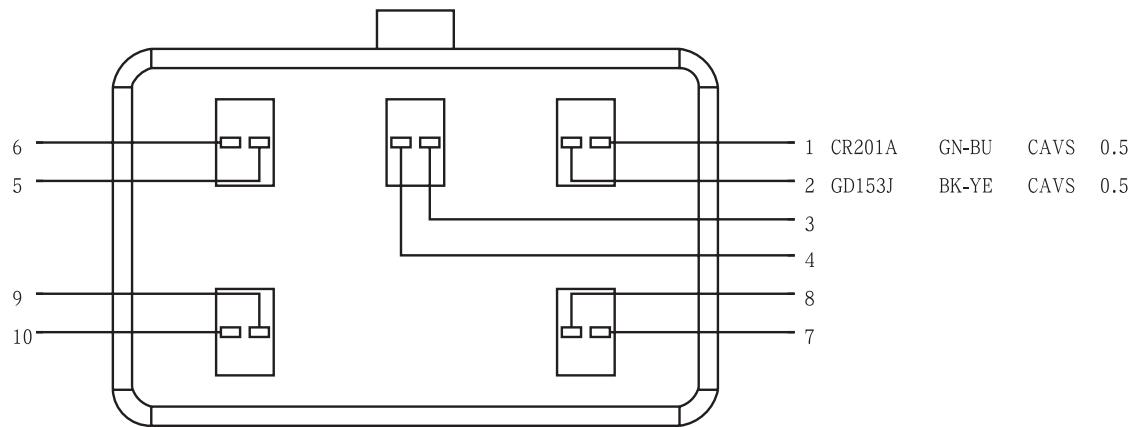

6S6T-14489-DKA

C3PS01

线束 14A005

节 501-11 玻璃、车架和机械

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

后车窗加热系统 — 4门，车辆配备：空调/手动温度控制.....	501-11-2
后车窗加热系统 — 4门，车辆配备：空调/自动温度控制.....	501-11-4
后车窗加热系统 — 5门，车辆配备：空调/手动温度控制.....	501-11-6
后车窗加热系统 — 5门，车辆配备：空调/自动温度控制.....	501-11-8
动力车窗.....	501-11-10

连接器


驾驶员门窗控制开关 — A.....	501-11-12
驾驶员门窗控制开关 — B.....	501-11-13
驾驶员门窗控制开关 — C.....	501-11-14
驾驶员门窗调节器电机.....	501-11-15
加热式后车窗组件 — A.....	501-11-16
加热式后车窗组件 — B.....	501-11-17
加热式后车窗组件 — C.....	501-11-18
加热式后车窗组件 — D.....	501-11-19
乘员门窗控制开关.....	501-11-20
乘员门窗调节器电机.....	501-11-21
后门窗控制开关LH.....	501-11-22
后门窗控制开关RH.....	501-11-23
后门窗调节器电机LH.....	501-11-24
后门窗调节器电机RH.....	501-11-25

501-11-2 后车窗加热系统—4门, 车辆配备: 空调/手动温度控制

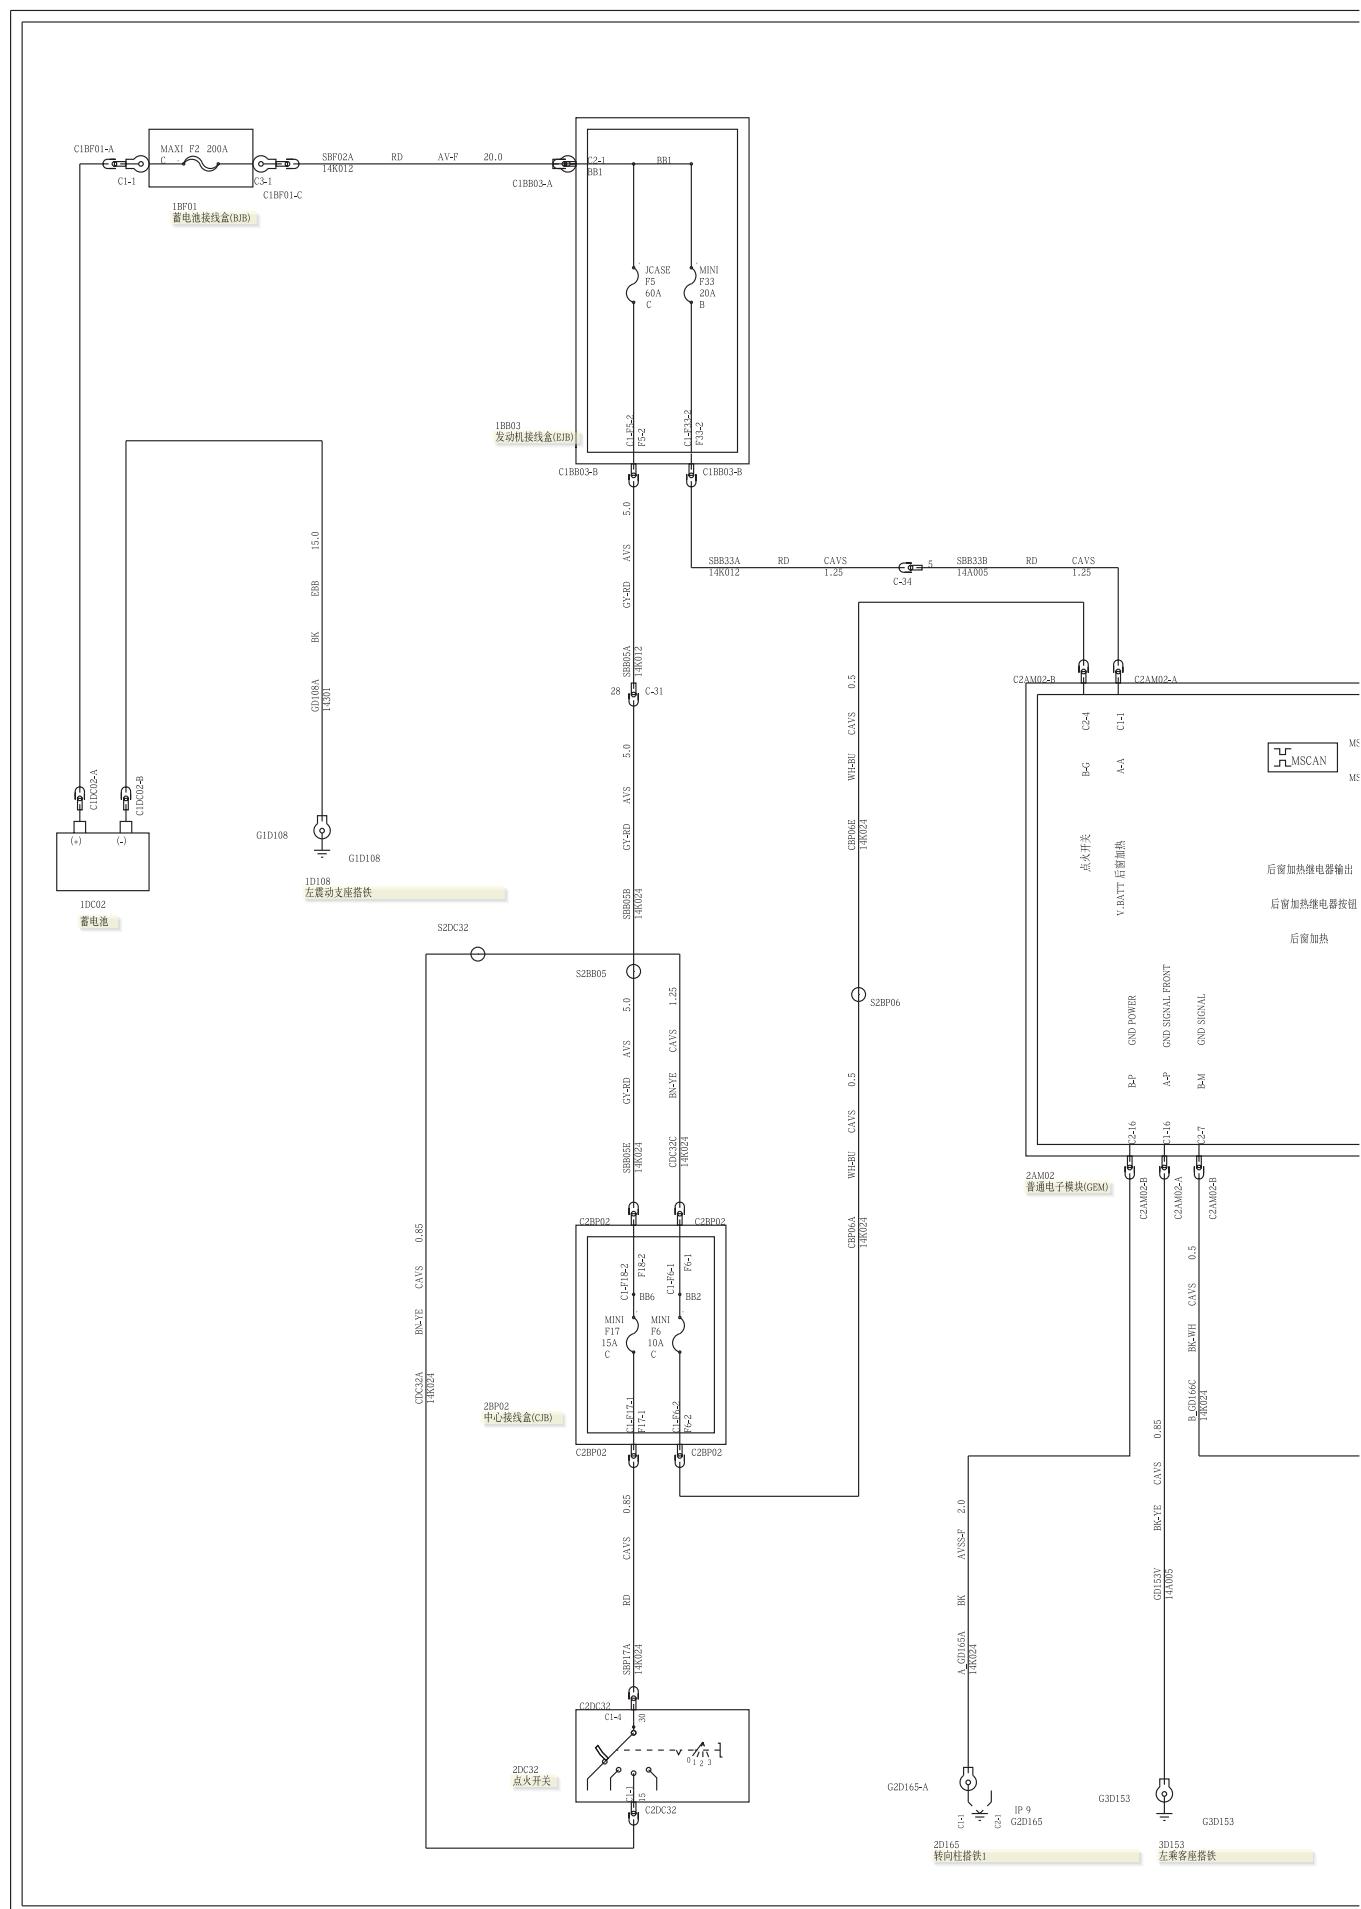


2008.75 Fiesta (G1109785)

501-11-3 后车窗加热系统—4门，车辆配备： 空调/手动温度控制

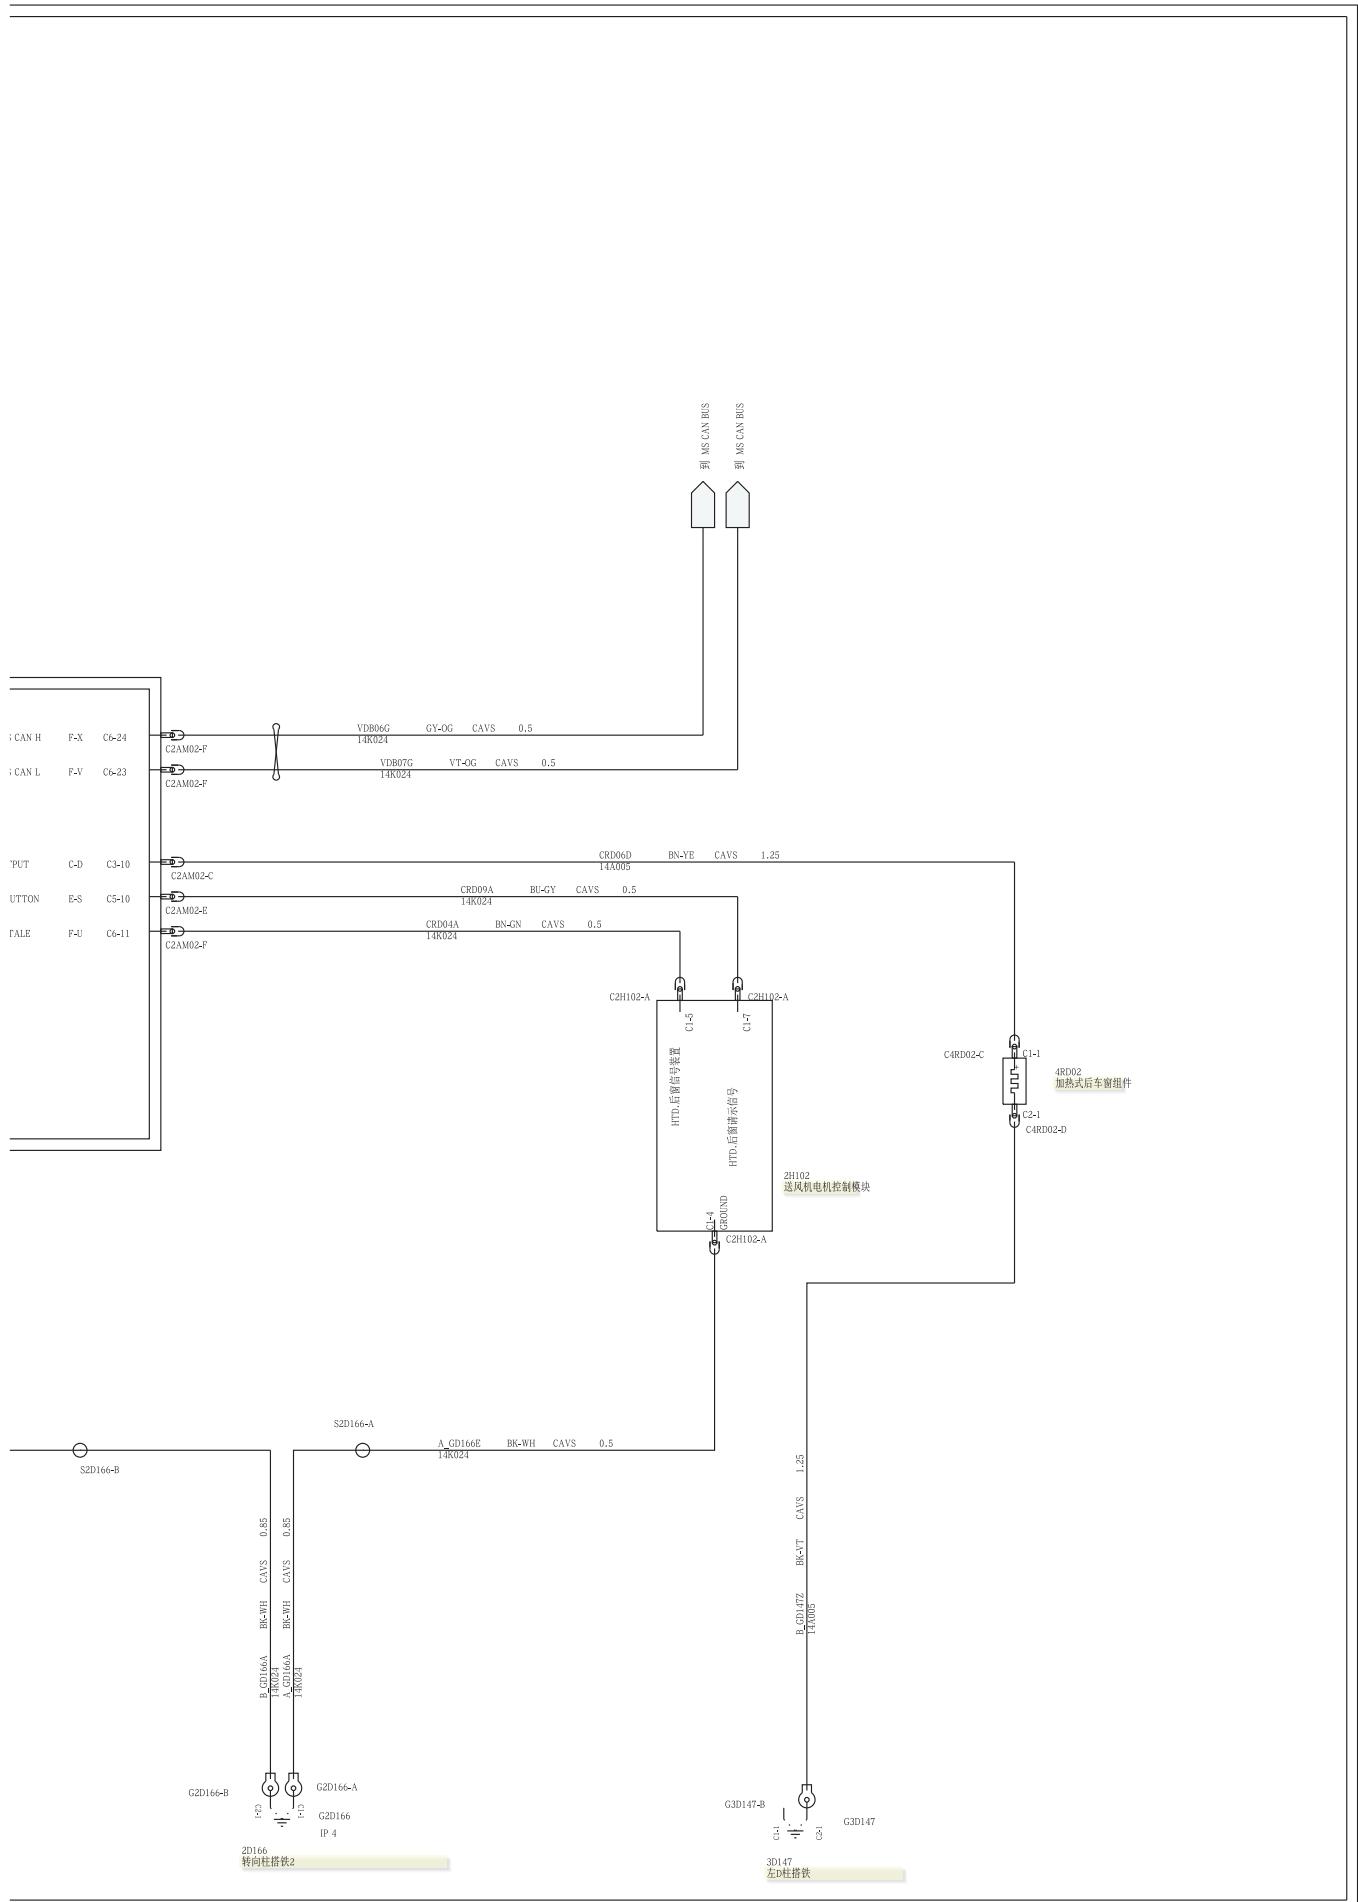


2008.75 Fiesta (G1109785)

501-11-4 后车窗加热系统—4门, 车辆配备: 空调/自动温度控制

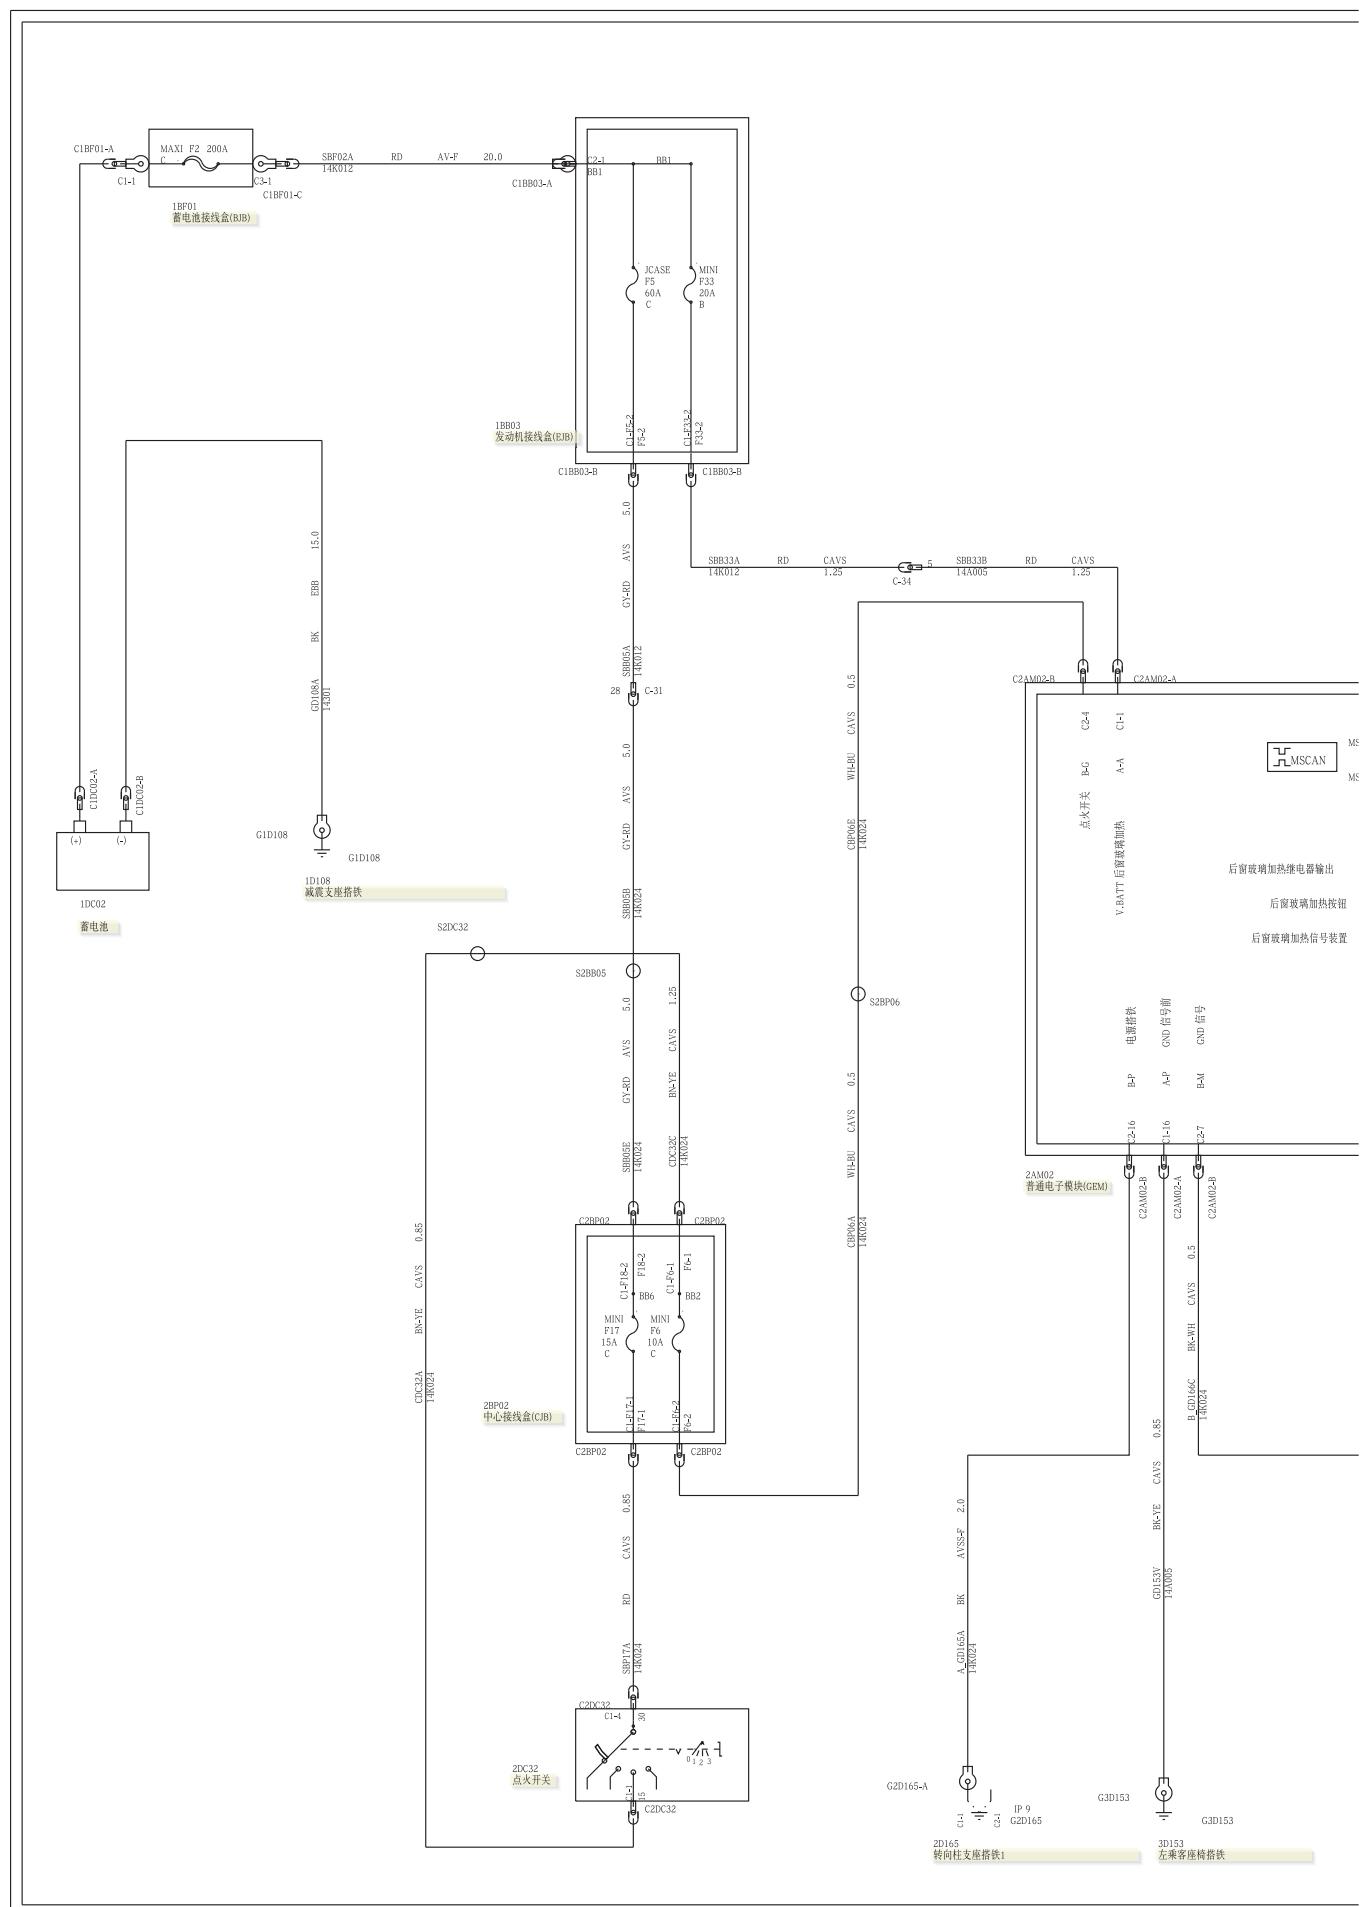


2008.75 Fiesta (G1109786)

501-11-5 后车窗加热系统—4门，车辆配备： 空调/自动温度控制

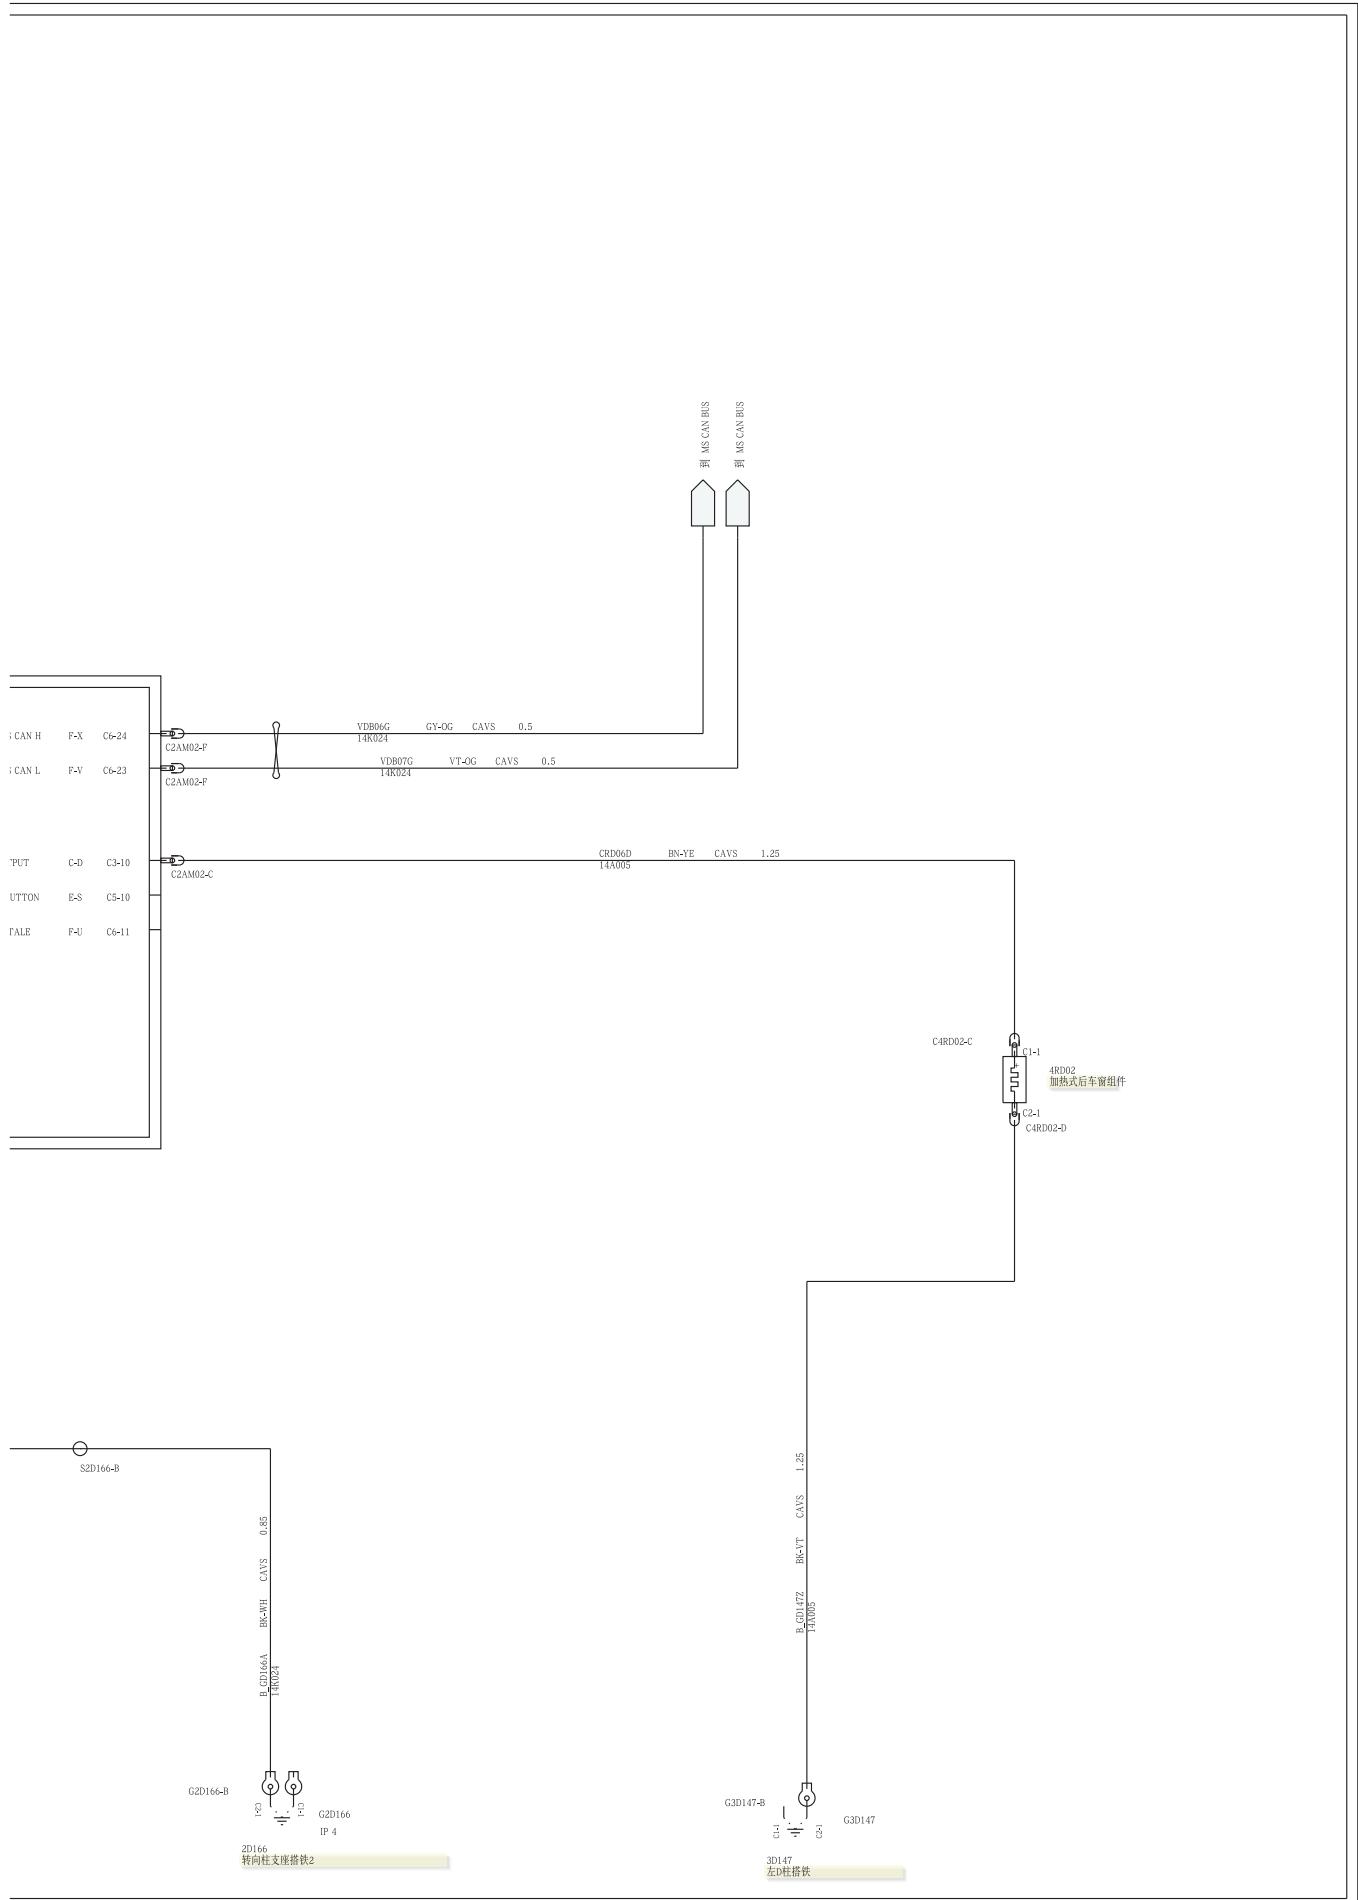


2008.75 Fiesta (G1109786)

501-11-6 后车窗加热系统—5门, 车辆配备: 空调/手动温度控制

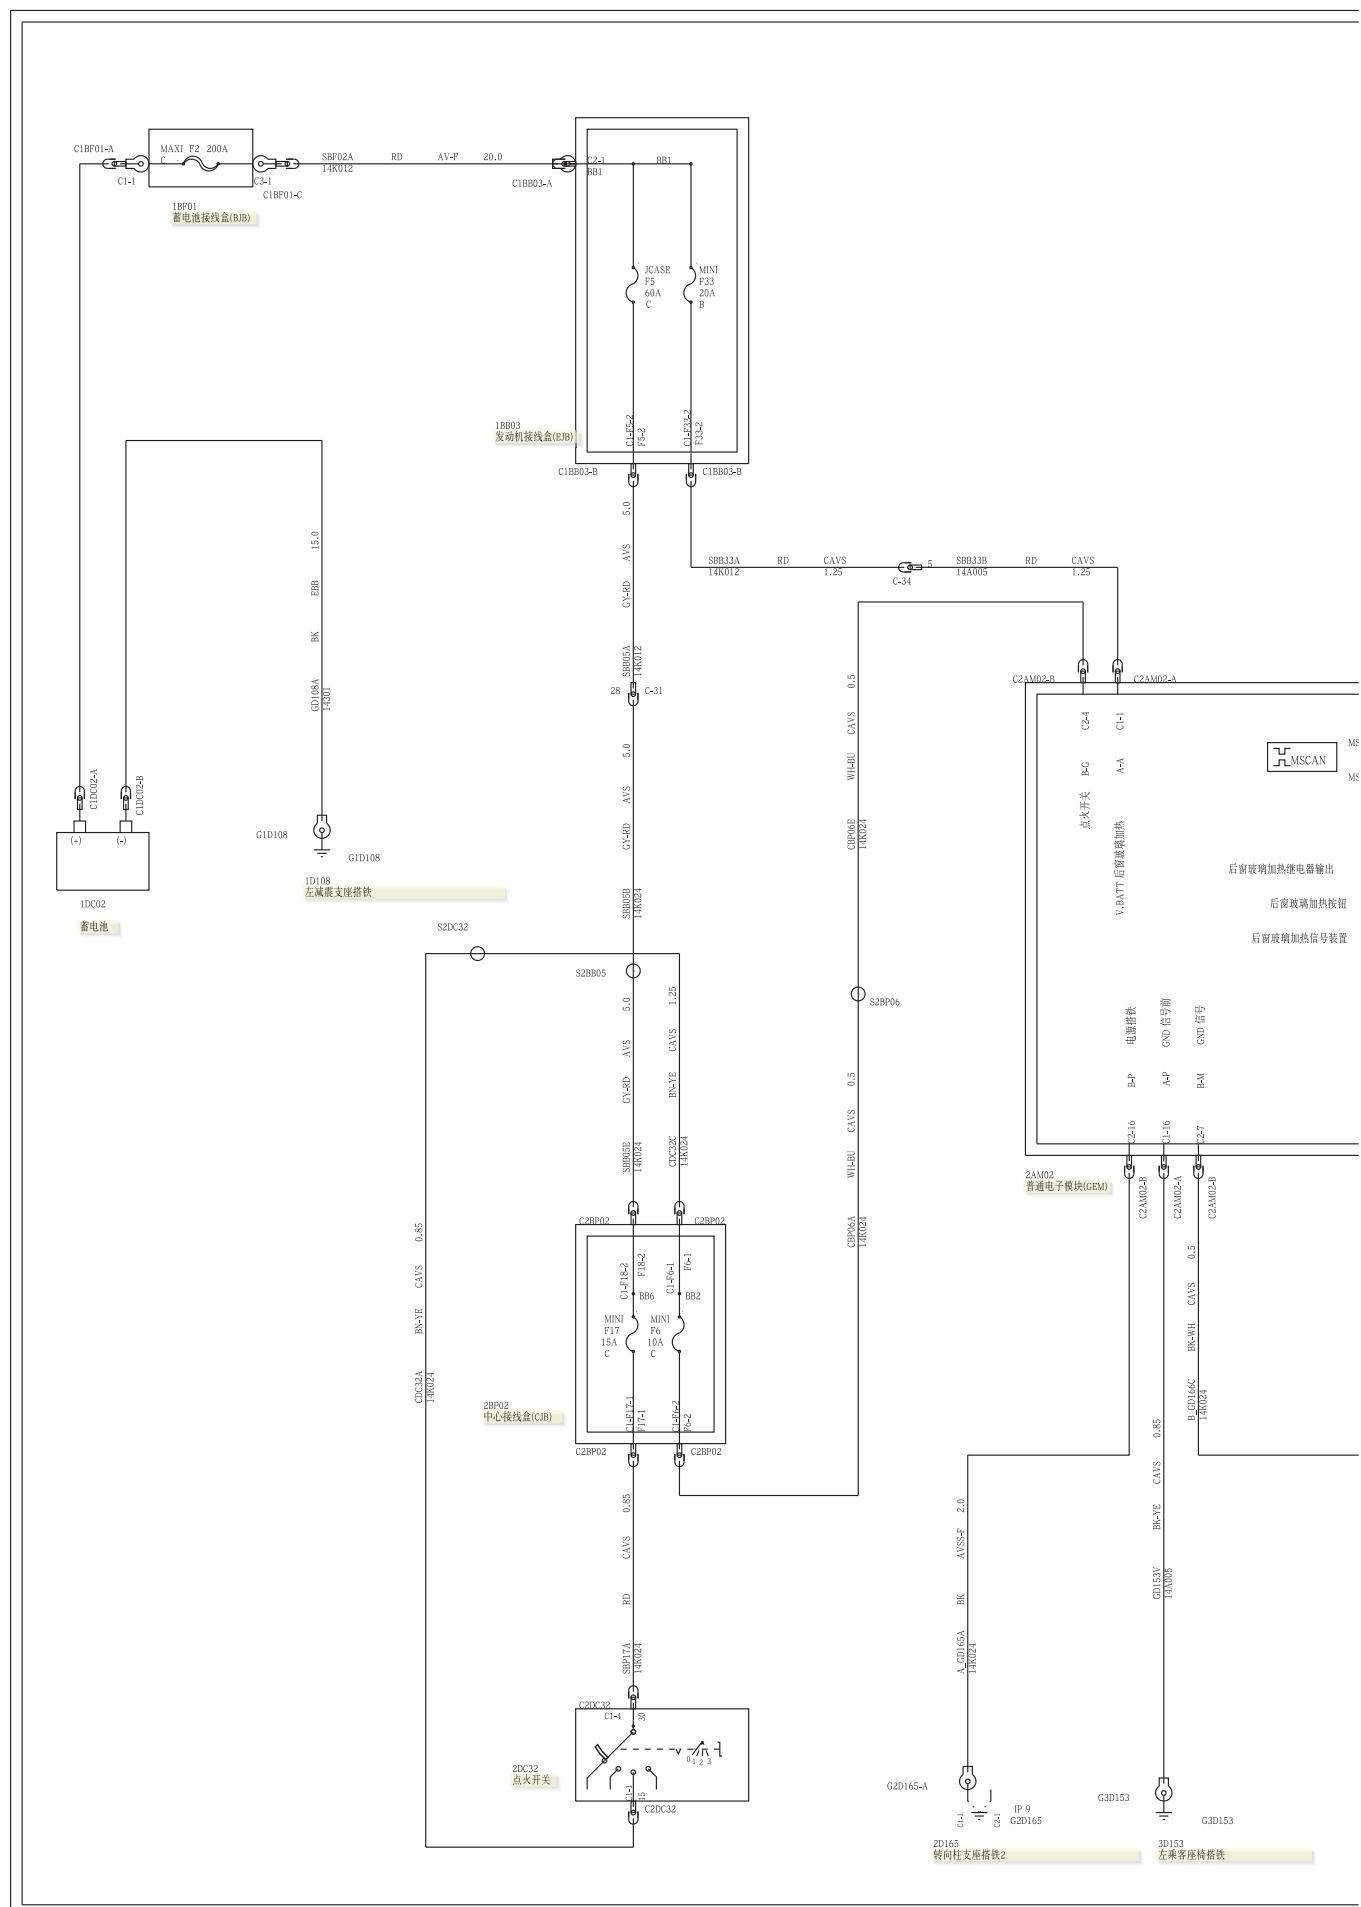


2008.75 Fiesta (G1109787)

501-11-7 后车窗加热系统—5门，车辆配备： 空调/手动温度控制

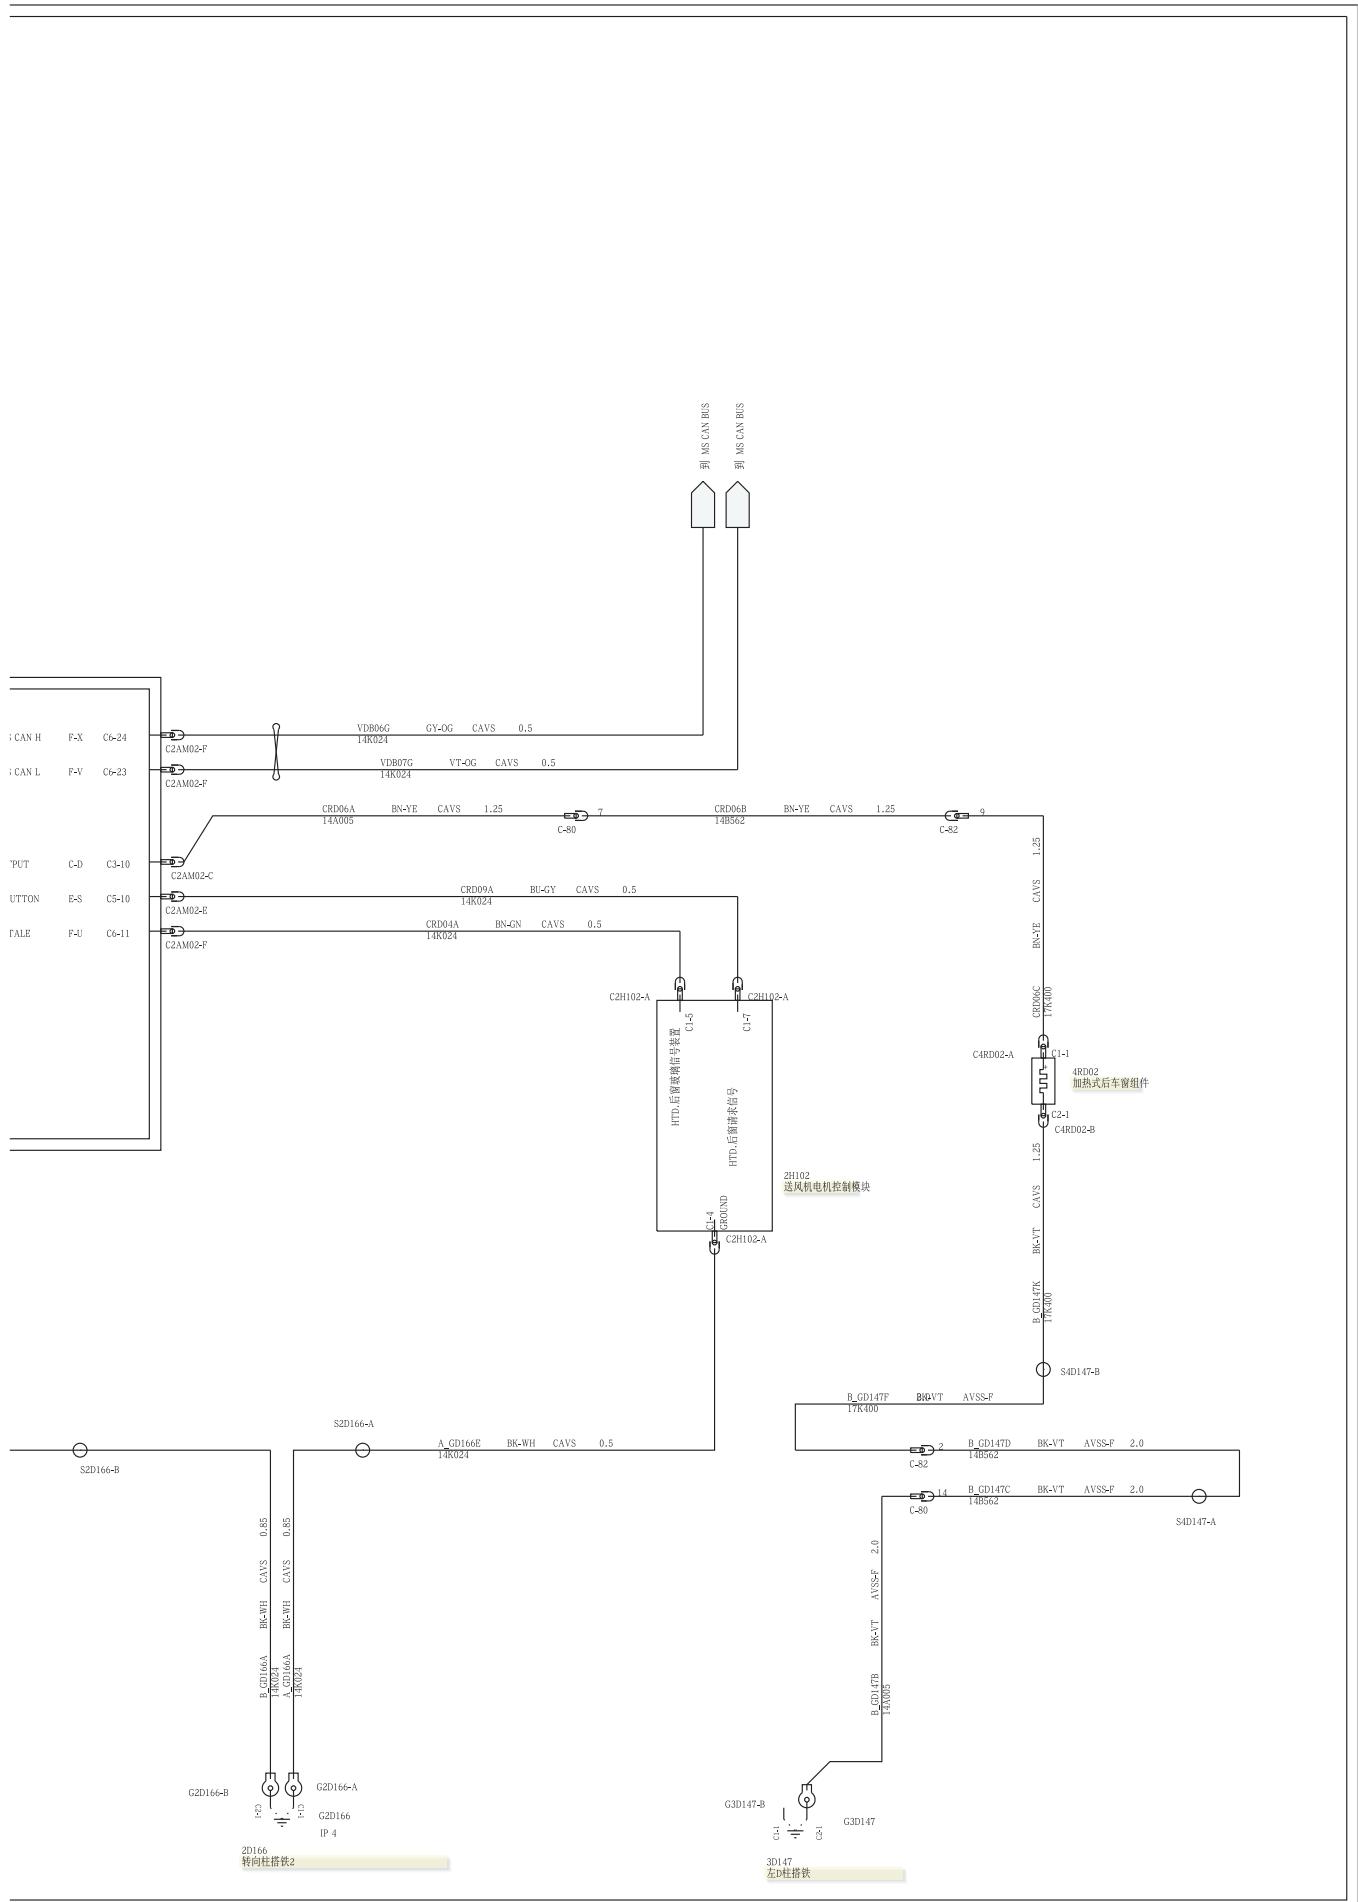


2008.75 Fiesta (G1109787)

501-11-8 后车窗加热系统—5门，车辆配备： 空调/自动温度控制

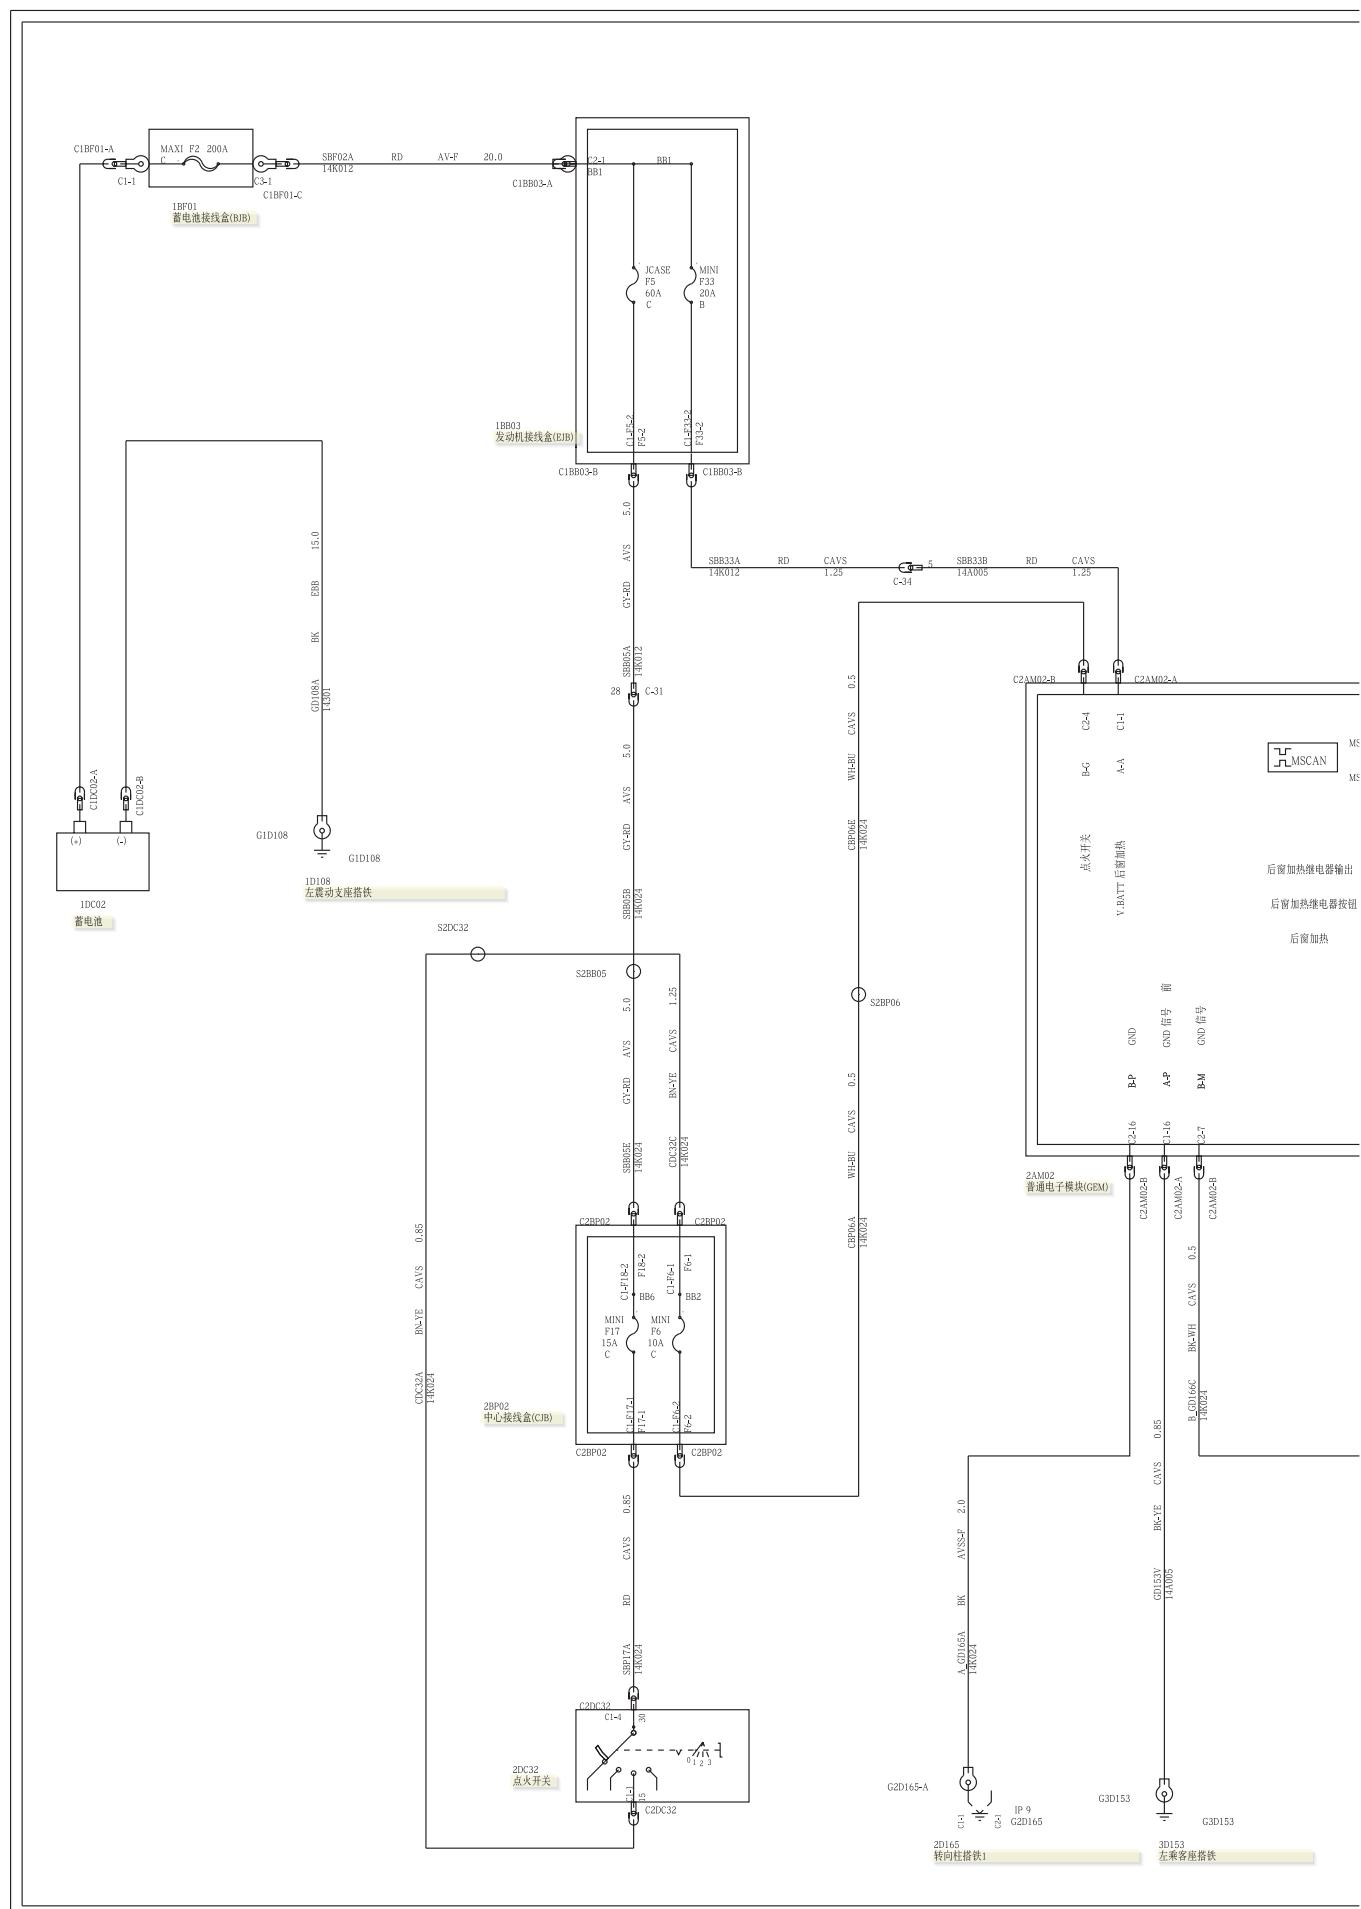


2008.75 Fiesta (G1109788)

501-11-9 后车窗加热系统—5门，车辆配备： 空调/自动温度控制

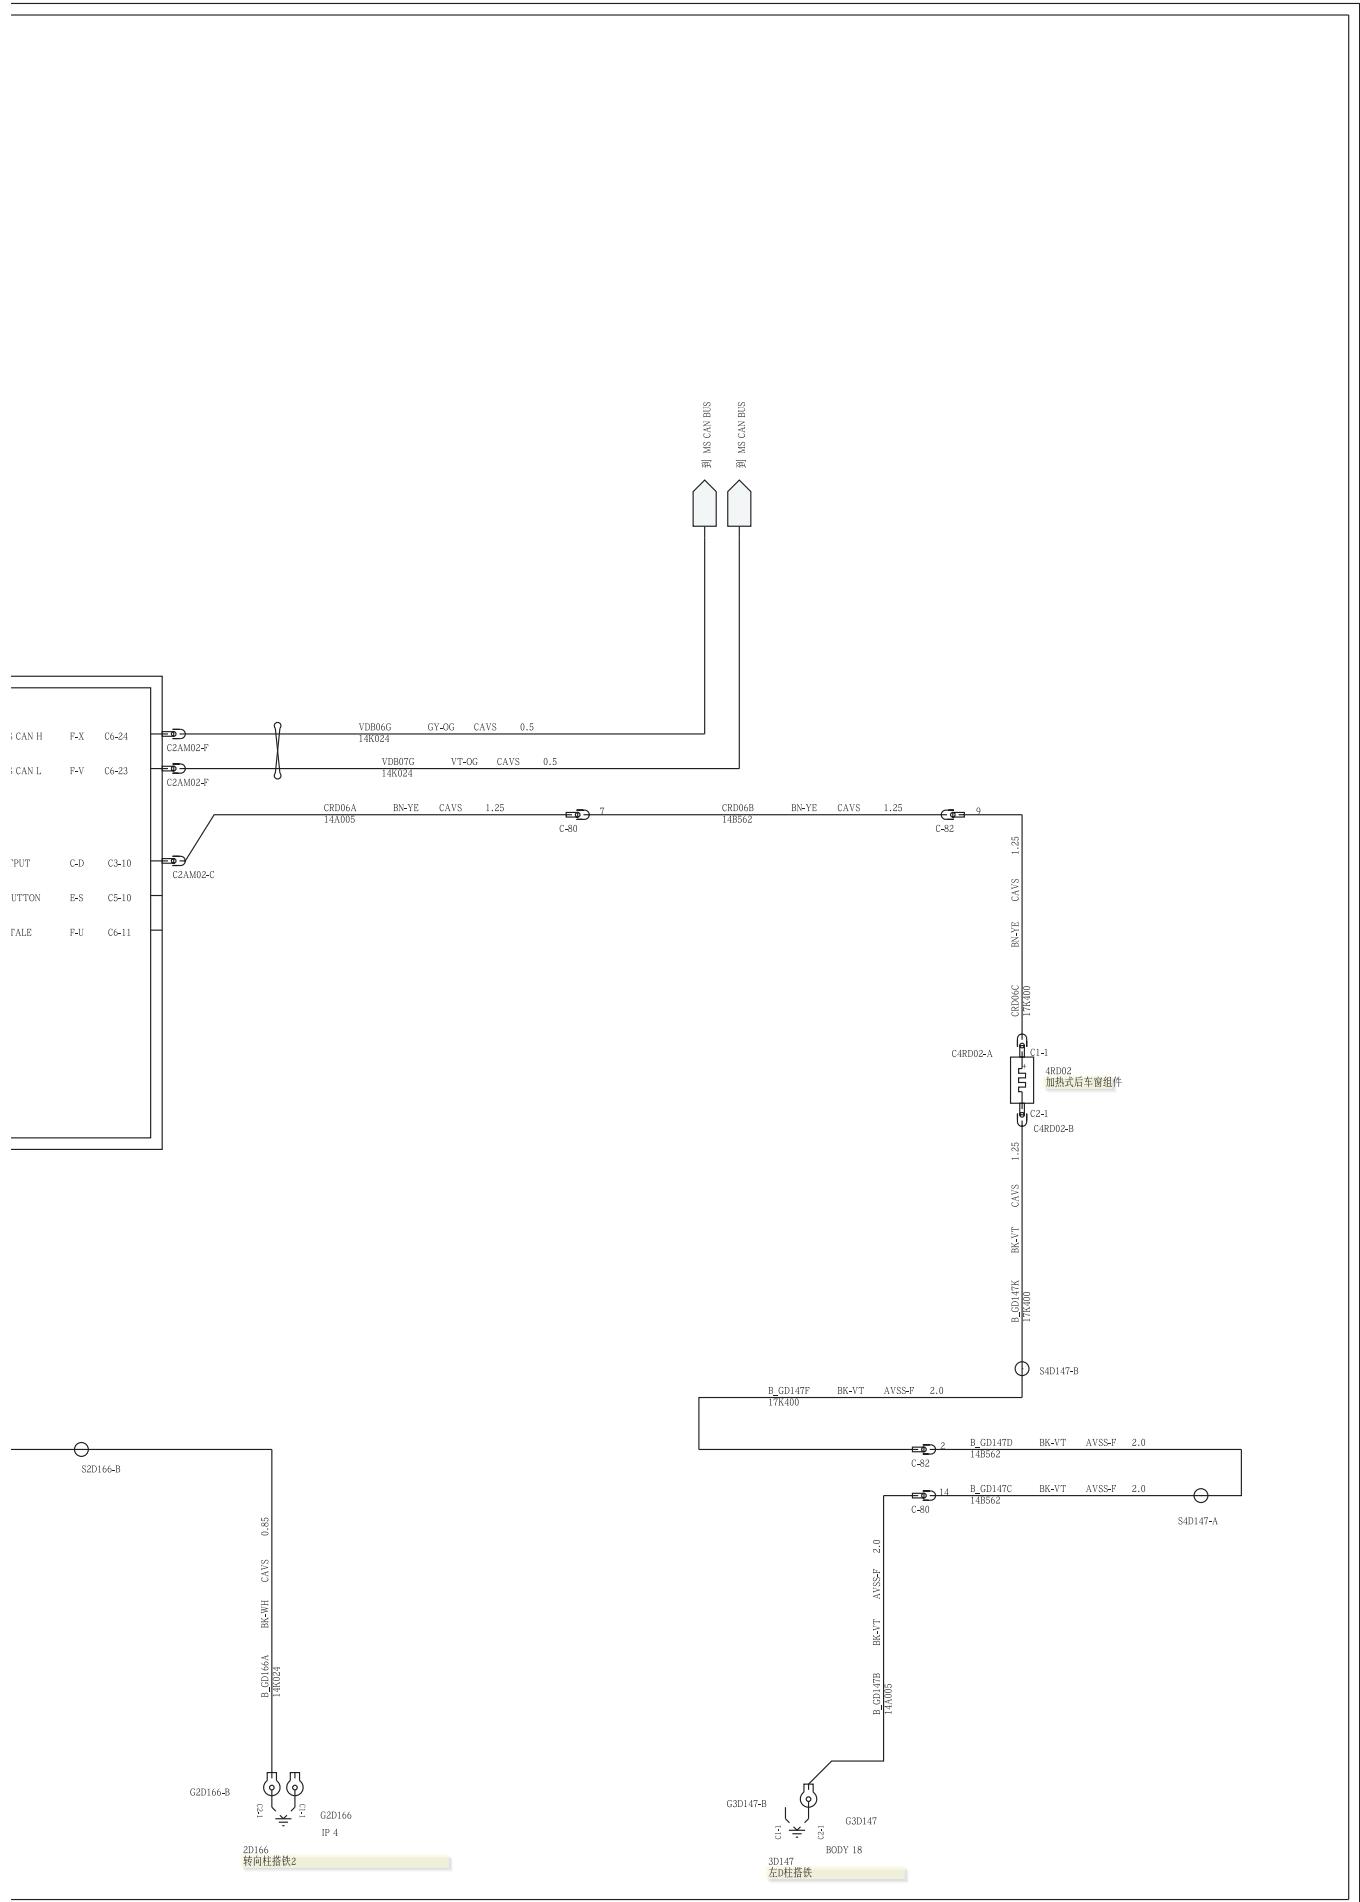


2008.75 Fiesta (G1109788)

501-11-10 动力车窗

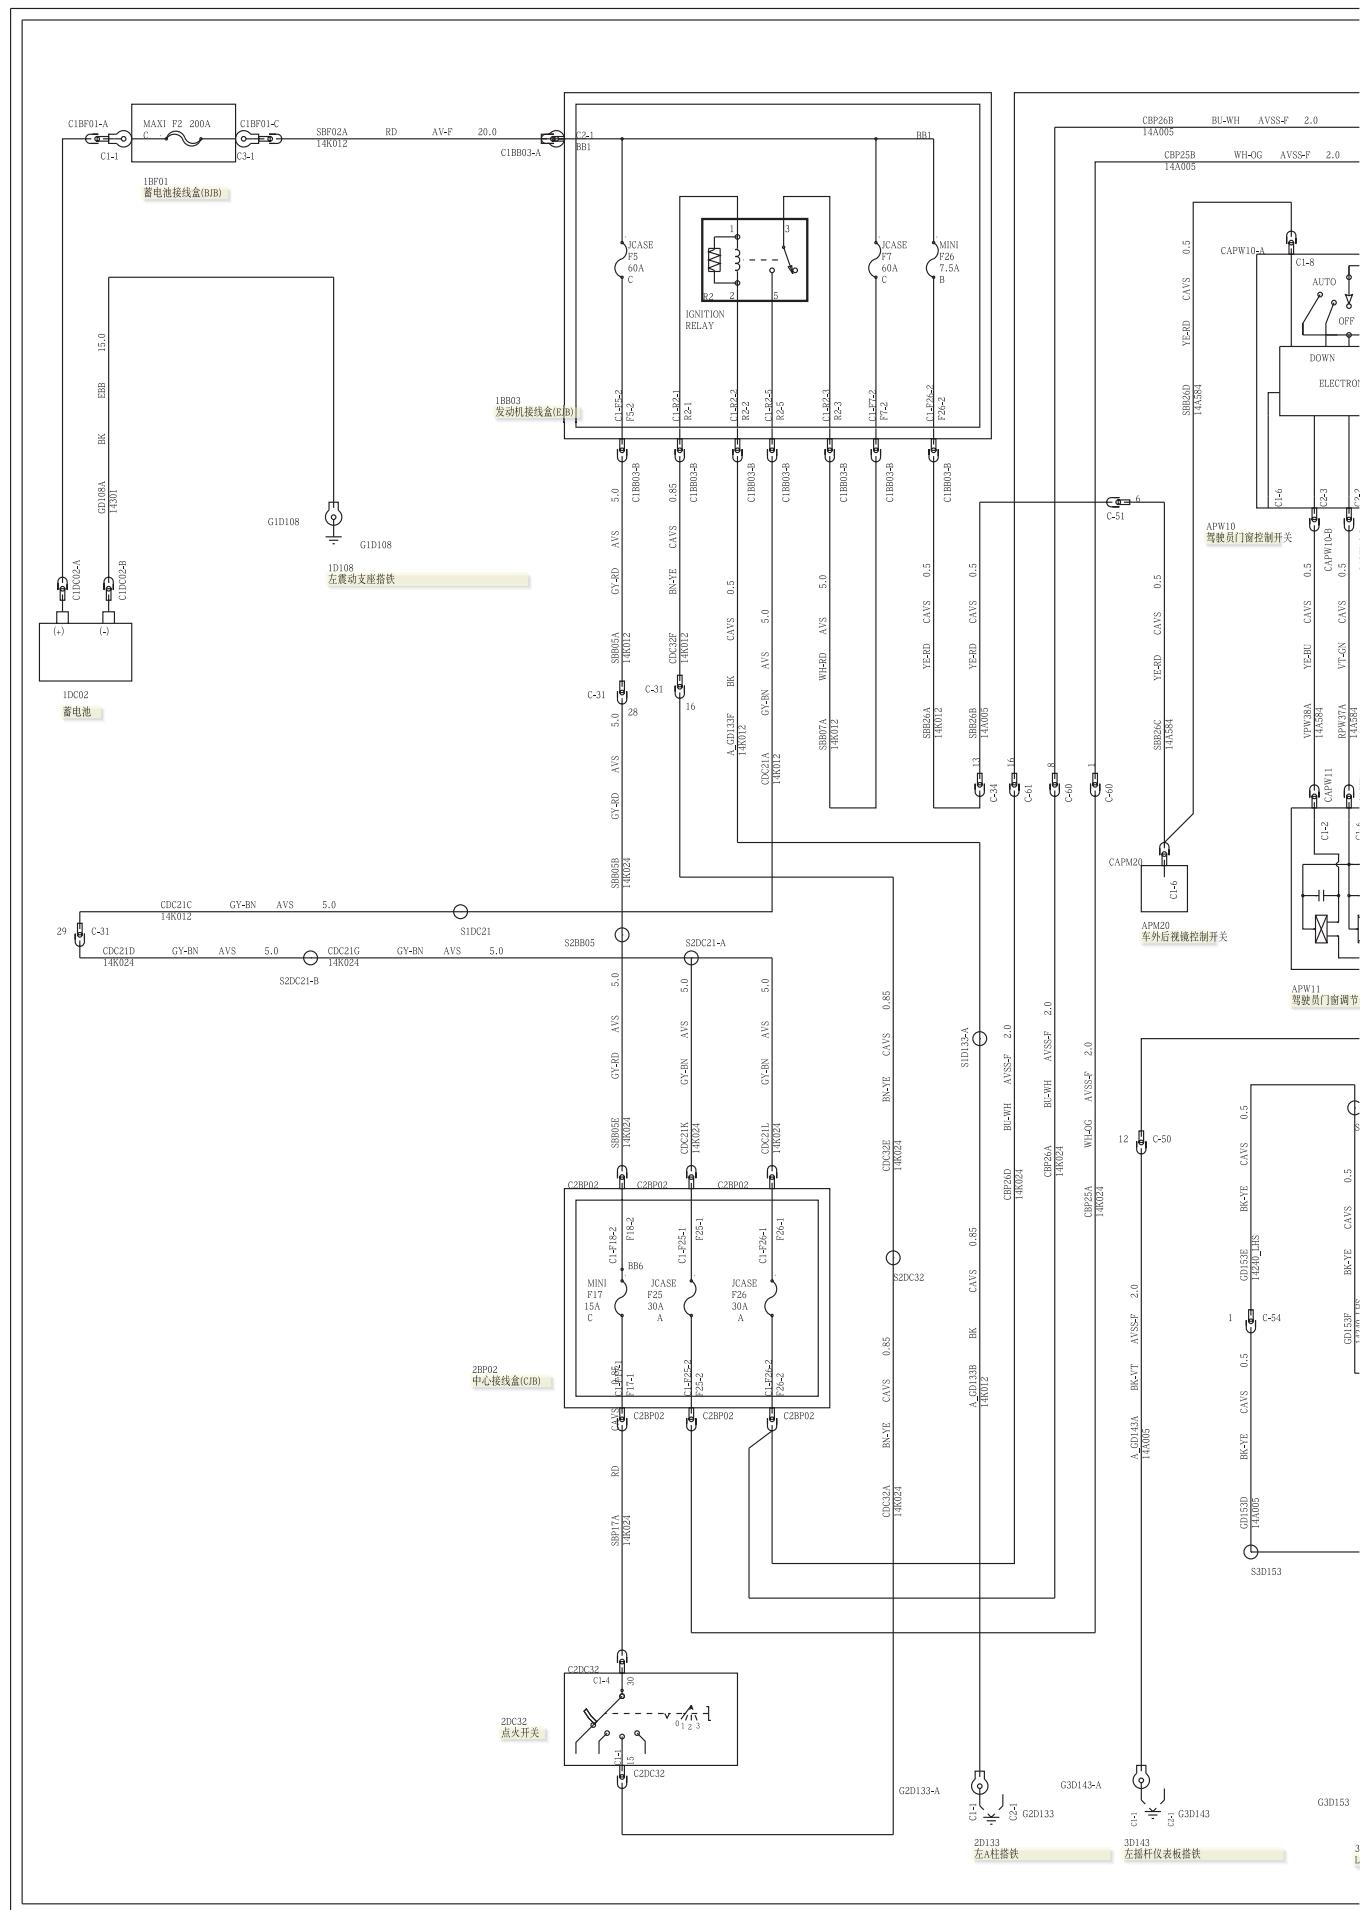


2008.75 Fiesta (G1102884)

501-11-11 动力车窗

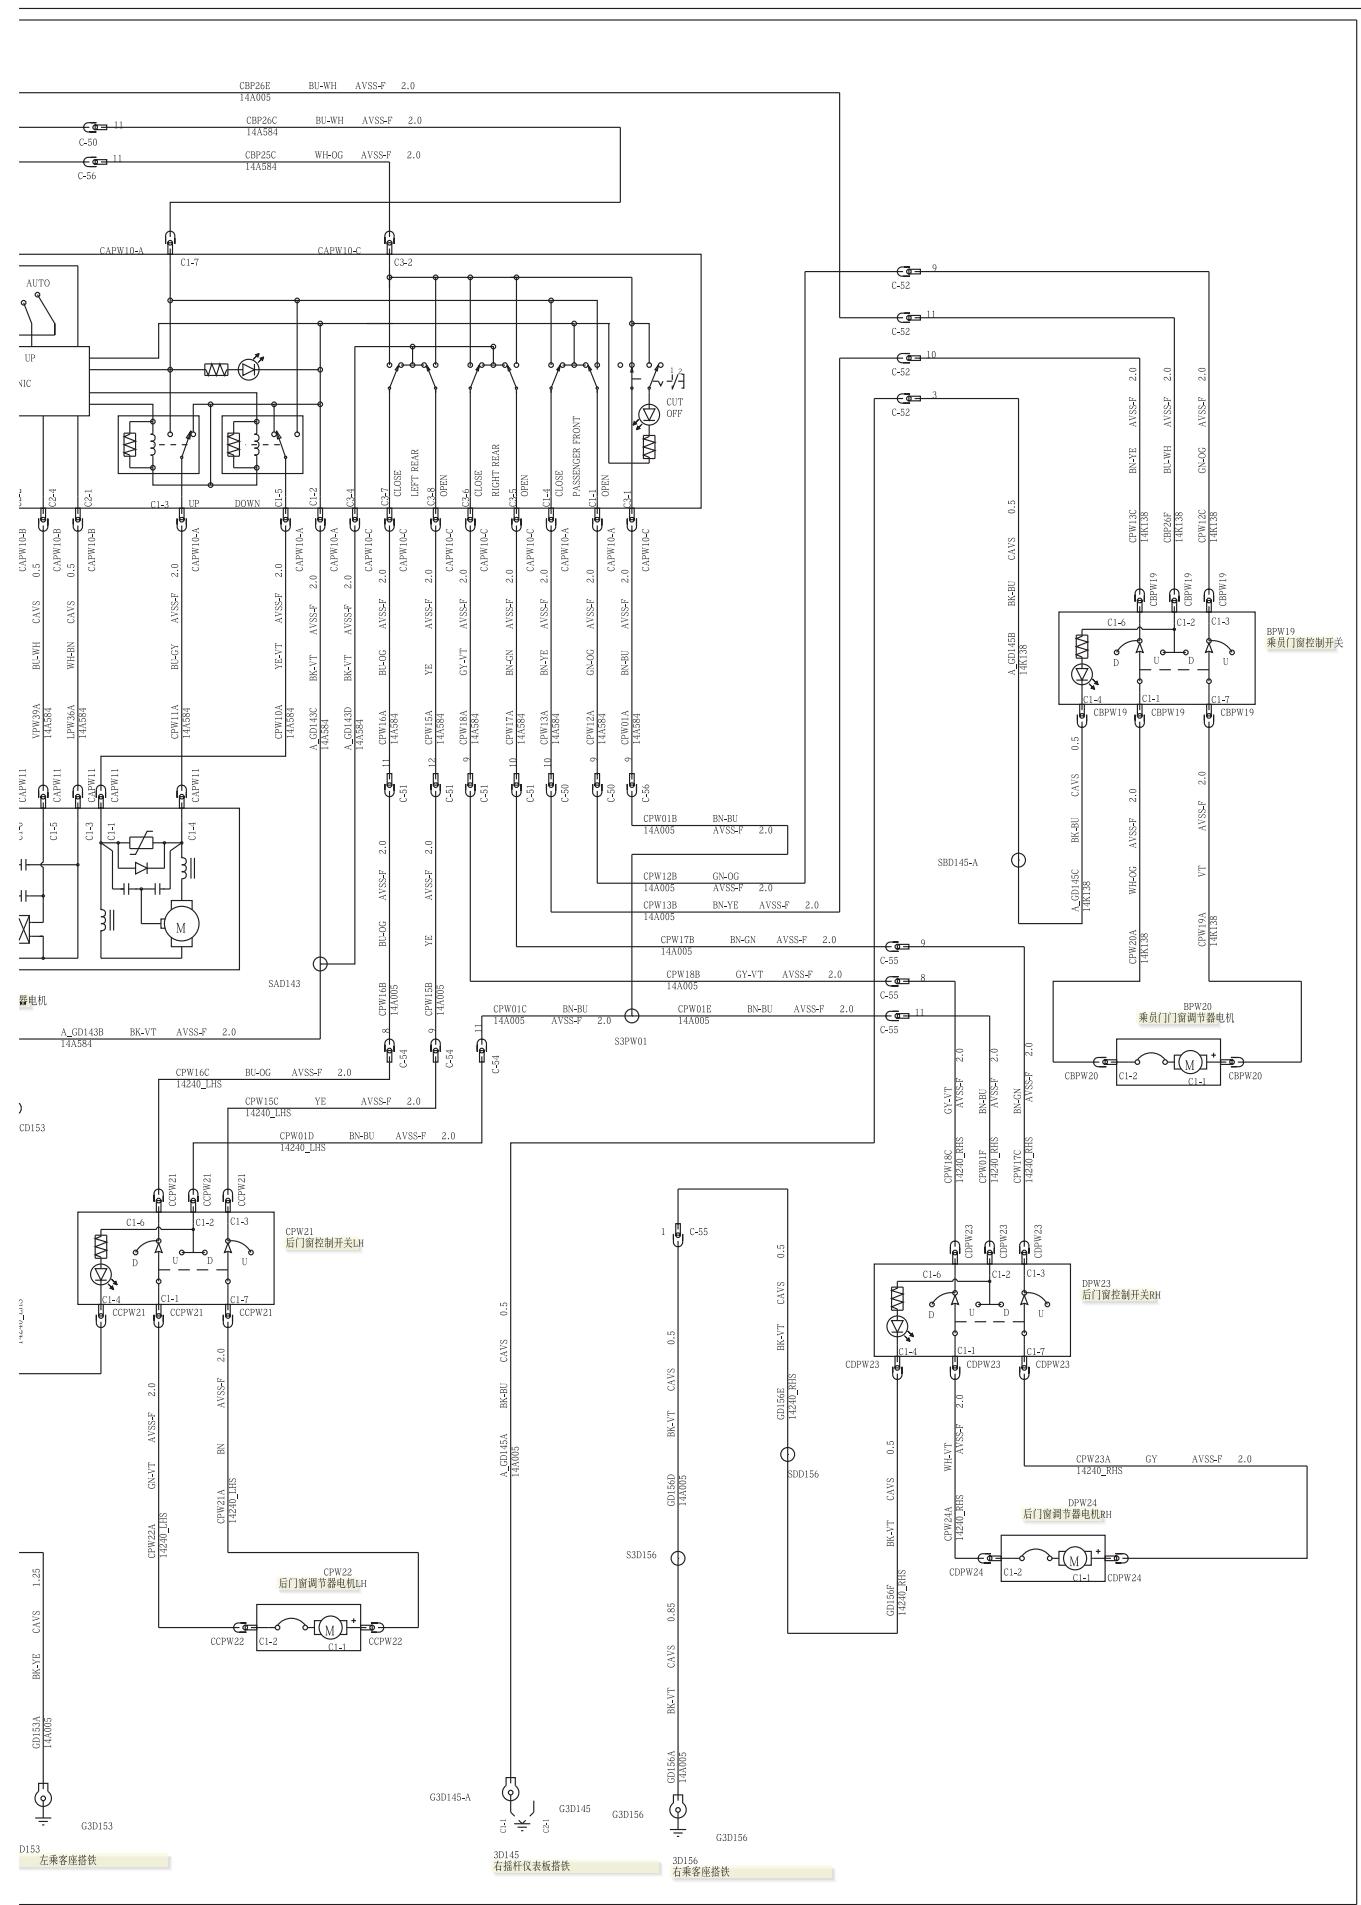

501-11-12 驾驶员门窗控制开关—A

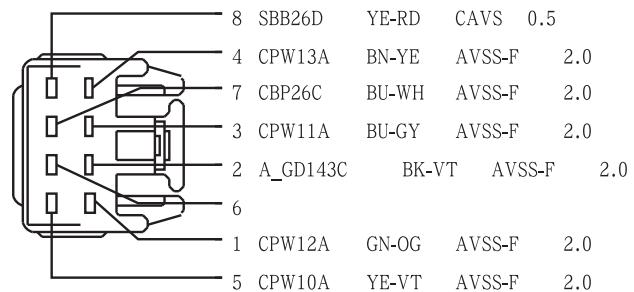


4S7T-14489-ZEA

CAPW10-A

线束 14A584

501-11-13 驾驶员门窗控制开关—B

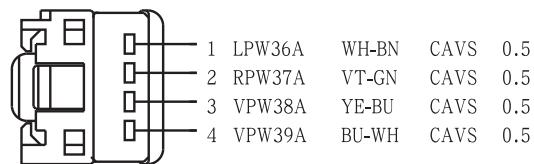


1L2T-14489-GB

CAPW10-B

线束 14A584

501-11-14 驾驶员门窗控制开关—C

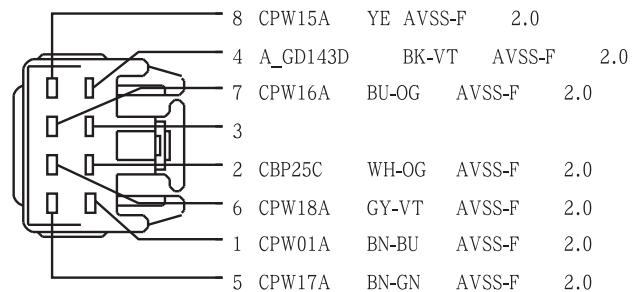


4S7T-14489-ZFA

CAPW10-C

线束 14A584

501-11-15 驾驶员门窗调节器电机

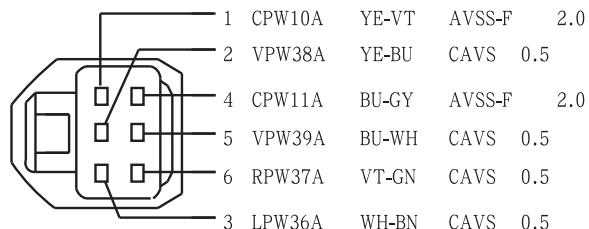

8V5T-14489-AJA

CAPW11

线束 14A584

501-11-16 加热式后车窗组件—A

 1 CRD06C BN-YE CAVS 1.25

81AG-14488-ACA

C4RD02-A

线束 17K400

501-11-17 加热式后车窗组件—B

 1 B_GD147K BK-VT CAVS 1.25

81AG-14488-ACA

C4RD02-B

线束 17K400

501-11-18 加热式后车窗组件—C

 1 CRD06D BN-YE CAVS 1.25

81AG-14488-ACA

C4RD02-C

线束 14A005

501-11-19 加热式后车窗组件—D


 1 B_GD147Z BK-VT CAVS 1.25

81AG-14488-ACA

C4RD02-D

线束 14A005

501-11-20 乘员门窗控制开关

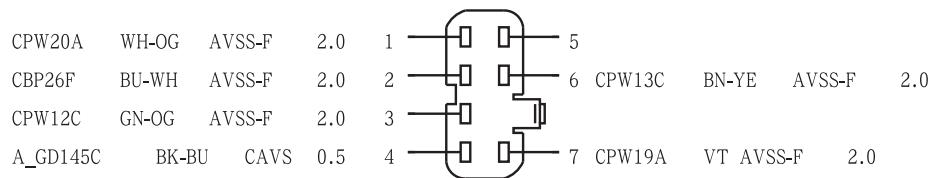


97AG-14489-HGA

CBPW19

线束 14K138

501-11-21 乘员门门窗调节器电机

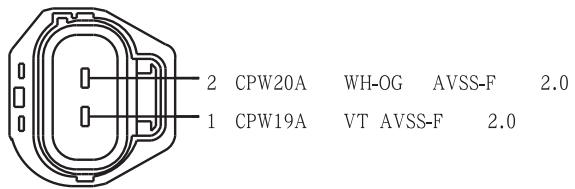


8V5T-14489-AGA

CBPW20

线束 14K138

501-11-22 后门窗控制开关LH

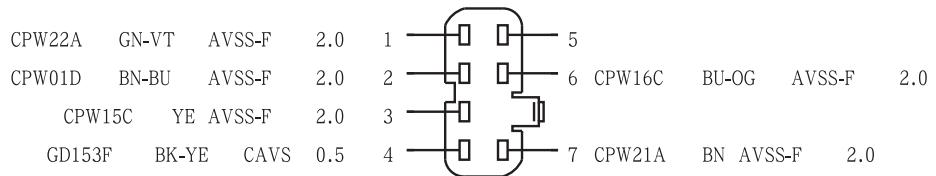


97AG-14489-HGA

CCPW21

线束 14240_LHS

501-11-23 后门窗控制开关RH

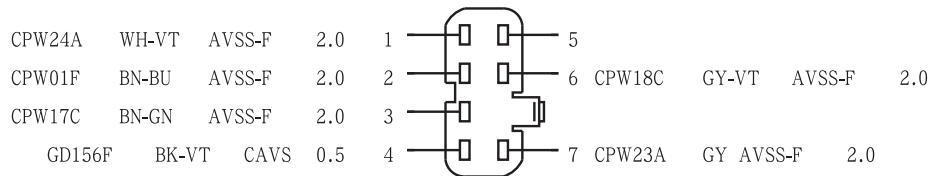


97AG-14489-HGA

CDPW23

线束 14240_RHS

501-11-24 后门窗调节器电机LH

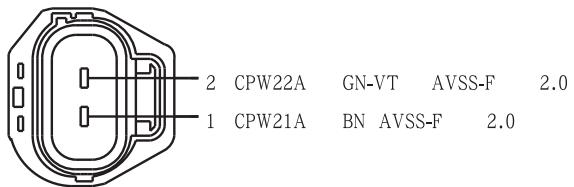


8V5T-14489-AGA

CCPW22

线束 14240_LHS

501-11-25 后门窗调节器电机RH

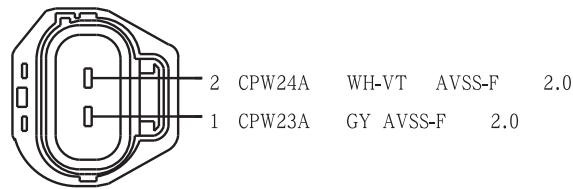

8V5T-14489-AGA

CDPW24

线束 14240_RHS

节 501-12 仪表板和控制台

车辆应用：2008.75 Fiesta

内容	页码
----	----

连接器

点烟器	501-12-2
仪表板控制台开关组件	501-12-3

501-12-2 点烟器




93BG-14488-GB

C2DC07

线束 14A005

501-12-3 仪表板控制台开关组件

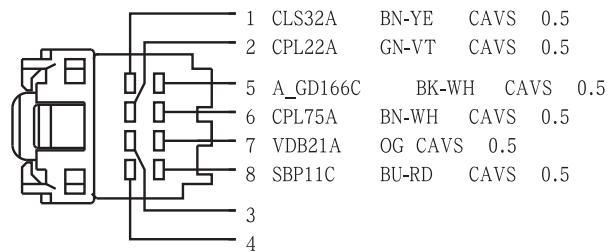

2L7T-14489-CA

C2LF28

线束 14K024

节 501-14 手柄系统、锁系统、插销系统和进入系统

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

电动门锁 — 4门.....	501-14-2
电动门锁 — 5门.....	501-14-4

连接器


驾驶员车门插销.....	501-14-6
提升门/行李舱盖门开开关.....	501-14-7
提升门/行李舱盖门开开关 — B.....	501-14-8
提升门/行李舱盖释放开关.....	501-14-9
提升门/行李舱盖释放开关 — B.....	501-14-10
乘员门插销.....	501-14-11
后门插销LH.....	501-14-12
后门插销RH.....	501-14-13


501-14-2 电动门锁—4门

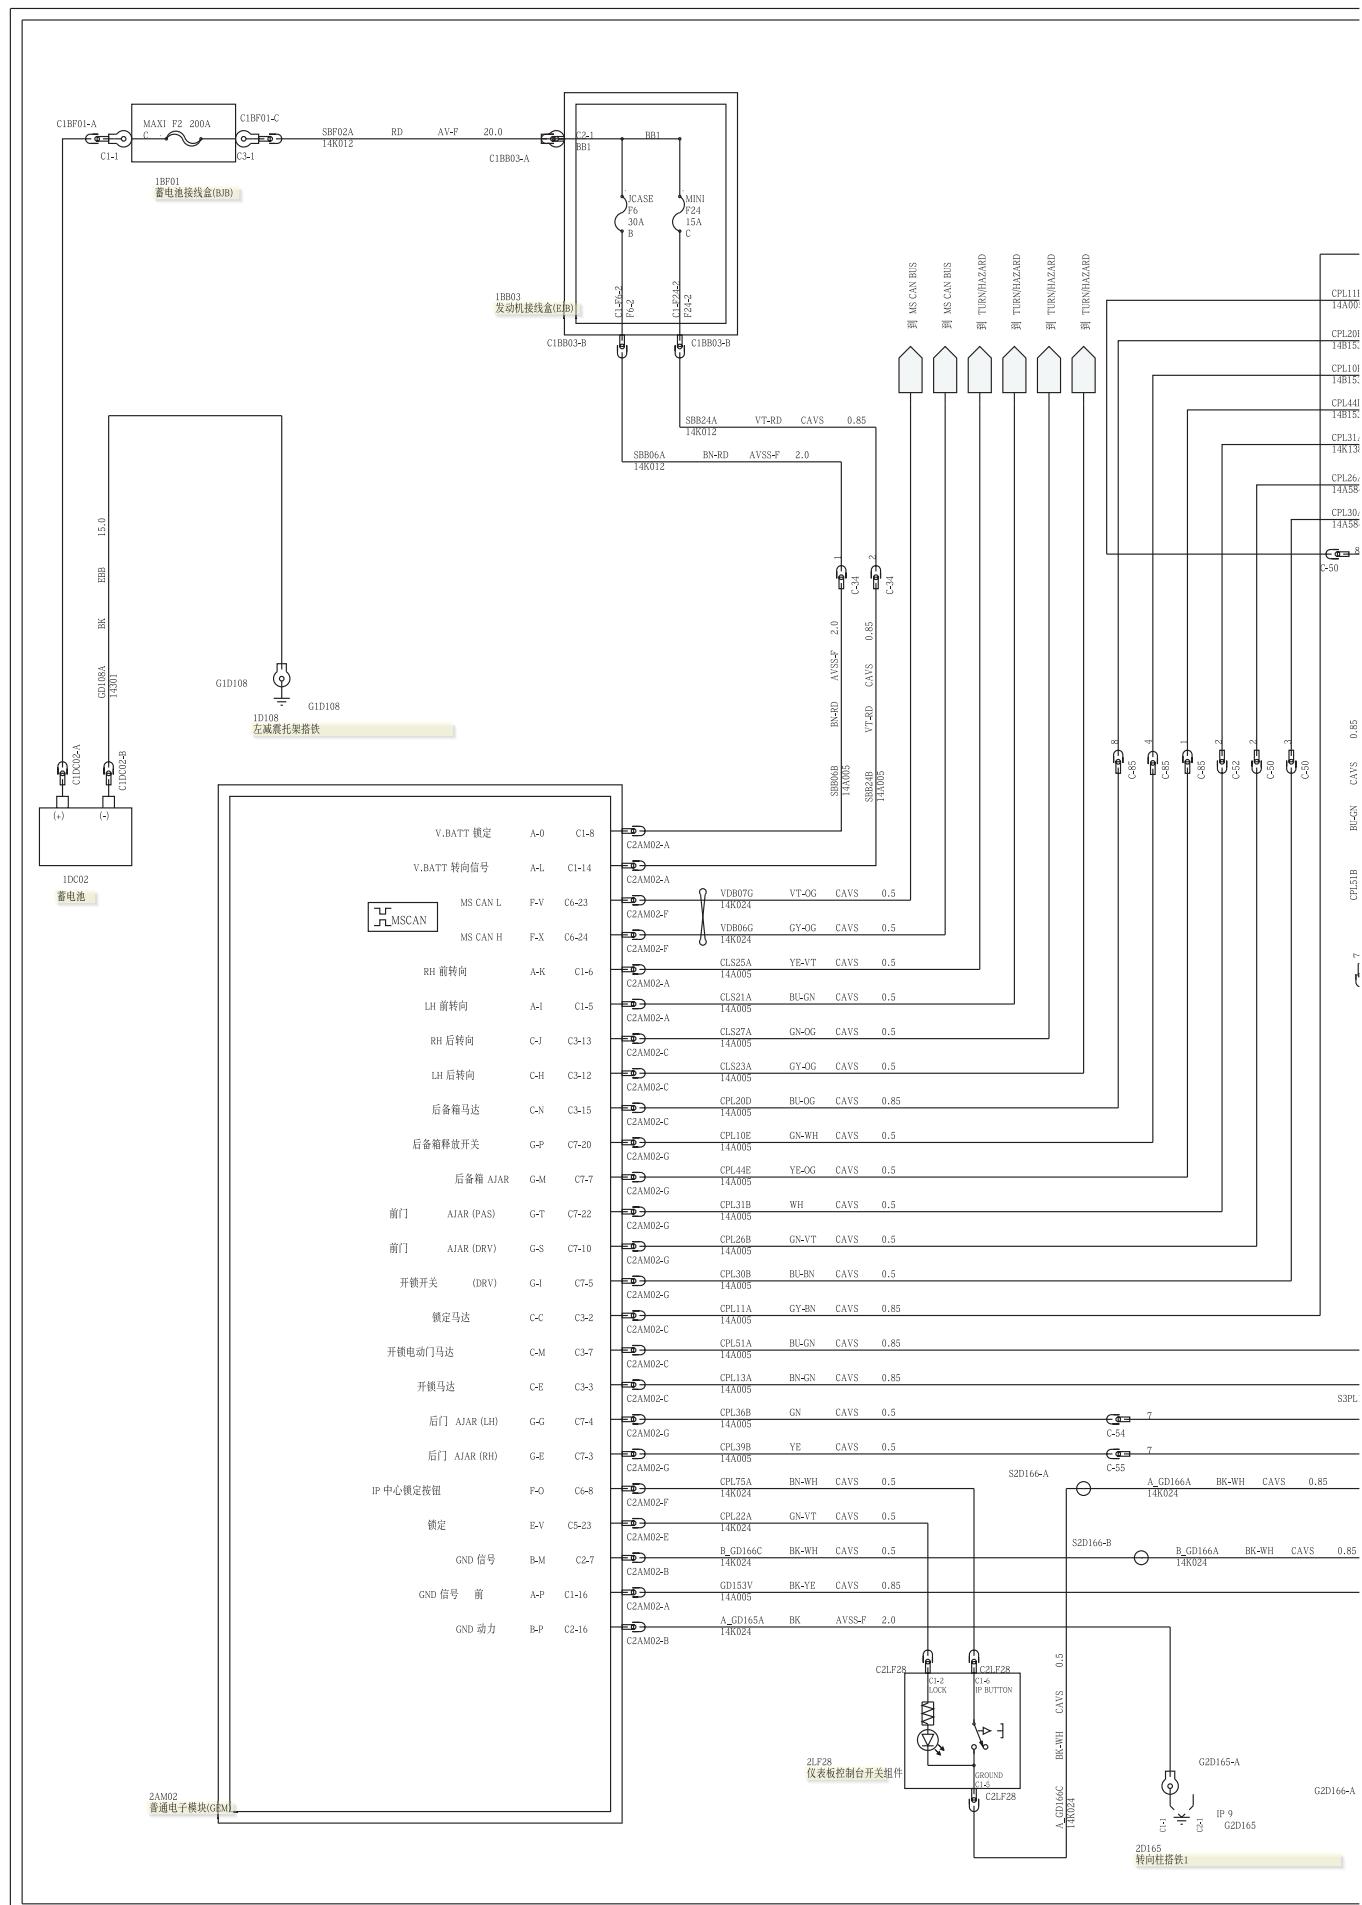


2008.75 Fiesta (G1102885)

501-14-3 电动门锁—4门

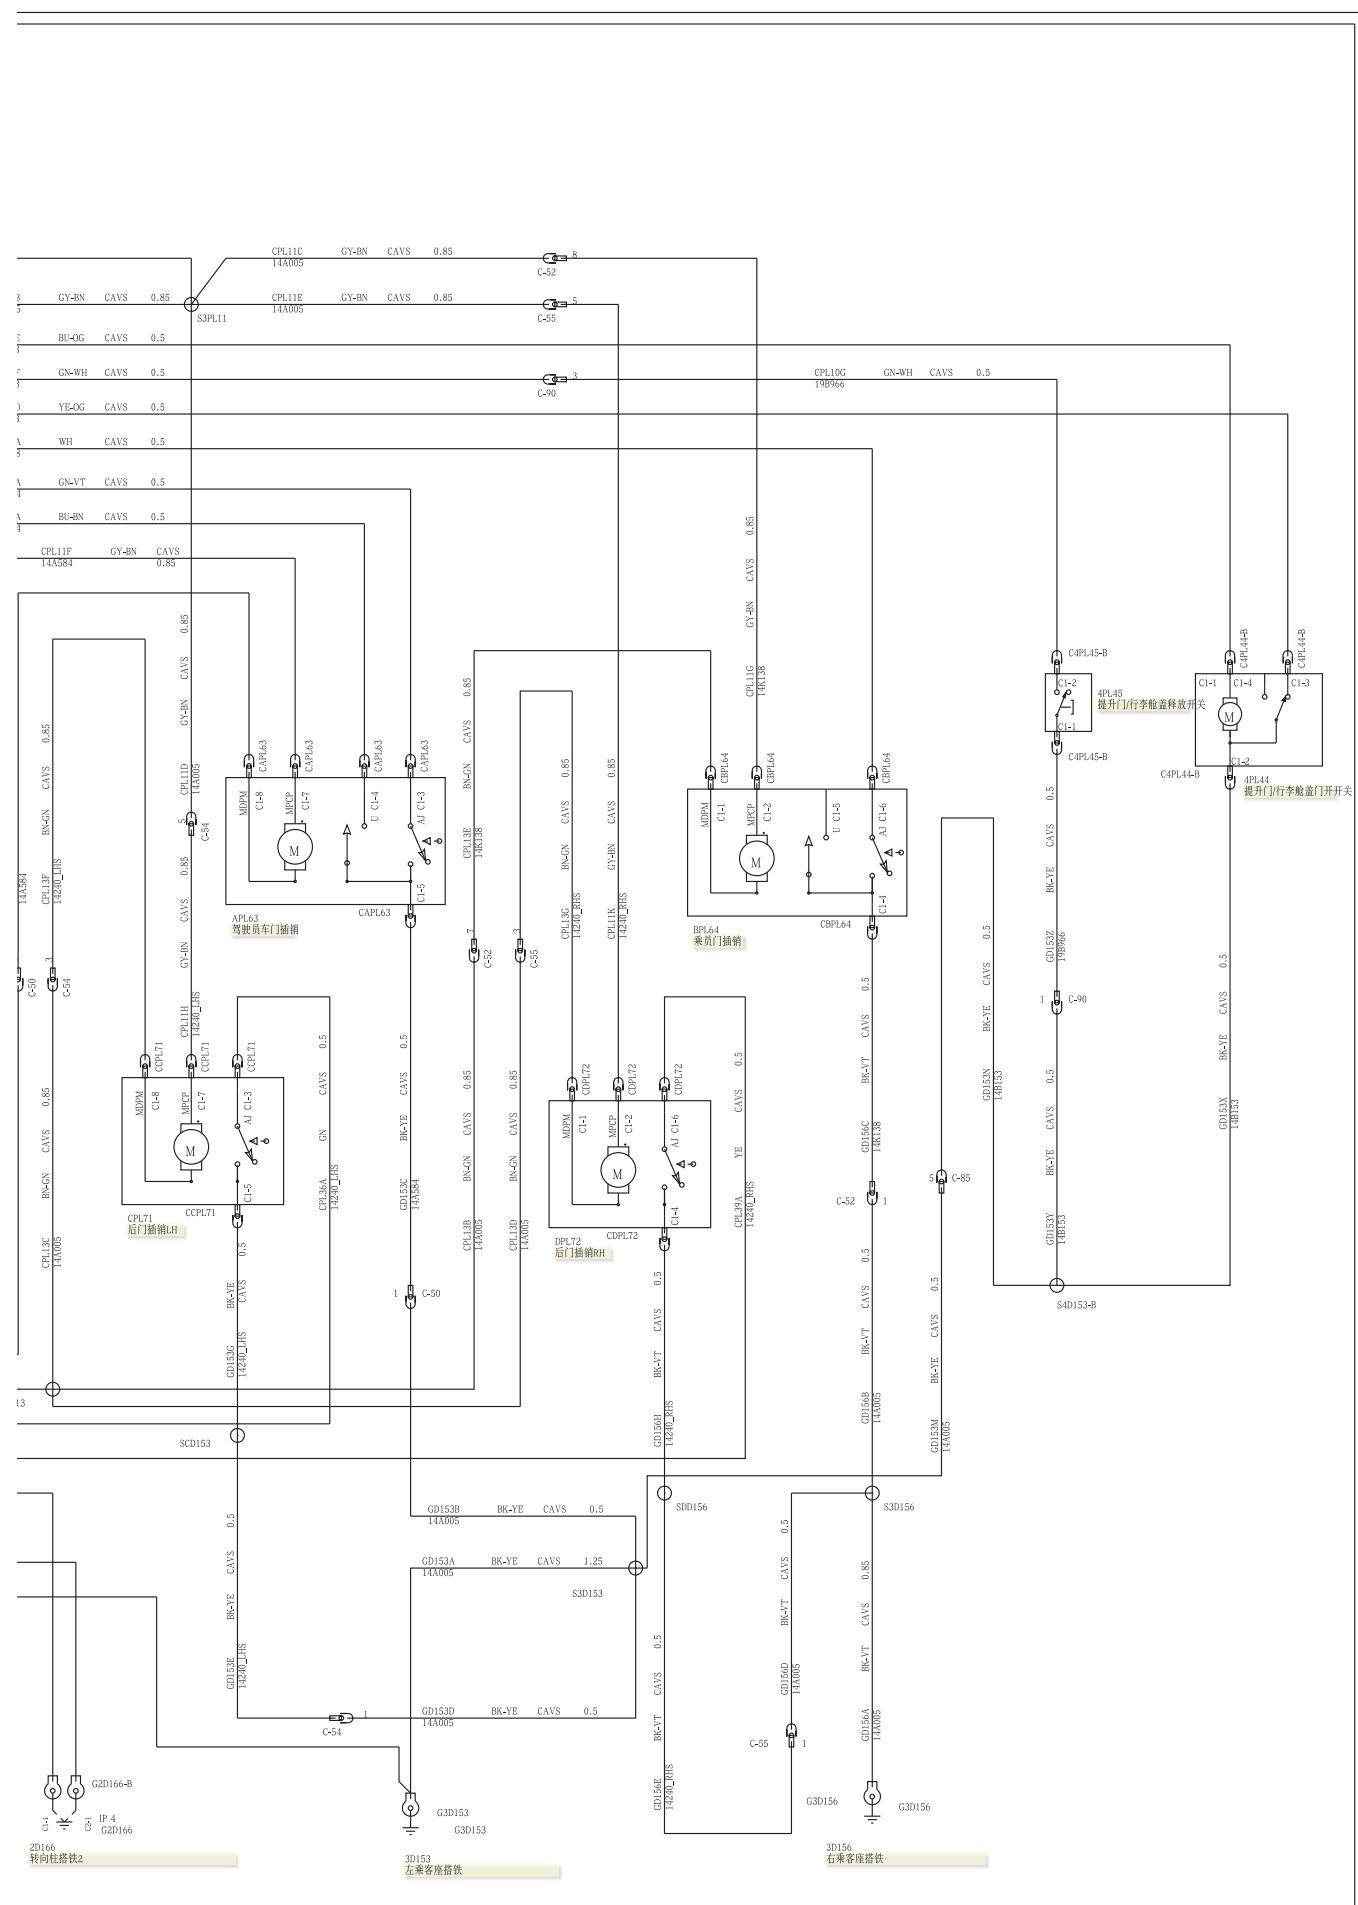

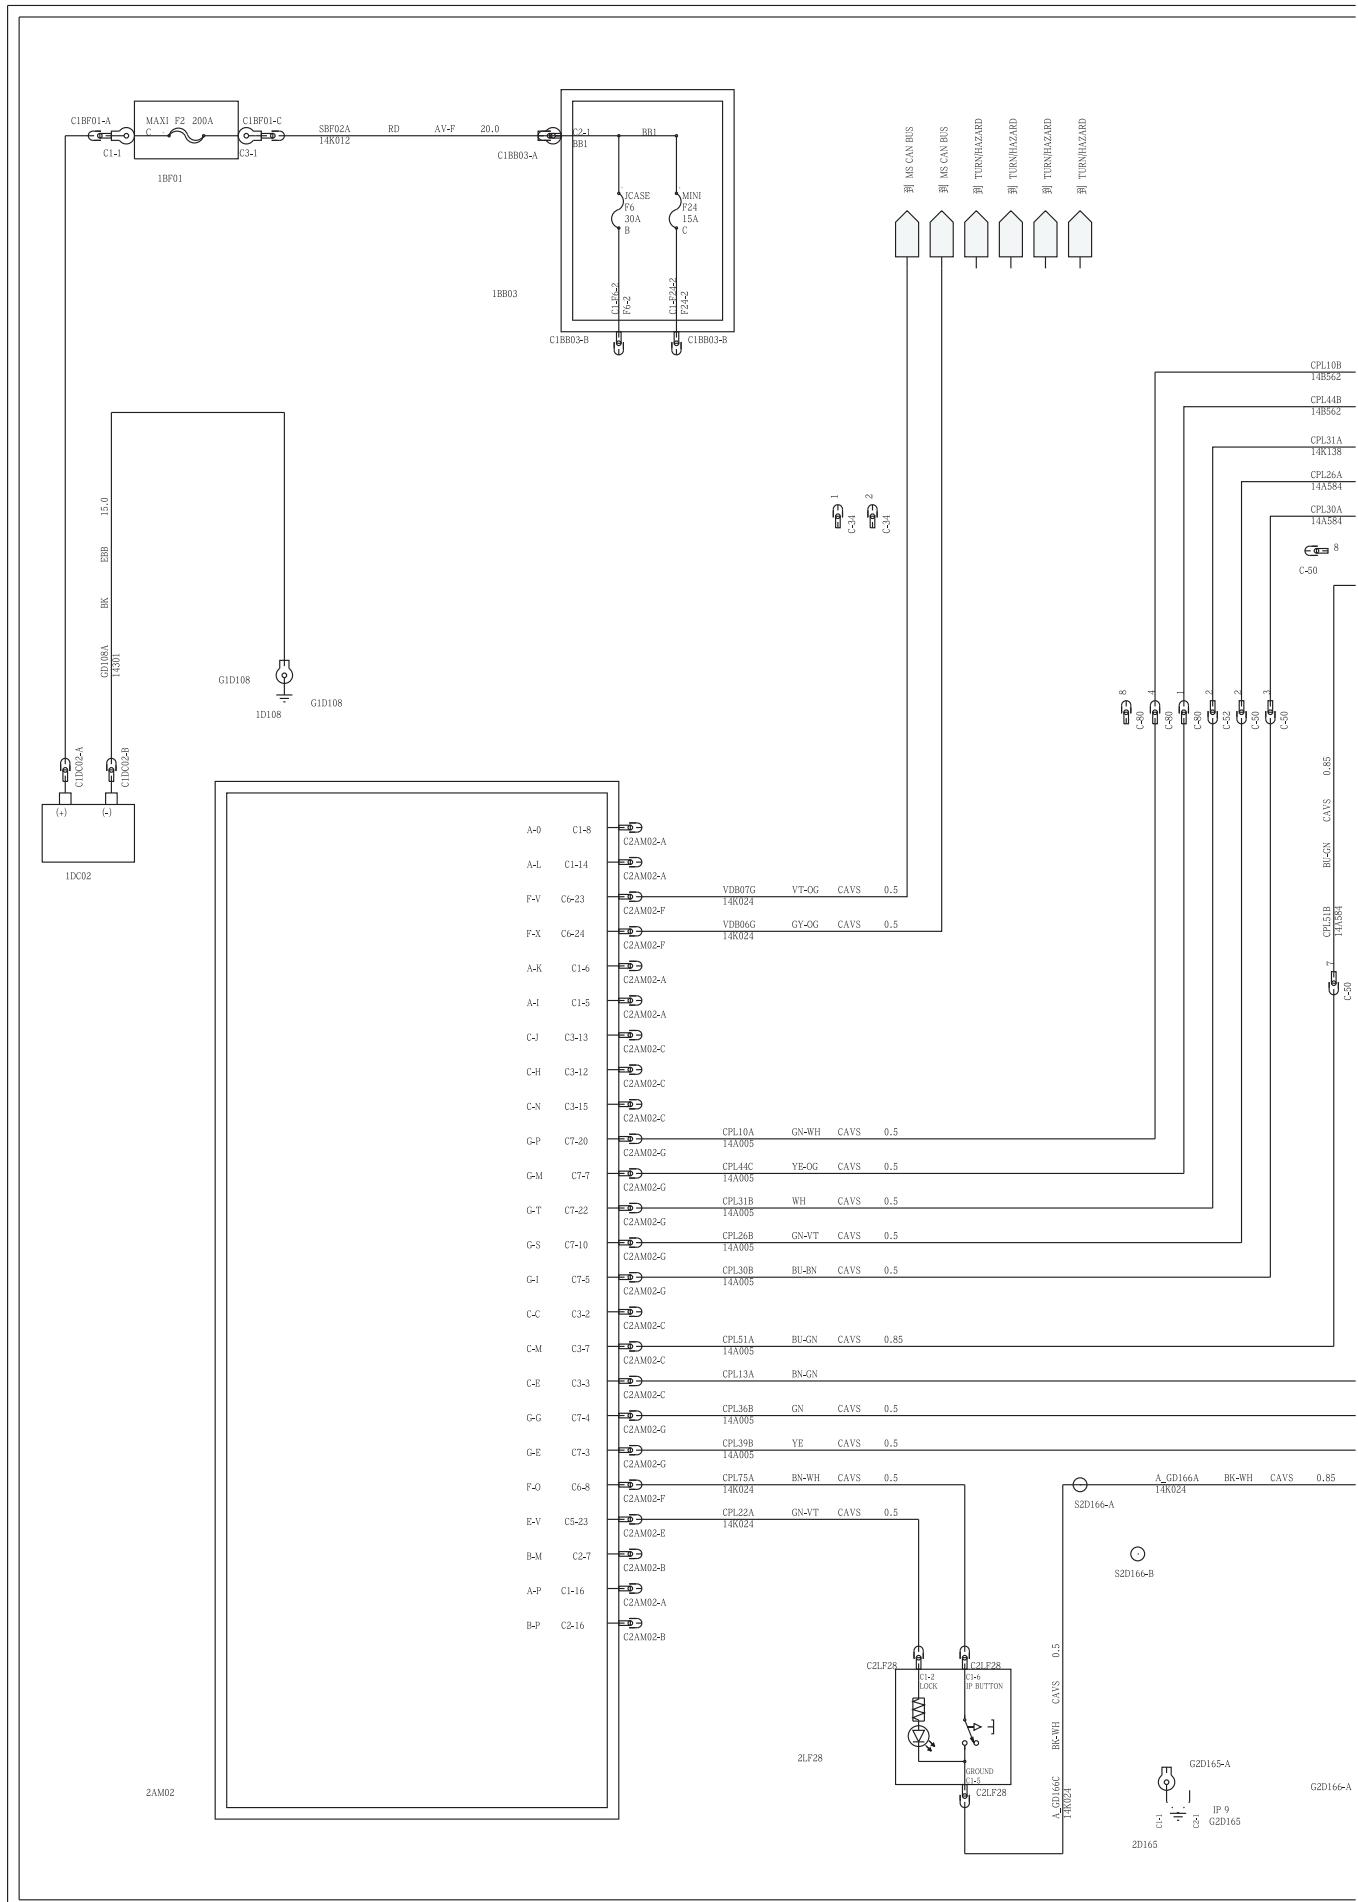

501-14-7 提升门/行李舱盖门开开关

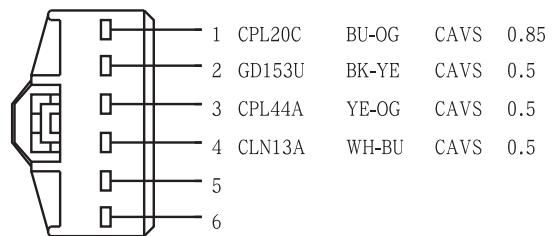


3M5T-14489-DFA

C4PL44

线束 17K400

501-14-8 提升门/行李舱盖门开开关—B

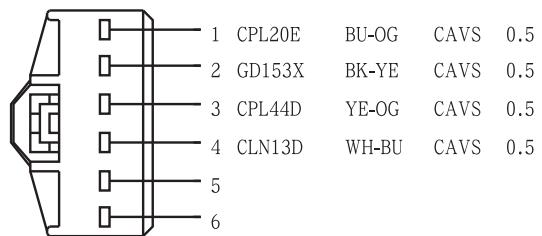

3M5T-14489-DFA

C4PL44-B

线束 14B153

501-14-9 提升门/行李舱盖释放开关




XF2T-14A464-YC

C4PL45

线束 19B966

501-14-10 提升门/行李舱盖释放开关—B

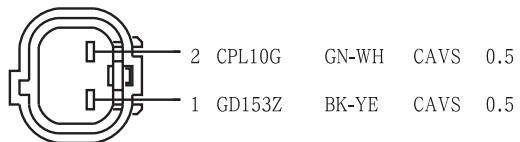


XF2T-14A464-YC

C4PL45-B

线束 19B966

501-14-11 乘员门插销

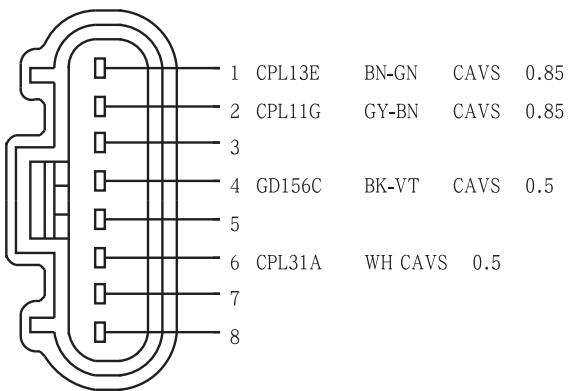


8U5T-14A464-DAA

CBPL64

线束 14K138

501-14-12 后门插销LH

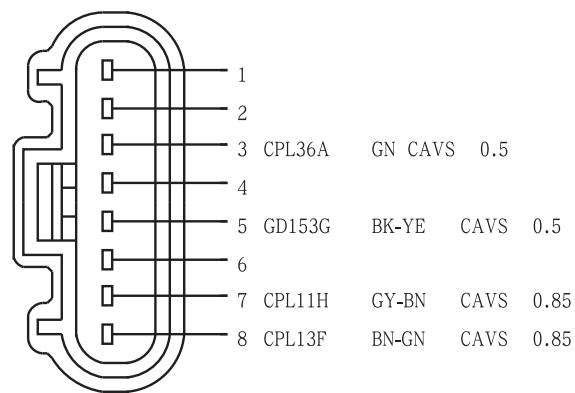


8U5T-14A464-DAA

CCPL71

线束 14240_LHS

501-14-13 后门插销RH

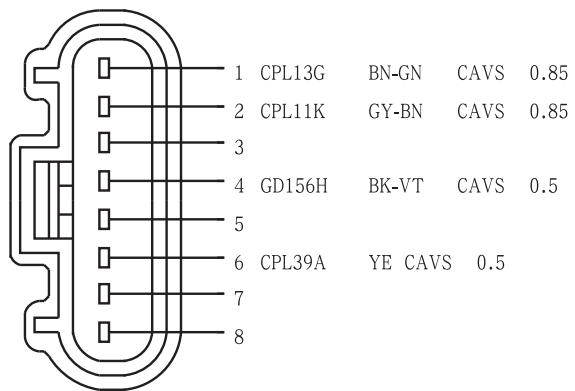

8U5T-14A464-DAA

CDPL72

线束 14240_RHS

节 501-16 刮水器和洗涤器

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

刮水器和洗涤器 — 4门, 车辆配备: 5—速手动变速器 (B5A)	501-16-2
刮水器和洗涤器 — 4门, 车辆配备: 4速自动变速器(FN4A-EL).....	501-16-6
刮水器和洗涤器 — 5门, 车辆配备: 5—速手动变速器 (B5A)	501-16-10
刮水器和洗涤器 — 5门, 车辆配备: 4速自动变速器(FN4A-EL).....	501-16-14

连接器



后窗刮水器电机LH.....	501-16-18
挡风玻璃洗涤器泵.....	501-16-19
挡风玻璃刮水器电机.....	501-16-20
挡风玻璃刮水器/洗涤器开关.....	501-16-21

501-16-2 刮水器和洗涤器—4门, 车辆配备: 5—速手动变速器 (B5A)

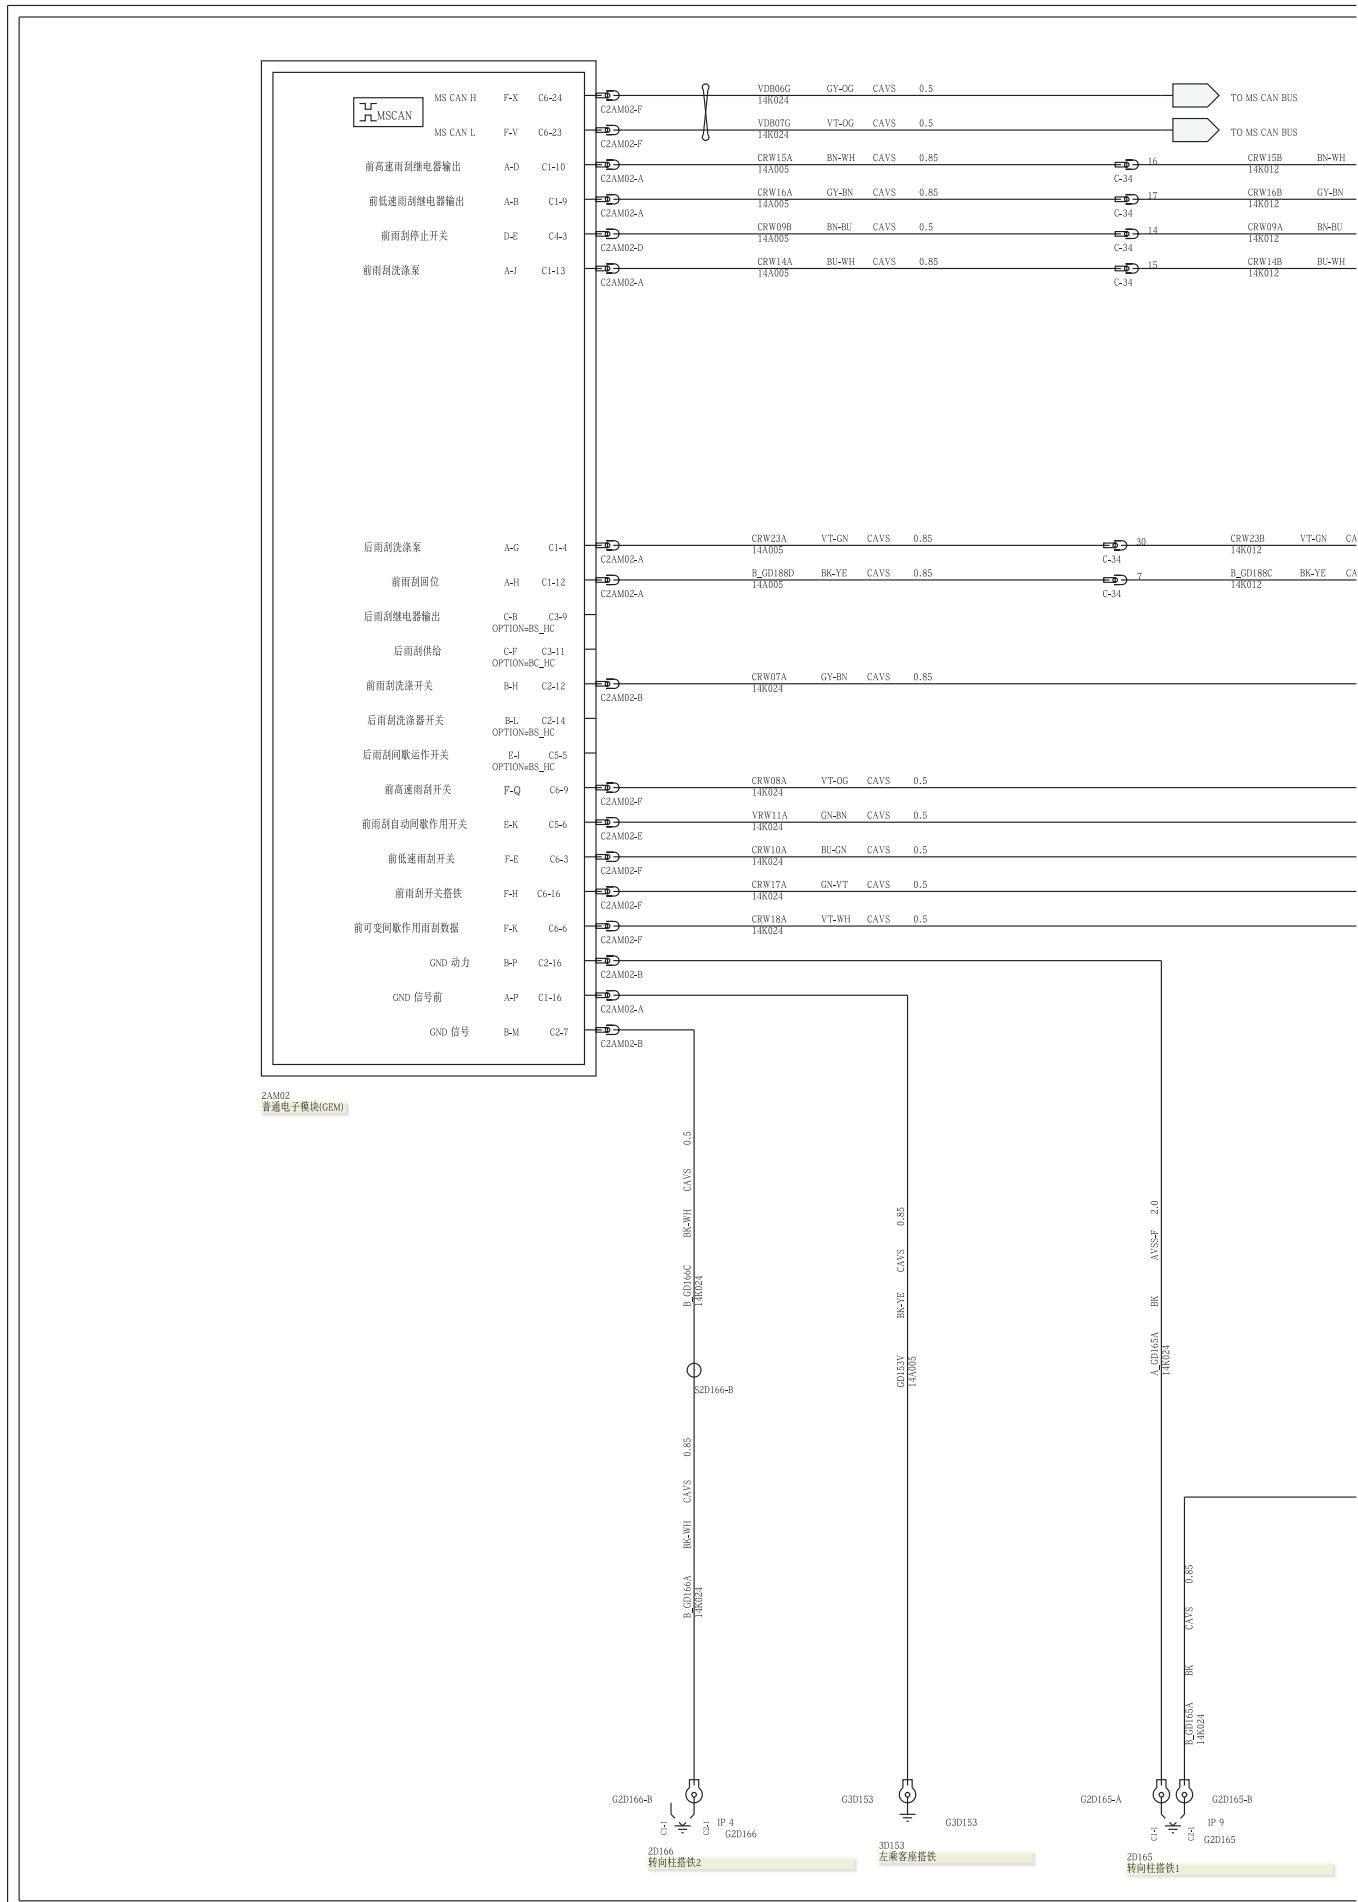


2008.75 Fiesta (G1102893)

501-16-3 刮水器和洗涤器—4门, 车辆配备: 5—速手动变速器 (B5A)

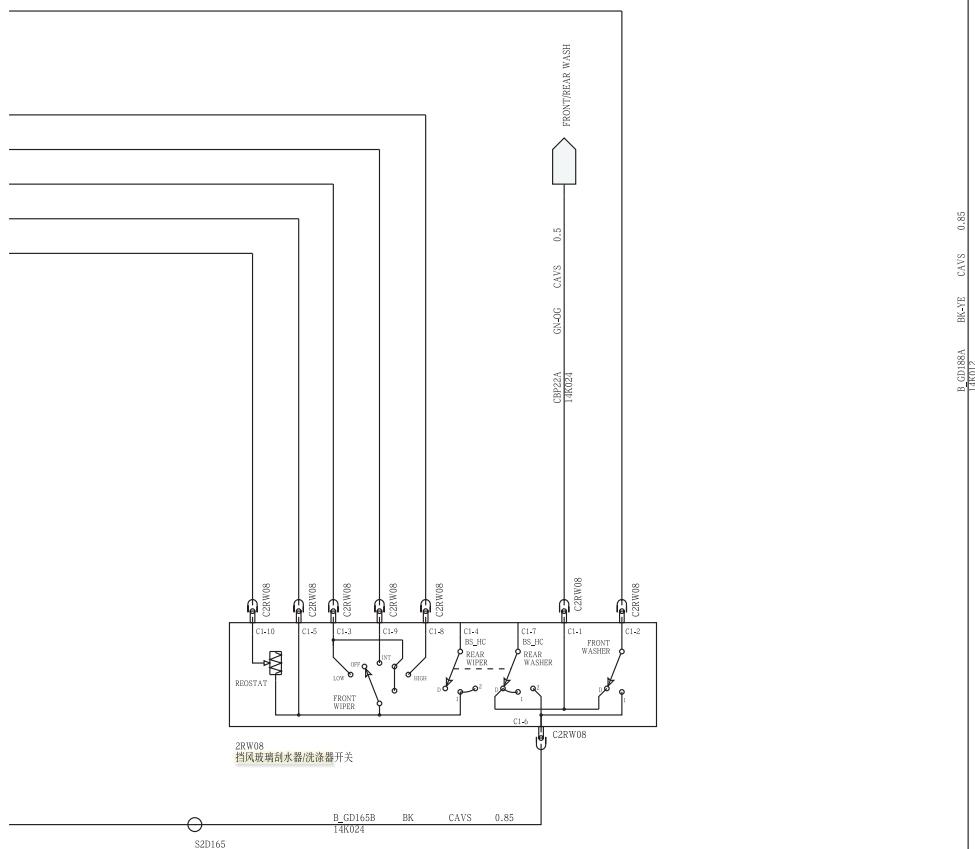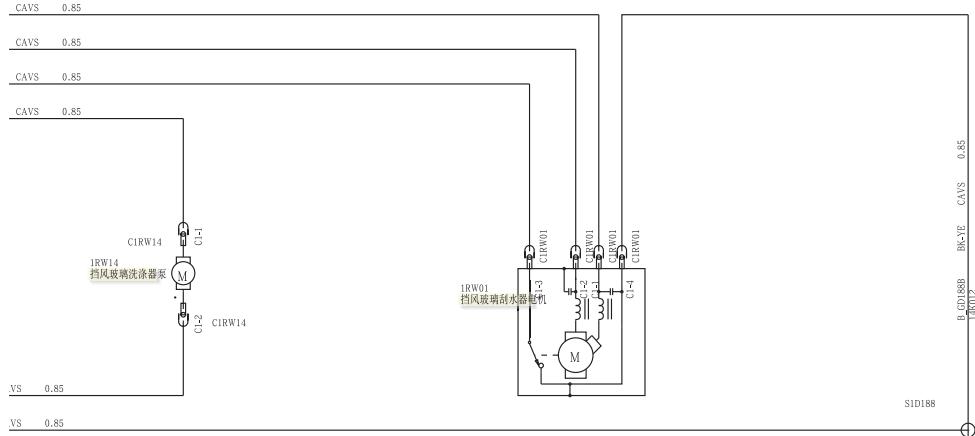


G1D188-B
左前翼子板2搭铁
G1D188

501-16-4 刮水器和洗涤器—4门, 车辆配备: 5—速手动变速器 (B5A)

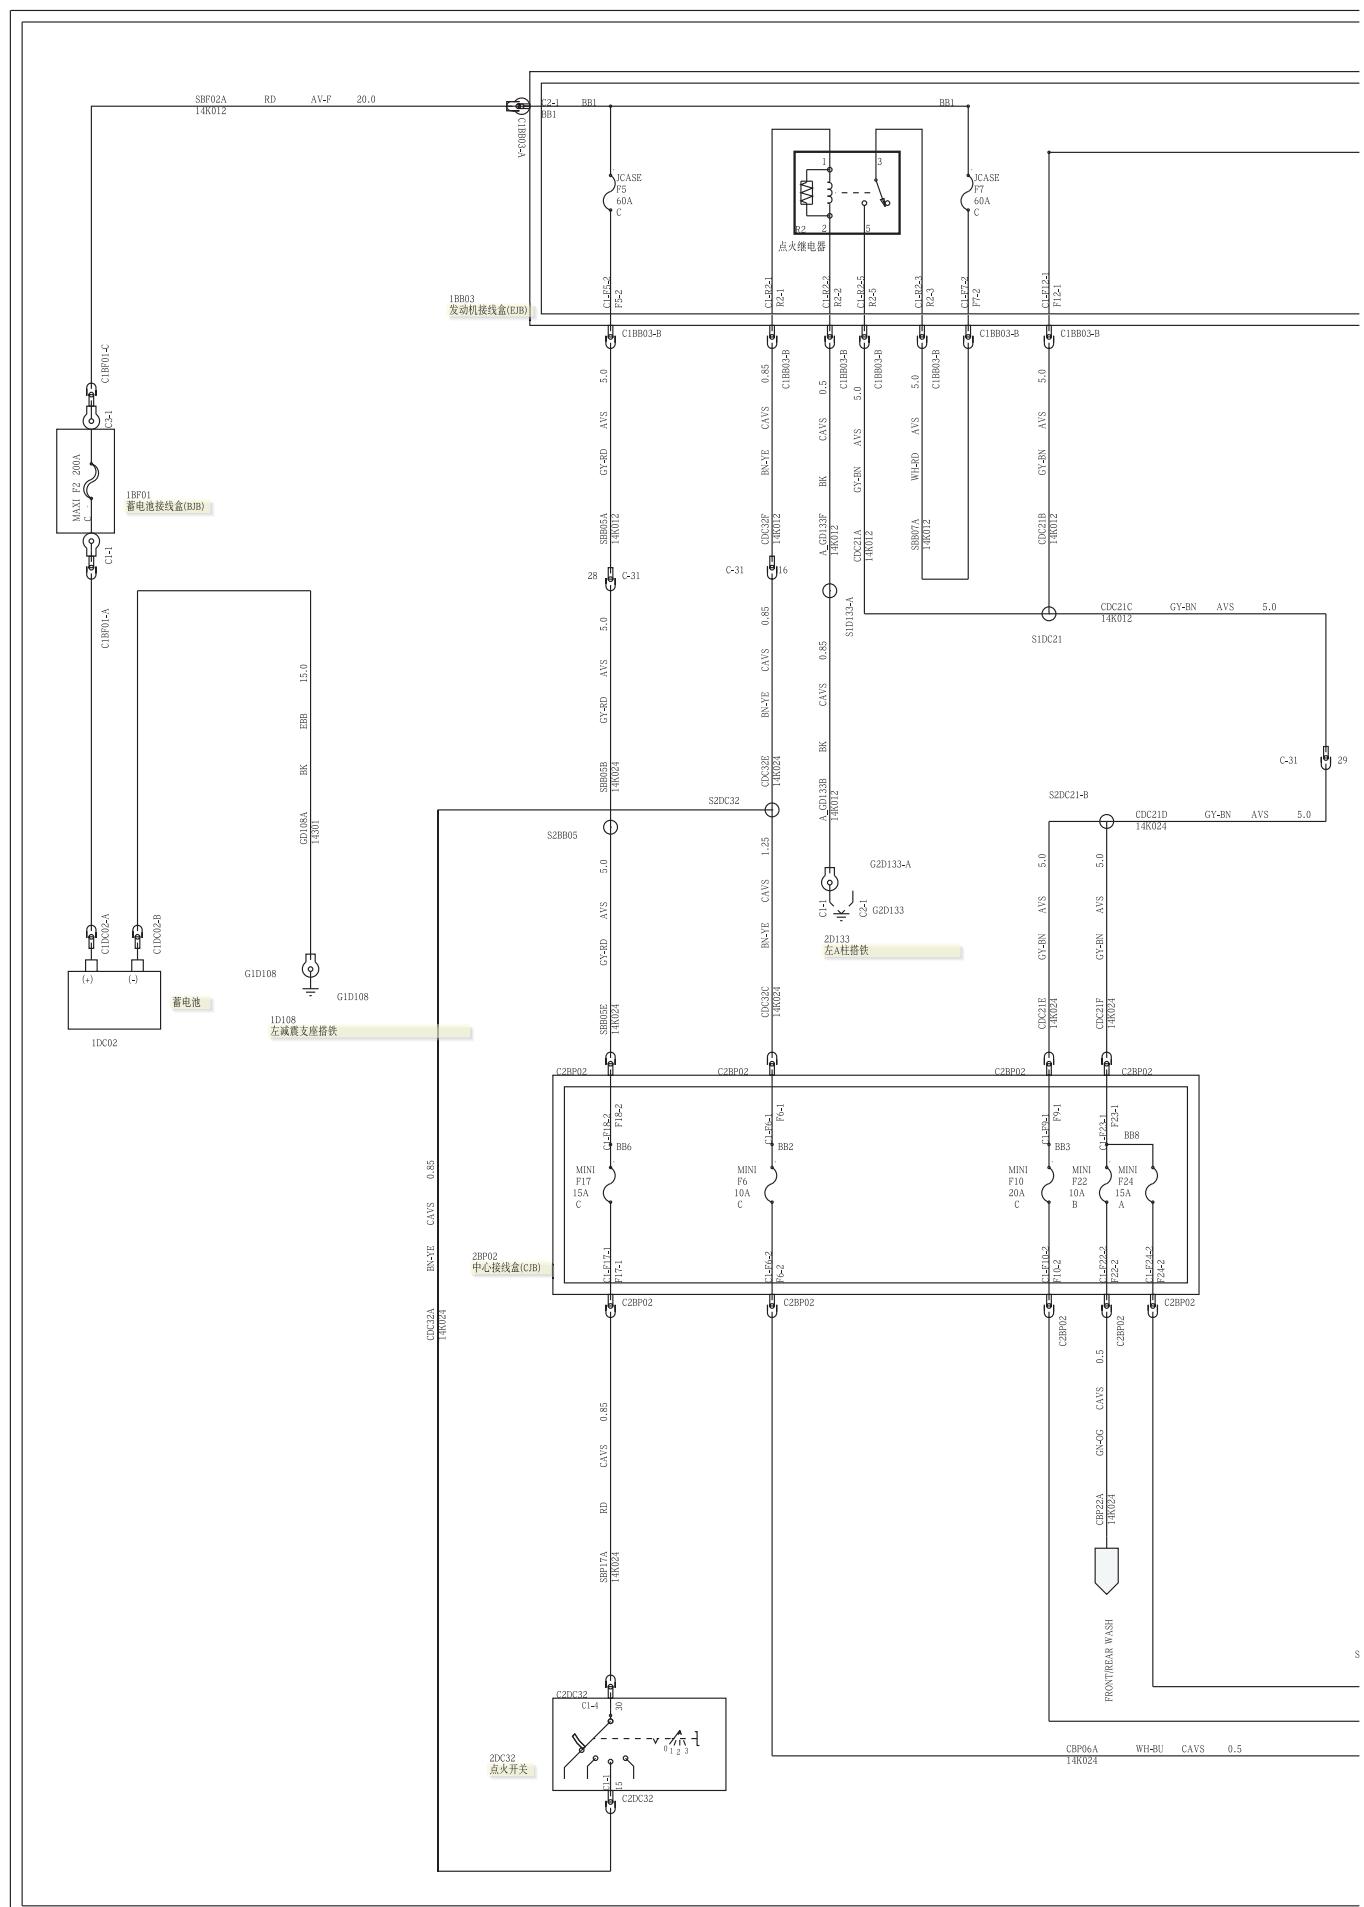


2008.75 Fiesta (G1102893)

501-16-5 刮水器和洗涤器—4门, 车辆配备: 5—速手动变速器 (B5A)


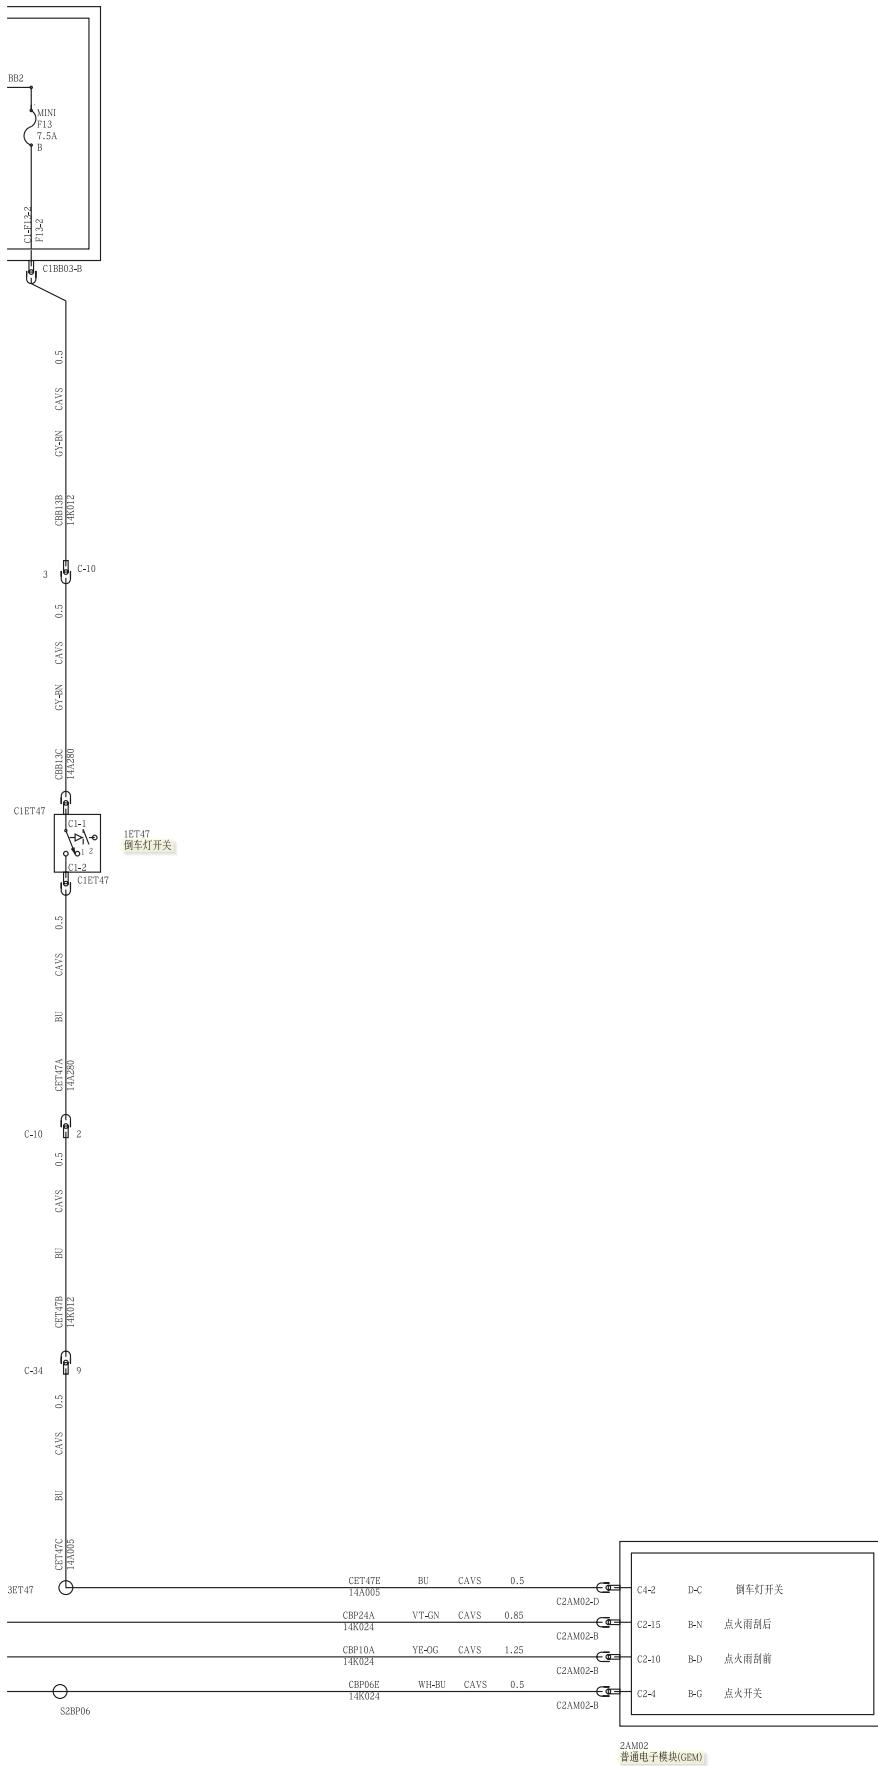


501-16-6 刮水器和洗涤器—4门, 车辆配备: 4速自动变速器(FN4A-EL)

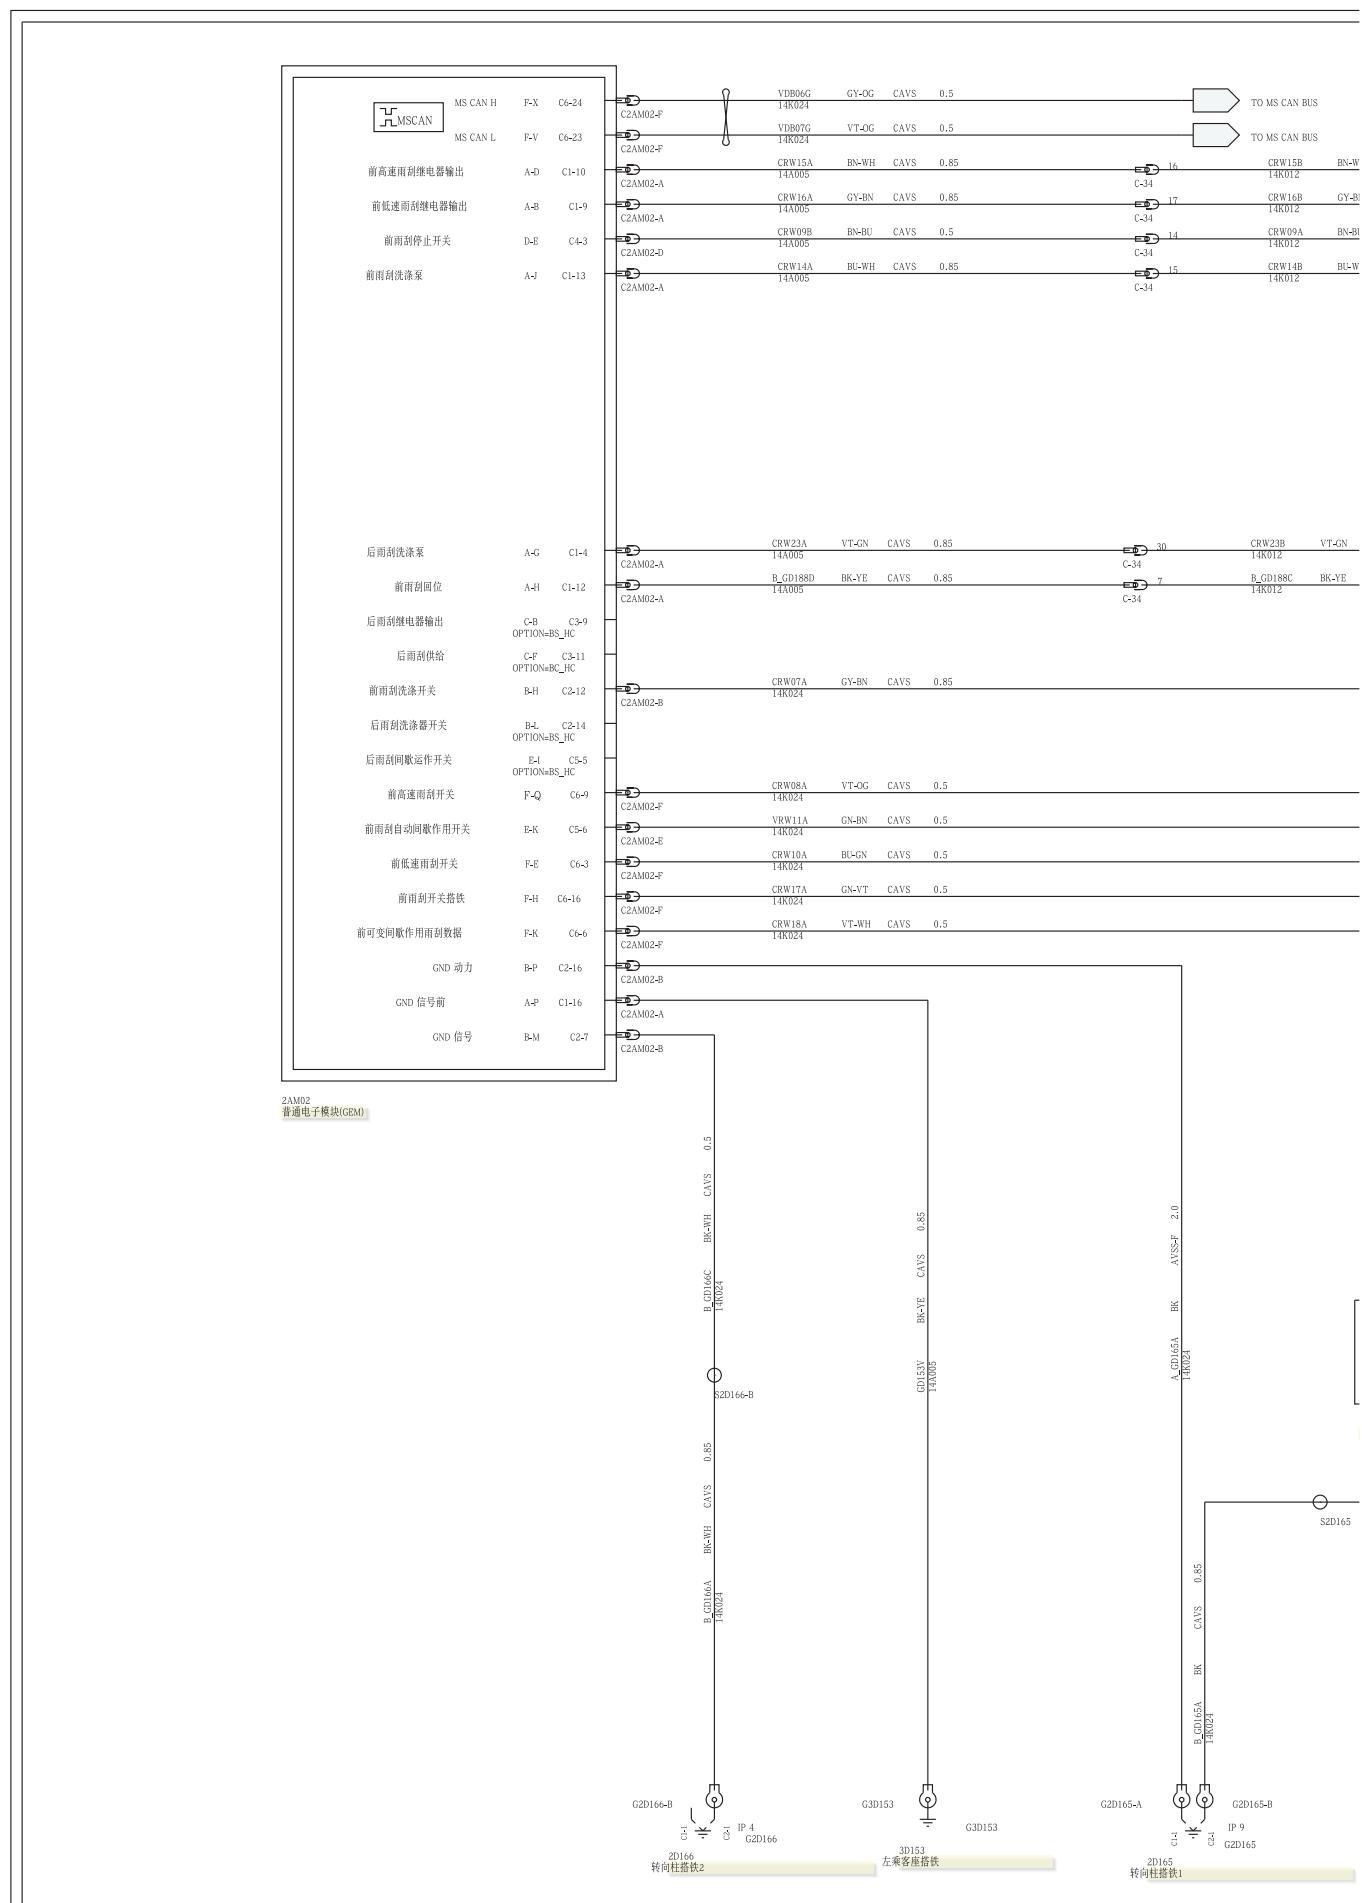


2008.75 Fiesta (G1102894)


501-16-7 刮水器和洗涤器—4门，车辆配备： 4速自动变速器(FN4A-EL)

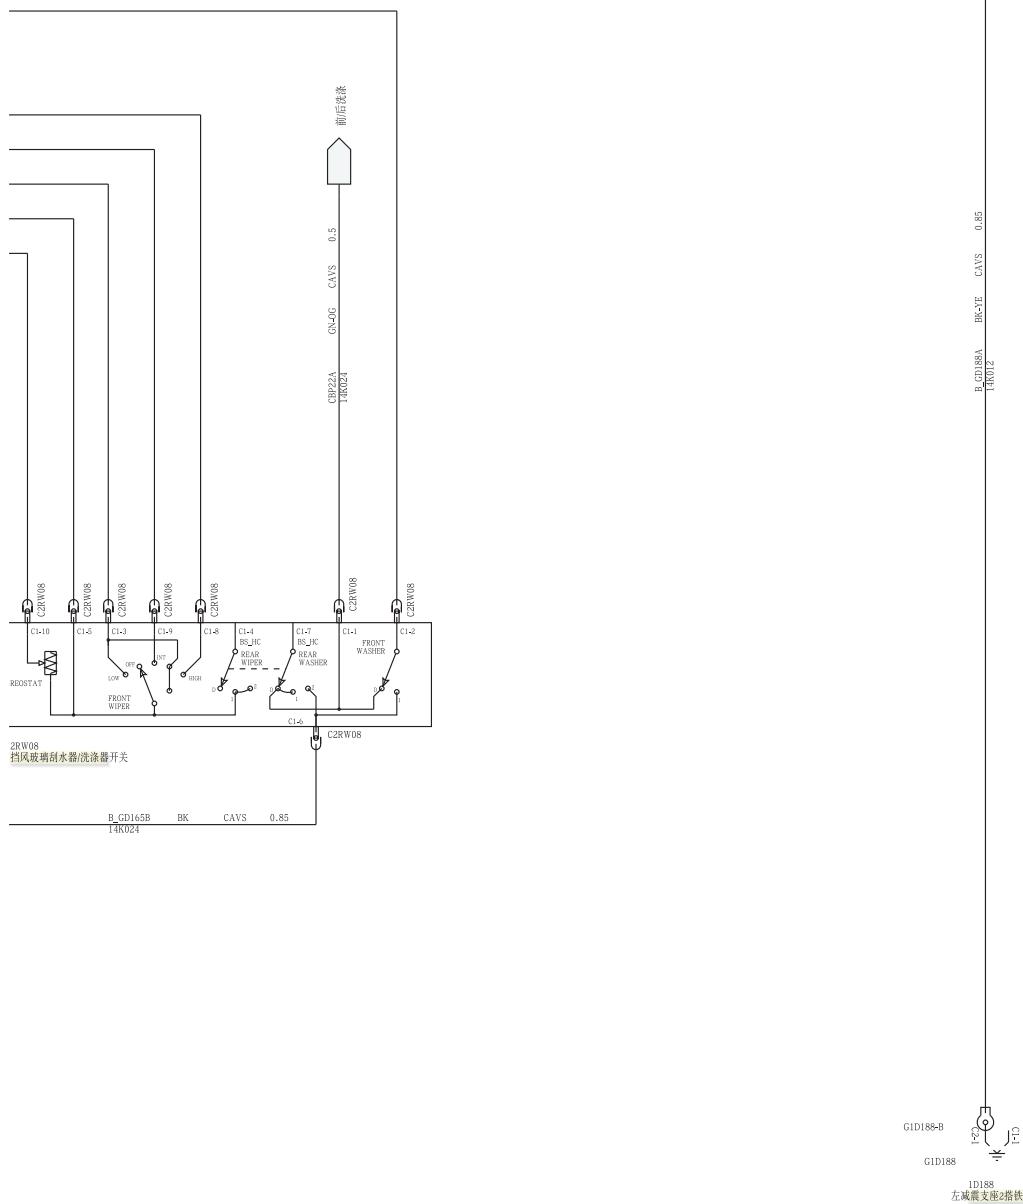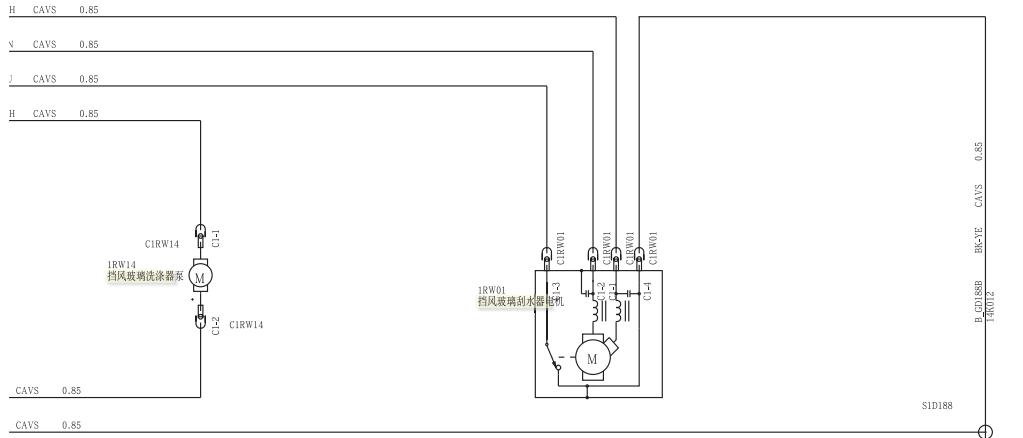


501-16-8 刮水器和洗涤器—4门，车辆配备： 4速自动变速器(FN4A-EL)

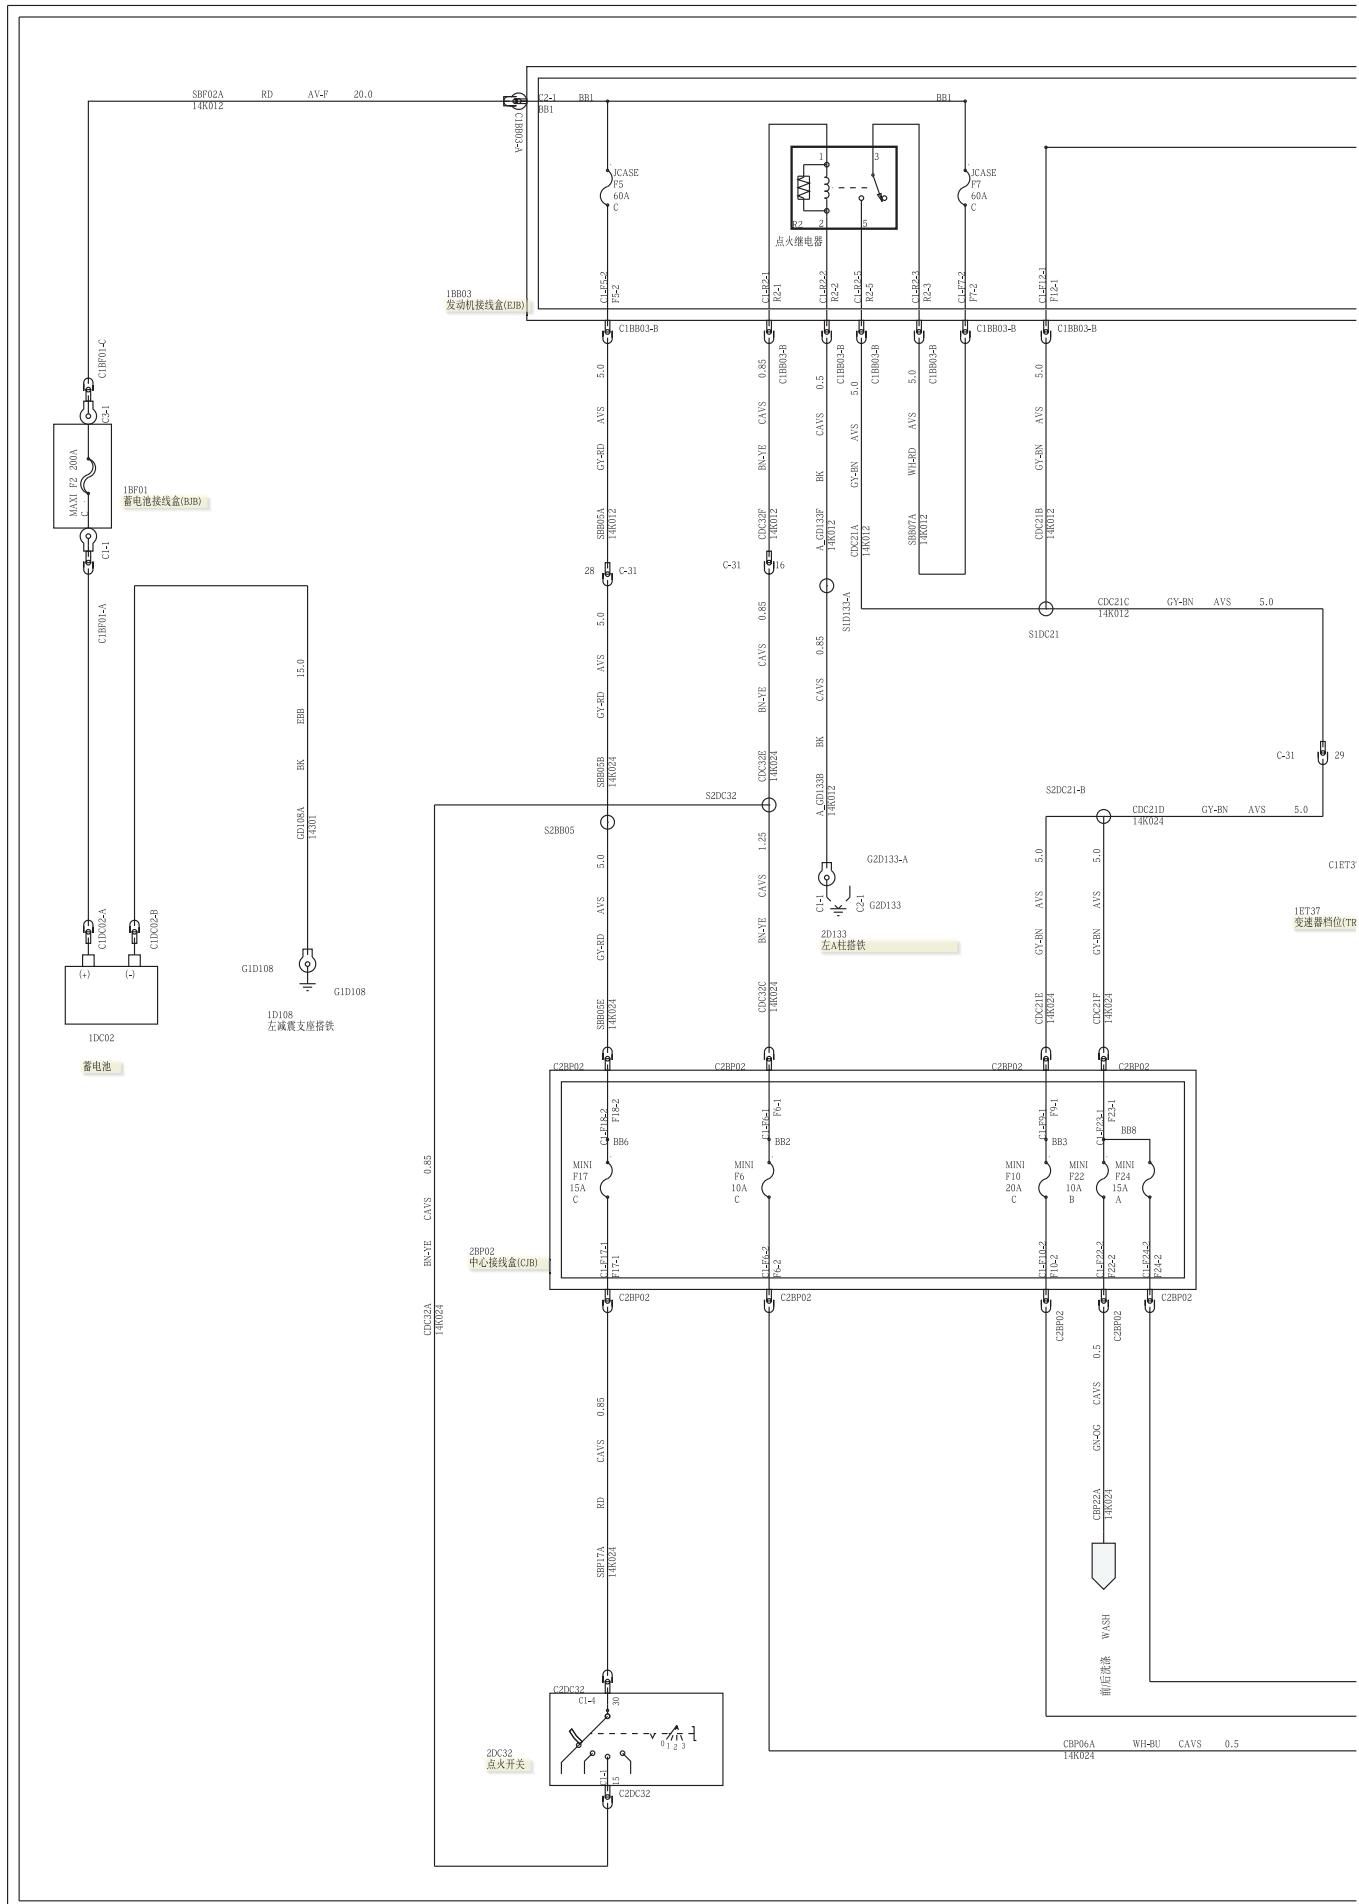

501-16-9 刮水器和洗涤器—4门, 车辆配备: 4速自动变速器(FN4A-EL)

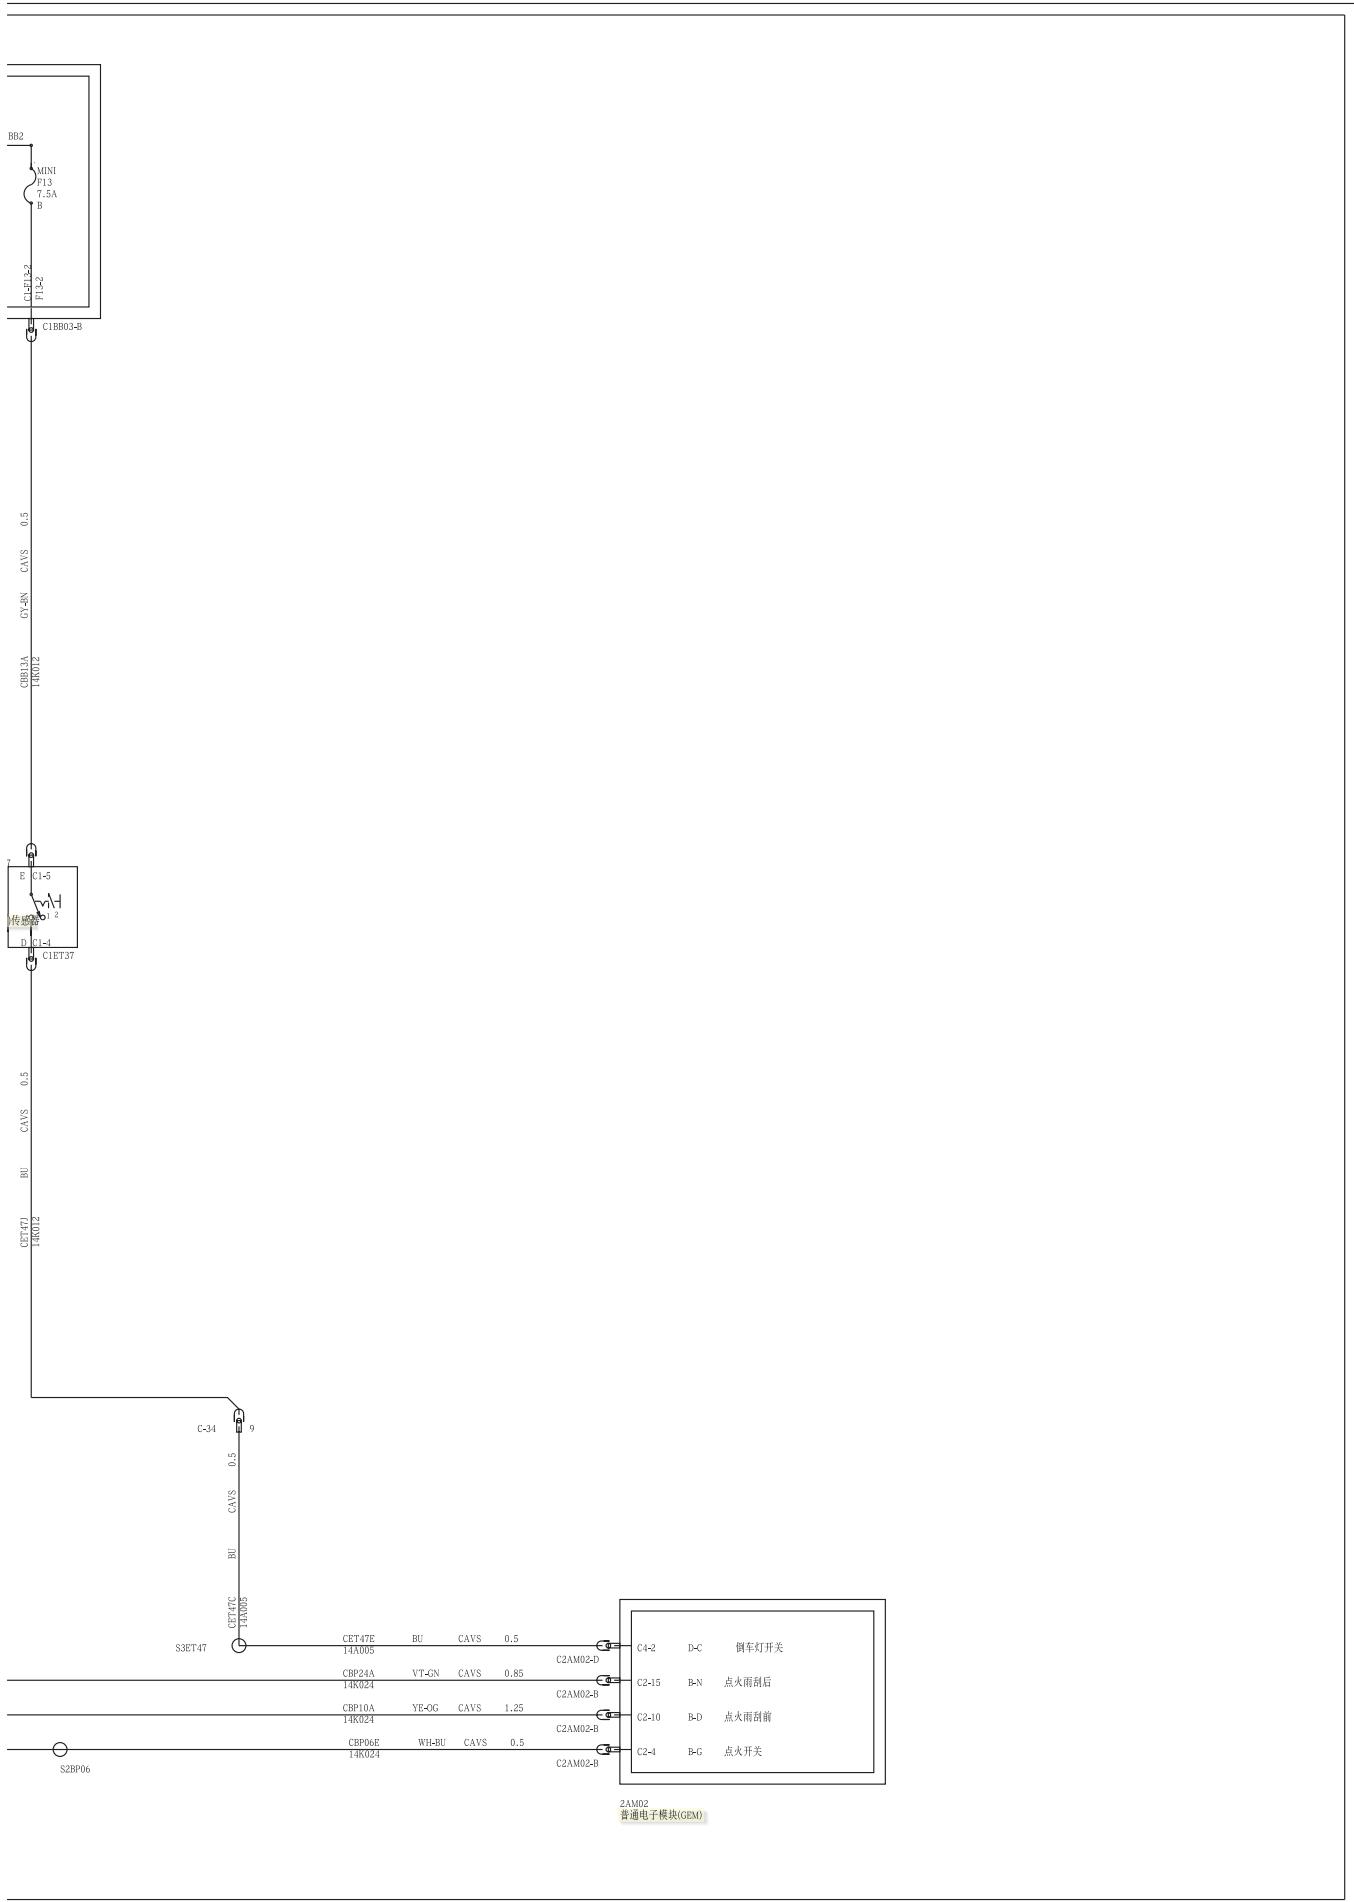


501-16-10 刮水器和洗涤器—5门, 车辆配备: 5—速手动变速器 (B5A)

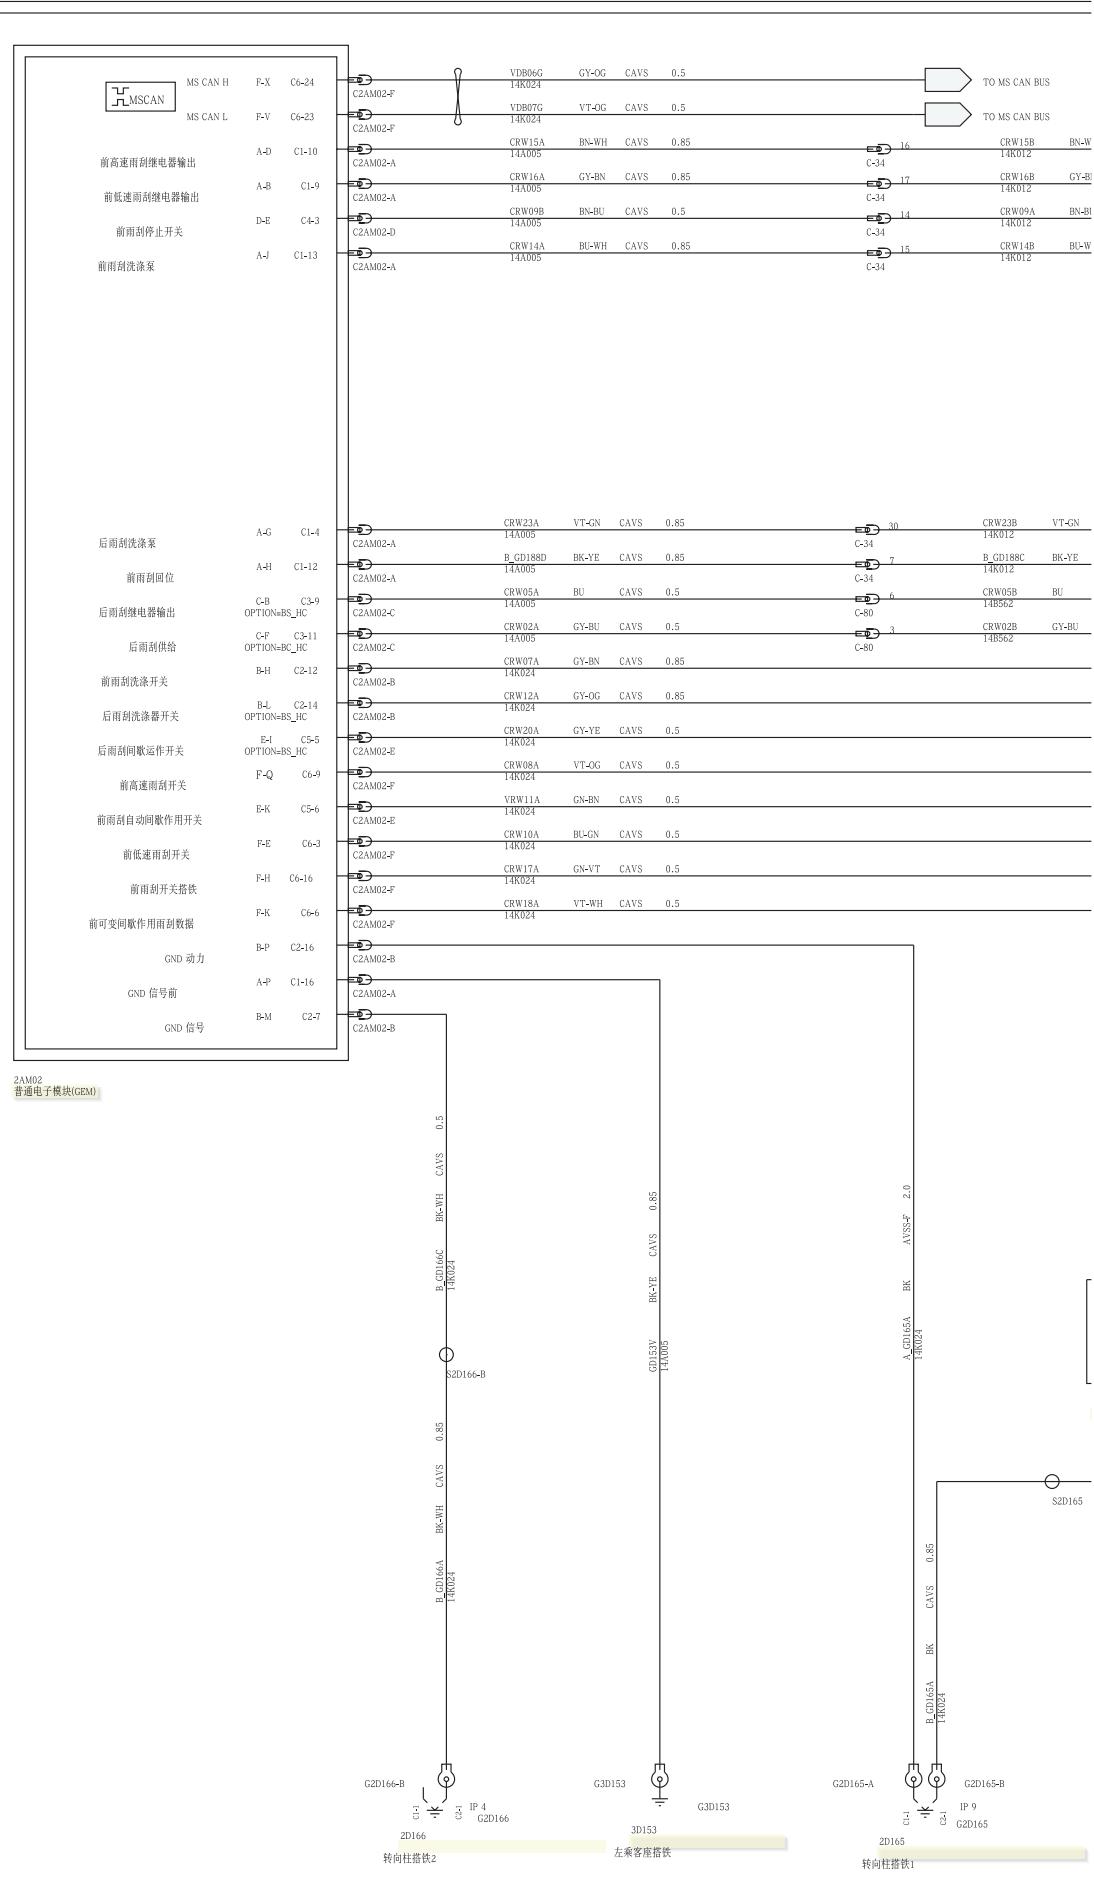


2008.75 Fiesta (G1102895)

501-16-11 刮水器和洗涤器—5门, 车辆配备: 5—速手动变速器 (B5A)

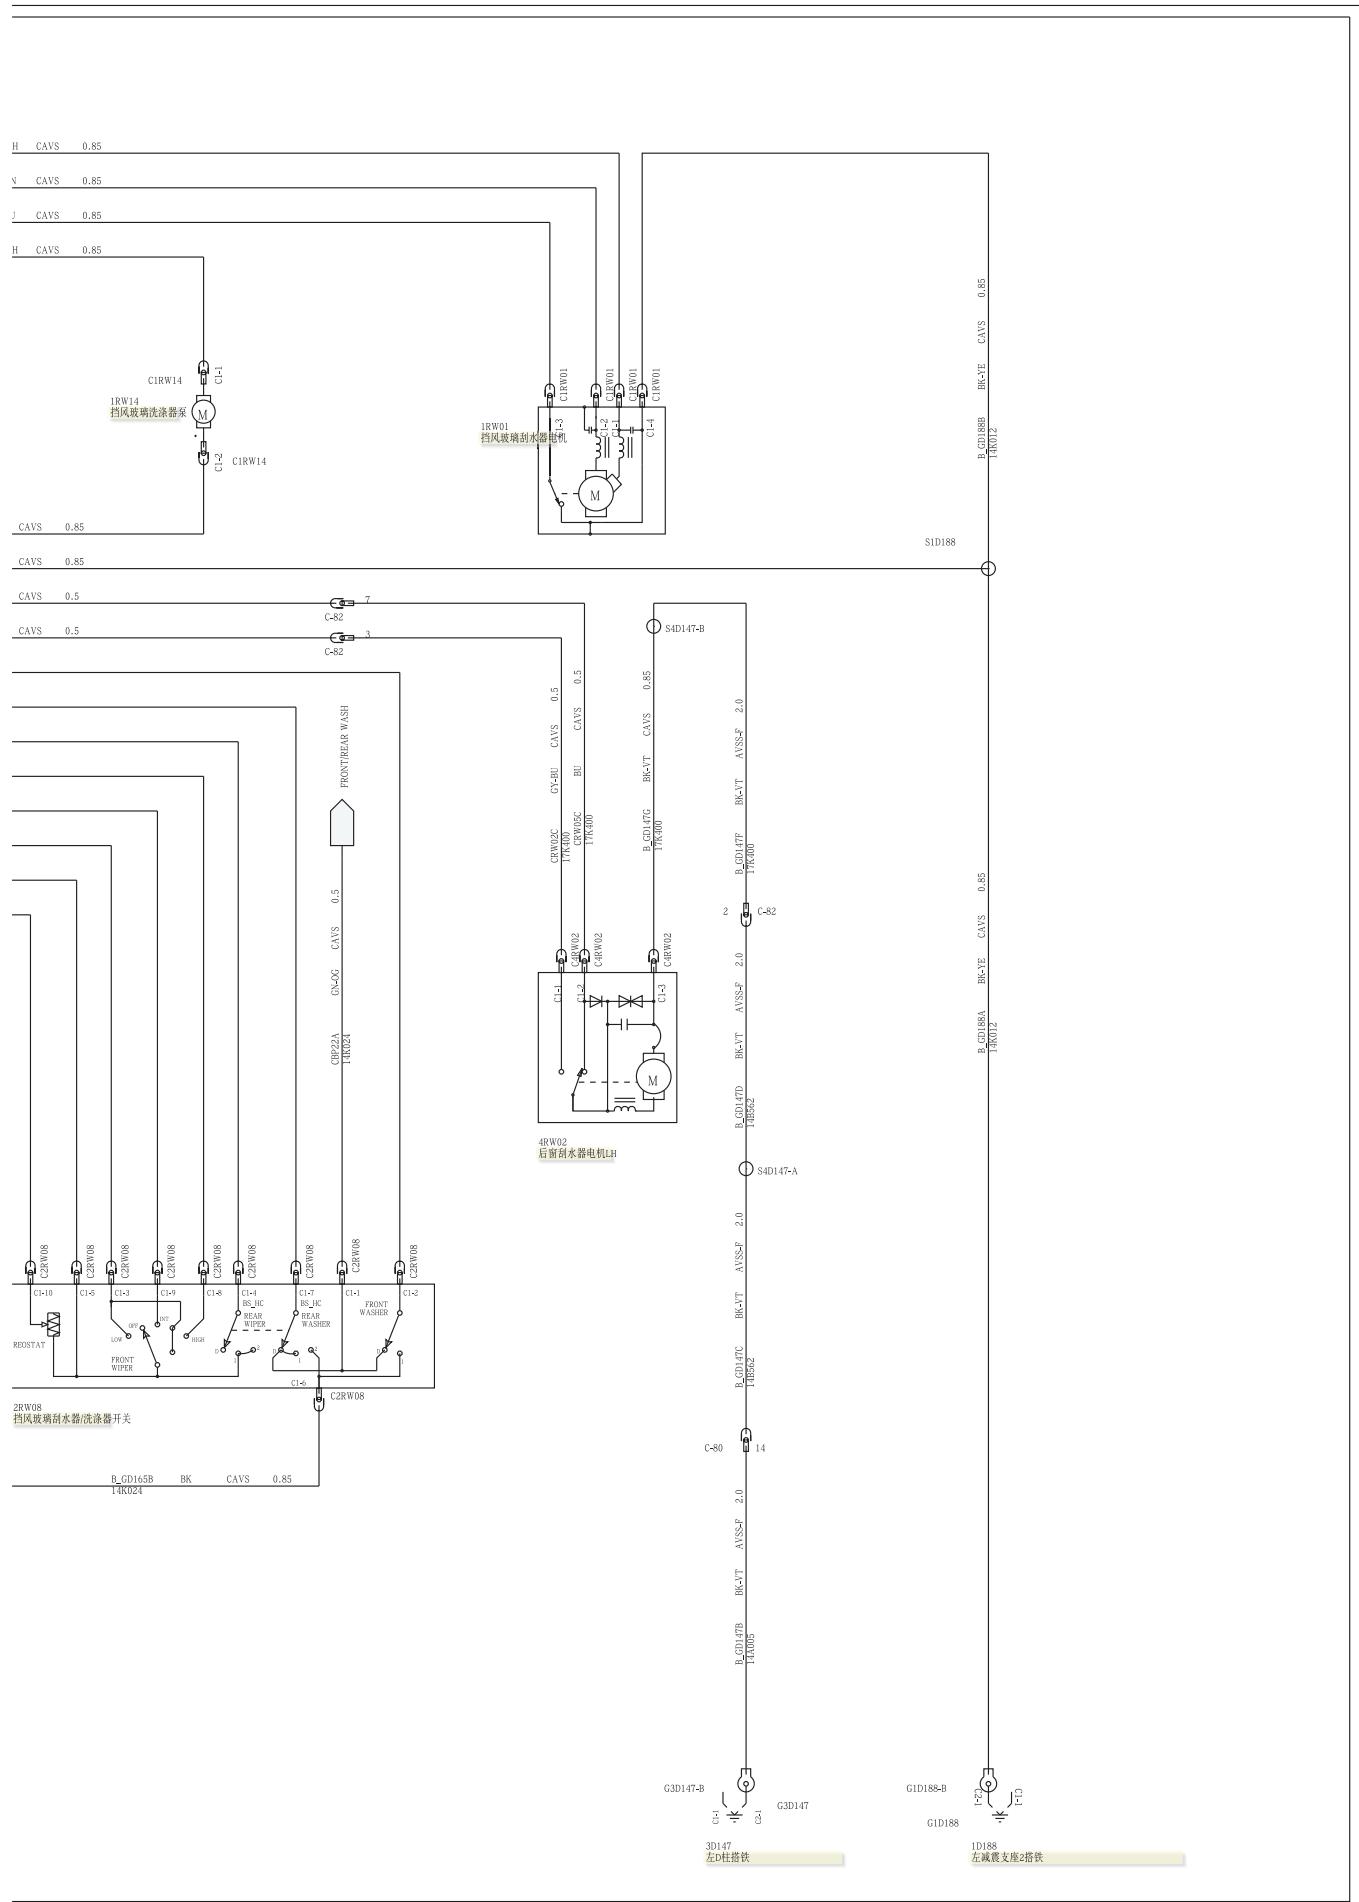


2008.75 Fiesta (G1102895)

501-16-12 刮水器和洗涤器—5门, 车辆配备: 5—速手动变速器 (B5A)

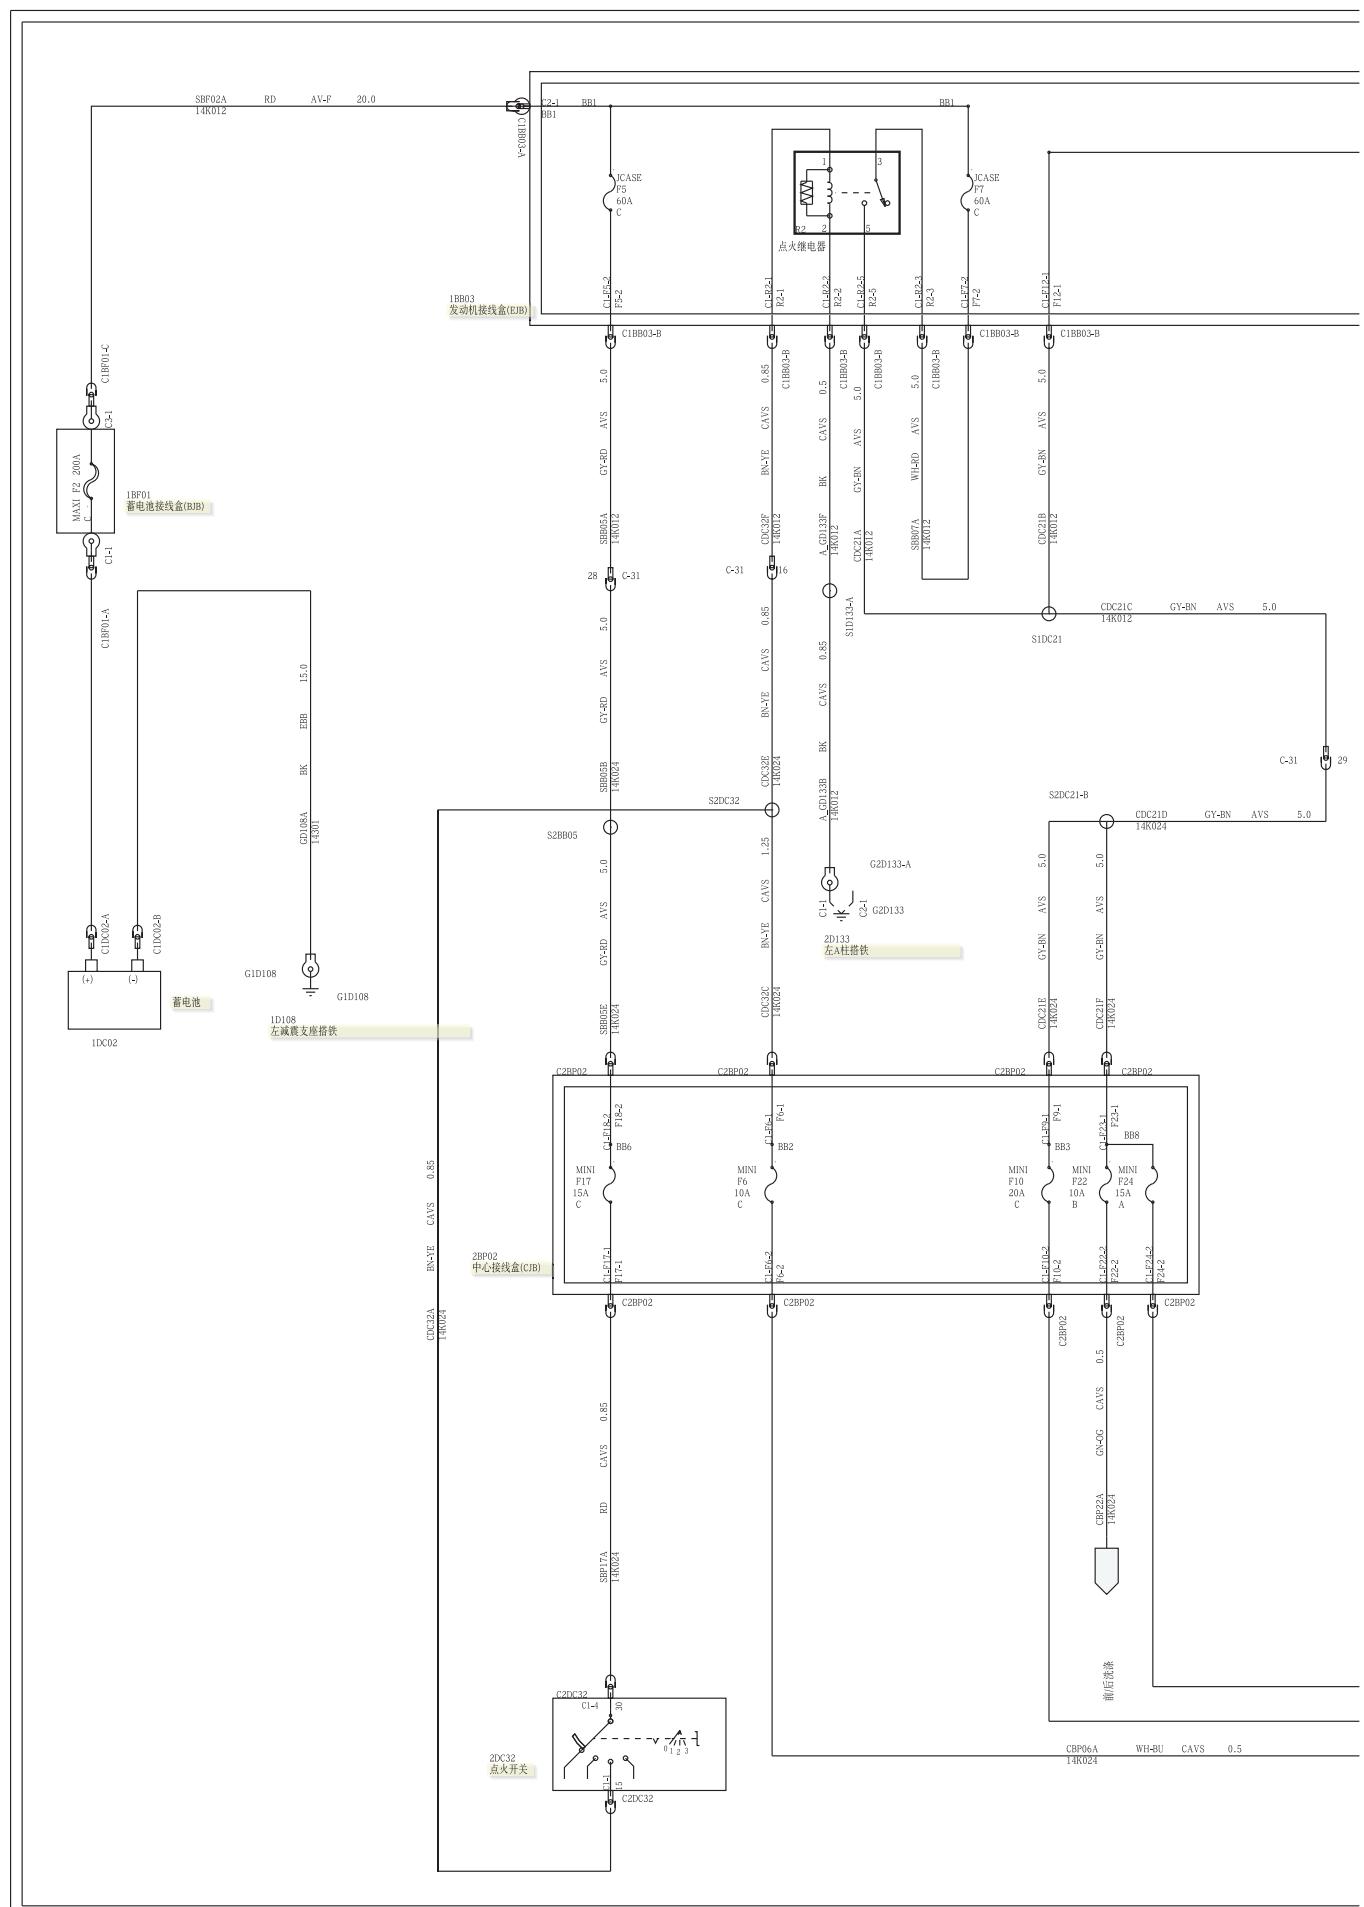


2008.75 Fiesta (G1102895)

501-16-13 刮水器和洗涤器—5门, 车辆配备: 5—速手动变速器 (B5A)

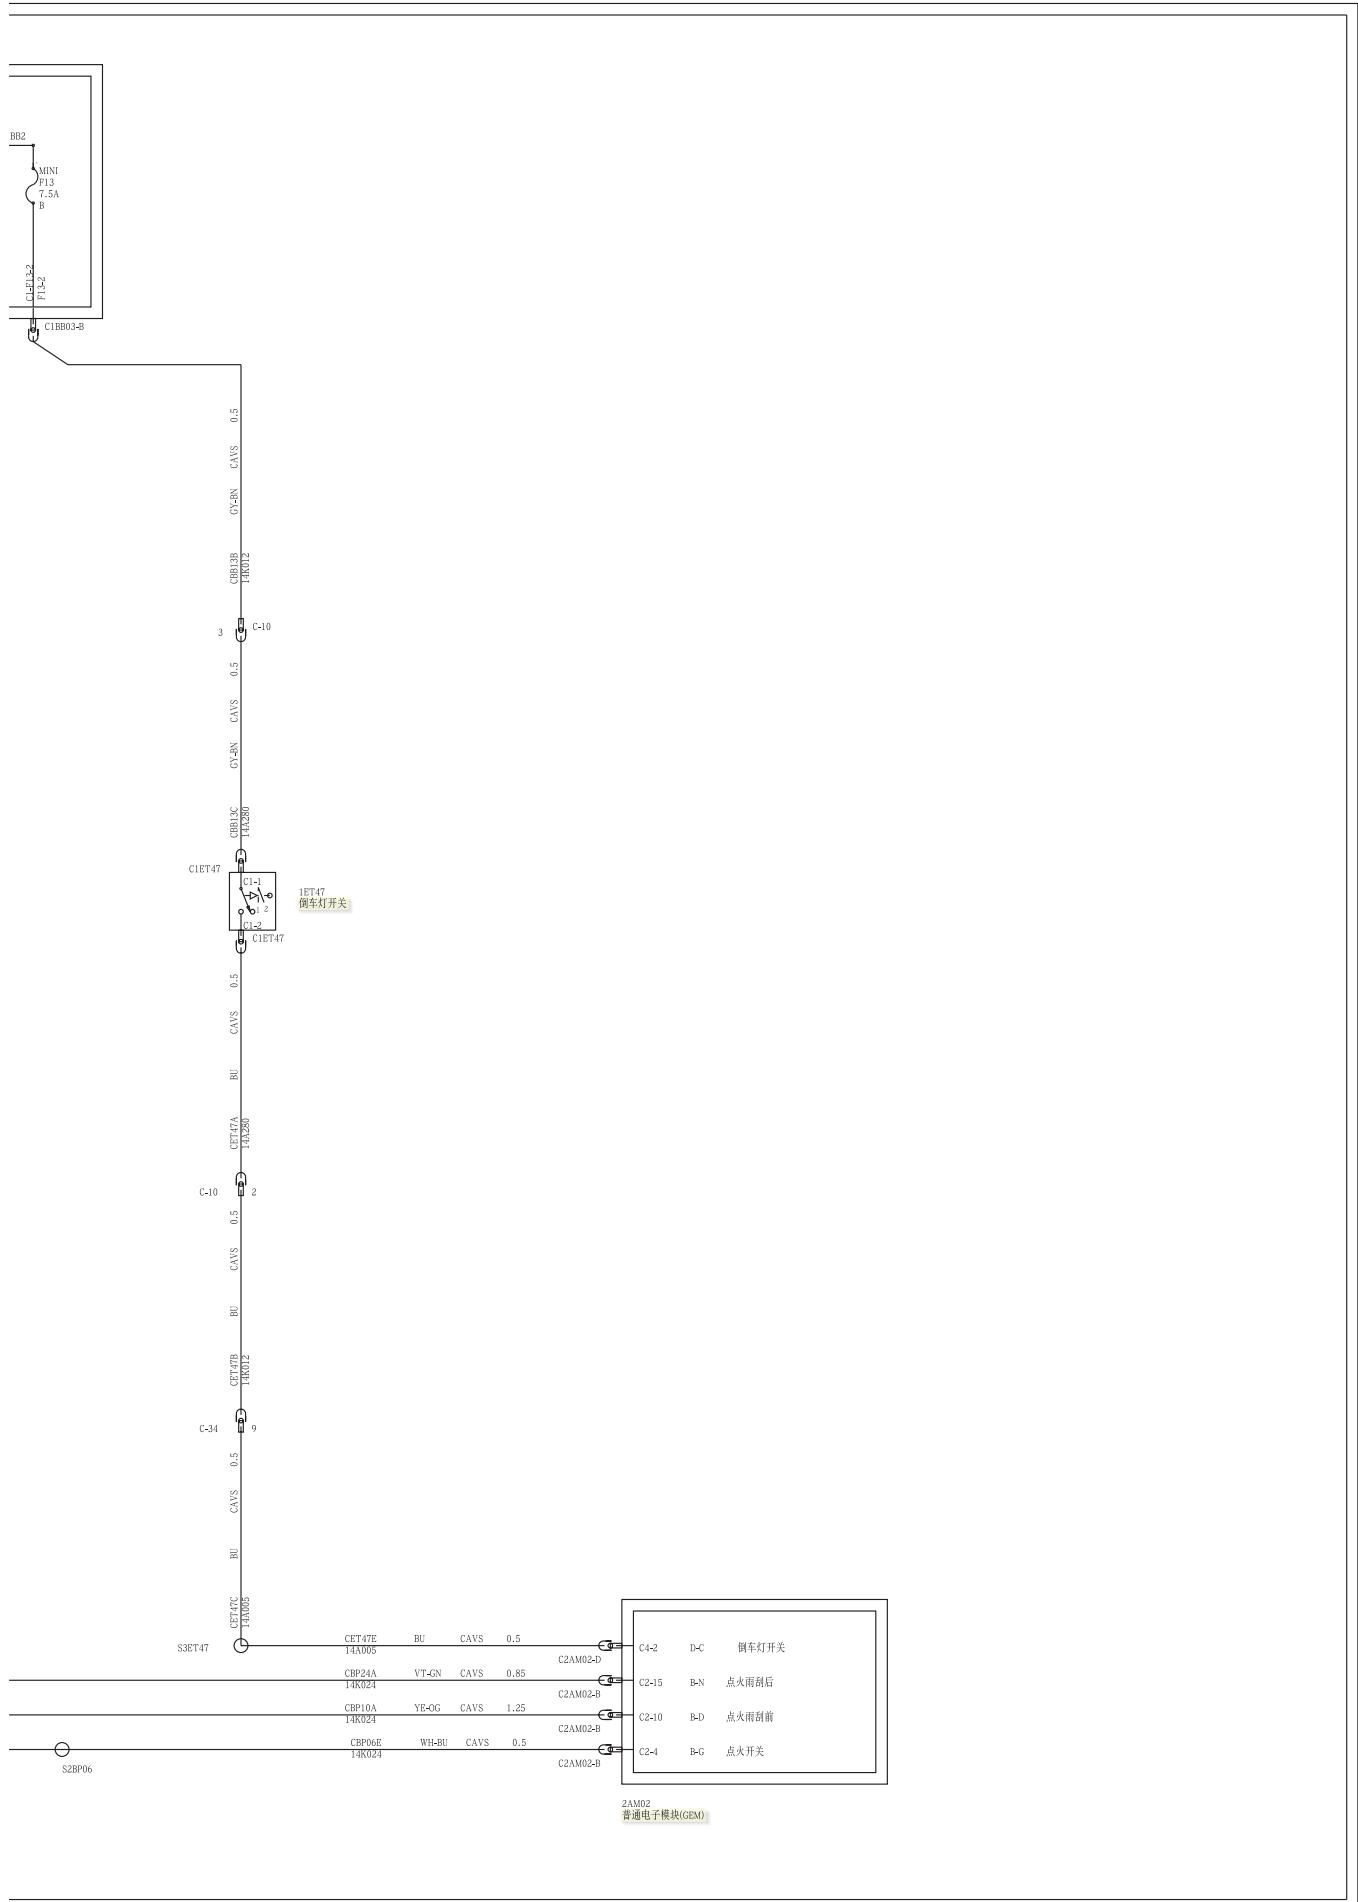


501-16-14 刮水器和洗涤器—5门, 车辆配备: 4速自动变速器(FN4A-EL)

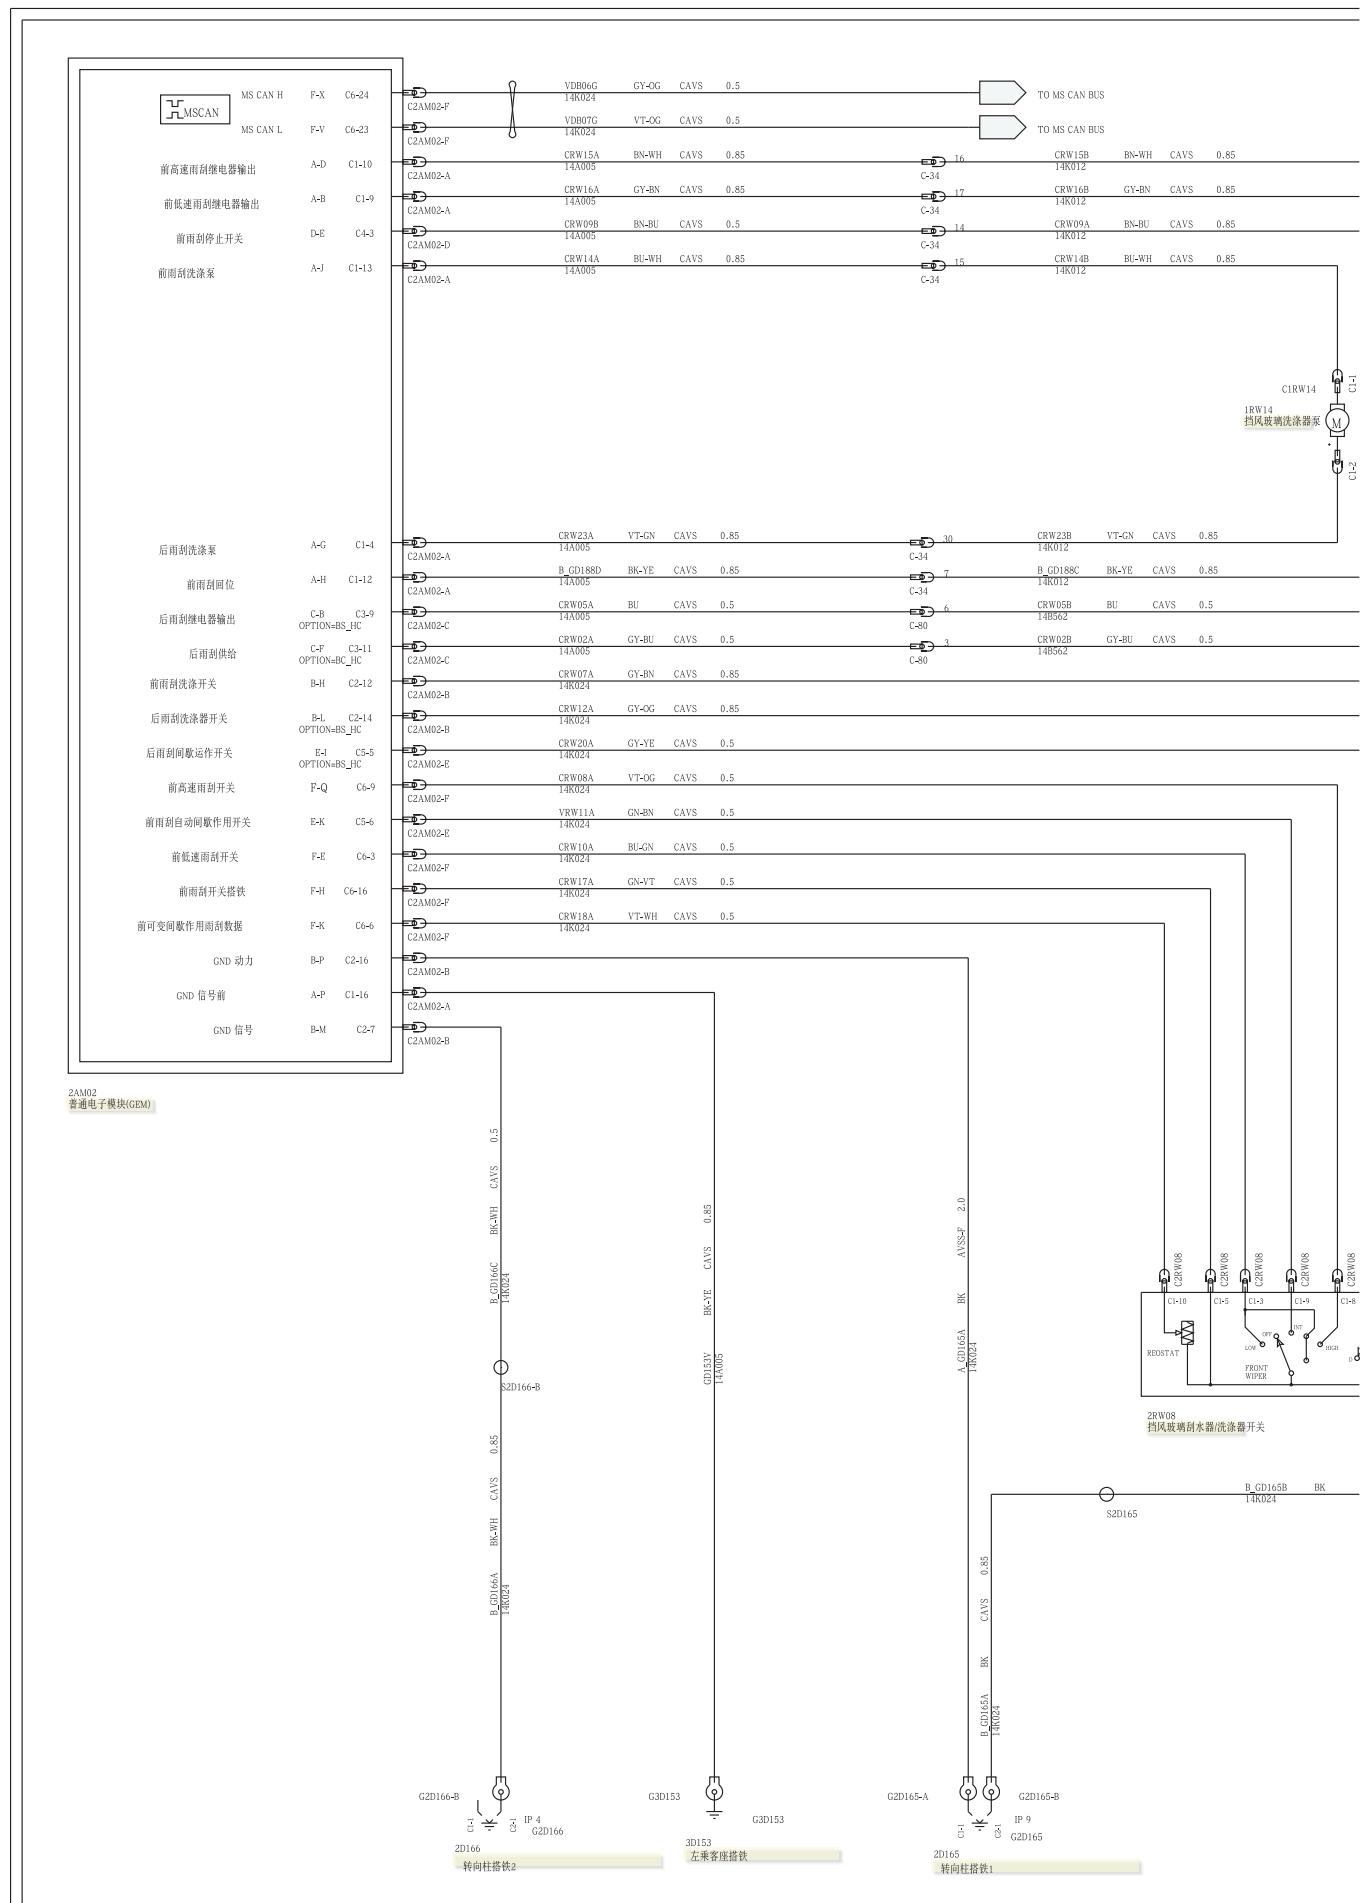


2008.75 Fiesta (G1102896)

501-16-15 刮水器和洗涤器—5门, 车辆配备: 4速自动变速器(FN4A-EL)

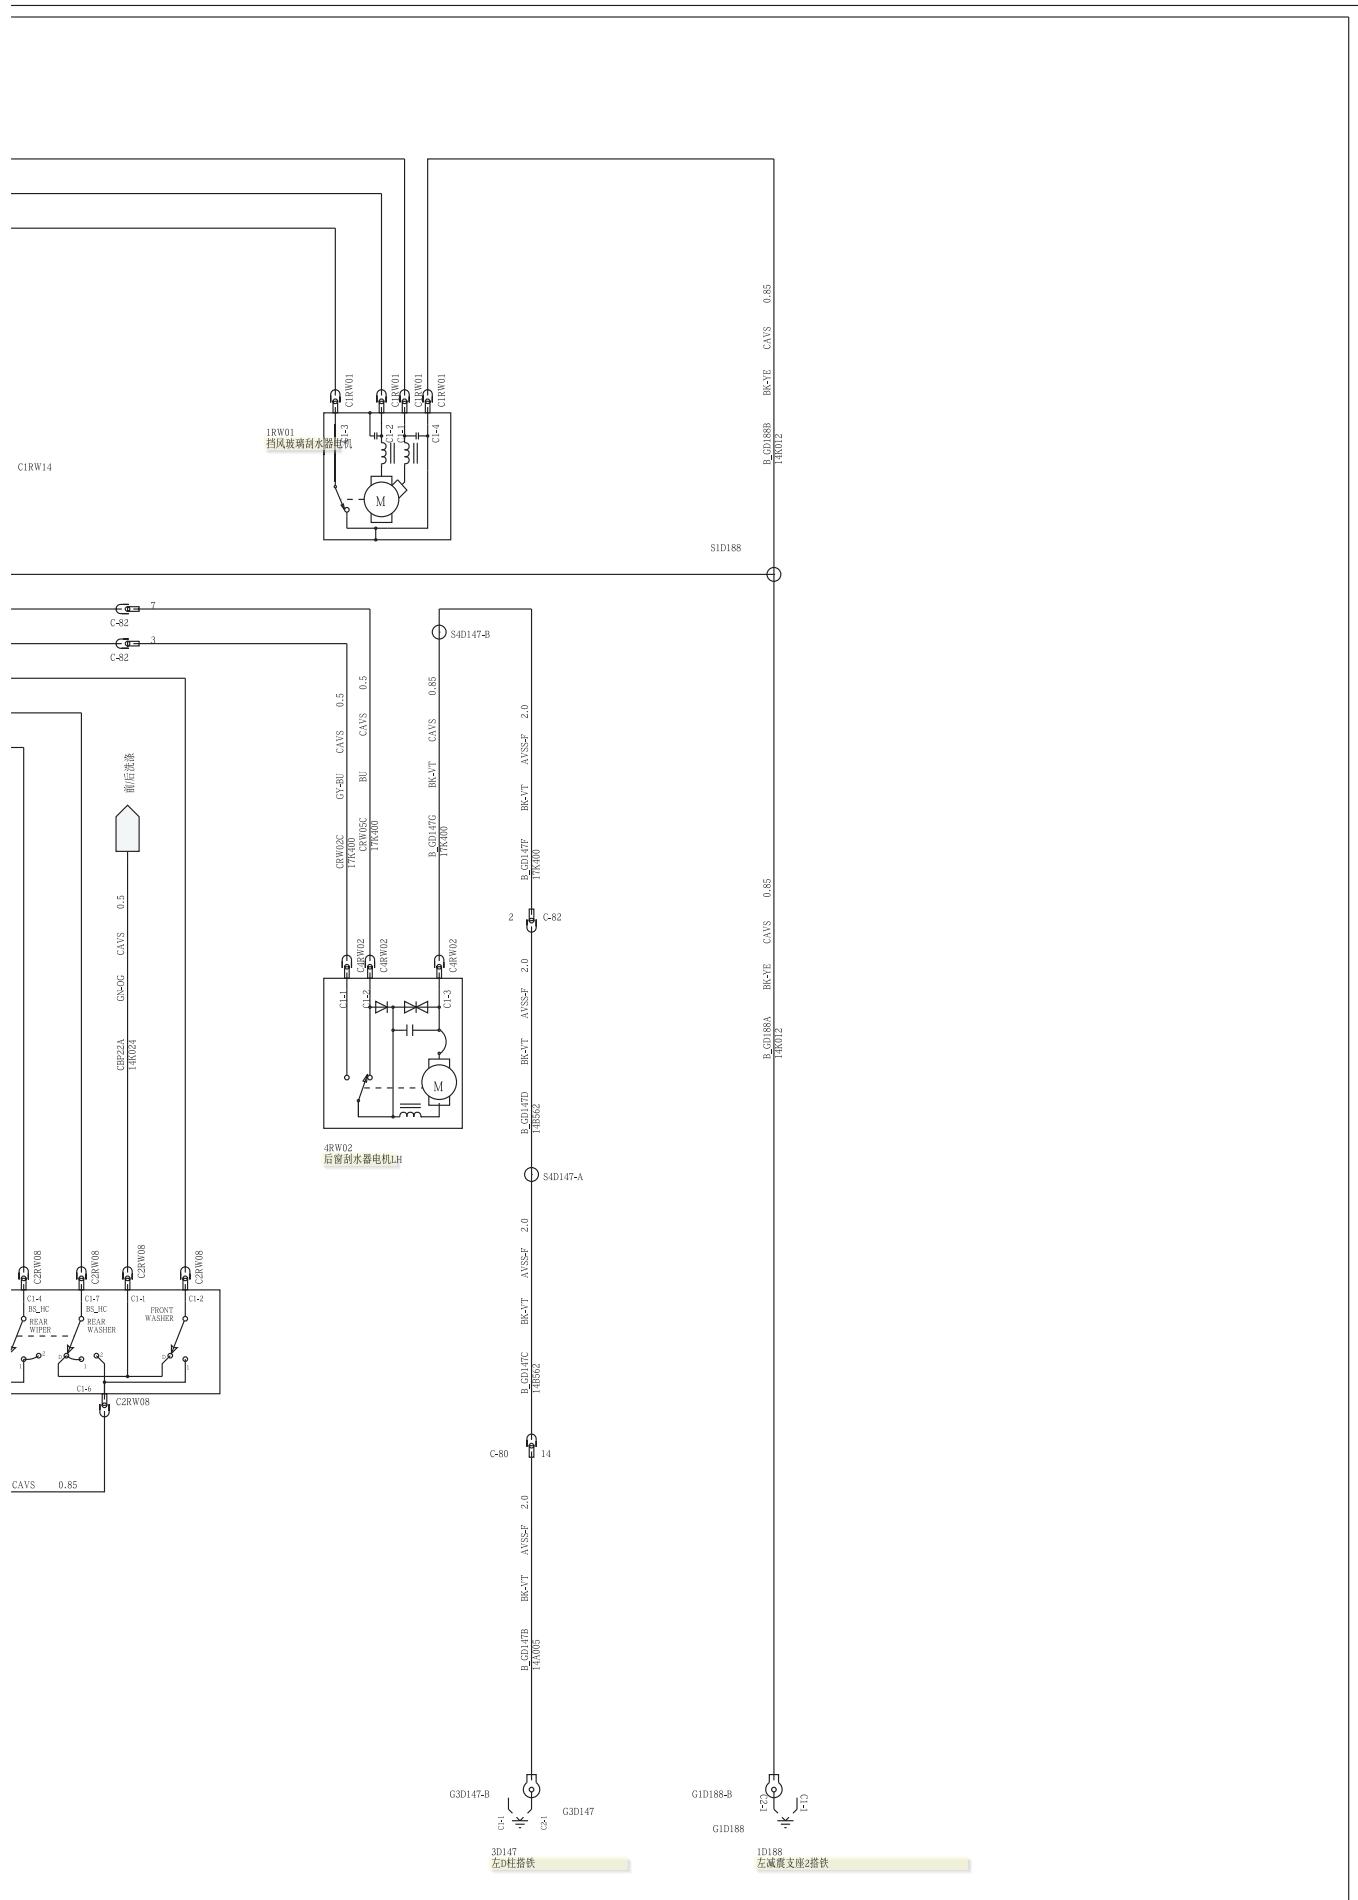


2008.75 Fiesta (G1102896)

501-16-16 刮水器和洗涤器—5门, 车辆配备: 4速自动变速器(FN4A-EL)

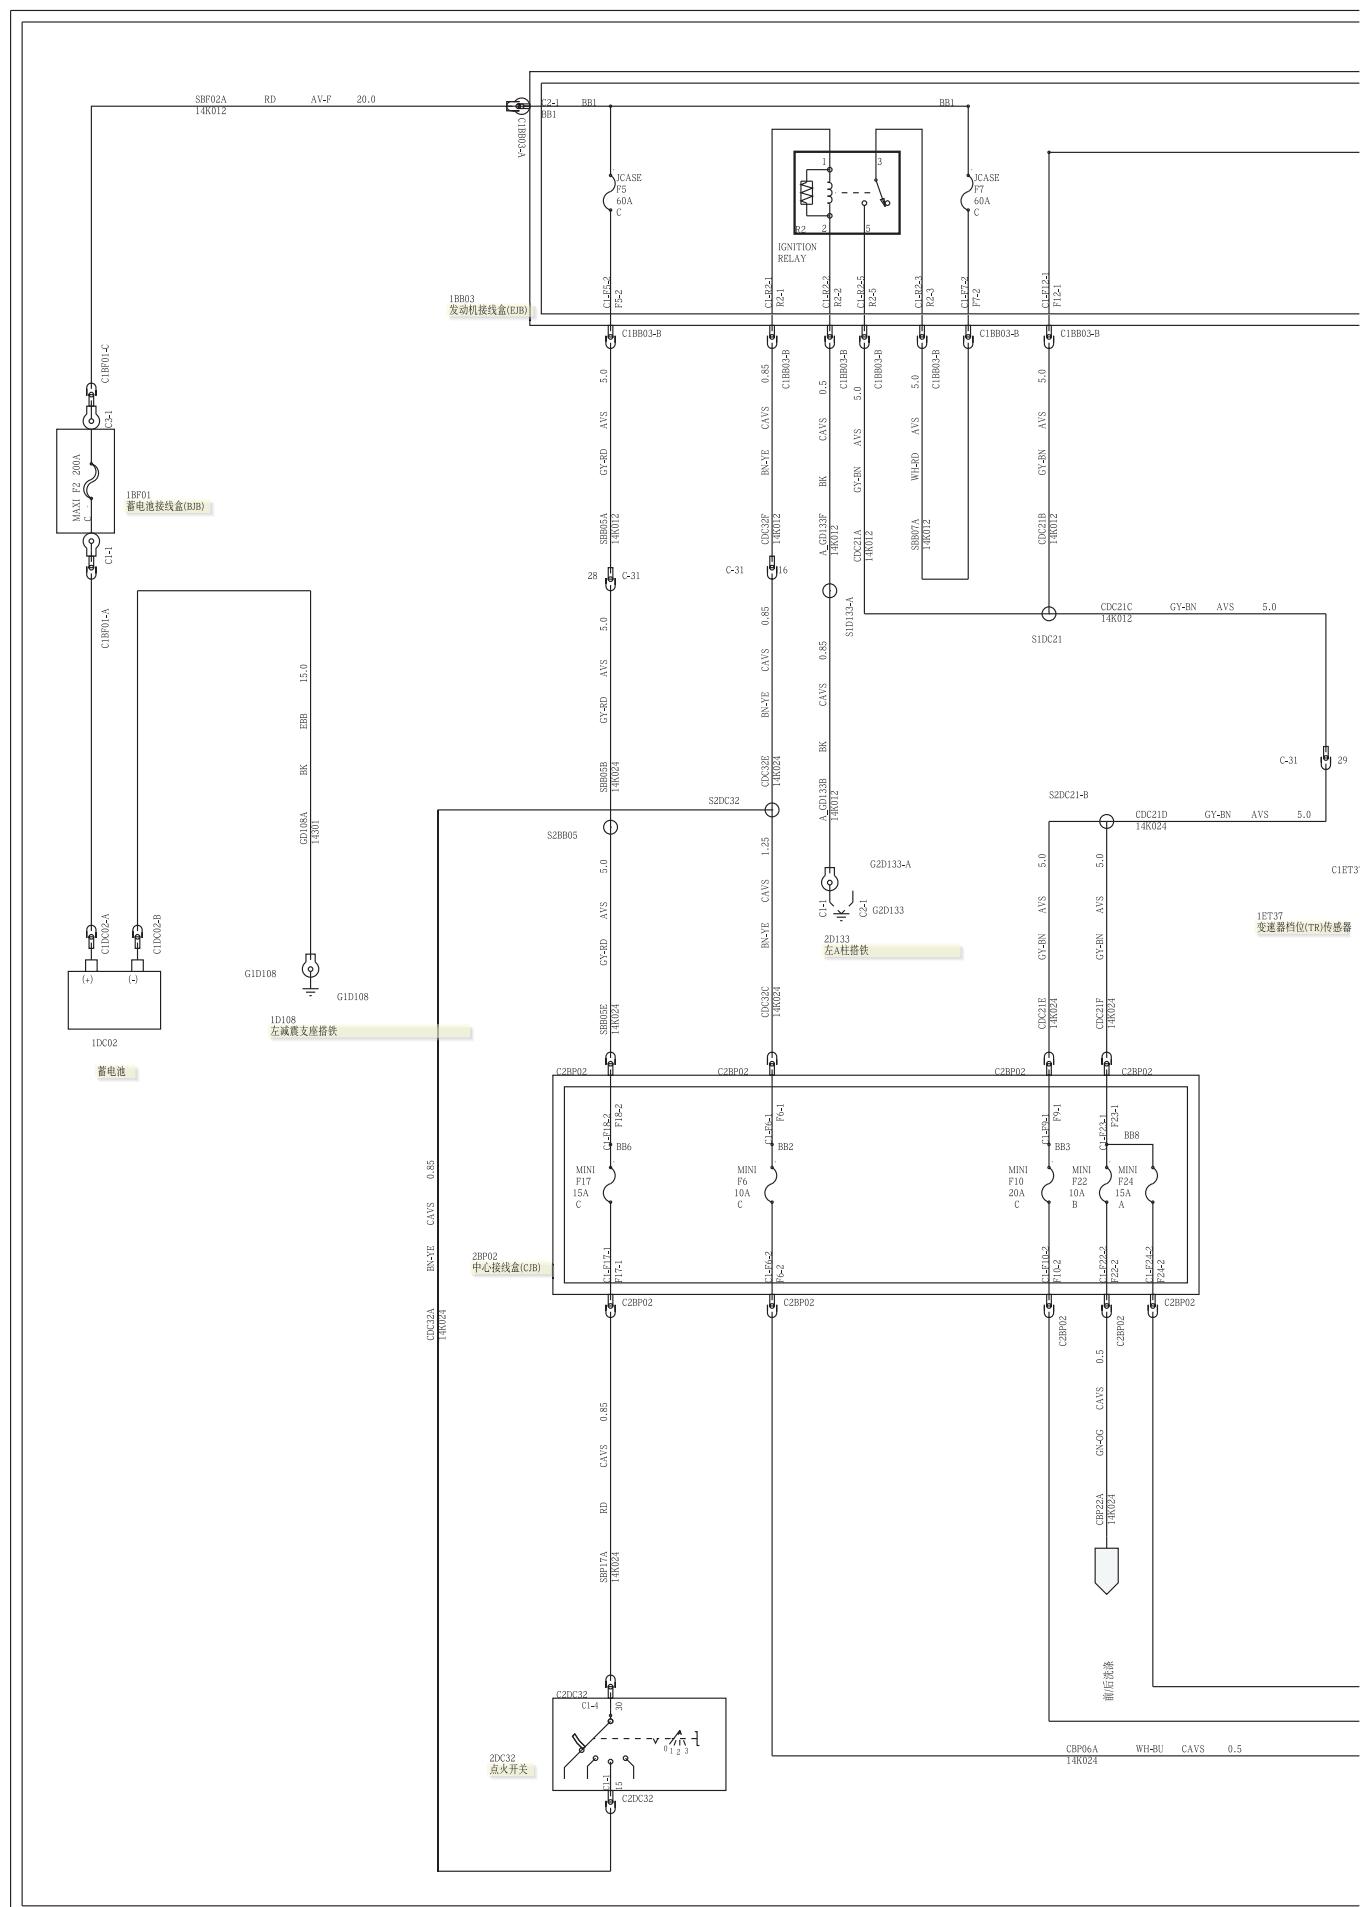

2008.75 Fiesta (G1102896)

501-16-17 刮水器和洗涤器—5门, 车辆配备: 4速自动变速器(FN4A-EL)

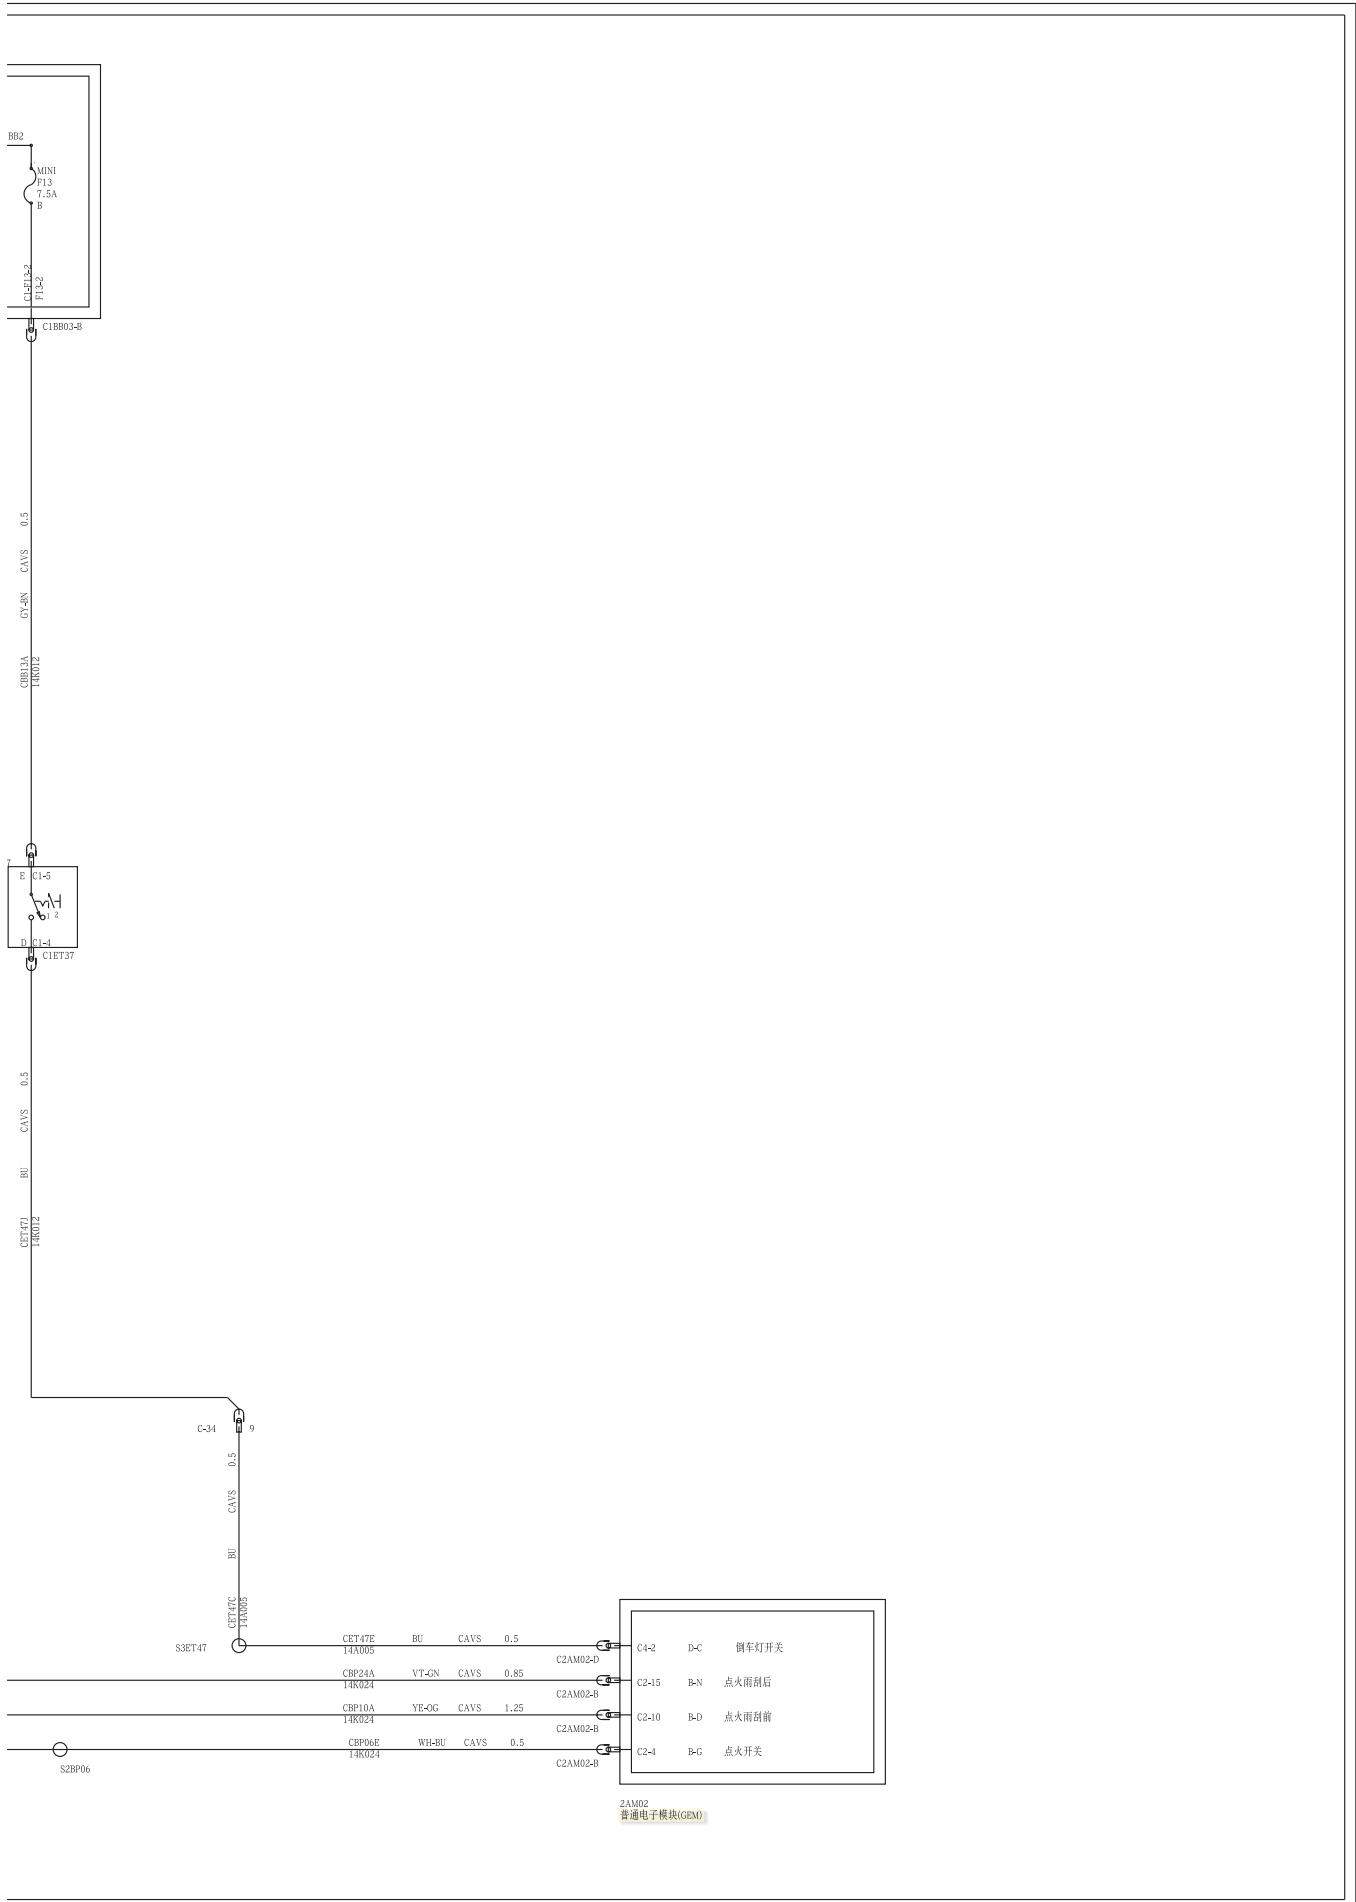

501-16-18 后窗刮水器电机LH




XR8T-14489-NB

C4RW02

线束 17K400

501-16-19 挡风玻璃洗涤器泵

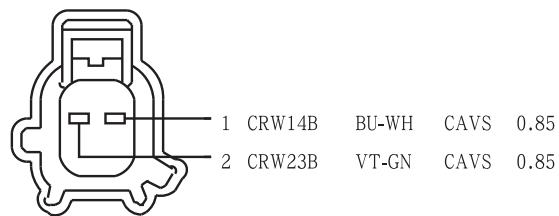


1L2T-14A464-BA

C1RW14

线束 14K012

501-16-20 挡风玻璃刮水器电机

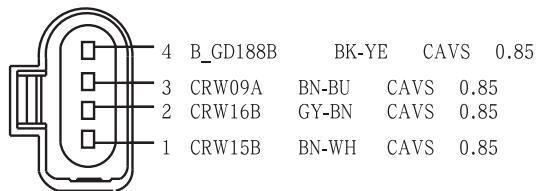


3M5T-14A464-GDA

C1RW01

线束 14K012

501-16-21 挡风玻璃刮水器/洗涤器开关

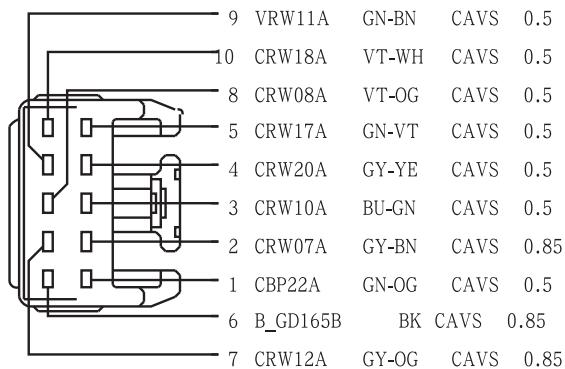

4S7T-14489-VJA

C2RW08

线束 14K024

节 501-17 天窗

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

电动车顶可开启的顶板.....	501-17-2
-----------------	----------


连接器

天窗模块.....	501-17-4
-----------	----------

501-17-2 电动车顶可开启的顶板

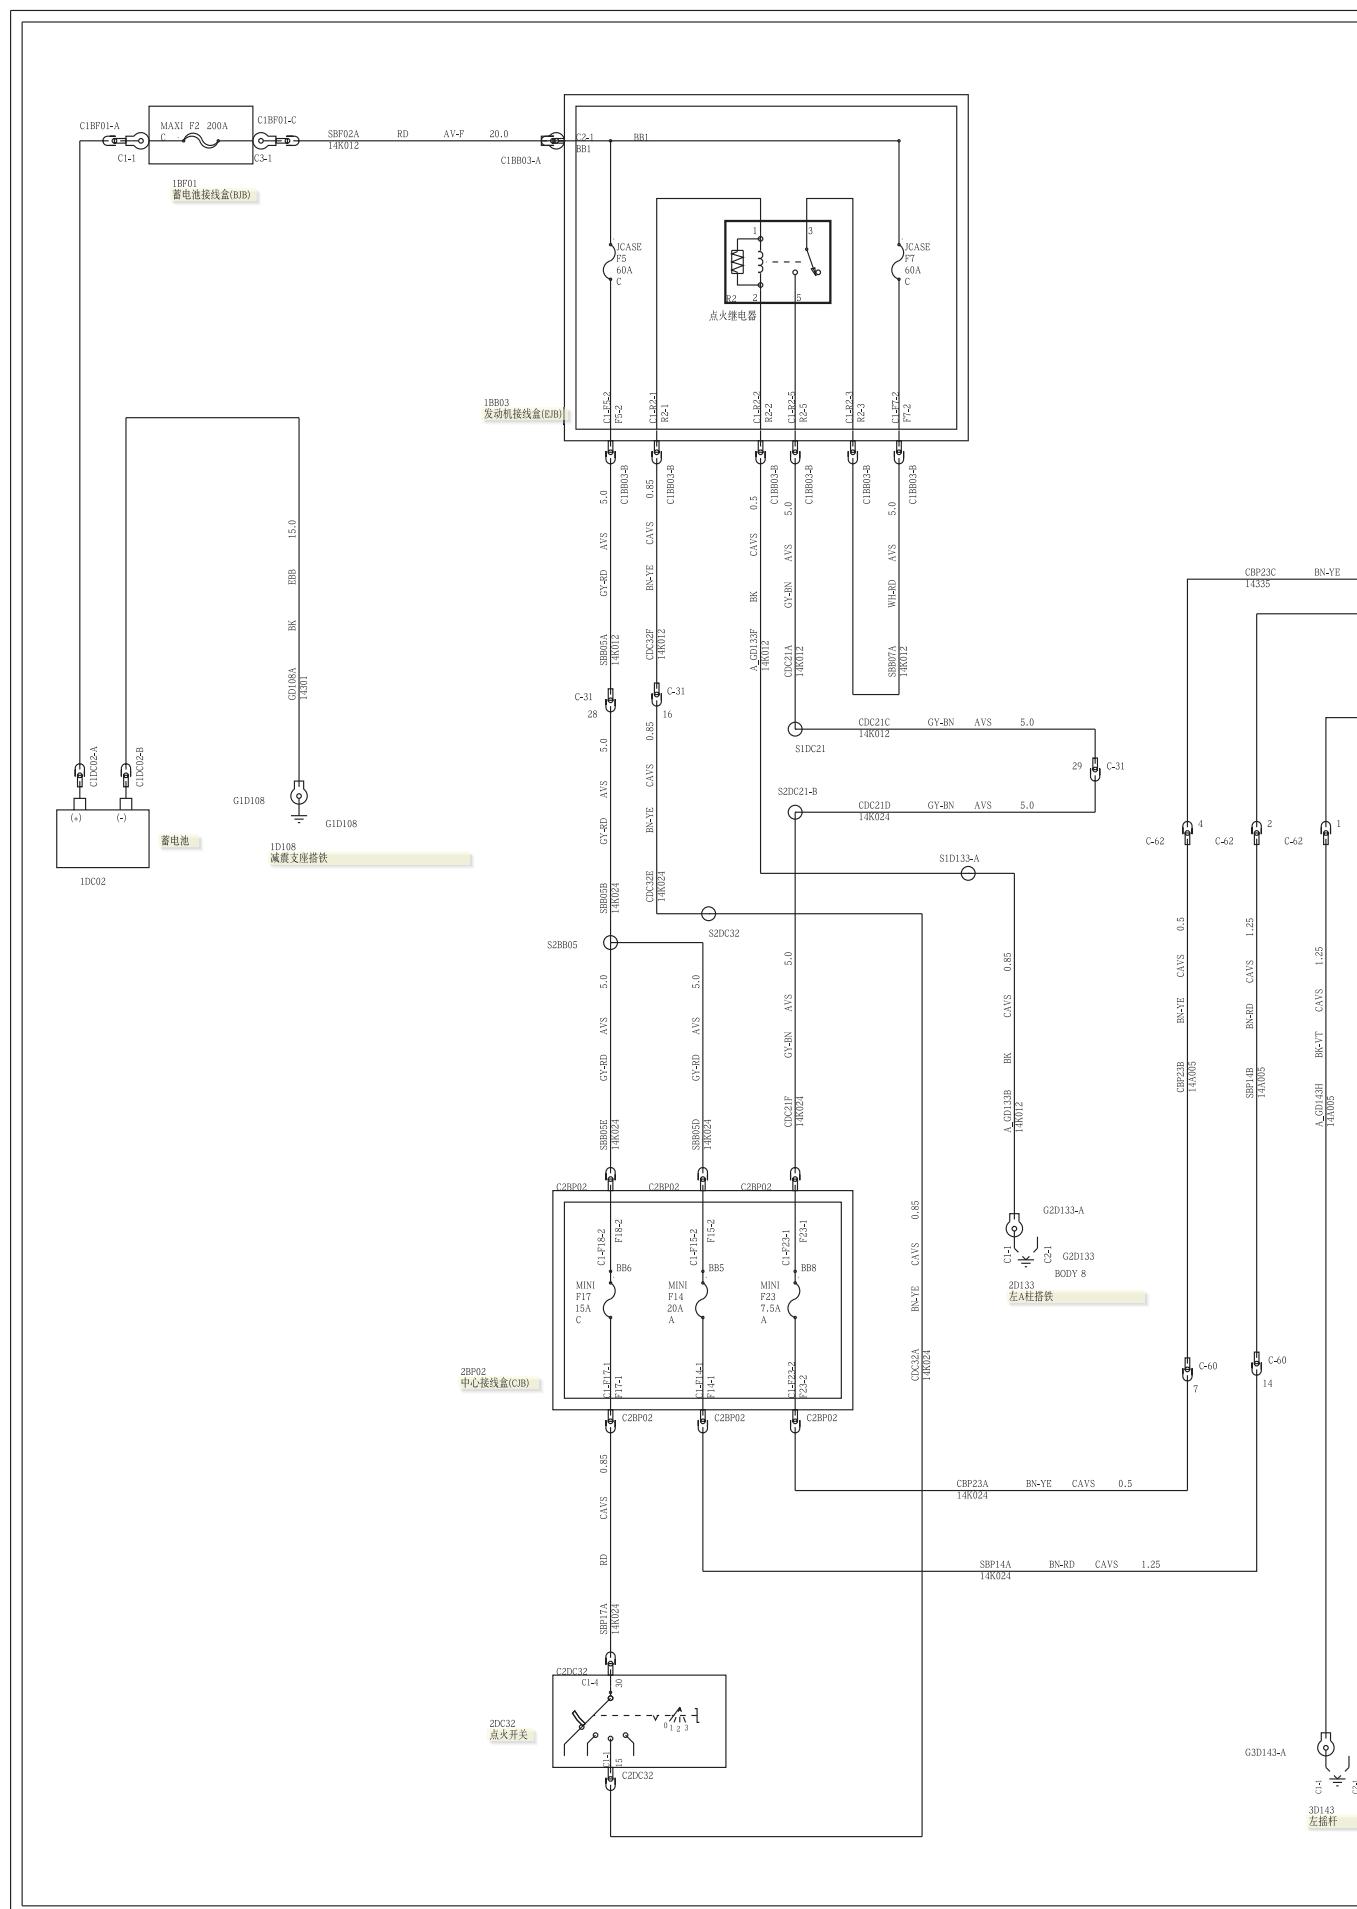


501-17-3 电动车顶可开启的顶板

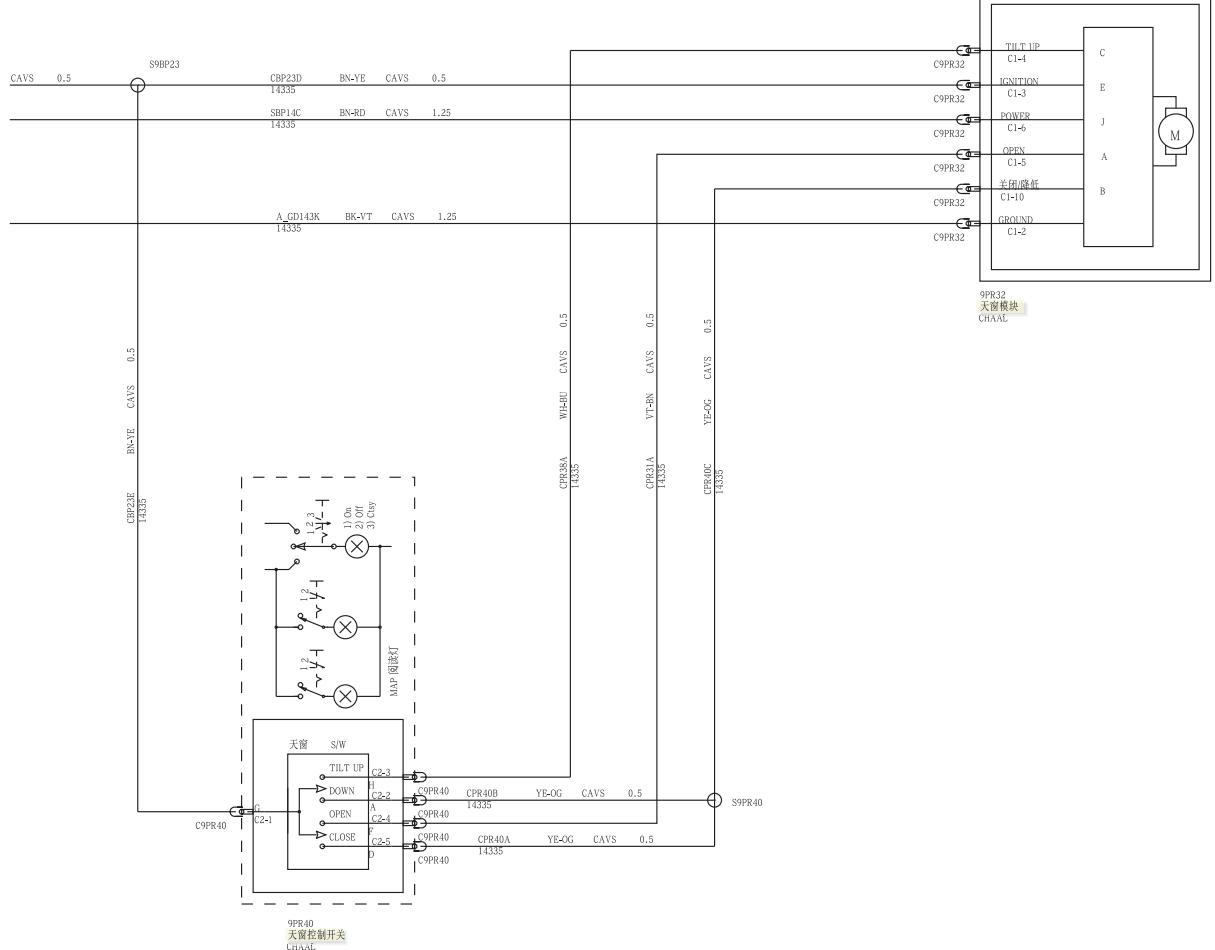

G3D143

摇杆仪表板搭铁

501-17-4 天窗模块

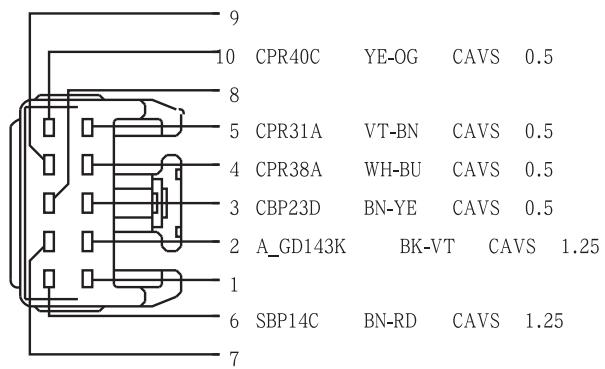

4S7T-14489-VJA

C9PR32

线束 14335

节 501-20A 安全带系统


车辆应用：2008.75 Fiesta

内容	页码
----	----

连接器

驾驶员安全带预张紧器.....	501-20A-2
换油指示灯重置.....	501-20A-3


501-20A-2 驾驶员安全带预张紧器

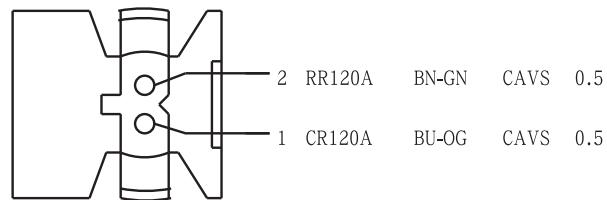

7M5T-14489-BA
C3R120

线束 14A005

501-20A-3 换油指示灯重置

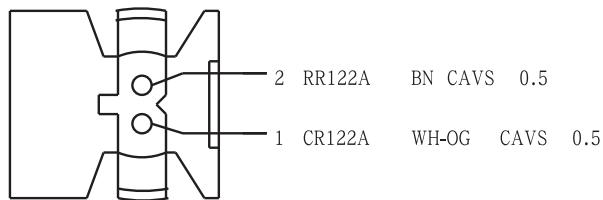

7M5T-14489-BA
C3R122

线束 14A005

节 501-20B 辅助约束系统

车辆应用：2008.75 Fiesta

内容	页码
----	----


示意图

气囊和安全带预张紧器.....	501-20B-2
-----------------	-----------

连接器


时钟弹簧.....	501-20B-4
前撞击传感器.....	501-20B-5
乘员气囊模块.....	501-20B-6
约束控制模块(RCM) — B.....	501-20B-7
约束控制模块(RCM) — C.....	501-20B-8

501-20B-2 气囊和安全带预张紧器

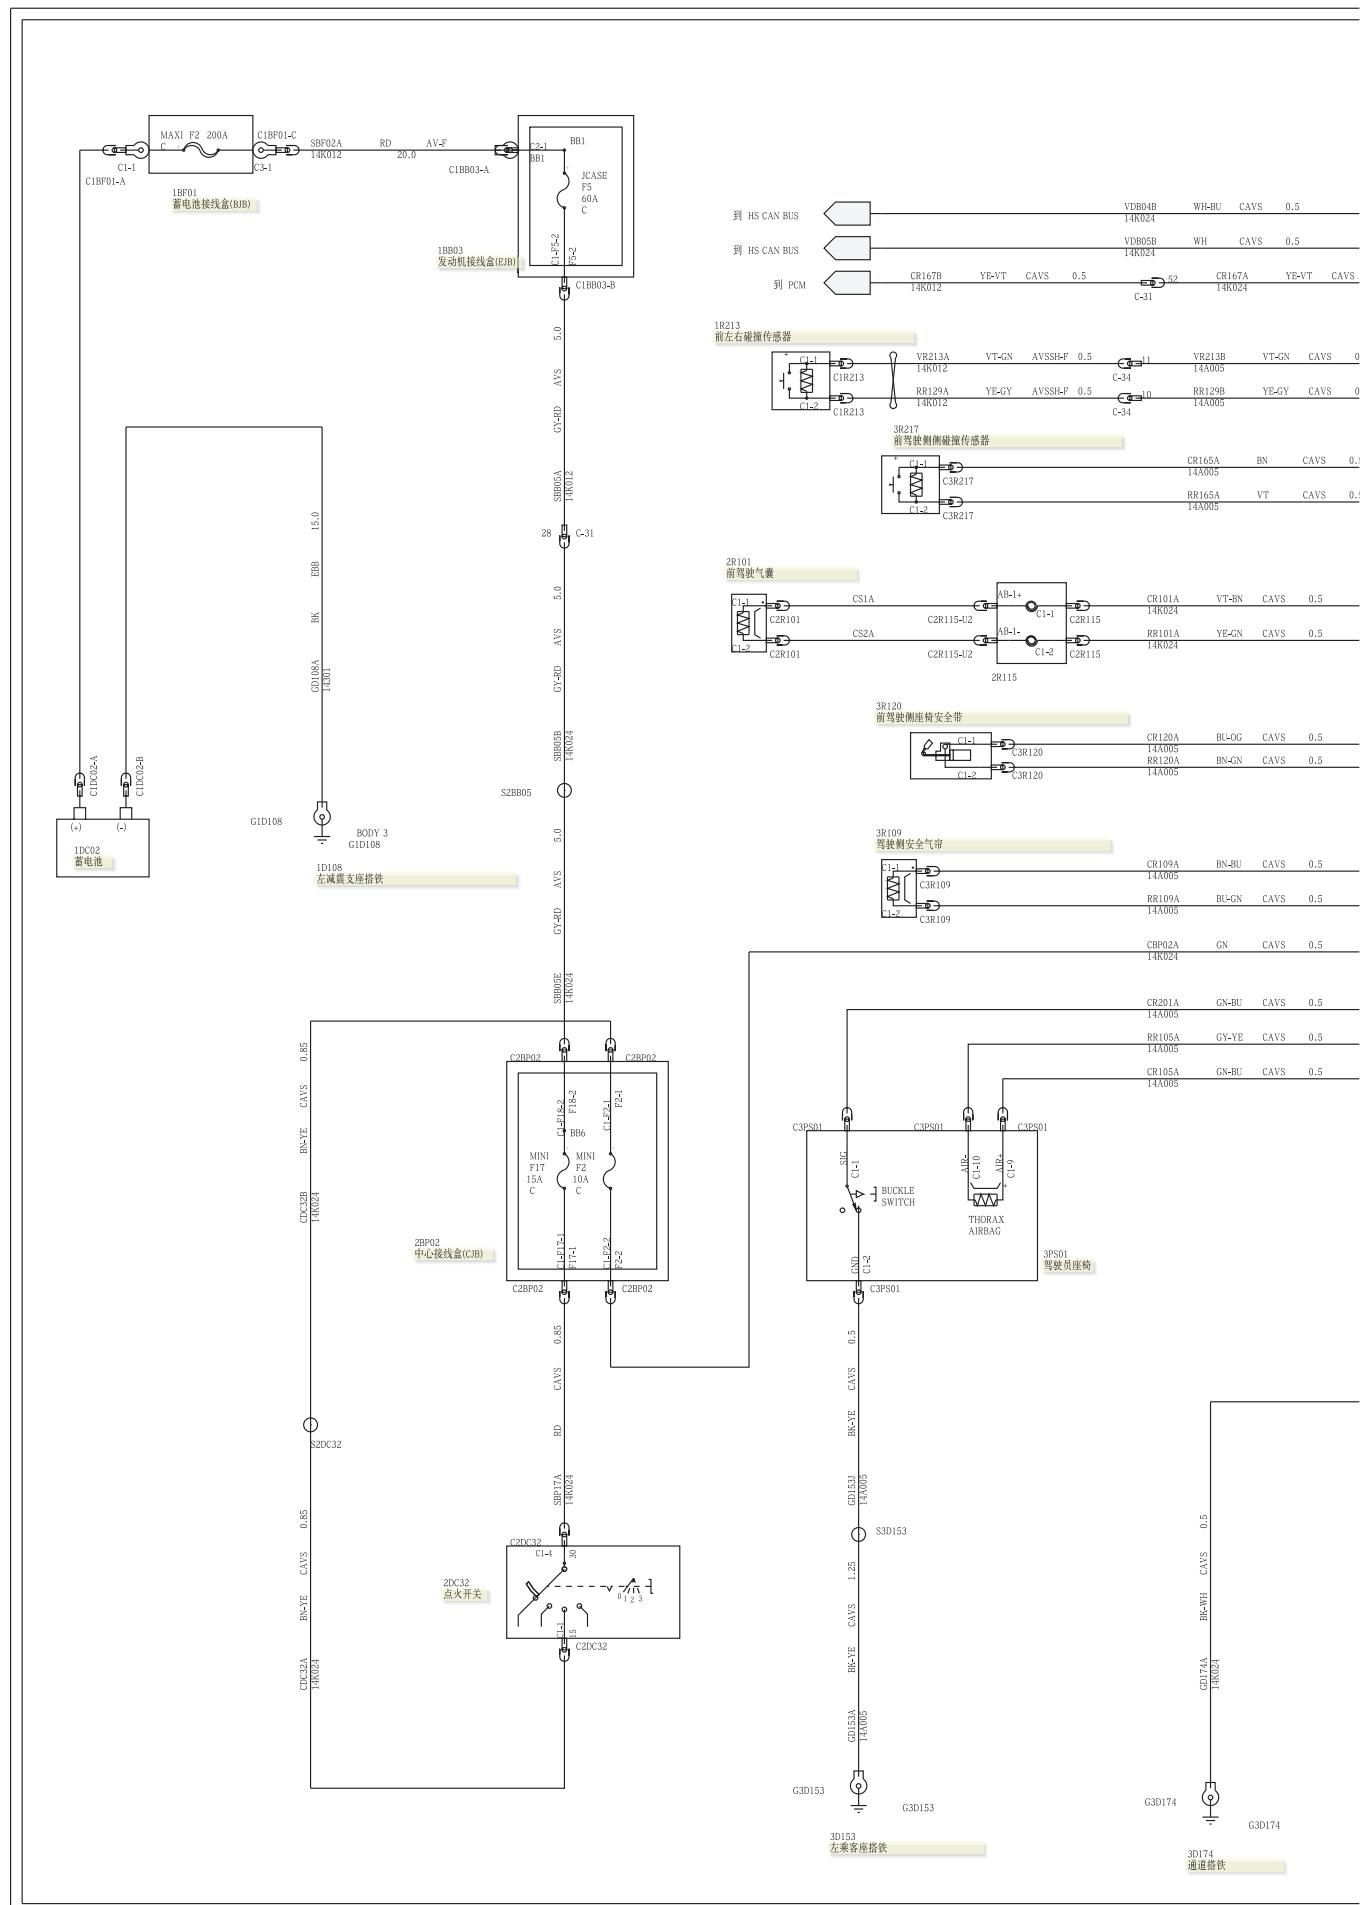


2008.75 Fiesta (G1102908)

501-20B-3 气囊和安全带预张紧器

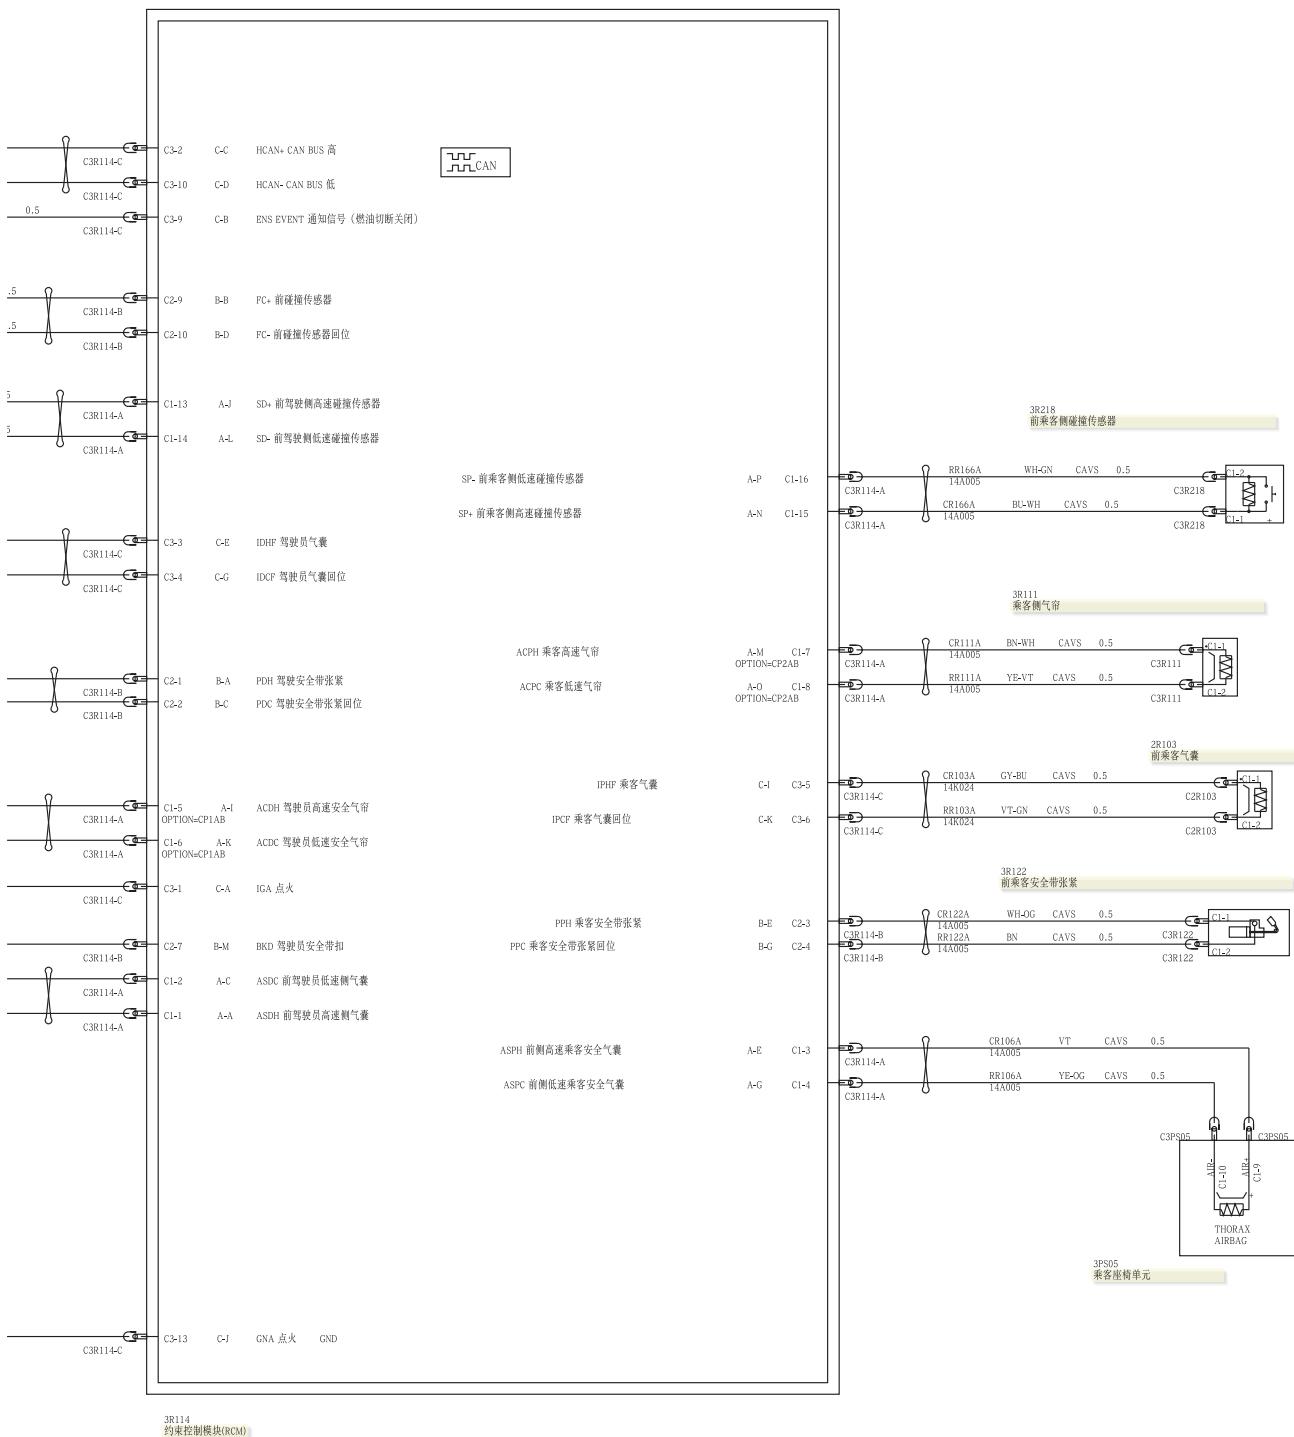

501-20B-4 时钟弹簧

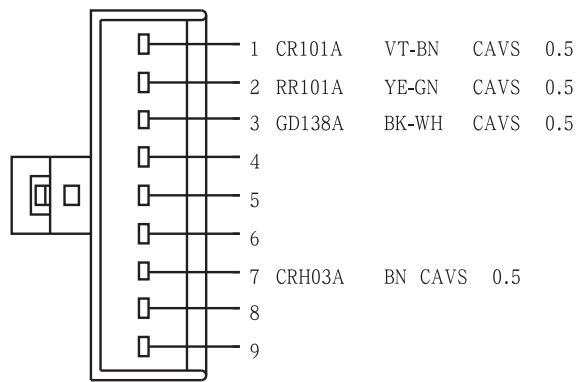

1S7T-14489-YA

C2R115

线束 14K024

501-20B-5 前撞击传感器




7L7T-14A464-EA

C1R213

线束 14K012

501-20B-6 乘员气囊模块

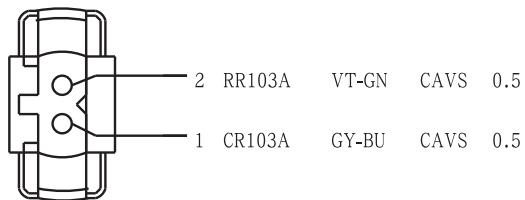


7M5T-14489-AA

C2R103

线束 14K024

501-20B-7 约束控制模块(RCM)——B

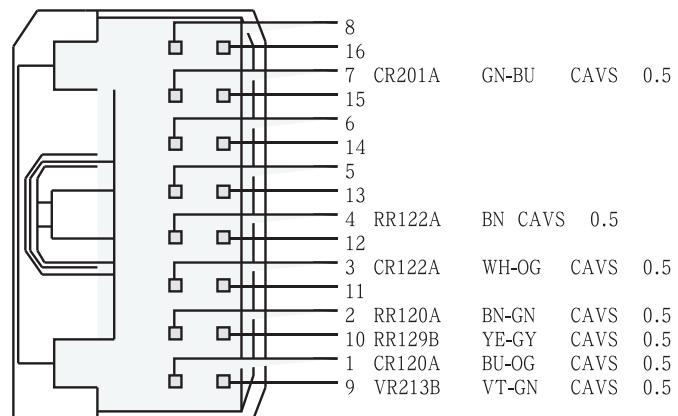


8V5T-14A464-CA

C3R114-B

线束 14A005

501-20B-8 约束控制模块(RCM)——C

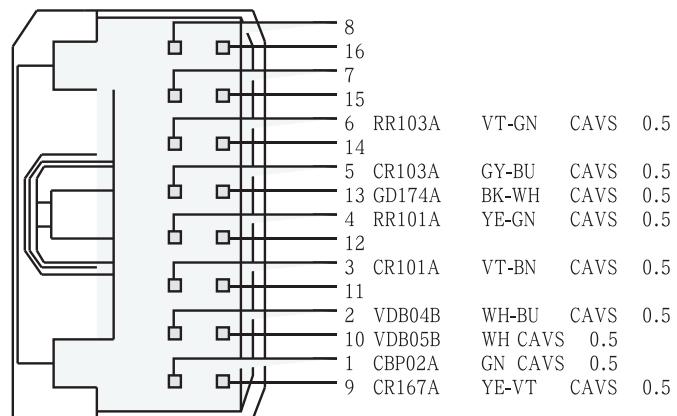

8V5T-14A464-DA

C3R114-C

线束 14K024