

 
发动机

 

基本零件号: 6L084

专用工具 / 通用设备





1. 注意: 拆卸前标注元件位置。




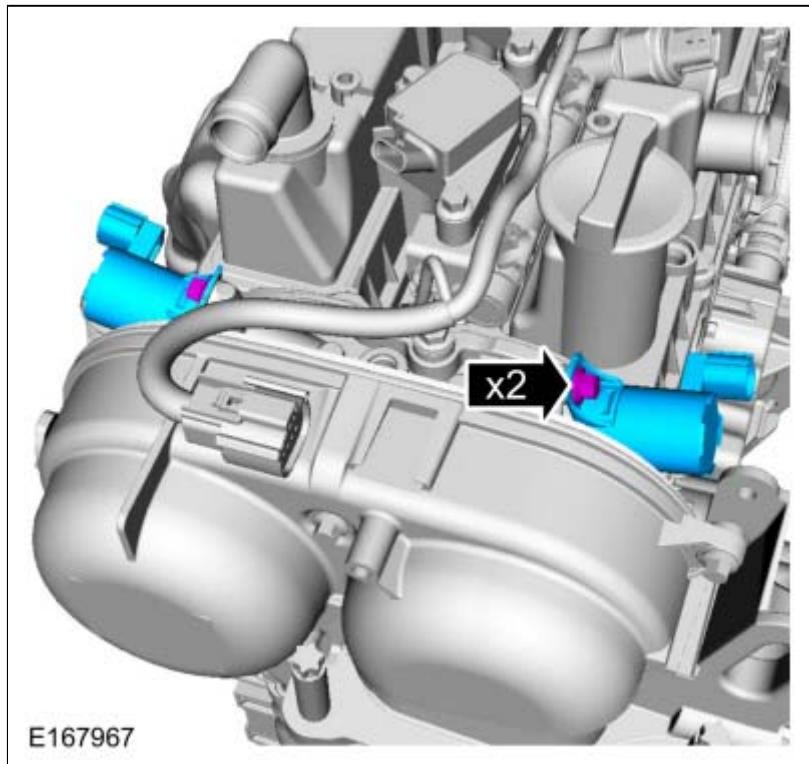

 

2.

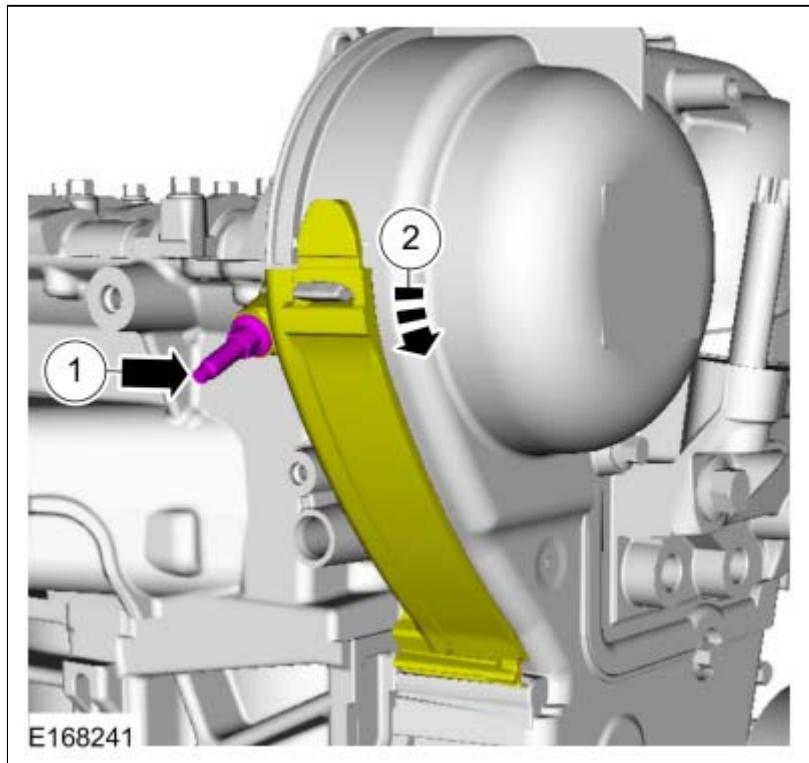



3.

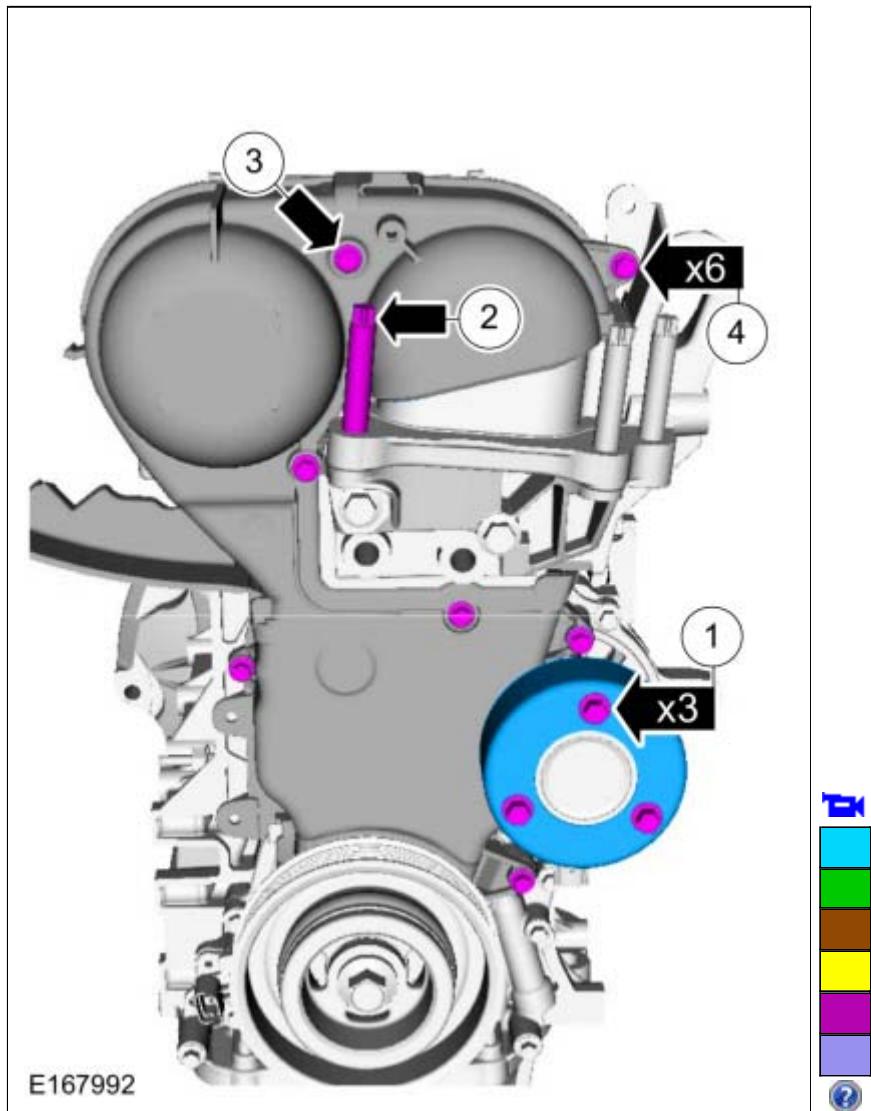

 

4. 注意：注意螺栓的不同长度。

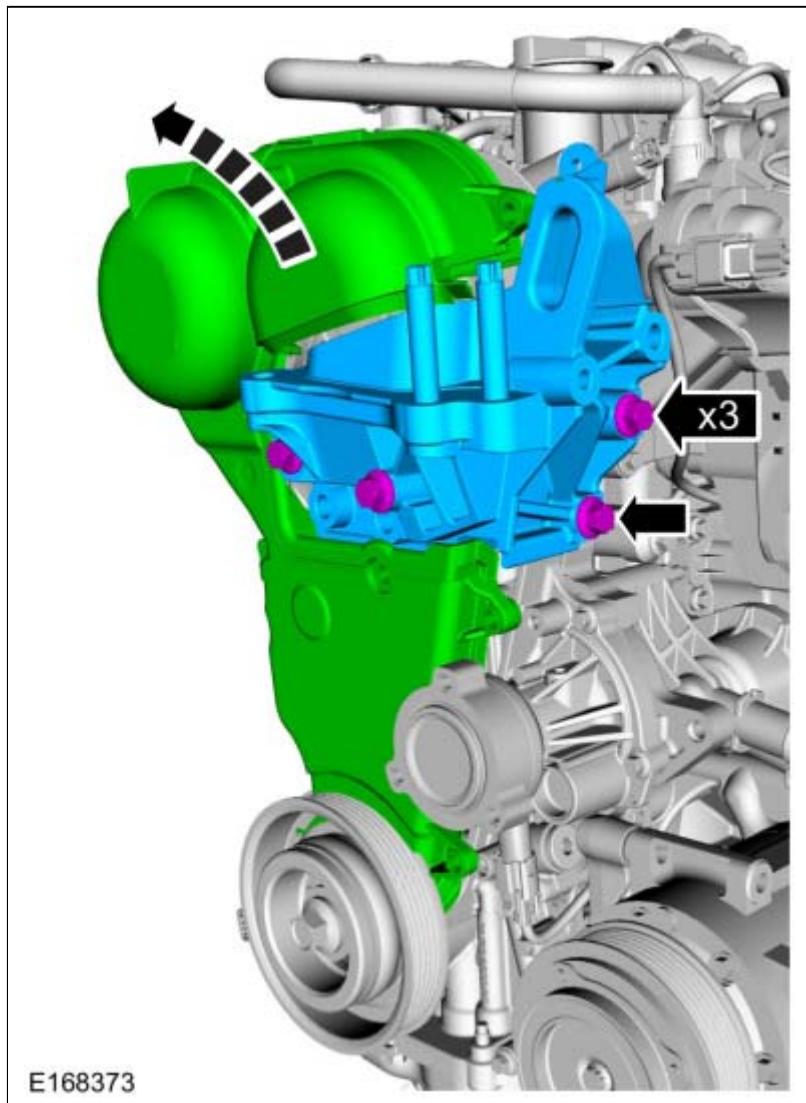

 

5.

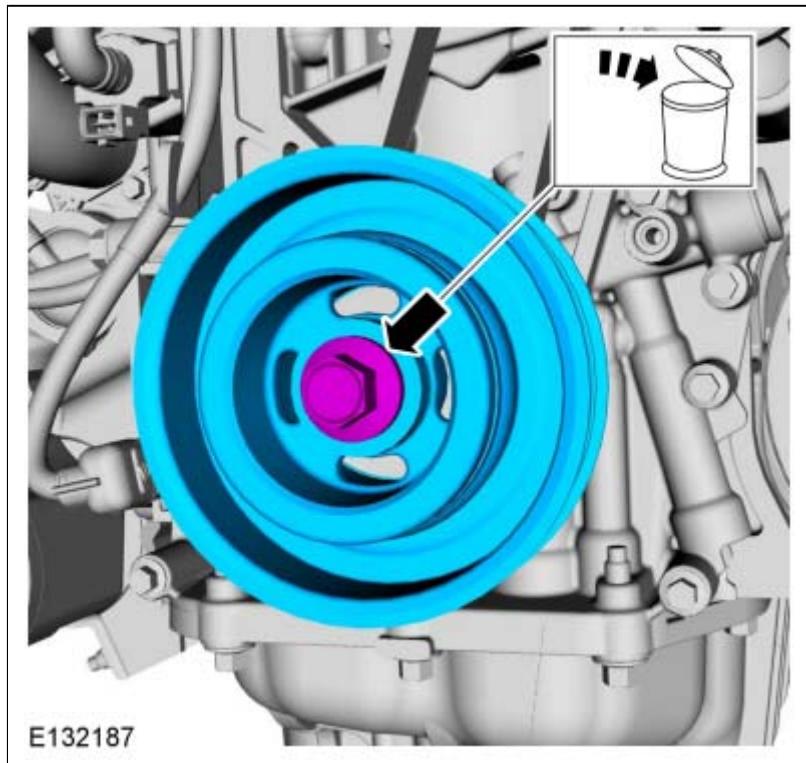

 
6.

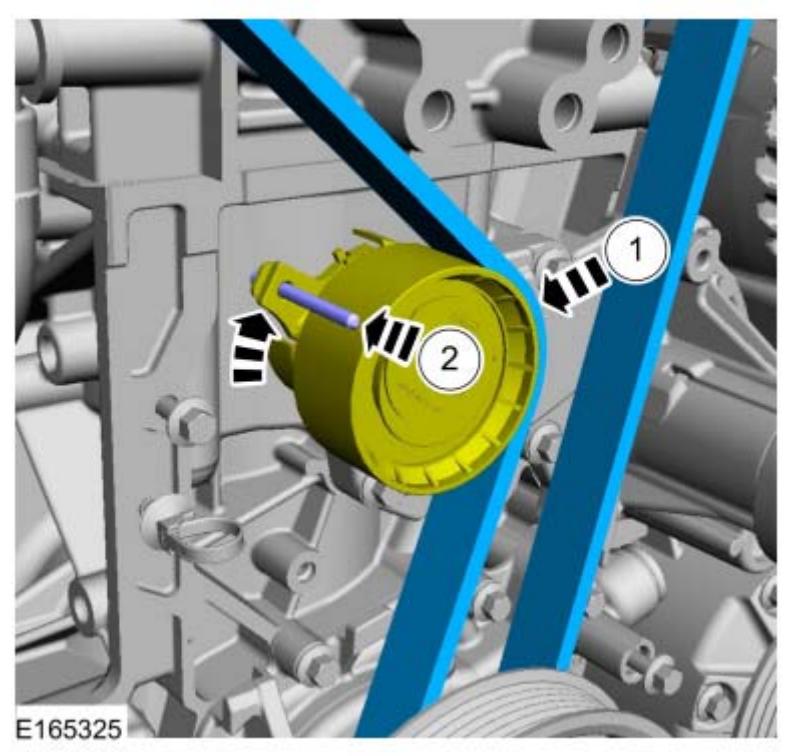


 7.

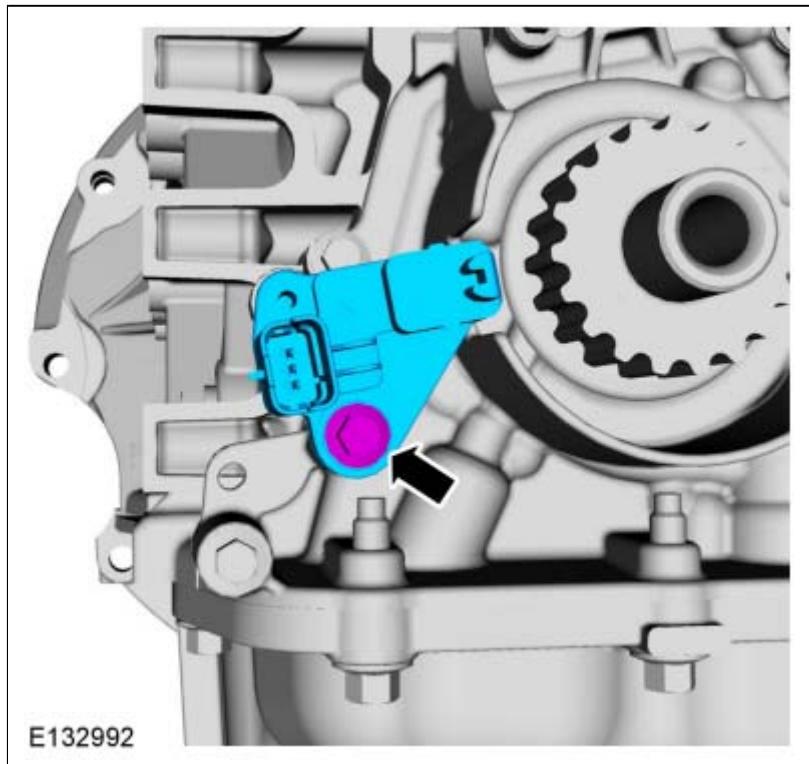

 
8.




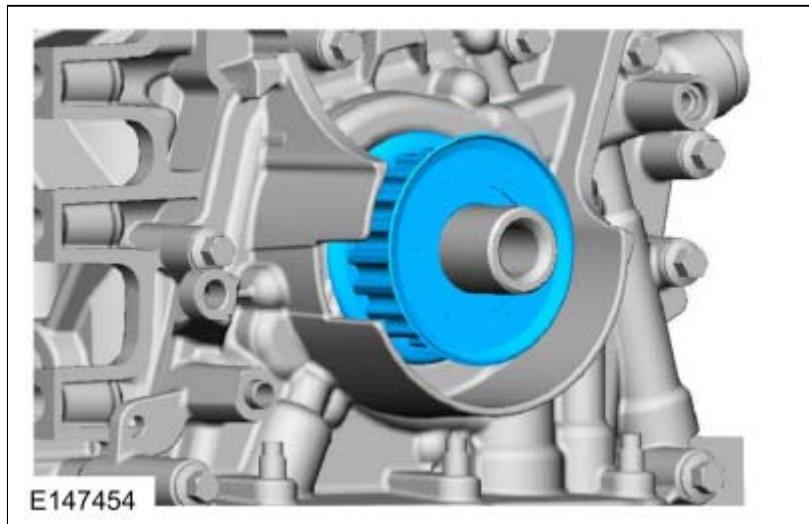


9. 警告： 张紧器位于弹簧张紧器下。 小心处理张紧器。 未遵循这些说明，可能会造成人身伤害。




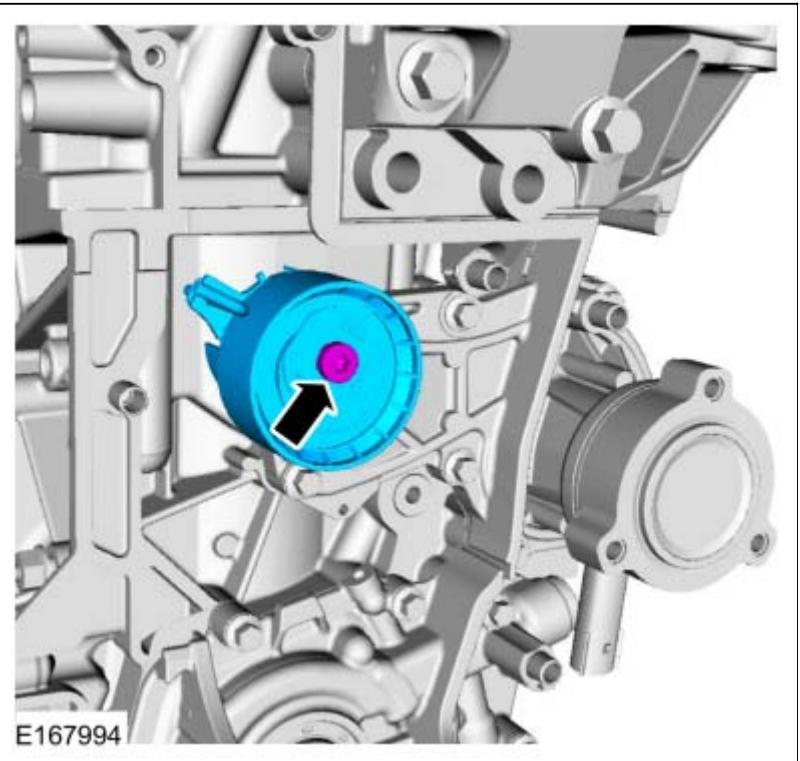

 
10.

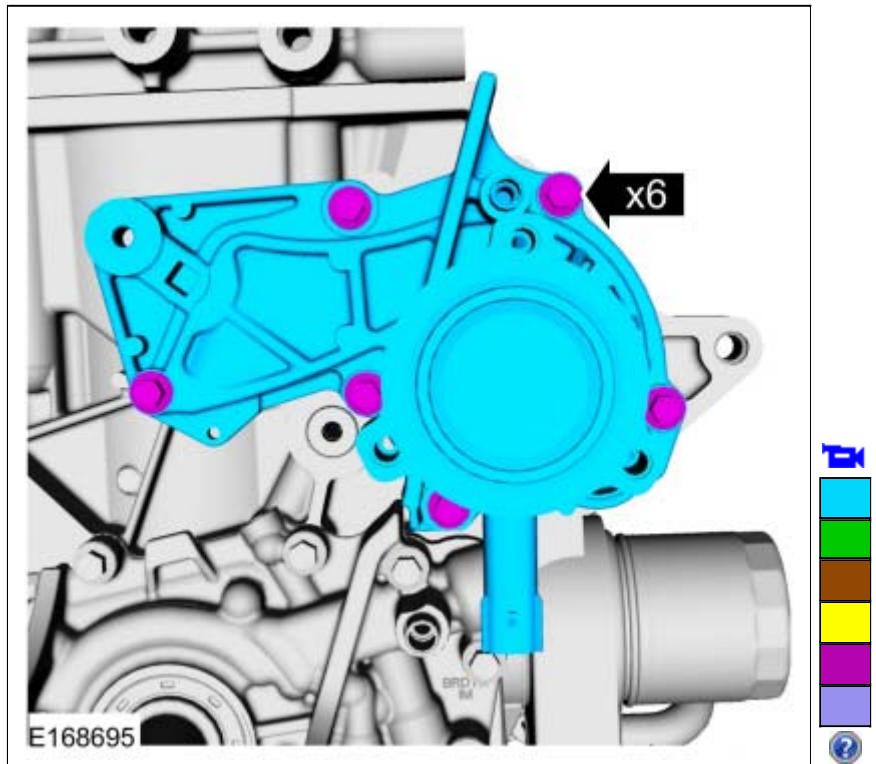



11.

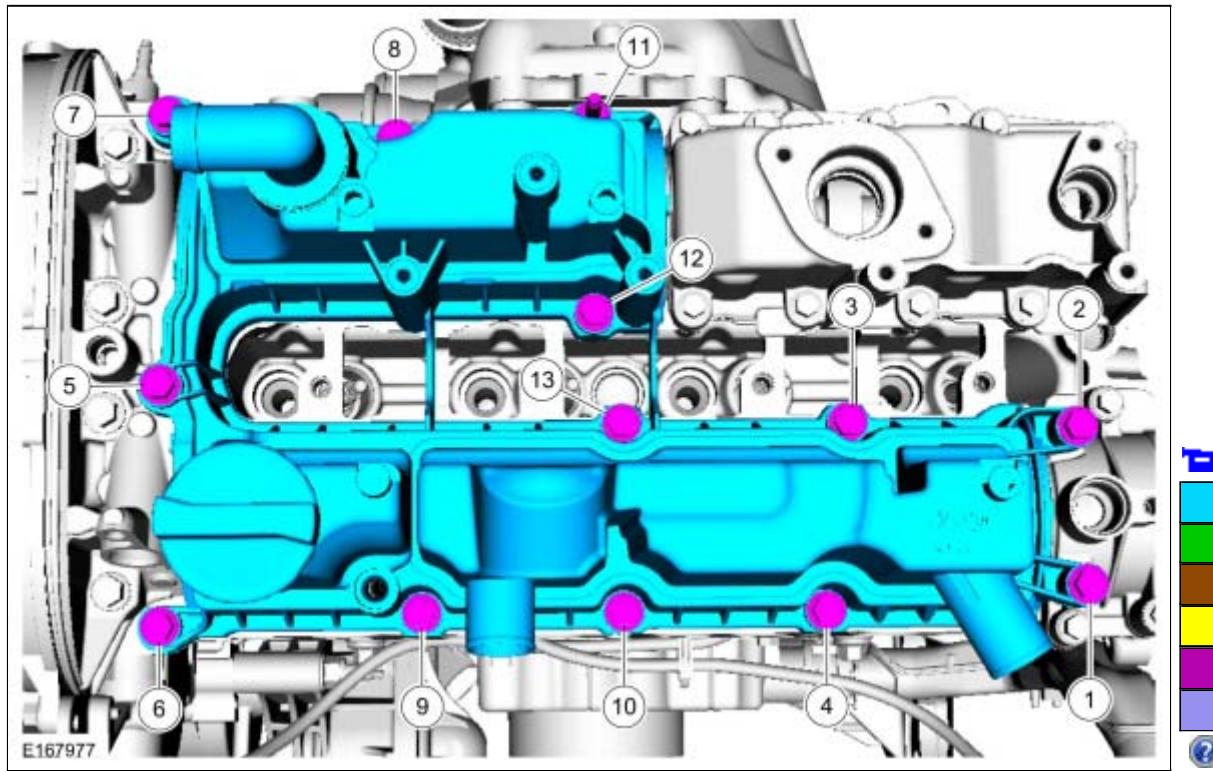



12.

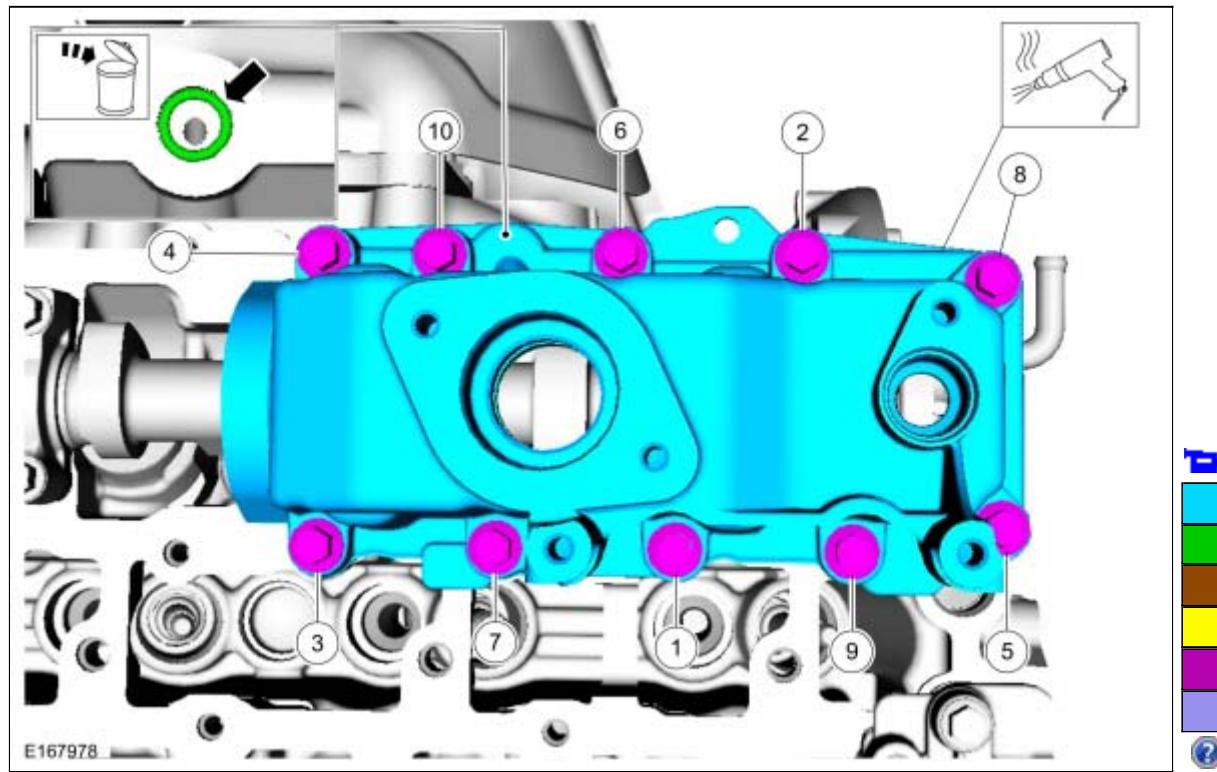

 
13.

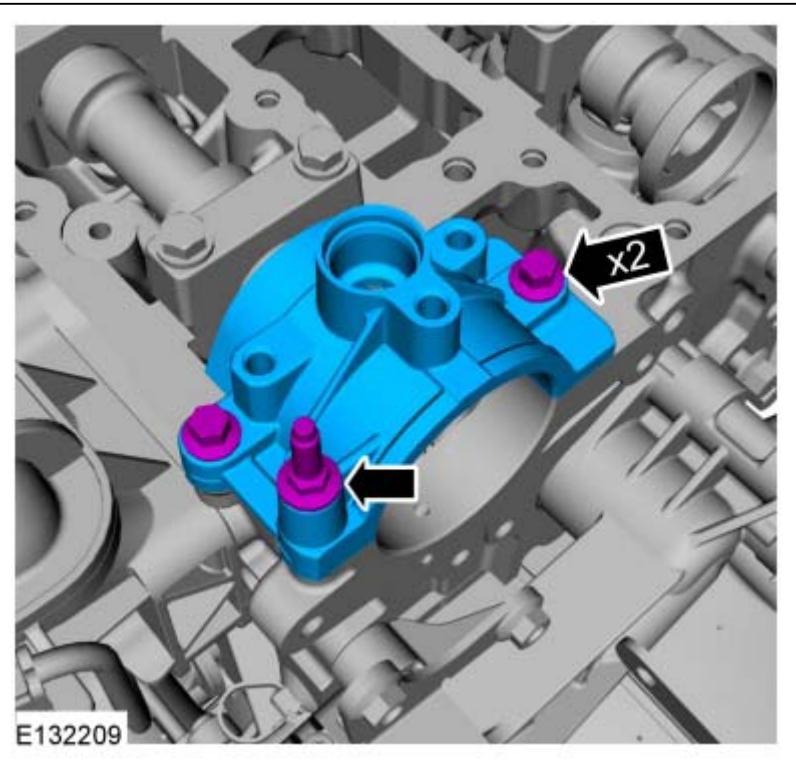

 14. 使用开口扳手防止部件转动。

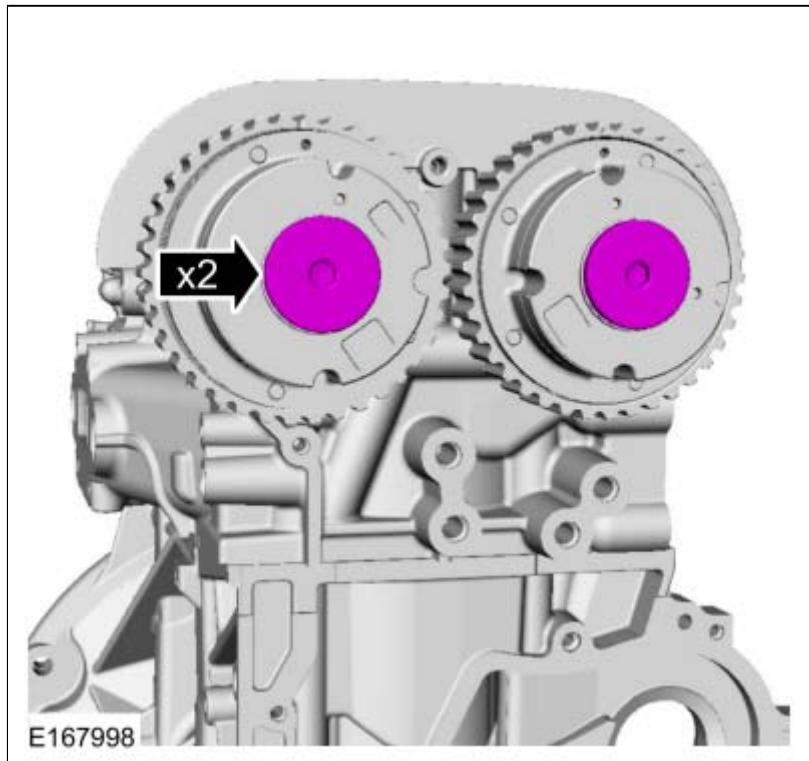


15. 使用开口扳手防止部件转动。

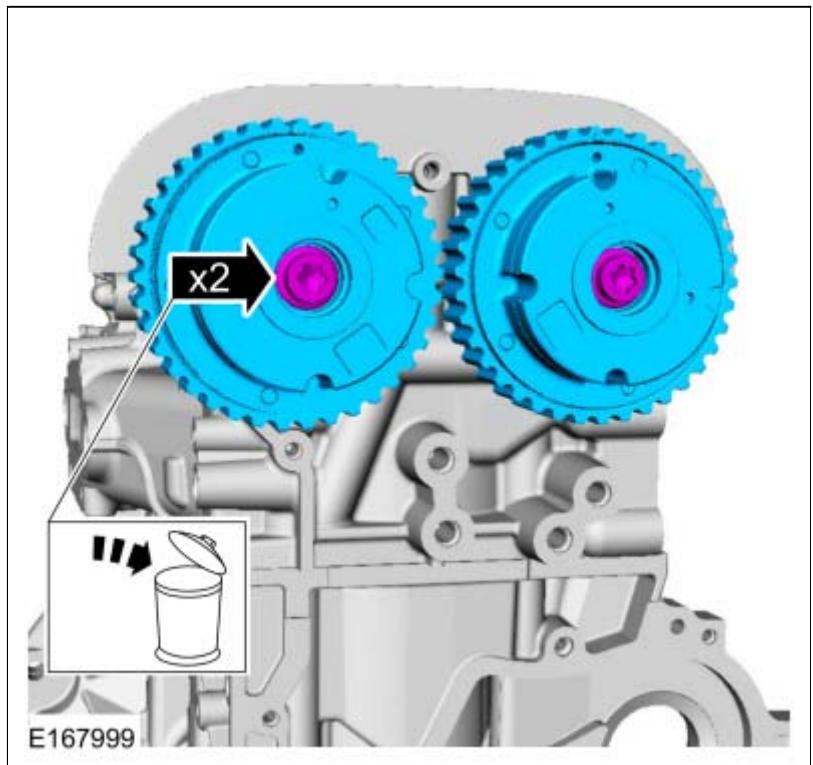


16. 用专用 工具: 303-293 曲轴油封拆卸器.



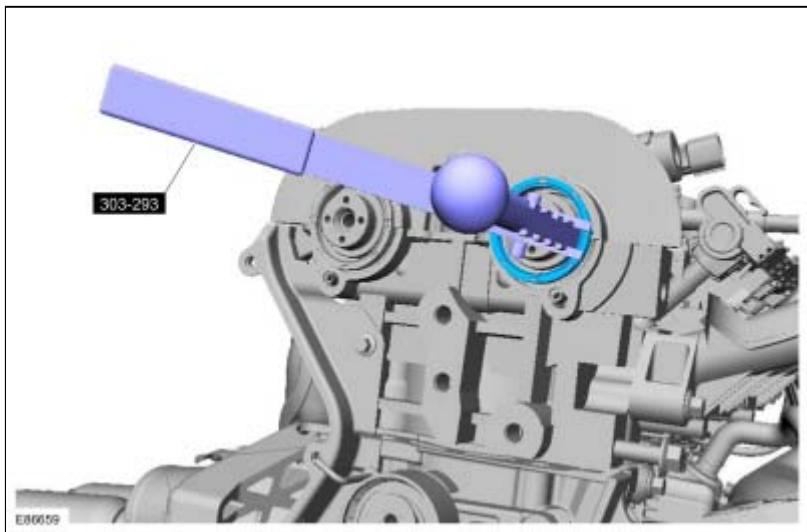



17.



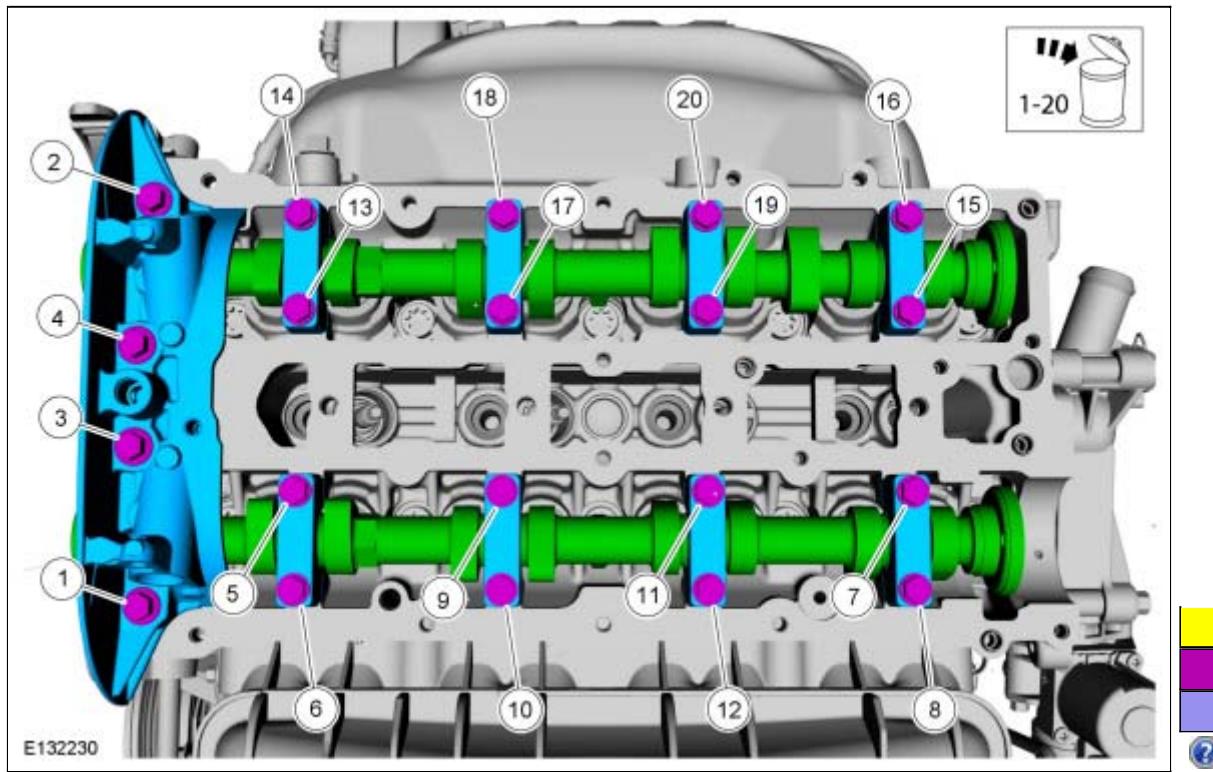


 18.




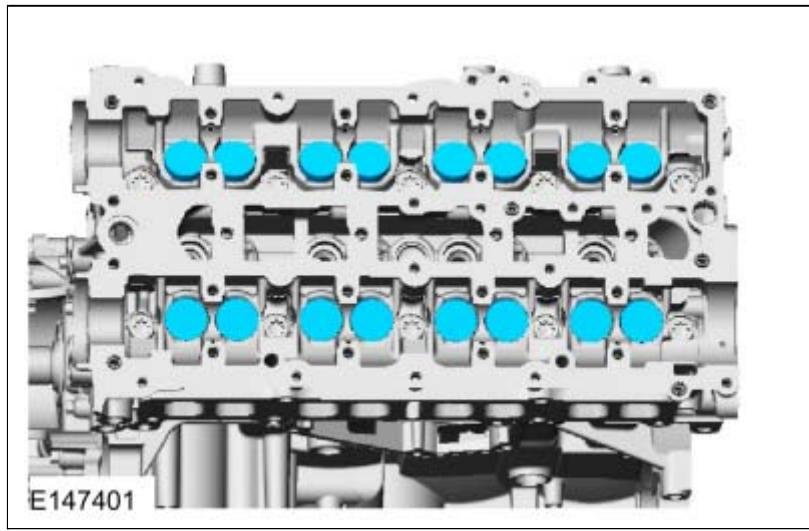

19.

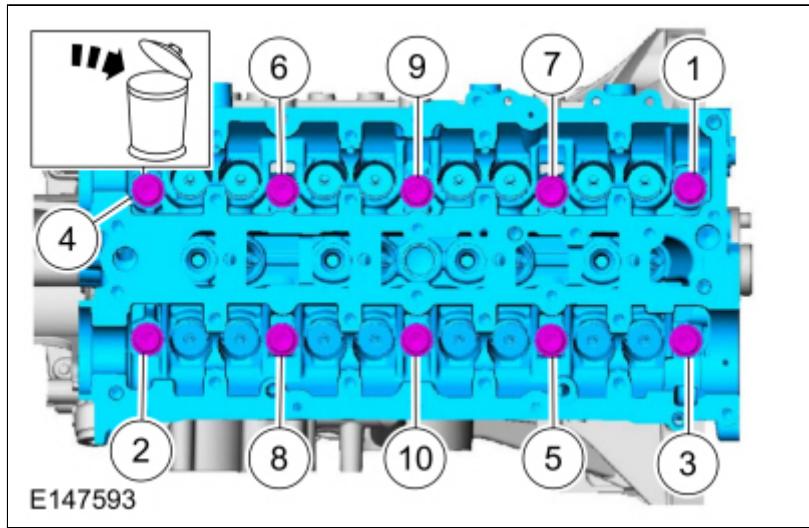

20. 注意：准备收集溢出的液体。

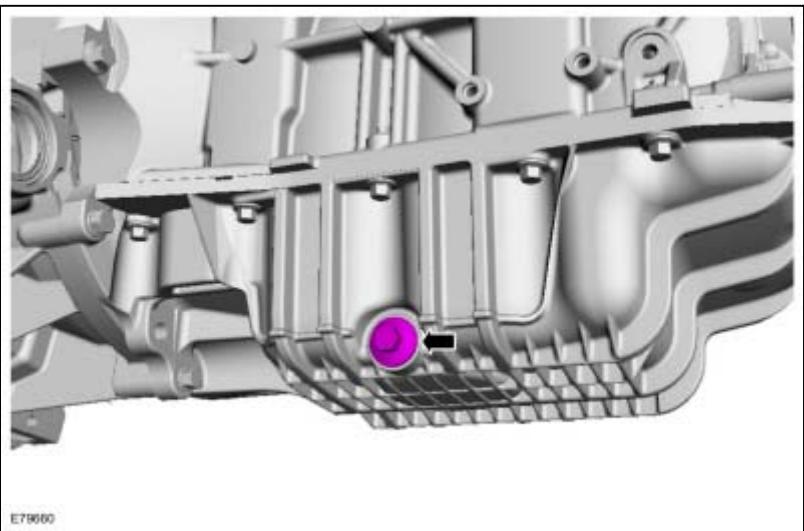


E79660




21.




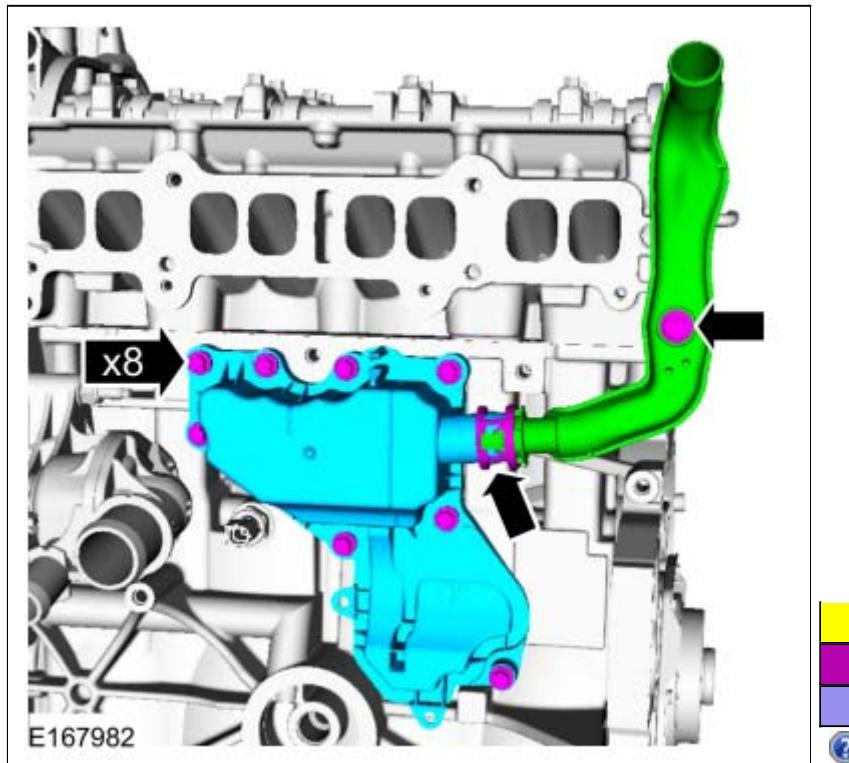


22.

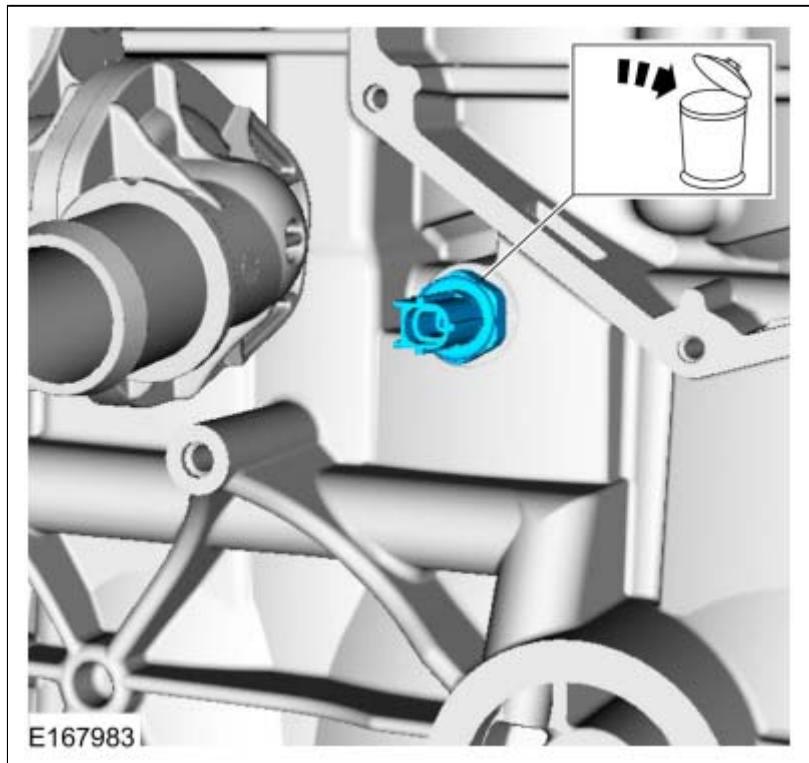


23.

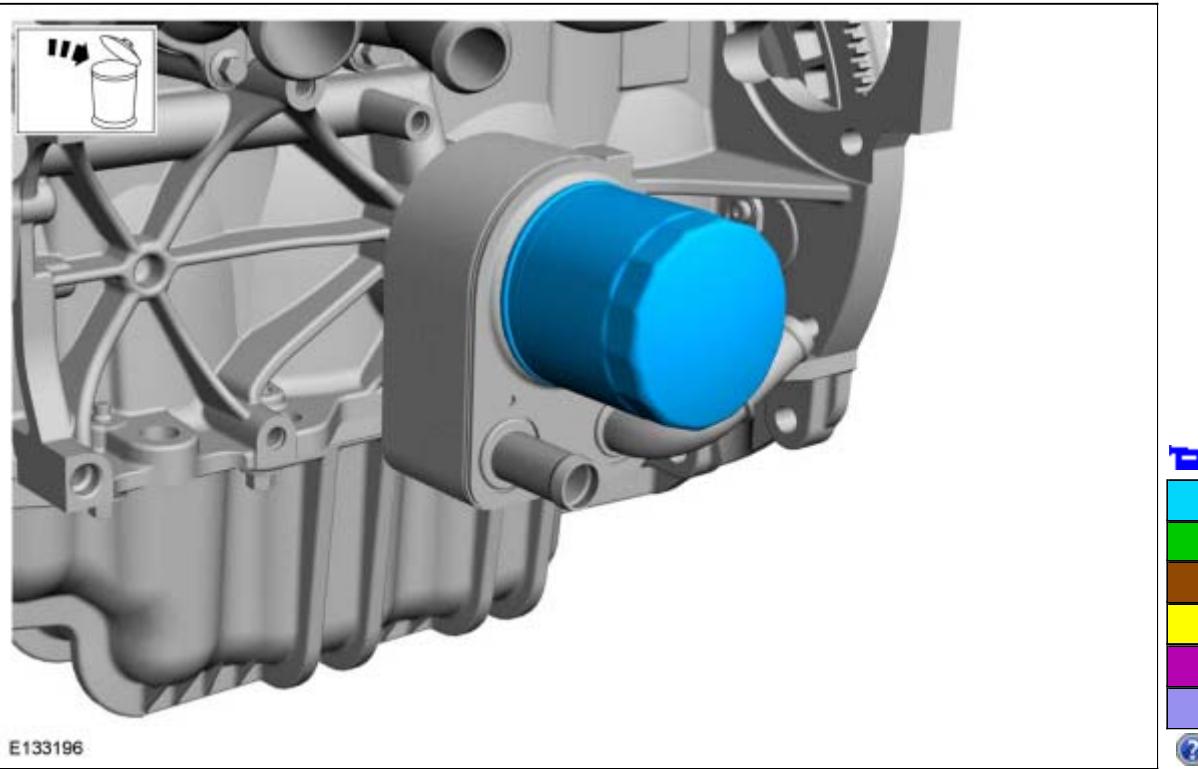

24.

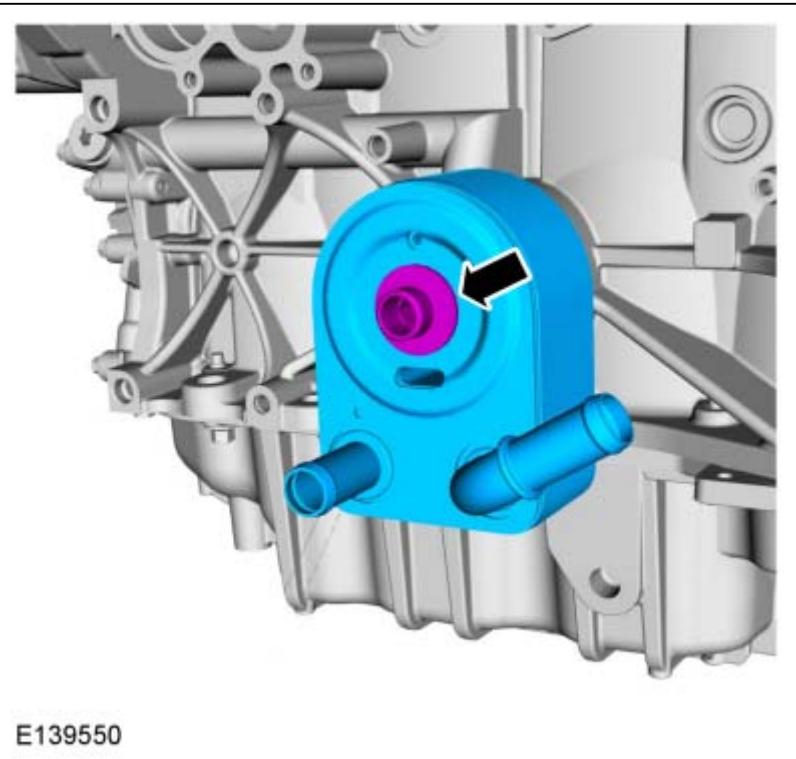


25. 用专用 工具: 303-293 曲轴油封拆卸器.

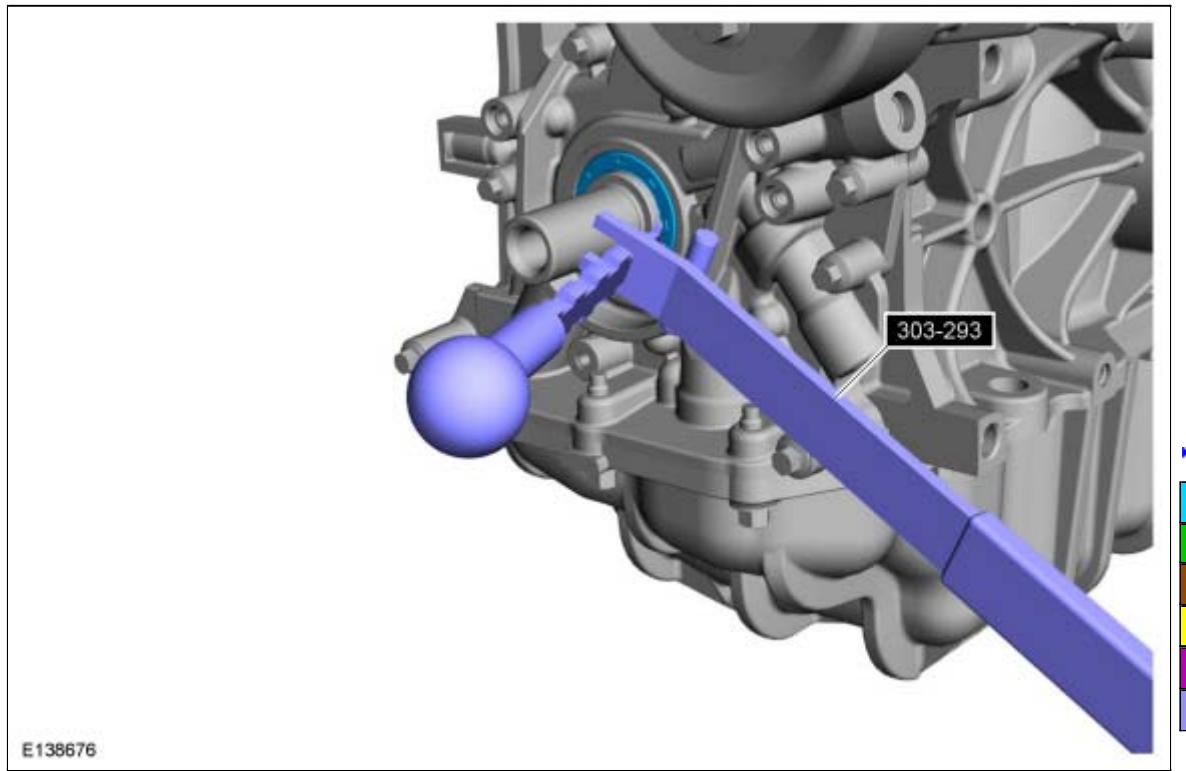


26.




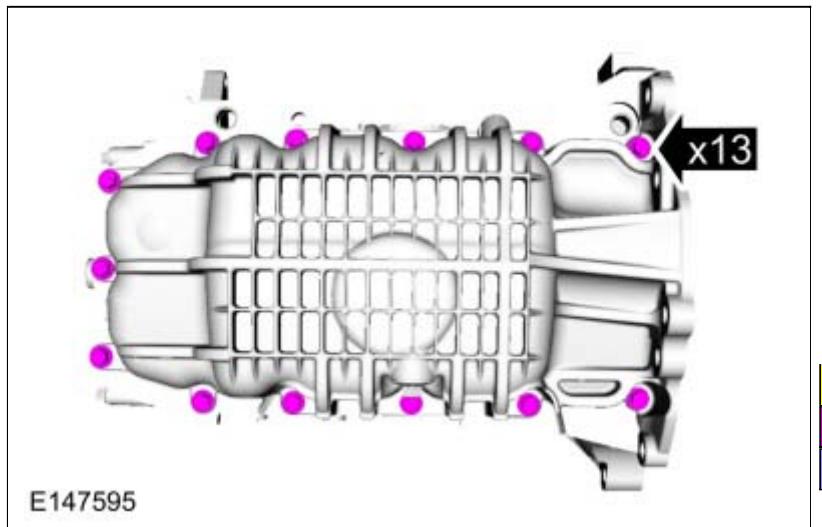


27.

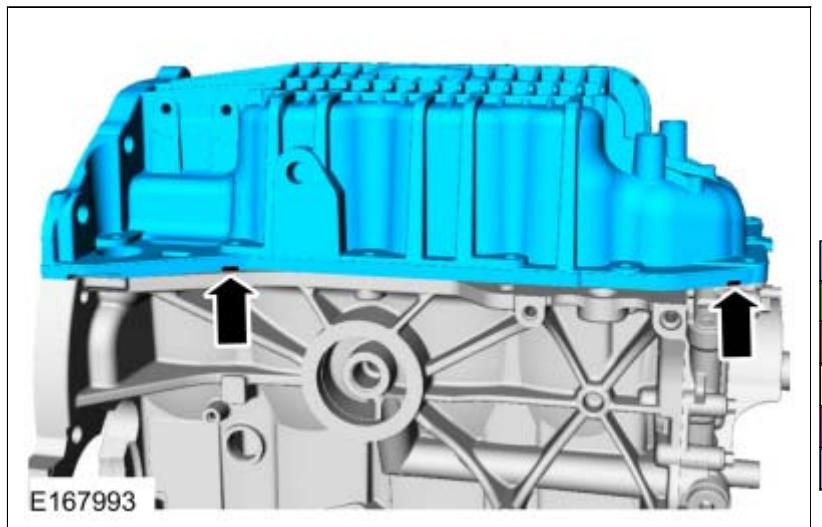


28.

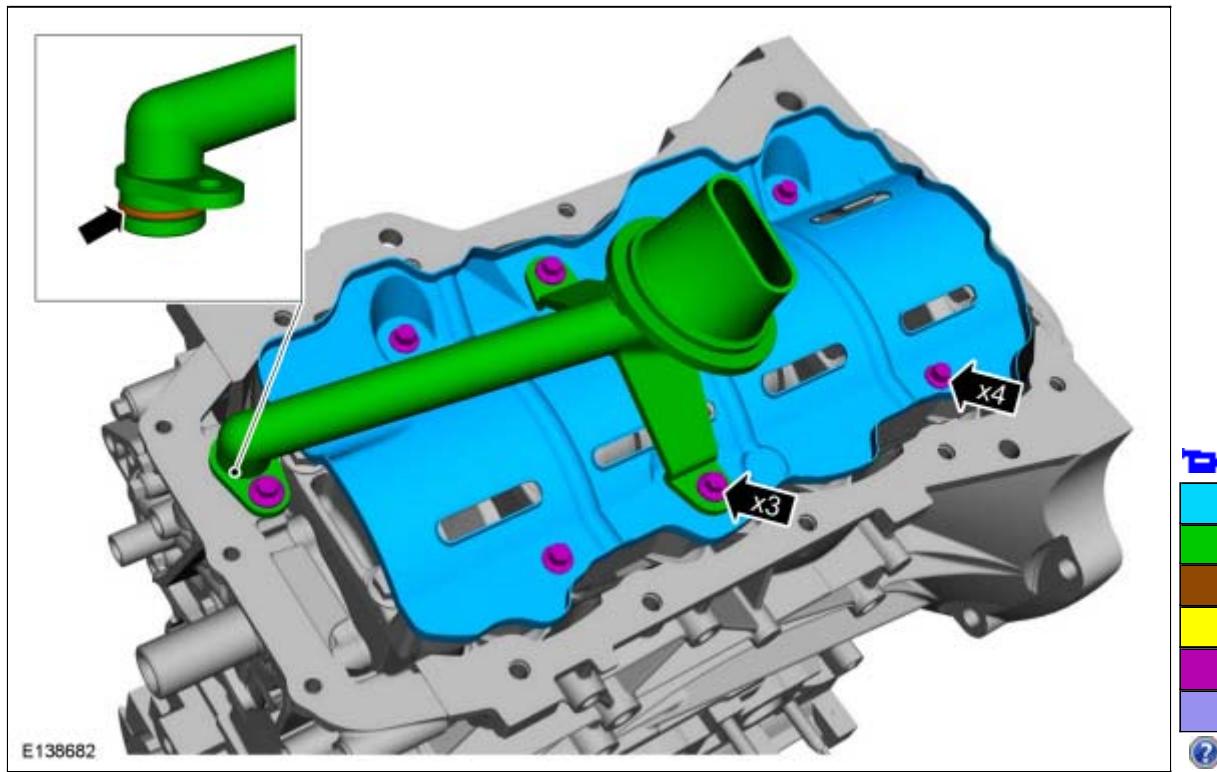

29. 注意：注意螺栓的不同长度。

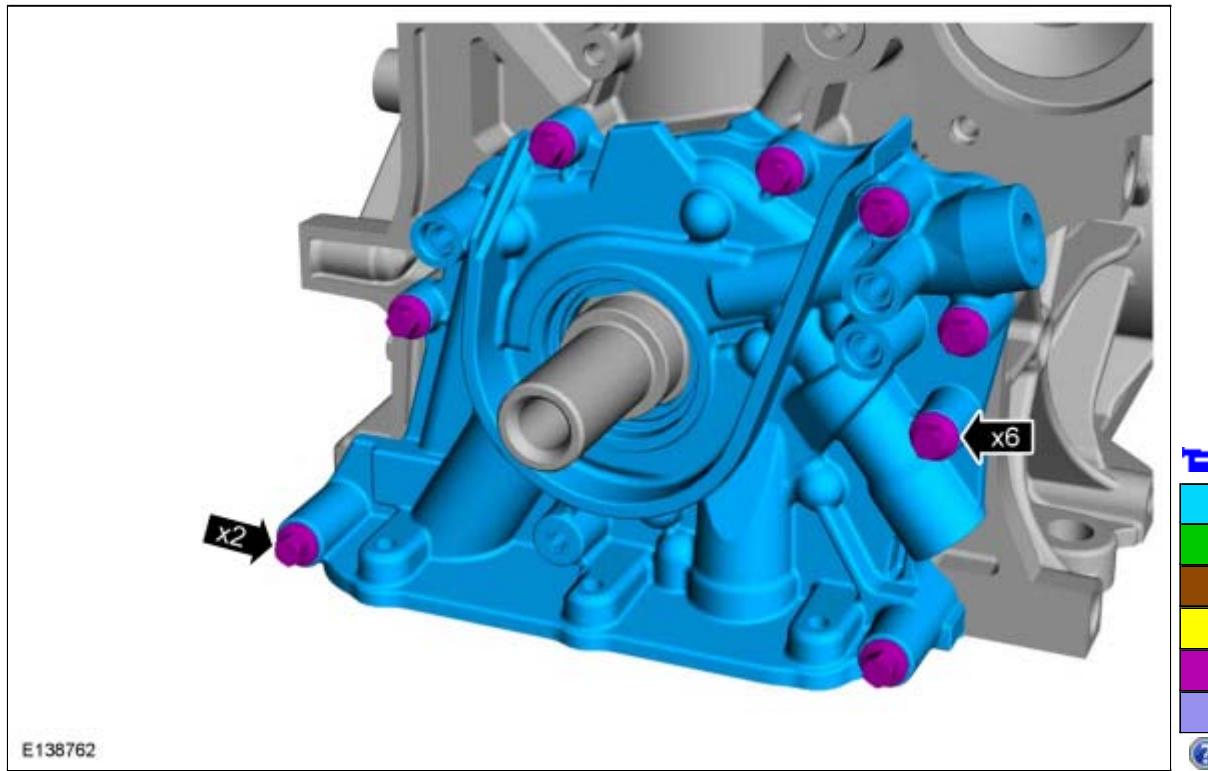

30.

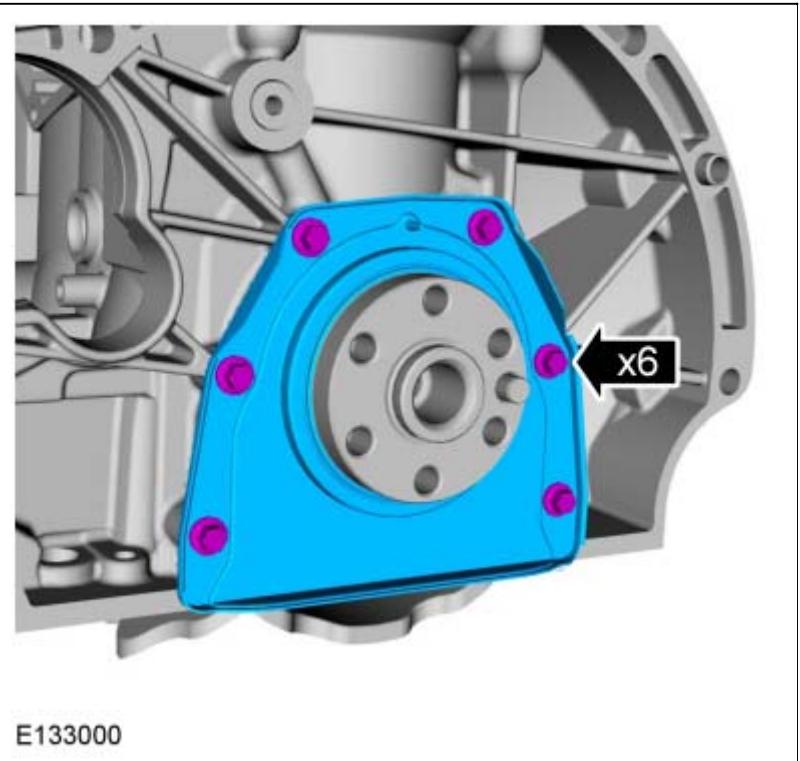

© 2016 Ford Motor Company
