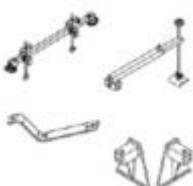


变速器支承绝缘体 - 2.0升 EcoBoost (184kW/250马力) - MI4

专用工具 / 通用设备

	303-050 (T70P-6000) 发动机吊架
 30329005A	303-290-05A 303-290A适配器
 E155156	303-290B-19 303-290B用适配器
	303-F072 发动机支承杆


材料

名称	规格

拆卸

⚠ 警告： 执行本节维修程序之前，参阅第100-00节一般信息中的安全警告。 如未遵循此说明，将引起严重的人身伤害。


1. 参阅：[健康安全预防措施](#) (100-00 一般信息, 说明和操作).
2. 参阅：[顶升和提升 - 概述](#) (100-02 顶升和提升, 说明和操作).
3. 拆卸以下项目：
 1. 参阅：[空气滤清器 \(303-12B 进气分配和过滤 - 2.0升 EcoBoost \(149kW/203马力\) - MI4/2.0升 EcoBoost \(177kW/240马力\) - MI4, 拆卸和安装\).](#)
 2. 参阅：[空气滤清器排气管 \(303-12B 进气分配和过滤 - 2.0升 EcoBoost \(149kW/203马力\) - MI4/2.0升 EcoBoost \(177kW/240马力\) - MI4, 拆卸和安装\).](#)
 3. 参阅：[蓄电池座盘 \(414-01 蓄电池、座架和电缆, 拆卸和安装\).](#)
- 4.

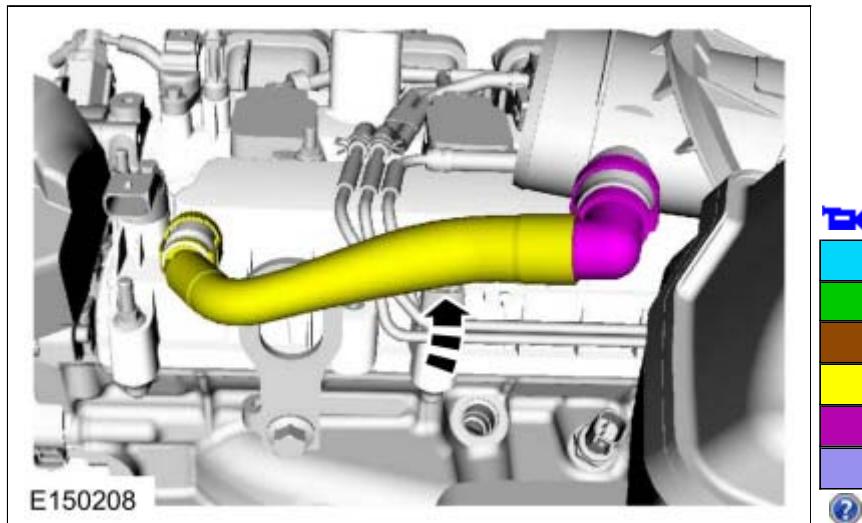

5. 注意：混合动力发动机显示，类似于汽油发动机。

此步骤专为未配备前吊耳的发动机。


使用专用维修工具: 303-050 (T70P-6000) 发动机吊架.

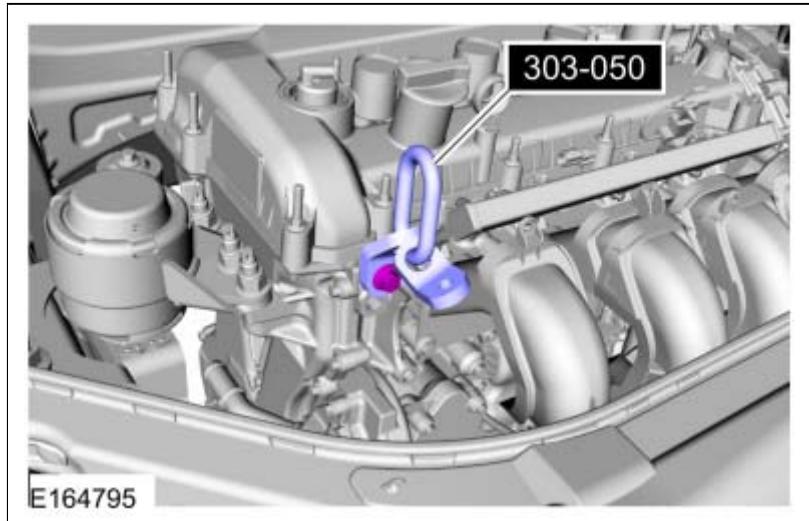


6. 注意：混合动力发动机显示，类似于汽油发动机。

此步骤专为未配备前吊耳的发动机。

 

使用专用维修工具: 303-050 (T70P-6000) 发动机吊架.



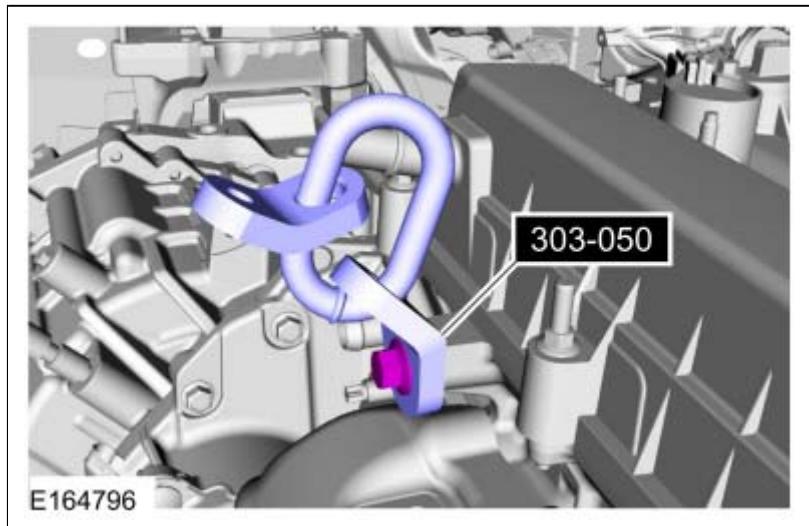

 
7. 使用专用维修工具: 303-F072 发动机支承杆., 303-290-05A 303-290A适配器., 303-290B-19 303-290B用适配器.



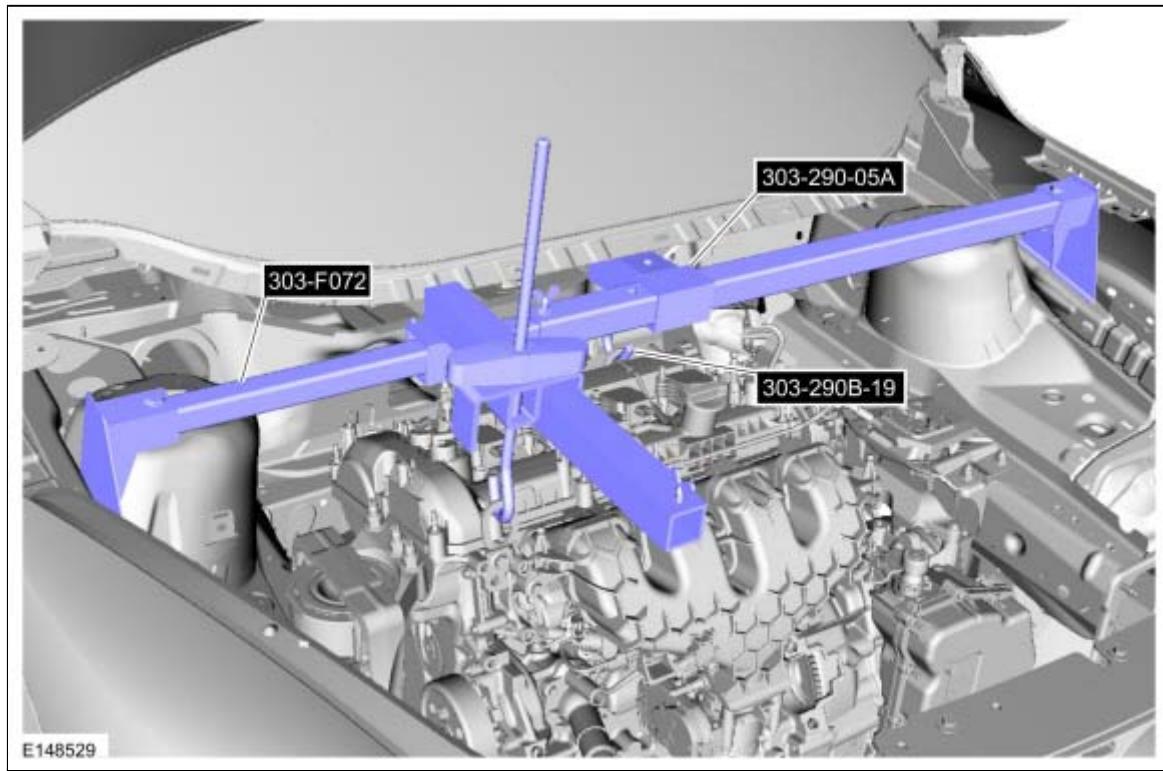

8.



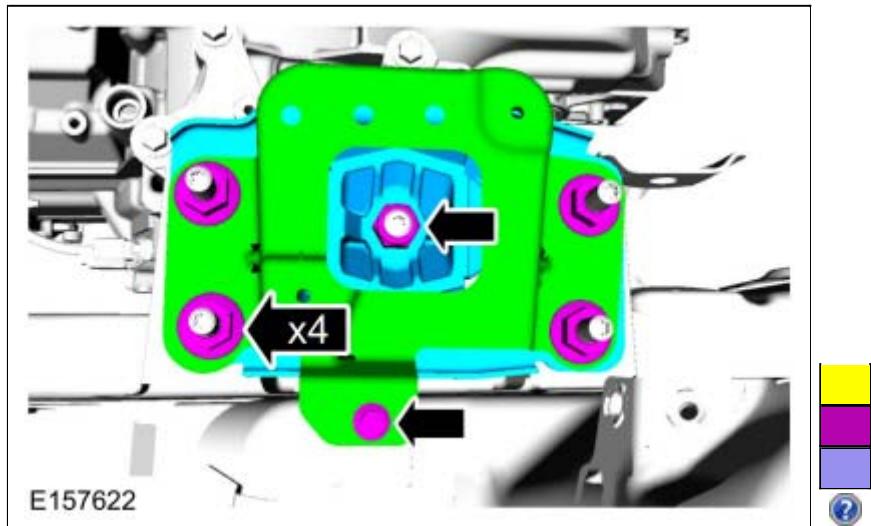


安装


1.

1. 材料: 螺纹固定黏合剂 (WSK-M2G351-A6)
扭矩: 80 Nm
2. 扭矩: 25 Nm
3. 材料: 螺纹固定黏合剂 (WSK-M2G351-A6)
扭矩: 133 Nm



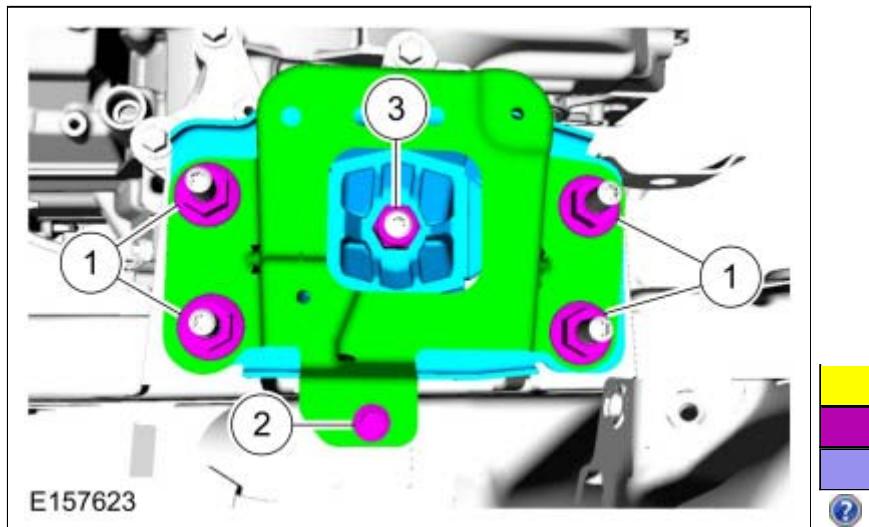

2.

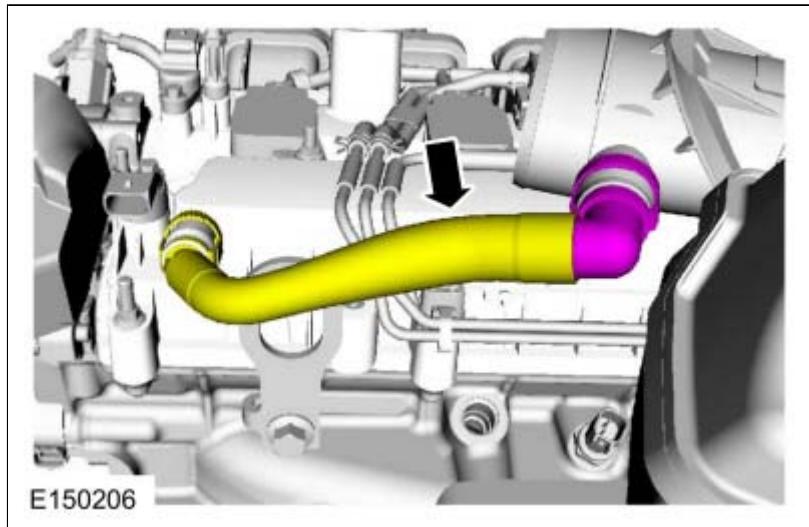

3. 安装以下项目：

1. 参阅: [蓄电池座盘](#) (414-01 蓄电池、座架和电缆, 拆卸和安装).
2. 参阅: [空气滤清器](#) (303-12B 进气分配和过滤 - 2.0升 EcoBoost (149kW/203马力) - MI4/2.0升 EcoBoost (177kW/240马力) - MI4, 拆卸和安装).
3. 参阅: [空气滤清器排气管](#) (303-12B 进气分配和过滤 - 2.0升 EcoBoost (149kW/203马力) - MI4/2.0升 EcoBoost (177kW/240马力) - MI4, 拆卸和安装).