


307-01B 自动变速器 - 6速自动变速器 6F55 组件的解体 and 组装


2015 - 2016 Taurus

变矩器壳体

基本零件号: 7005


专用工具 / 通用设备

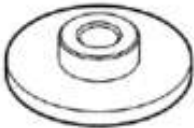 E142000	204-029 拉杆
 E216590	204-069 (T81P-1104-C) 前轮毂拆除/安装工具
 E133913	205-153 (T80T-4000-W) 把手
	307-541 分动器轴承安装工具
	307-576 轴承杯安装工具

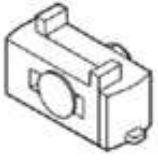
	307-577 分动器轴承座圈拆卸工具
	307-583 油塞密封件安装工具
	307-586 差速器轴承杯拆卸工具
	307-591 差速器/分动器轴承厚度计
塞尺	
液压	
拉拔器	
打孔器	

解体


1. 使用专用维修工具: 204-069 (T81P-1104-C) 前轮毂拆除/安装工具., 307-577 分动器轴承座圈拆卸工具.

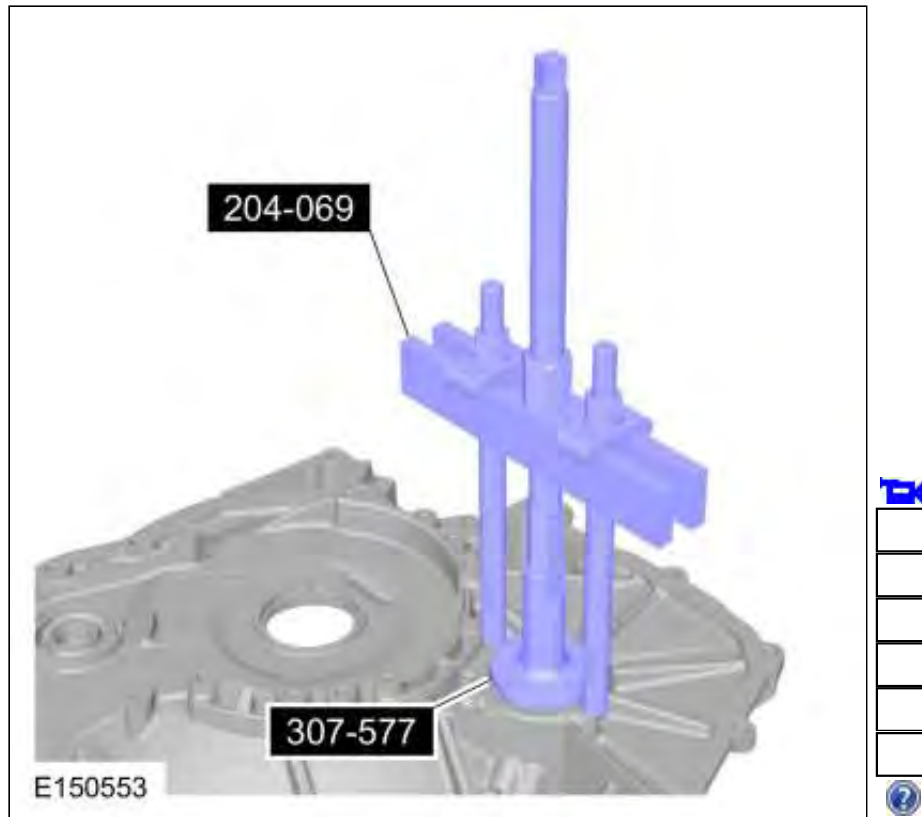


2.

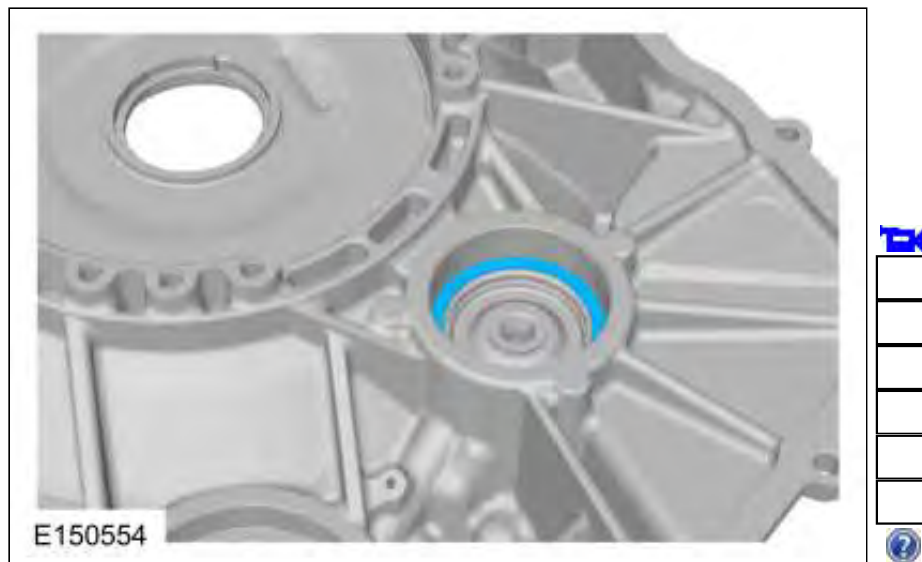

3. 通用设备: 打孔器

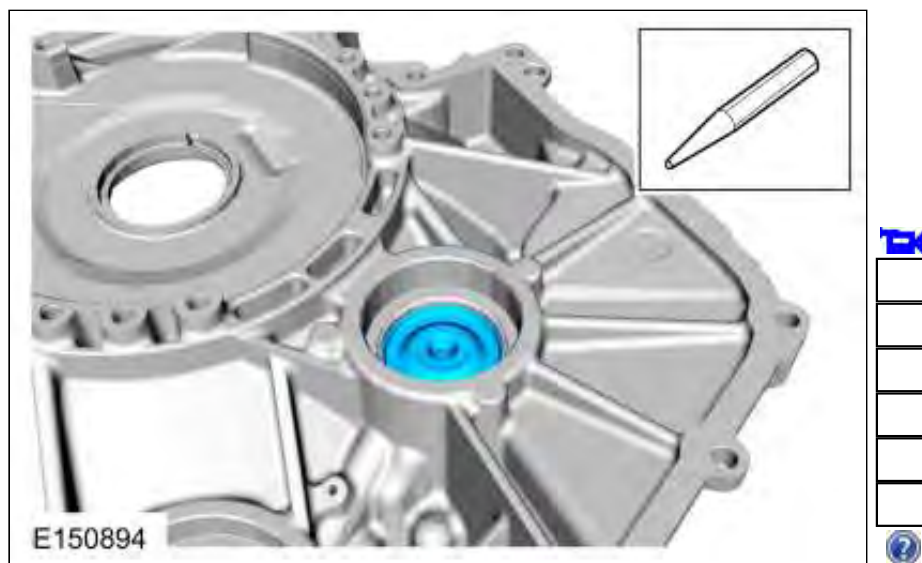


4. 通用设备: 拉拔器

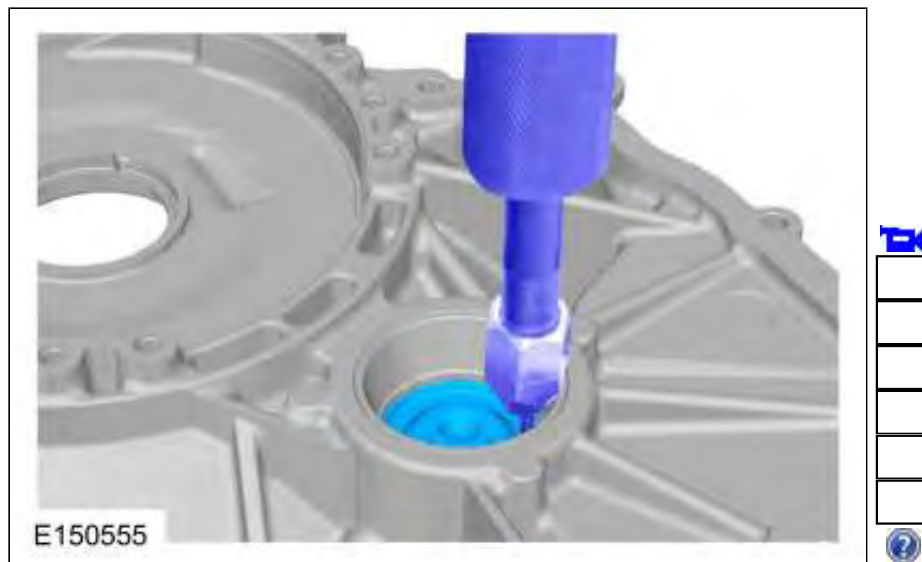

5.


1. 使用专用维修工具: **307-586** 差速器轴承杯拆卸工具.
- 2.
- 3.

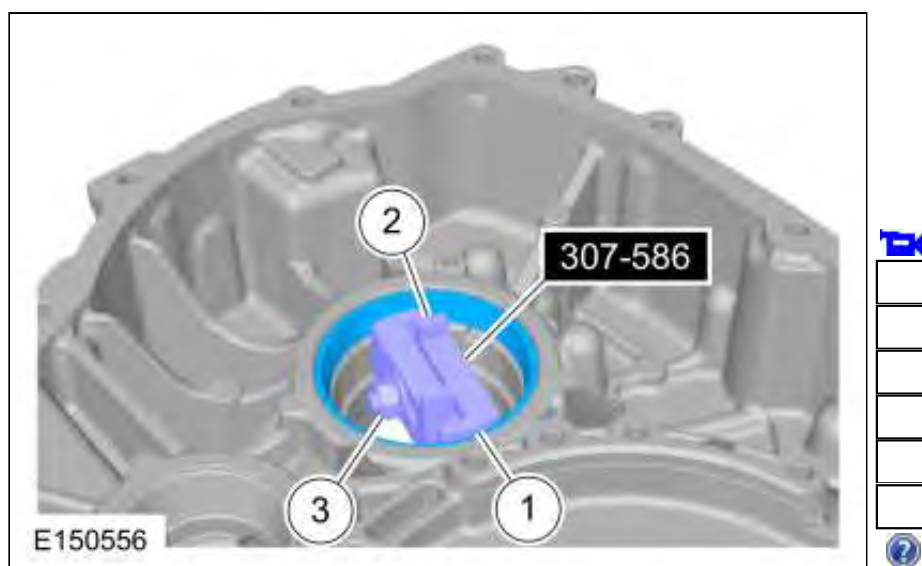

6. 通用设备: 液压




7.

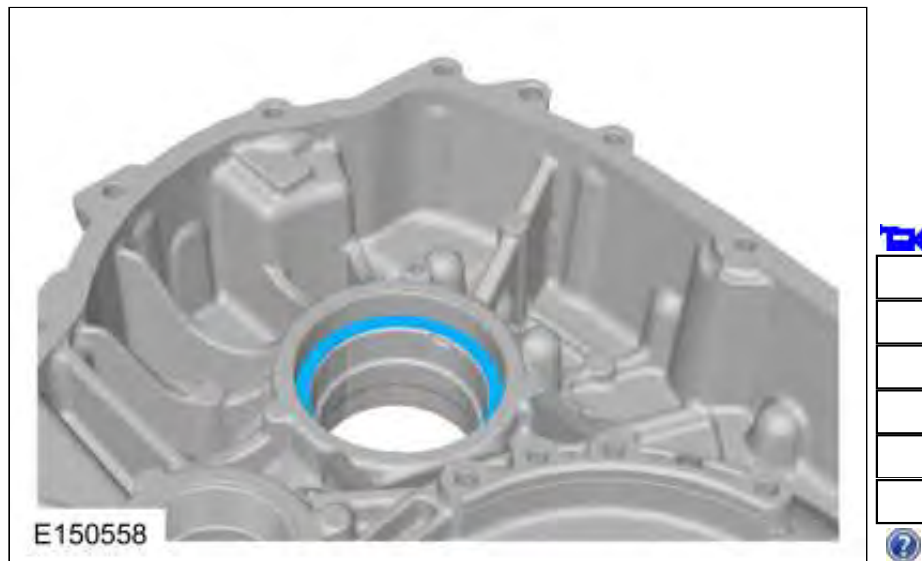


组装


1.

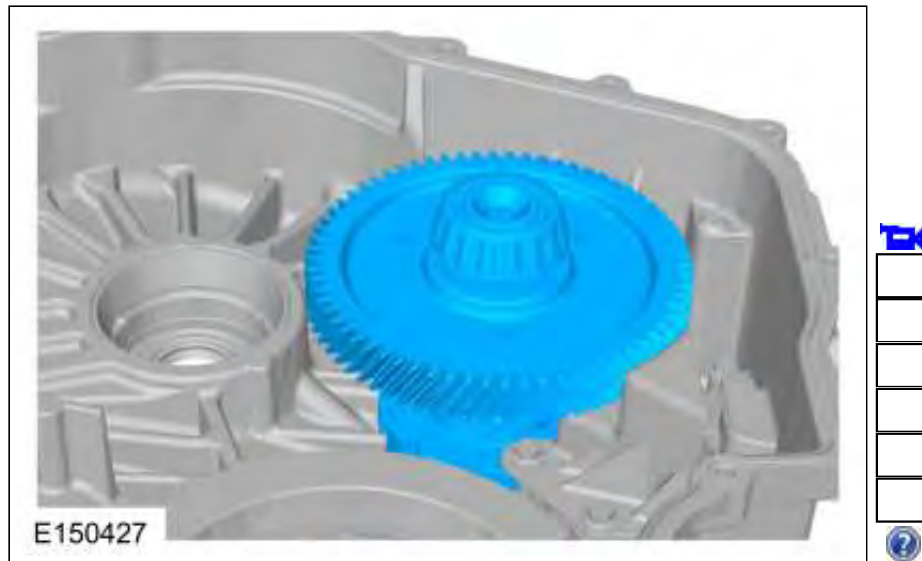


2.

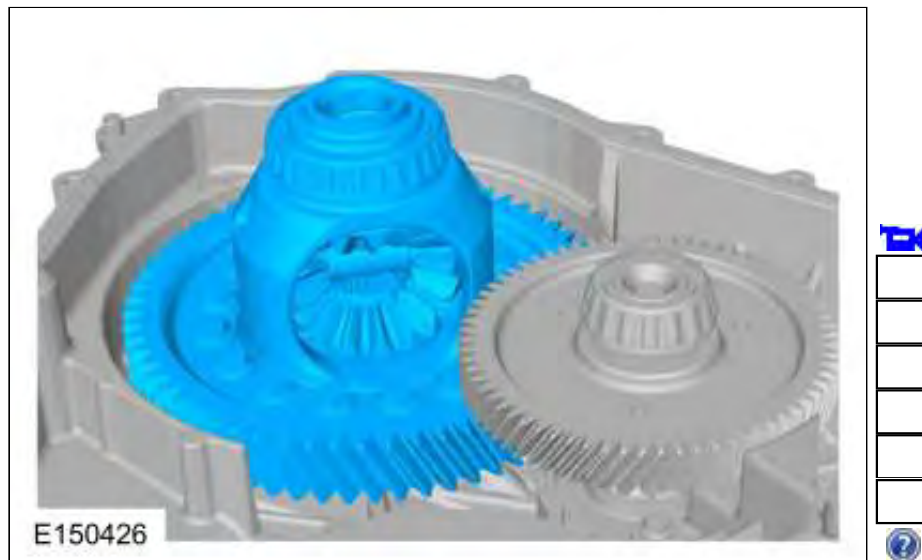


3.

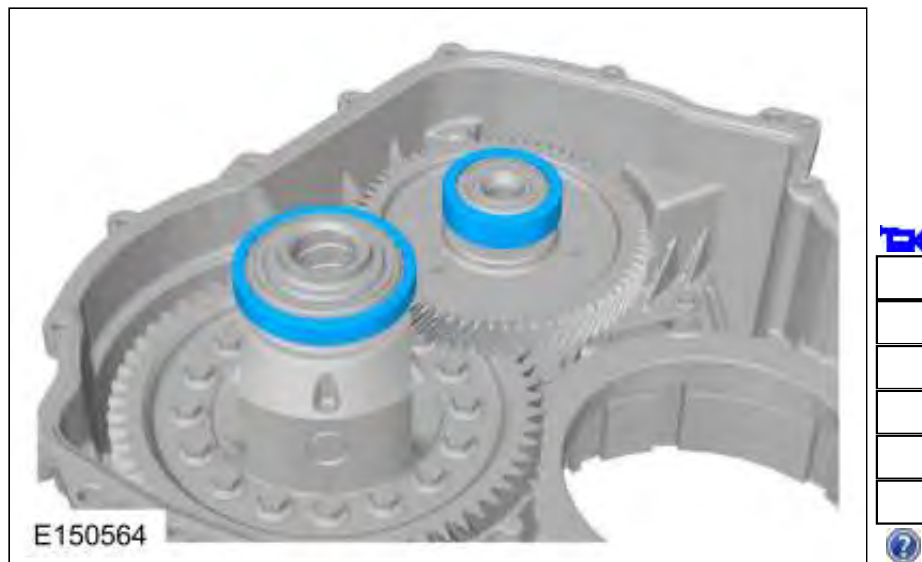


4. 使用专用维修工具: 307-591 差速器/分动器轴承厚度计.

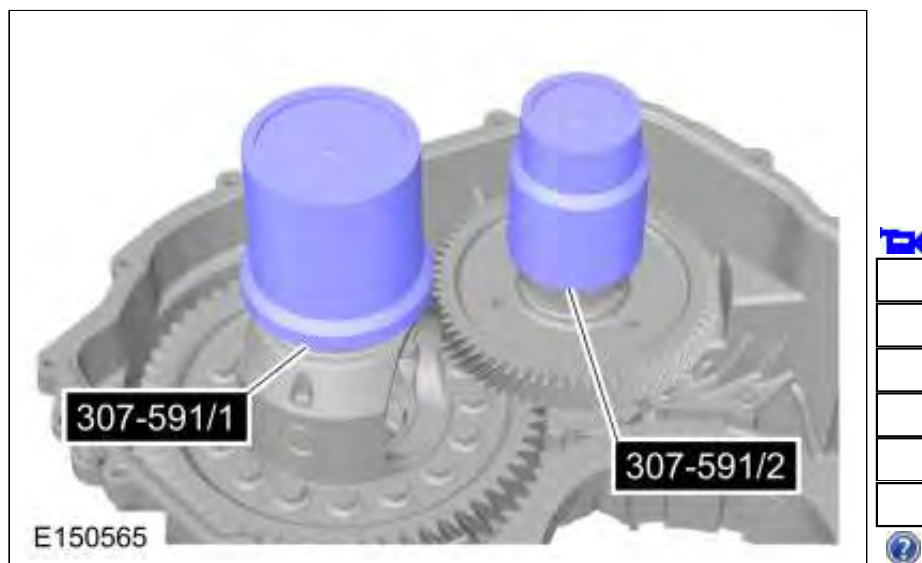


5. 使用专用维修工具: 307-591 差速器/分动器轴承厚度计.

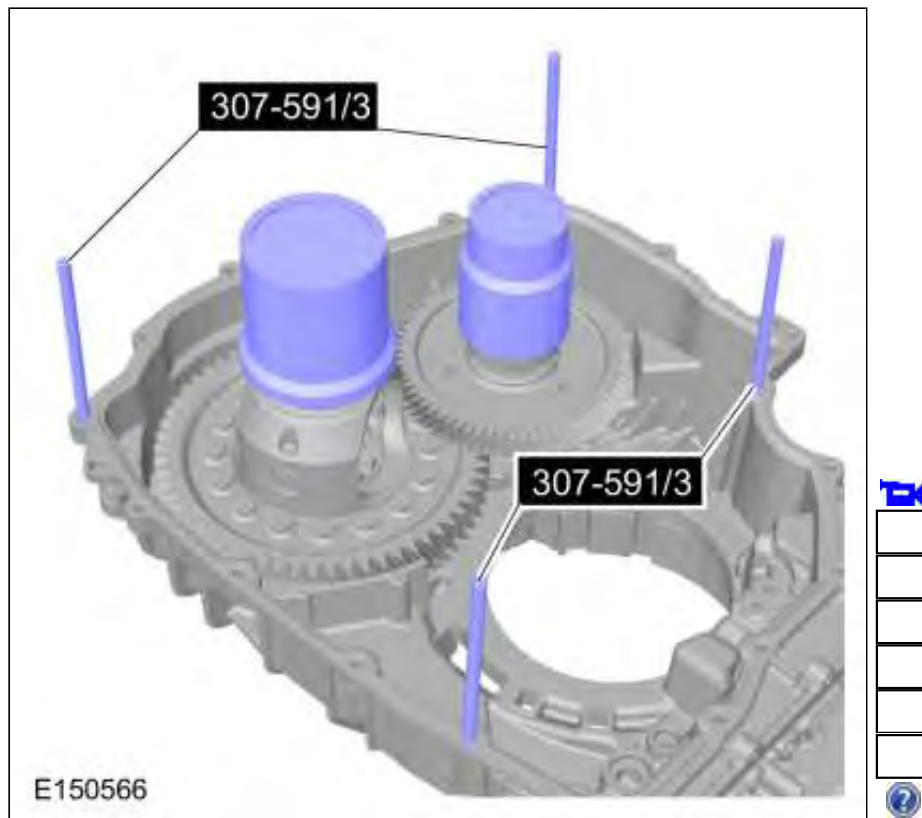


6. 注意： 确保在安装差速器/传动齿轮轴承垫片 **307-591/3**（4 个垫片）之前，清除变速箱和变矩器外壳机削表面上的硅密封胶，否则可能导致预载测量不准。
- 使用专用维修工具: **307-591** 差速器/分动器轴承厚度计.

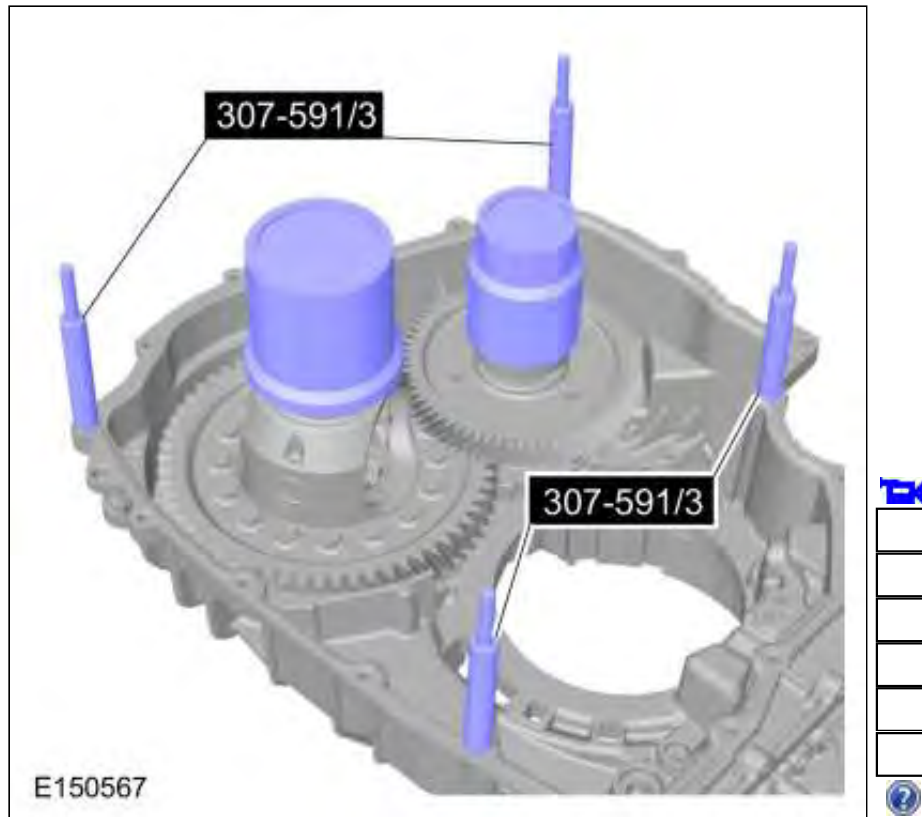

7.

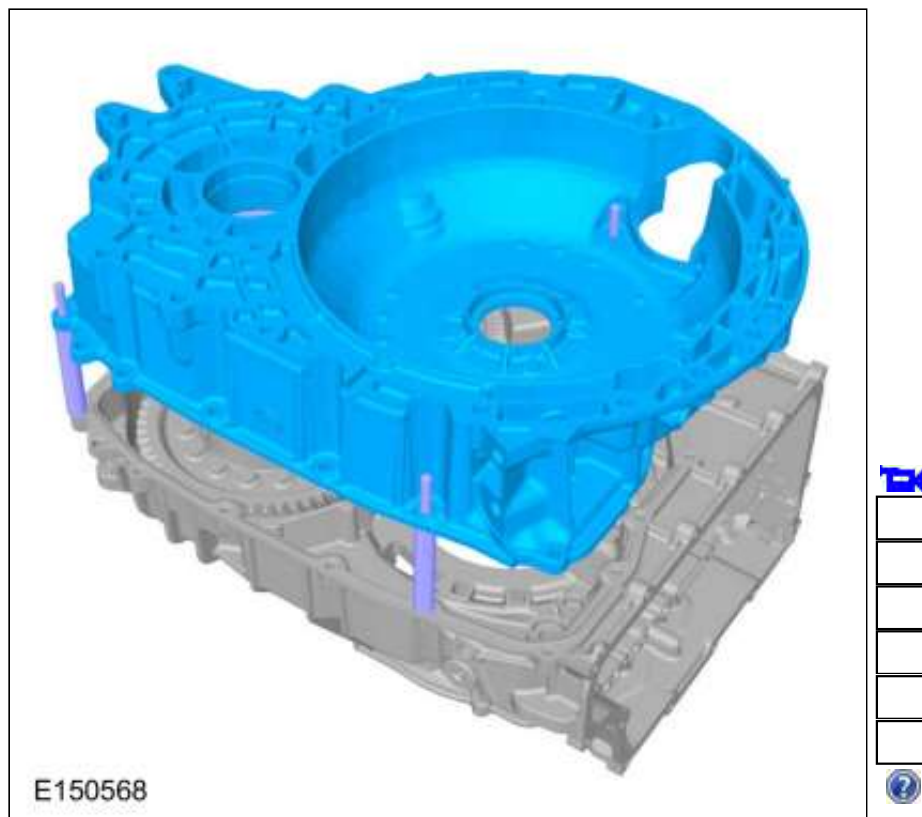


8. 使用专用维修工具: 307-591 差速器/分动器轴承厚度计.
扭矩: 24 Nm

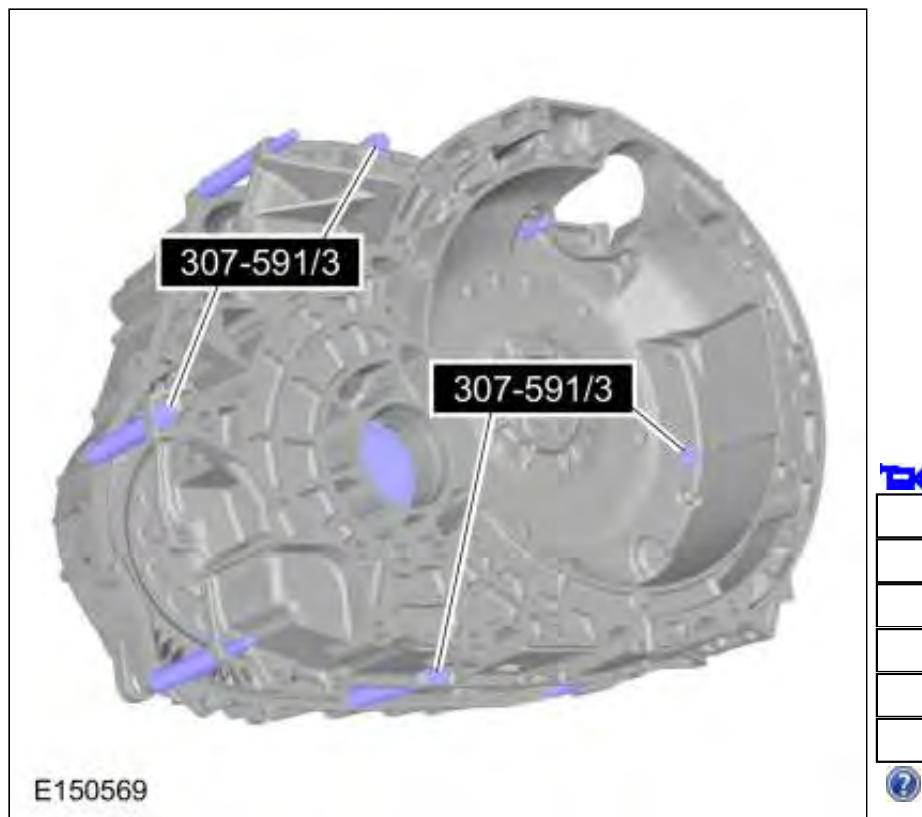


9. 使用专用维修工具: 307-591 差速器/分动器轴承厚度计.
扭矩: 24 Nm




10.

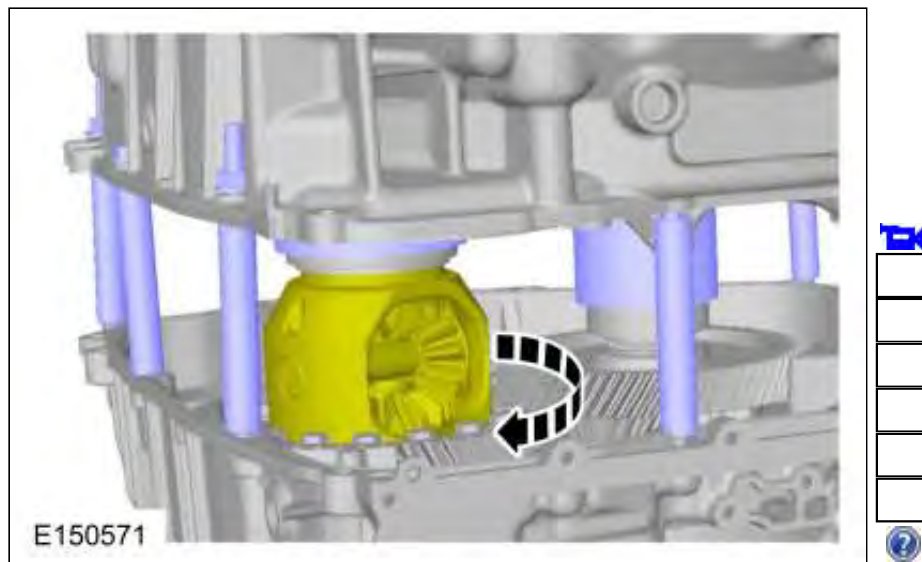

11. 参阅: [规格](#) (307-01B 自动变速器 - 6速自动变速器 6F55, 规格).
通用设备: 塞尺

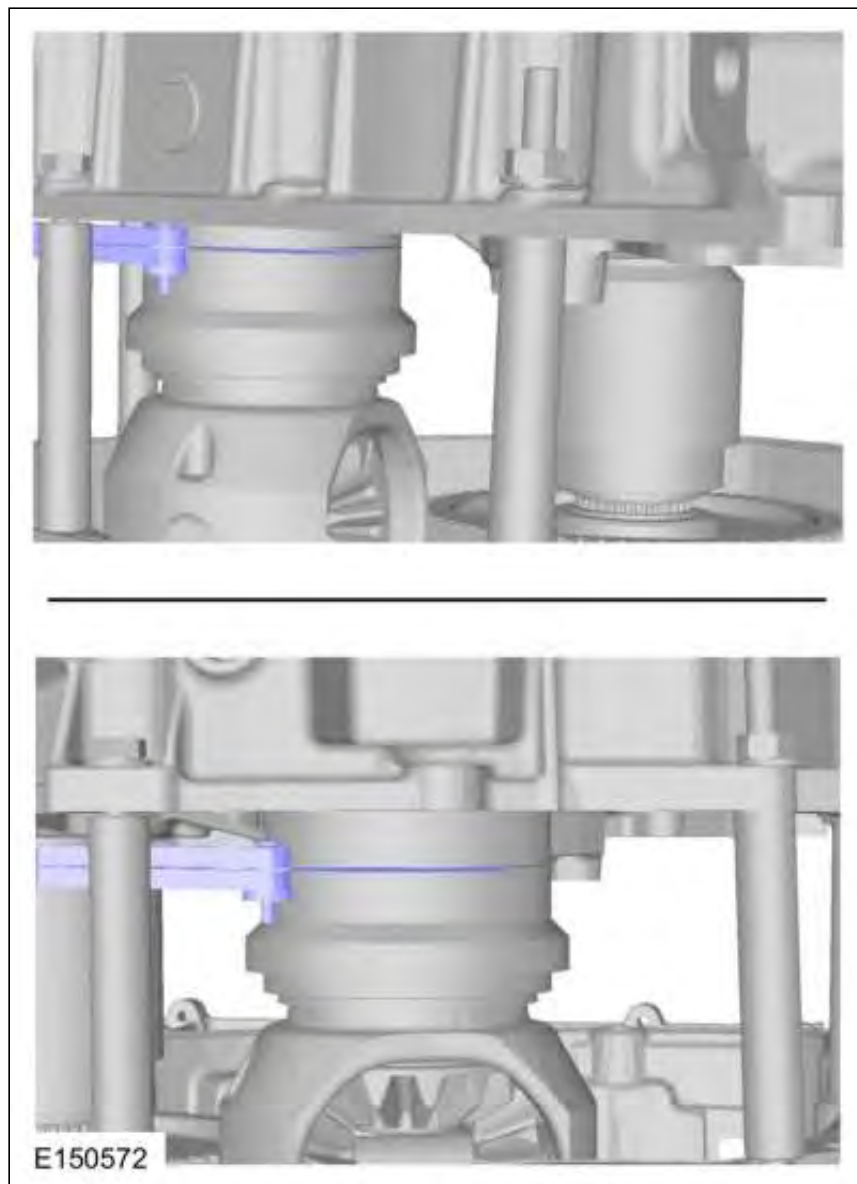

12. 参阅: [规格](#) (307-01B 自动变速器 - 6速自动变速器 6F55, 规格).
通用设备: 塞尺

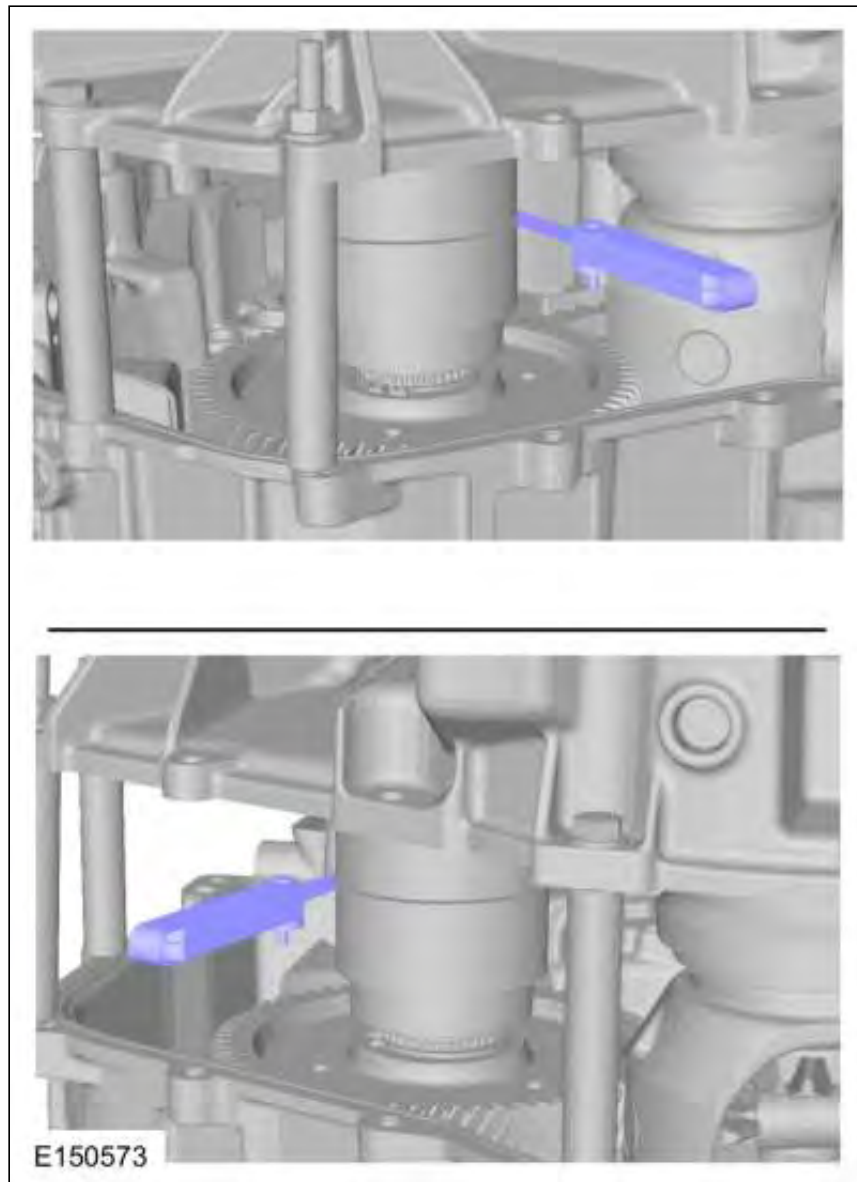


13. 使用专用维修工具: 205-153 (T80T-4000-W) 把手., 307-583 油塞密封件安装工具.




14. 使用木块支撑变矩器外壳，否则可能损坏变矩器外壳。


使用专用维修工具: 205-153 (T80T-4000-W) 把手., 307-583 油塞密封件安装工具.

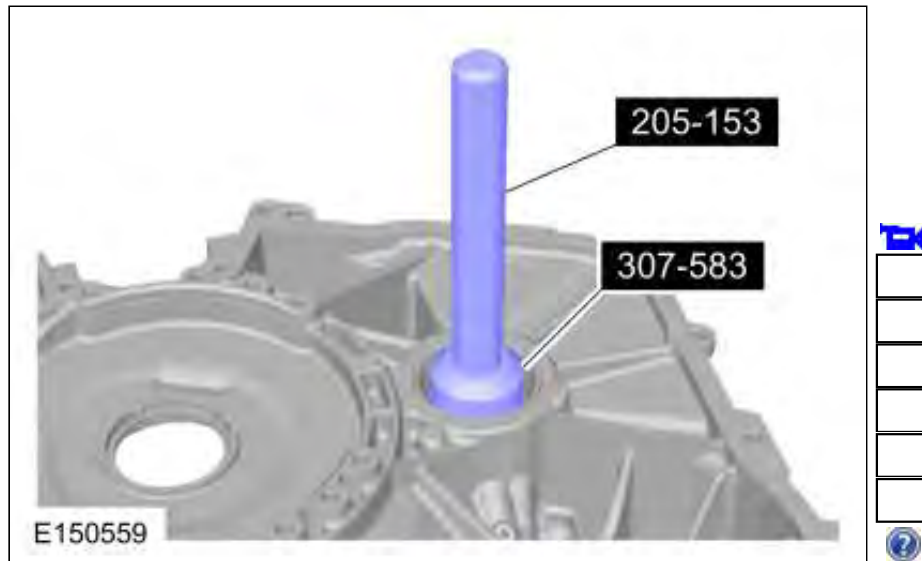

15.

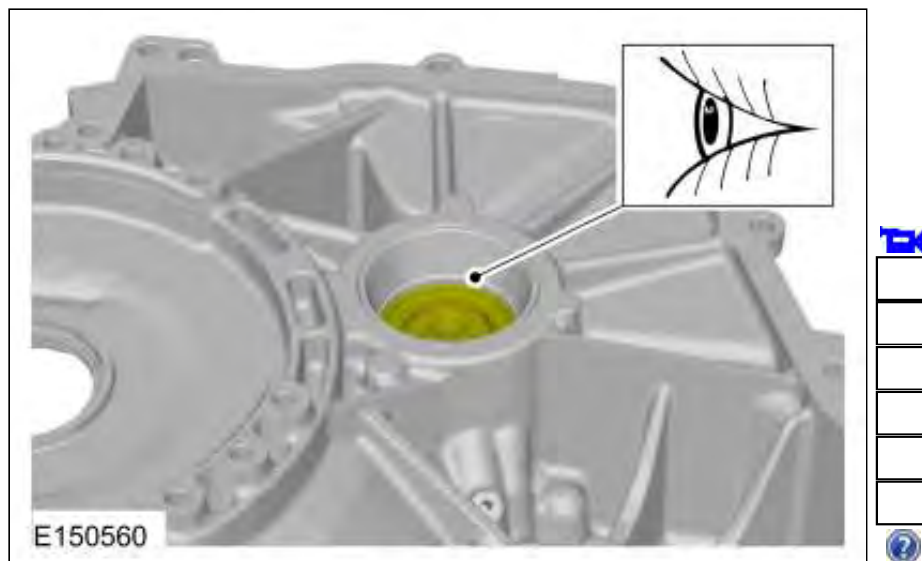


16.

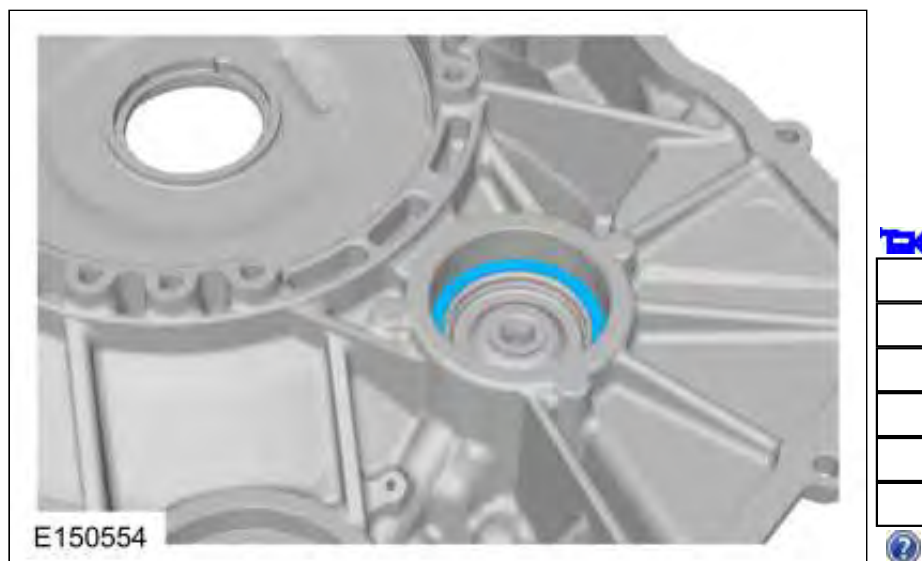


17. 使用专用维修工具: 307-576 轴承杯安装工具,
通用设备: 液压




18.

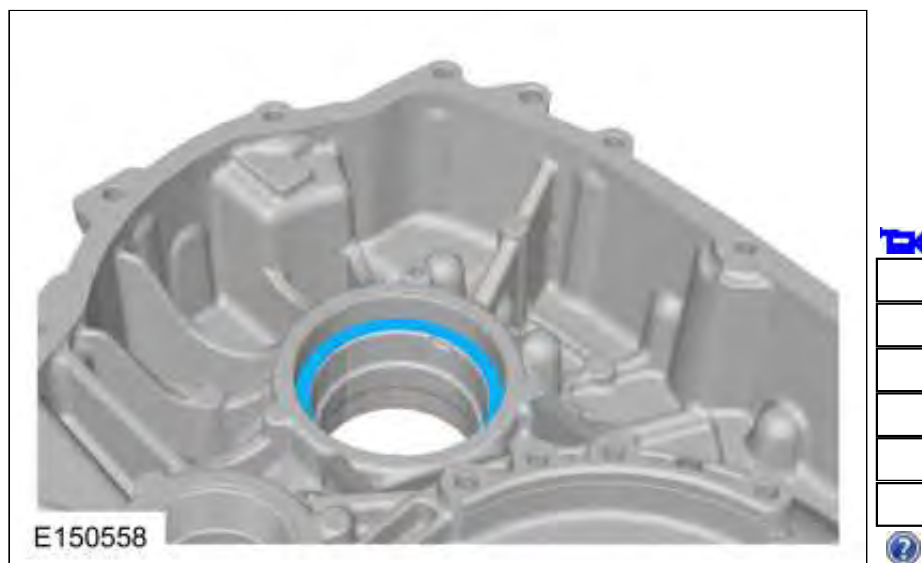

19. 使用专用维修工具: 307-576 轴承杯安装工具.

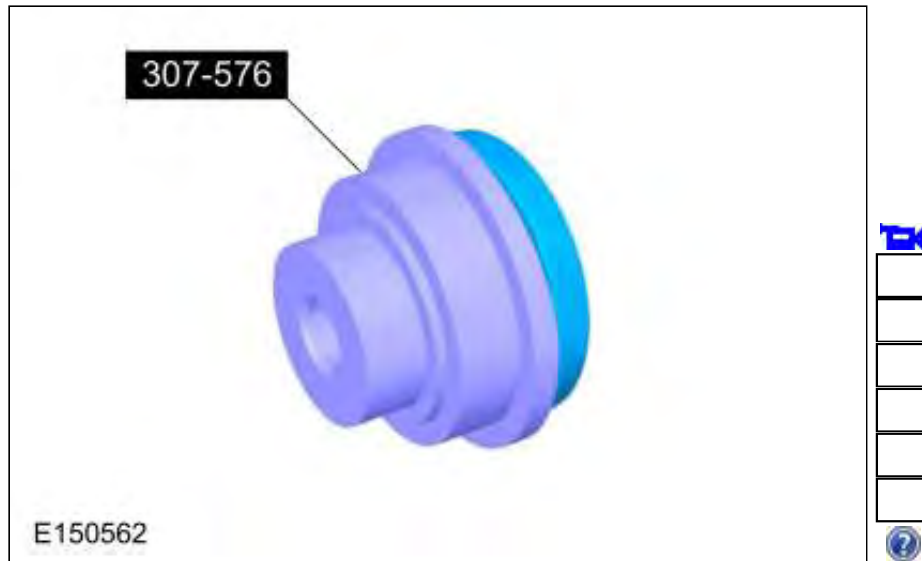

20. 使用专用维修工具: 204-029 拉杆., 307-541 分动器轴承安装工具., 307-576 轴承杯安装工具.

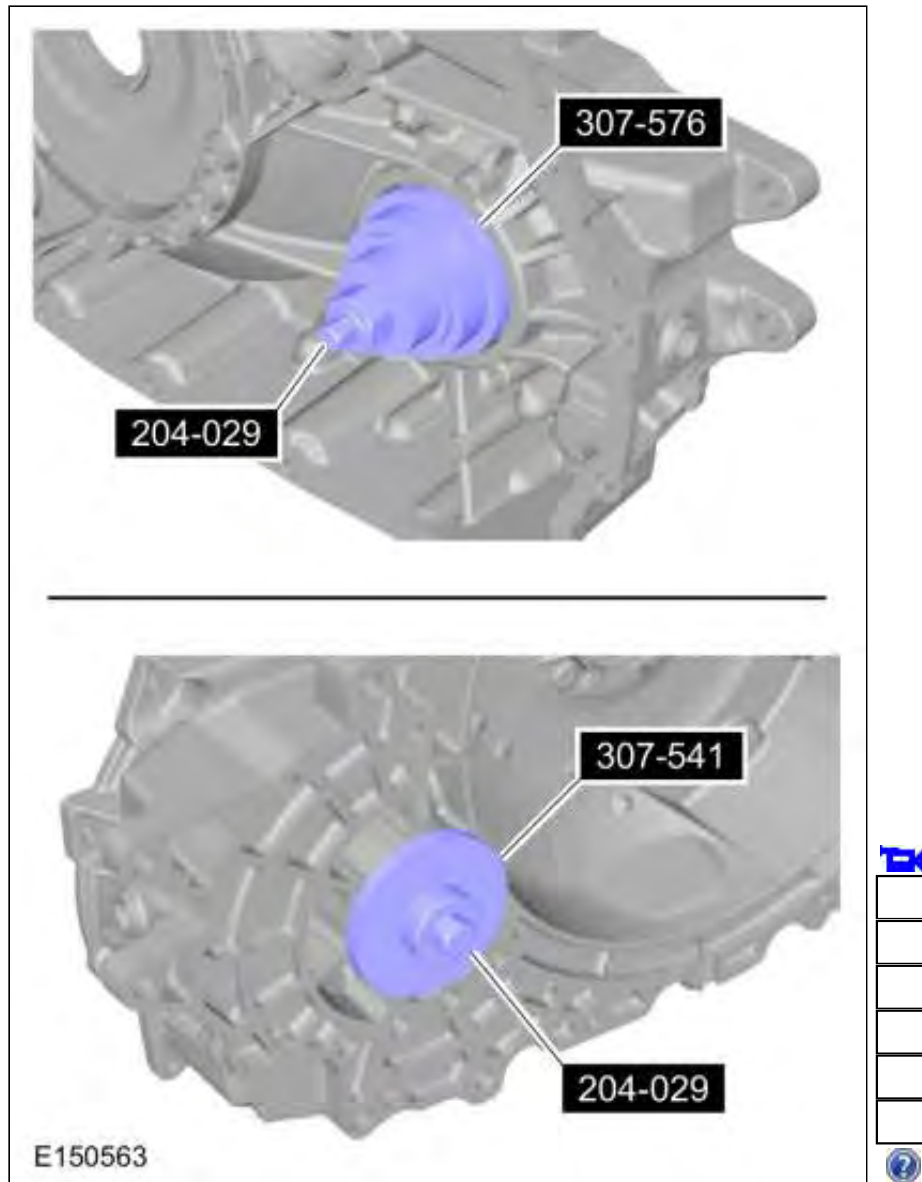

版权 © 2016 Ford Motor Company

