

TYCO:1719057-4
TYCO:2050656-1

ECU IP45

HL:TK02FBR

司机安全带指示开关 LB02

17	CNH20	SR18	SR19					SR25		SR27	SR28							32
	RB	YR	YL					GY		G	Y							
	0.5	0.5	0.5					0.3		0.5	0.5							
	IF13	CNL20	SR03	SR04	SR05	SR06	SR07	SR08	SR09	SR10	SR11	SR12	SR13	SR14	SR15	SRE1		
	Br	OL	Y	YB	YR	YG	R	RG	O	LW	W	L	GR	YR	P	B		
	0.5	0.5	0.5	0.5	0.5	0.5	0.3	0.3	0.3	0.3	0.5	0.5	0.5	0.5	0.3	0.5		

2		1
SR15 G ^Y 0.3		SRE2 B 0.3

TYCO:1411142-1	1411560-2 (鍍金)
----------------	----------------

接主气囊螺旋电缆 IP19

副气囊过渡线束


JST:SQMR-02H-1A-K JST:SQMR-02H-1A-K

安全带预张紧发生器 RB11

安全帶預張緊發生器

4		1
	SR03 Y 0.5	SR04 YB 0.5

	SR06	SR05
1	YG 0.5	YR 0.5
2		

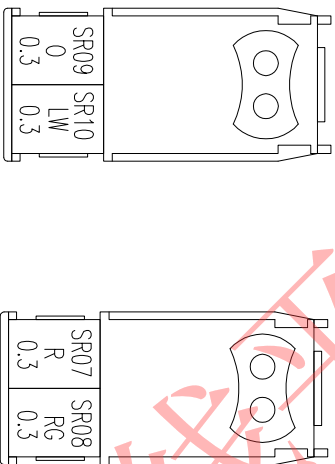

AMP:1318747-1

接左车身电线束 P-1B1

[illegible]

PW14 YL	WP17 YL	FP04 RB	DL03 WR	IF06C RB	RV01B RL	SR15 P	AB30A L	AV27 B	DL01D WL	DE01 R
1.25	0.5	0.85	0.85	0.3	0.3	0.3	0.5	0.5	0.85	2.0
PW15 YR	WP18 BR	AD08 YL	AD02 GL	TS02A RY	FZ3E GW		WE4 B	AU07 W	IF51 Y	DL02C WG
1.25	0.5	0.5	0.5	0.3	0.3		0.5	0.5	1.25	0.85

[illegible]

AMP:936151-1

接右车身电线束总成 IP-RB1

[illegible][illegible]