




二十一、转向灯/刹车灯

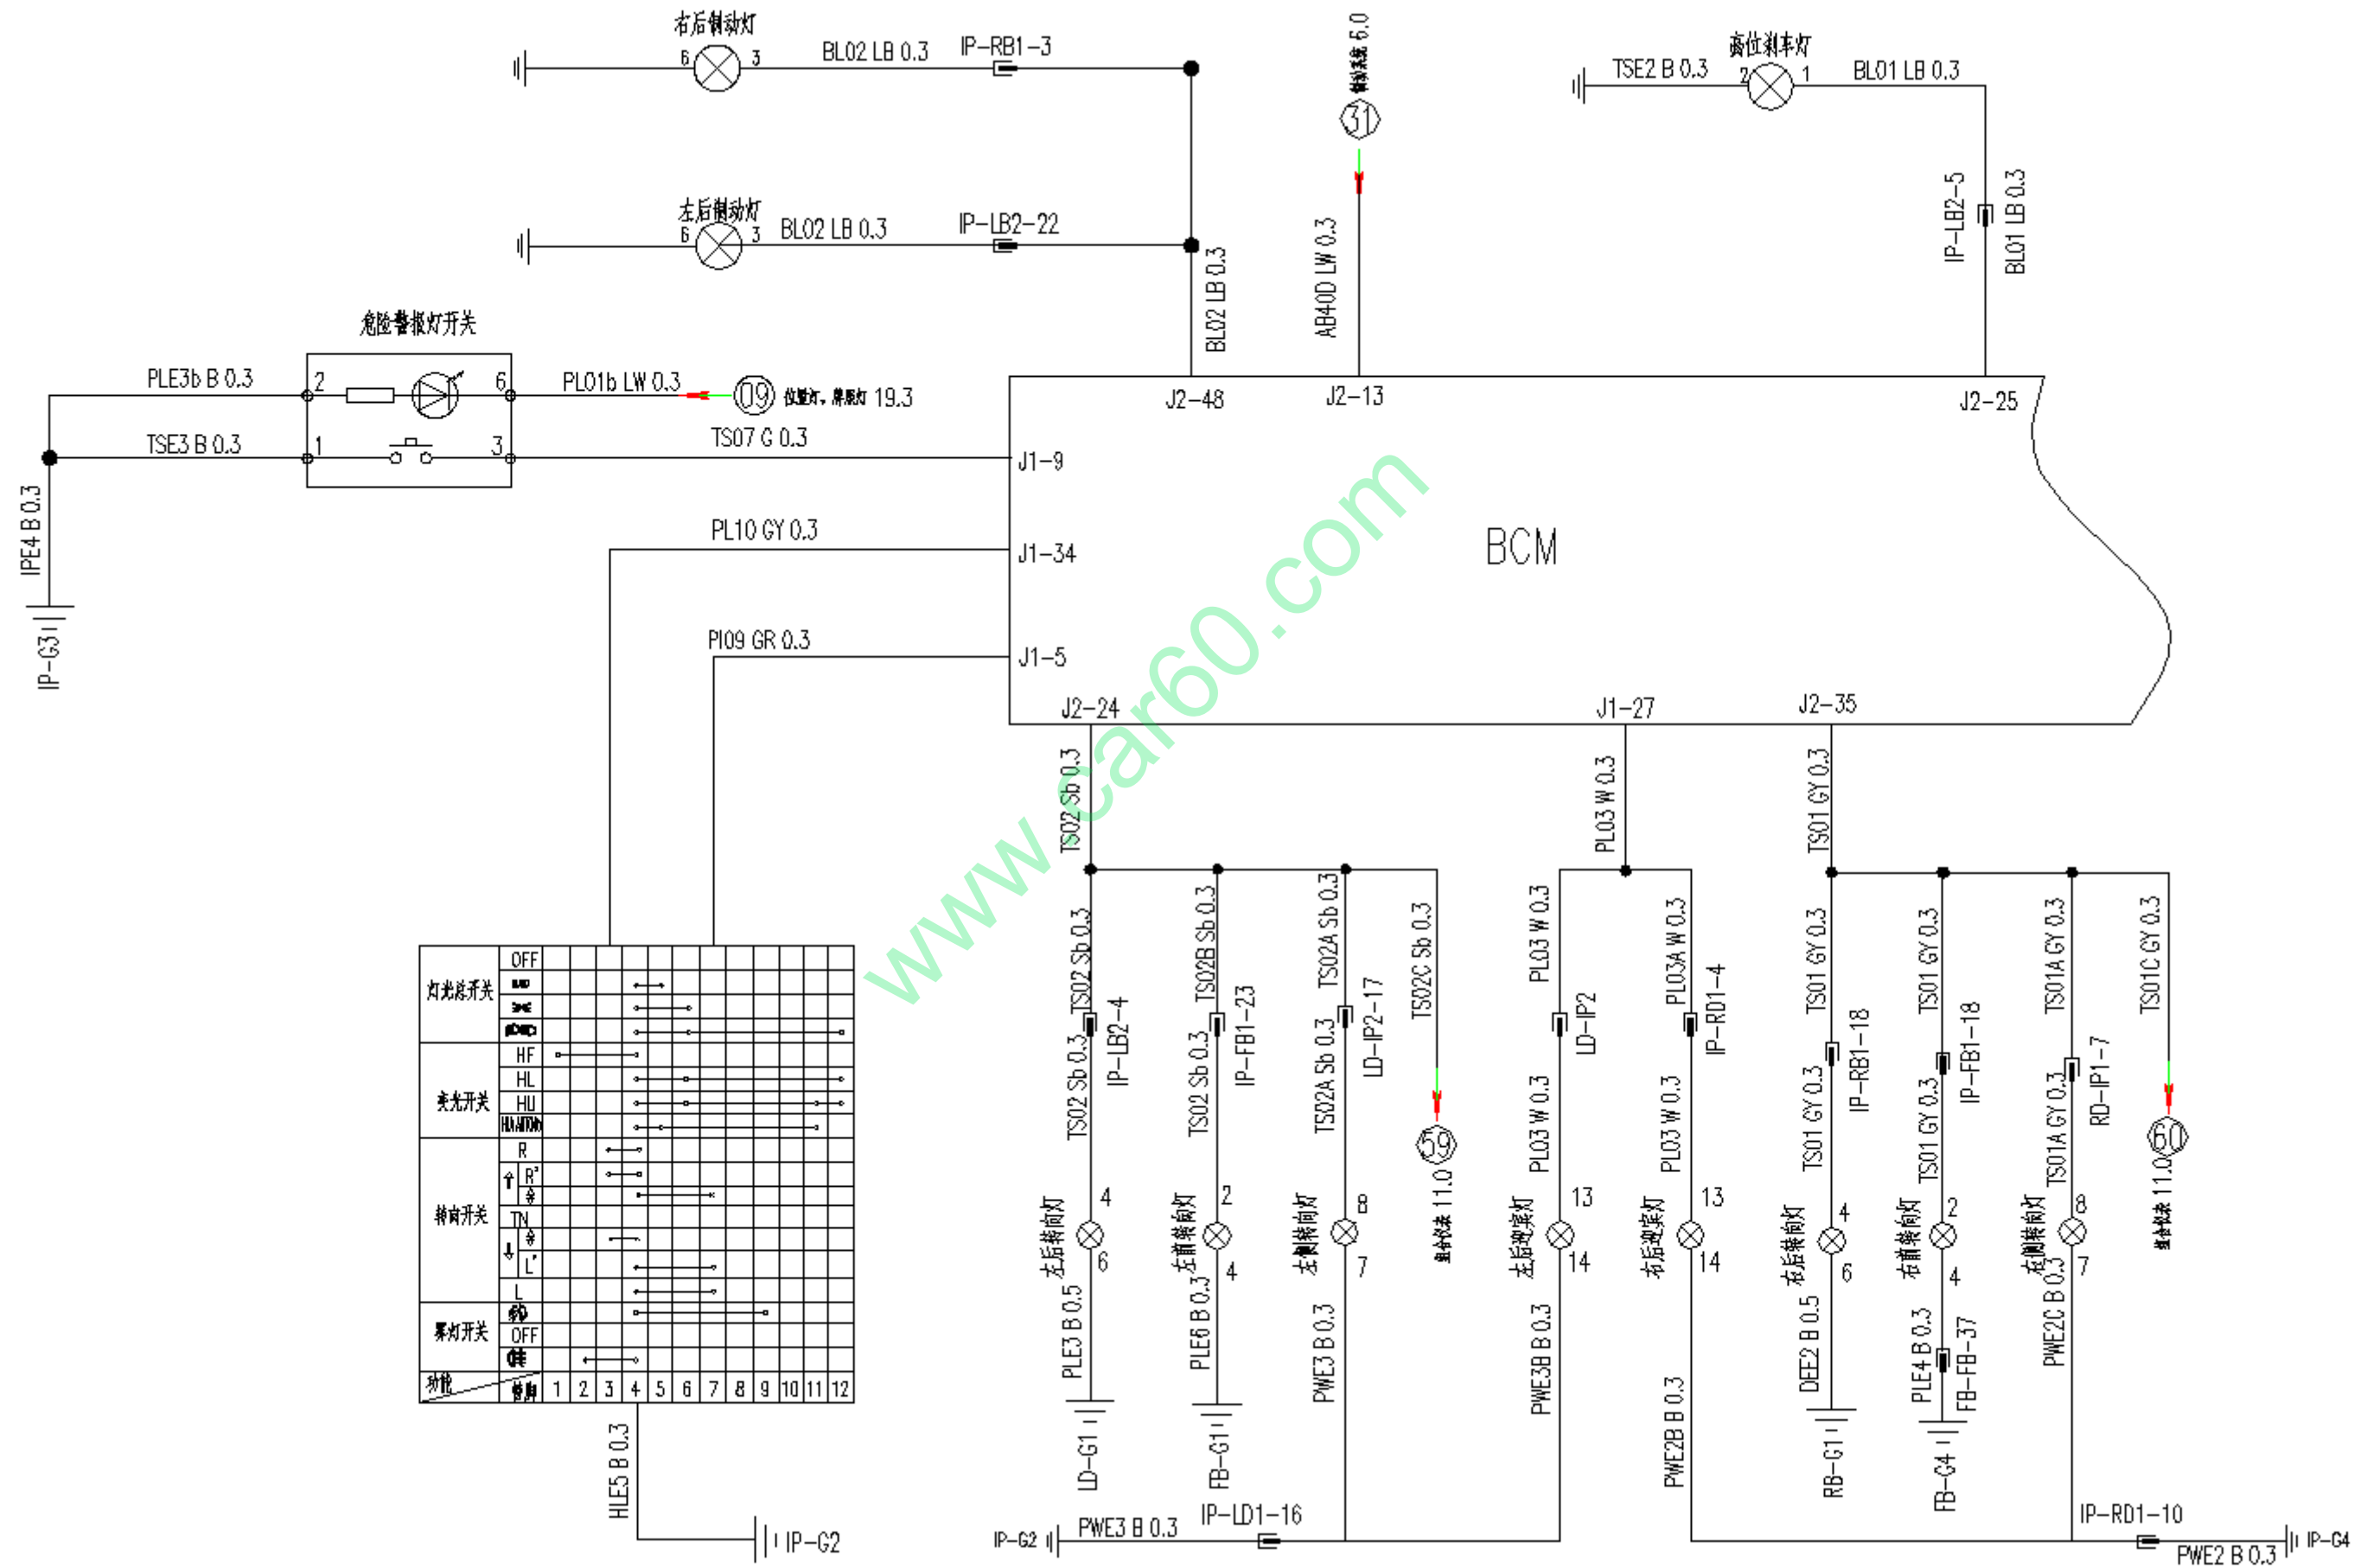

整车电器原理图


THB:0404104

危险警告开关 IP20

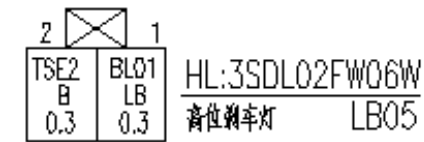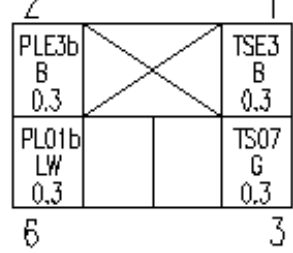




AMP:493577-2

左前照灯 FB08

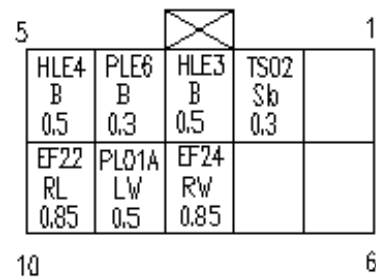

AMP:493577-2


右前照灯 FB16

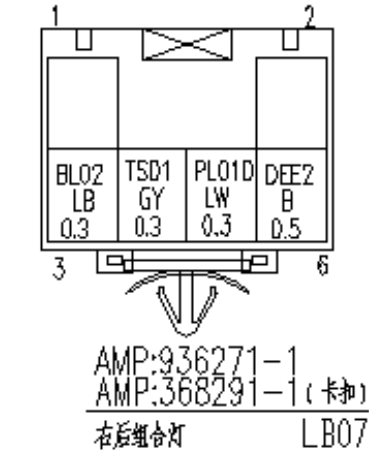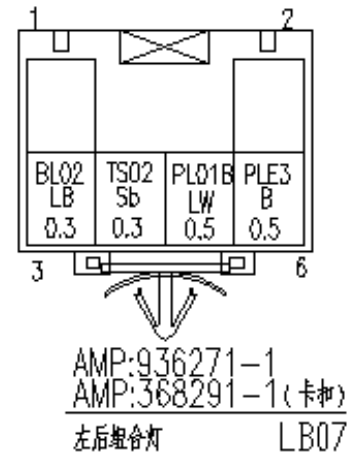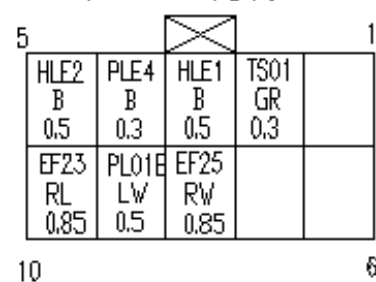


AMP:936271-1
AMP:368291-1 (卡扣)
右后组合灯 LB07

SWS:60985283

接右前车门线束总成 IP-RD1

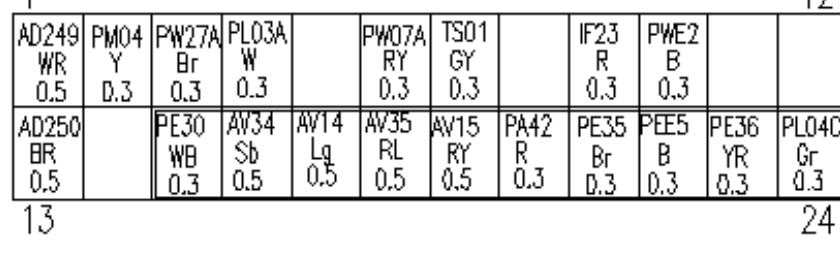


TYCO:2137489-1
BCM ECU_J2 IP50

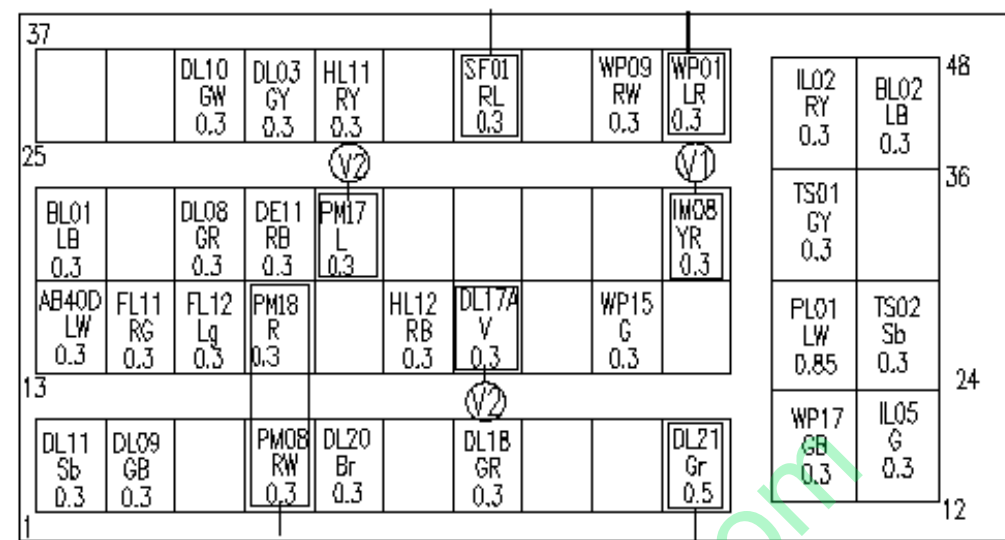


TE:2298622-1

接机舱线束 IP-FB1

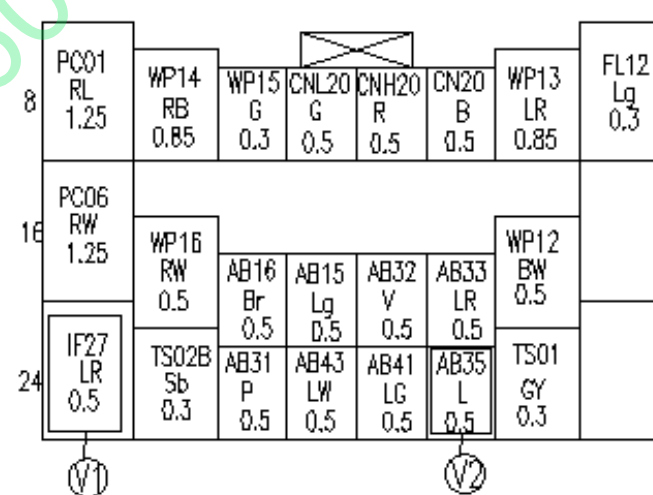

AMP:936151-1



接右车身线束总成 IP-RB1

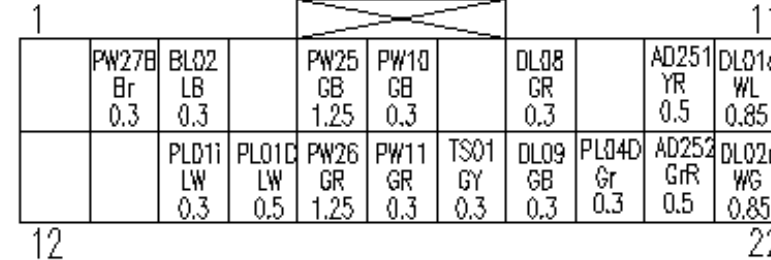

TYCO:284972-1
BCM ECU_J1 IP52

TE:2298622-1(black)

接左车身线束 IP-LB2

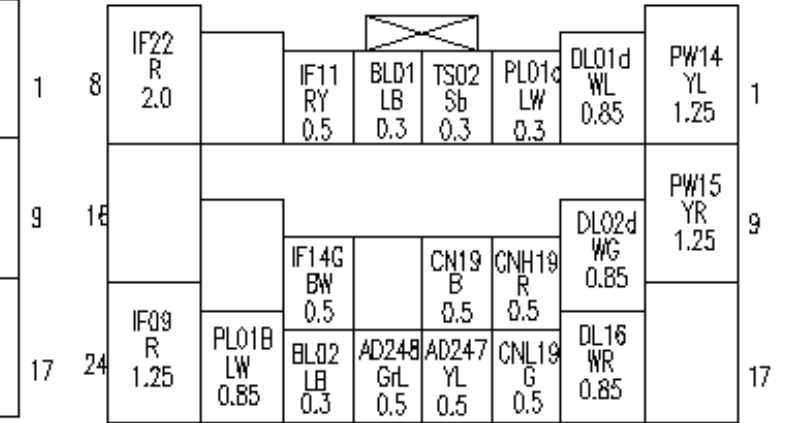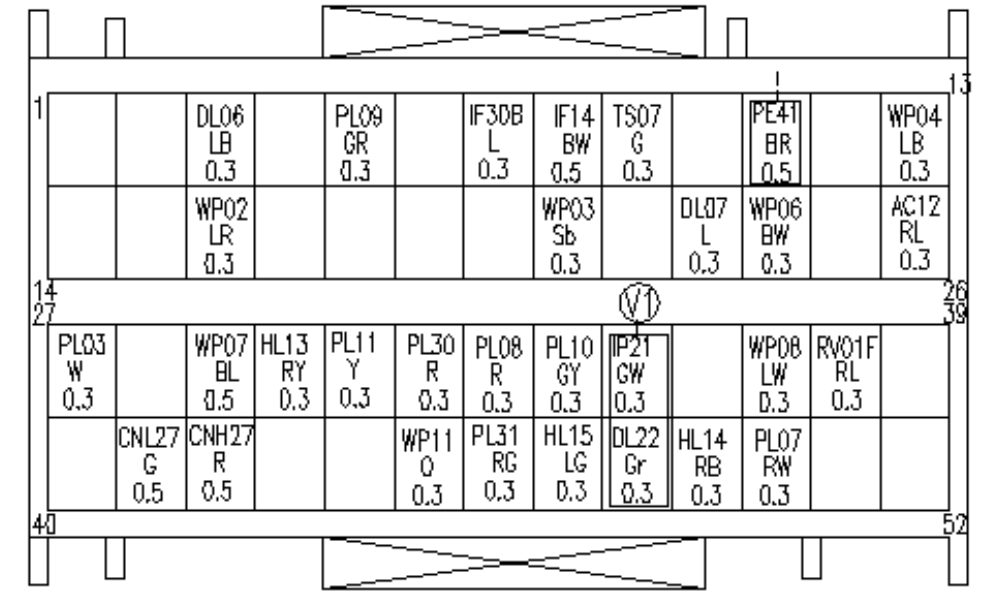

SWS:60985988

接左前车门线束总成 IP-LD2

