


灯光总开关	OFF													
	AUTO													
	☞													
	☞													
变光开关	HL													
	HU													
	HF													
	R													
转向开关	↑													
	↑													
	TN													
	↓													
雾灯开关	L													
	☞													
	OFF													
	☞													
功能	管脚	1	2	3	4	5	6	7	8	9	10	11	12	

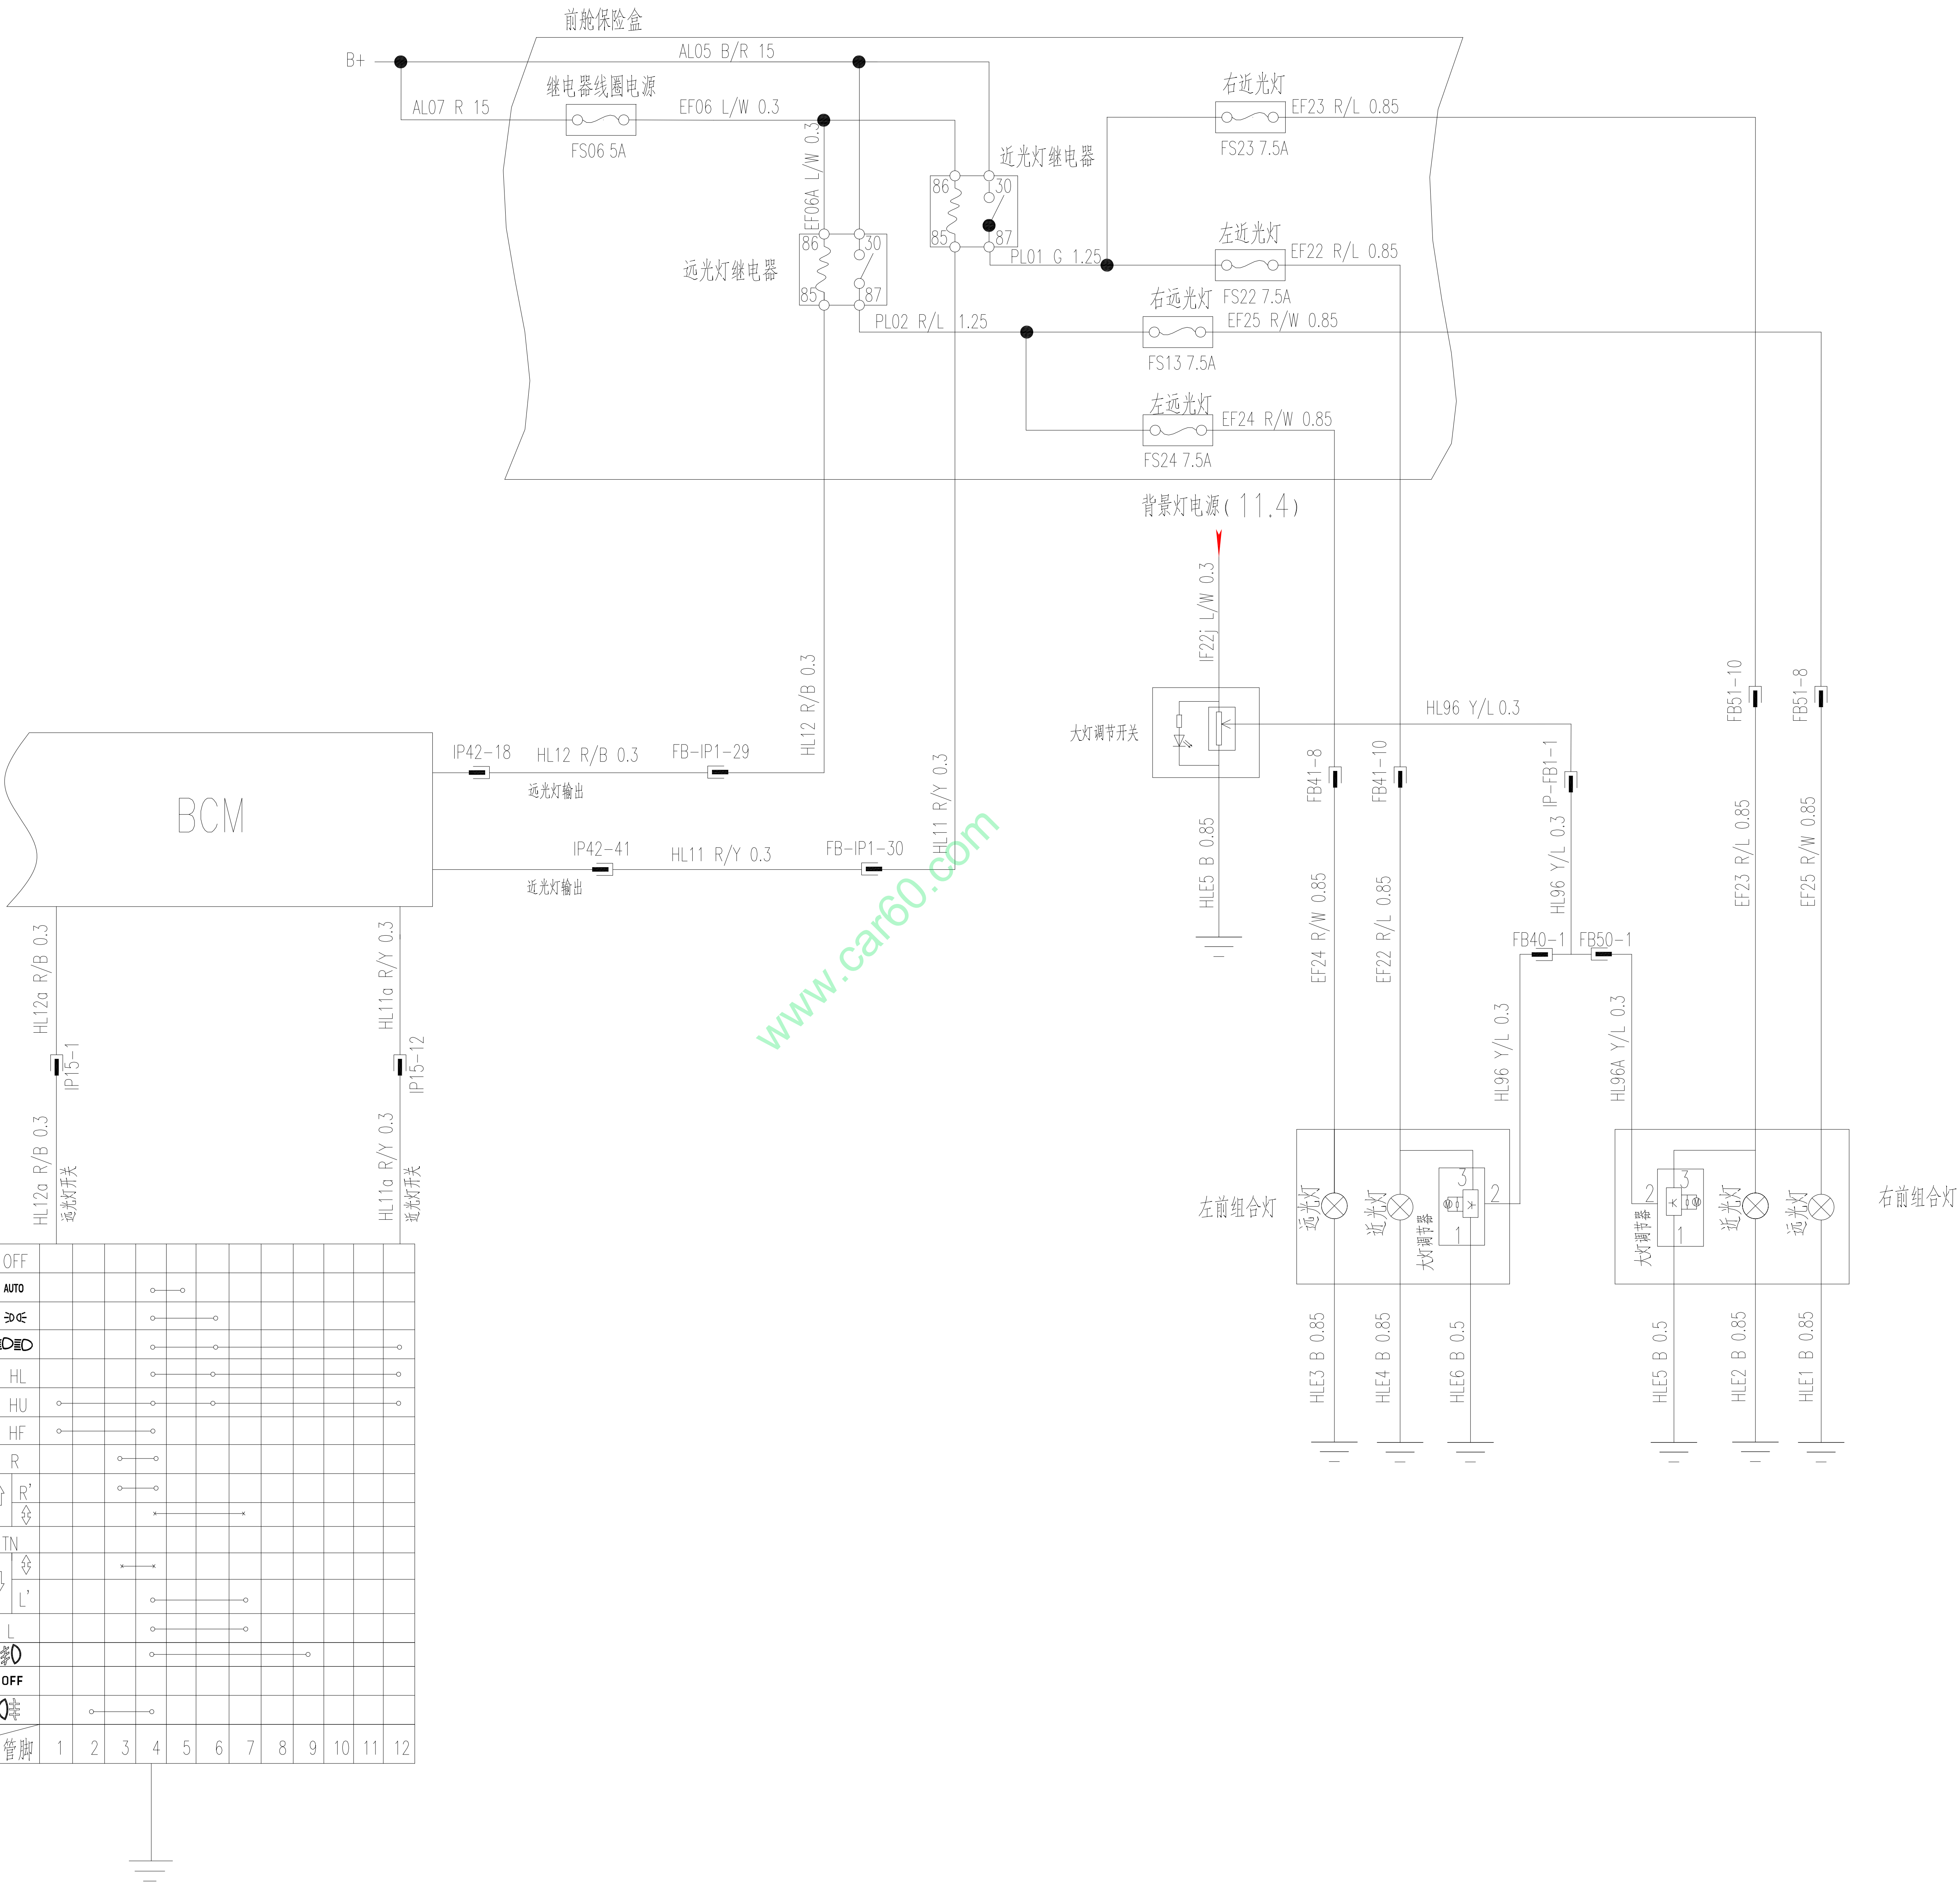

1

接仪表板电缆束总成 FB-IP1

16

HL96 YL 0.3	WP02 BW 0.5		BC31 W 0.3	IP02 Y 0.3		BC29 GR 0.3	AB06 Br 0.5	AB29 BW 0.5		IP36 Y 0.5	BC71 YR 0.3	EF24A RW 0.3	AB20 L 0.5	AB33 RG 0.5	HN02 RW 0.3
BC70 GW 0.3	WP01 RW 0.5						AB17 LR 0.5	AB18 R 0.5	AB31 W 0.5	AC08 GW 0.5	EF14 W 0.3	HL12 RB 0.3	HL11 RY 0.3	AL08 W 0.5	BC10 Br 0.5

17

BCM ECU J2 IP42

32

		DL14 GW 0.3	DL01 GY 0.3	HL11 RY 0.3			WP03 BR 0.3	WP10 BR 0.3			IL03 RY 0.5	
		DL15 GR 0.3	DE13 RB 0.3						IM05 RL 0.3		TS07 GY 0.3	
					HL12 RB 0.3	PE06 V 0.3		WP04 G 0.3			PL01 G 0.5	TS08 SB 0.3
DL17 SB 0.3	DL16 GB 0.3				FL14 RG 0.3	DL18 GR 0.3					FL12 GB 0.3	IL11 L 0.3

接变光开关 IP15

6	PL11 Y 0.3		WPE4 B 0.3	TS05 GY 0.3	FL23 R 0.3	HL12a RB 0.3	1
12	HL11a RY 0.3			FL22 RW 0.3		TS04 GR 0.3	7

右前大灯高度调节器 FB50

3		1
EF23A RL 0.5	HL96A YL 0.3	HLE5 B 0.5

左前大灯高度调节器 FB40

3		1
EF22A RL 0.5	HL96 YL 0.3	HLE6 B 0.5

右前照灯 FB51

5			1
HLE2 B 0.85	PLE4 B 0.3	HLE1 B 0.85	TS07 GY 0.3
EF23 RL 0.85	IF23 GW 0.3	EF25 RW 0.85	
10			6

左前照灯 FB41

5			1
HLE4 B 0.85	PLE6 B 0.3	HLE3 B 0.85	TS08 SB 0.3
EF22 RL 0.85	IF24 Y 0.3	EF24 RW 0.85	
10			6