



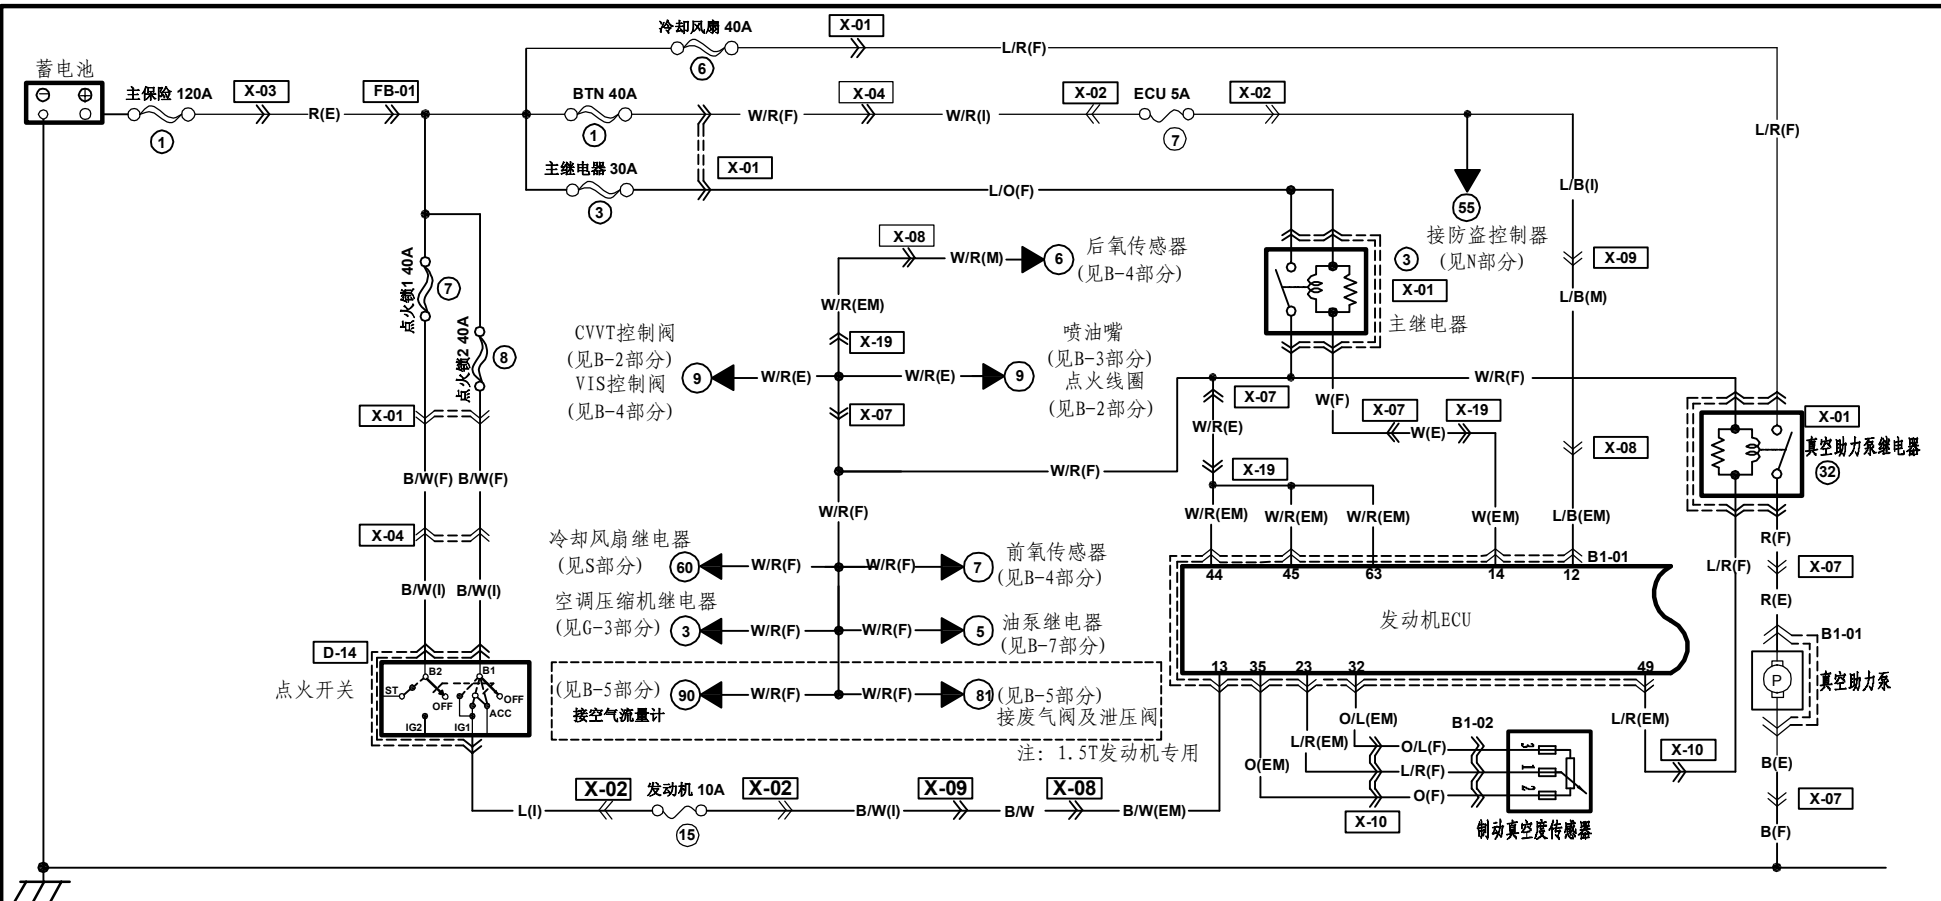


B1-01 发动机ECU(EM)

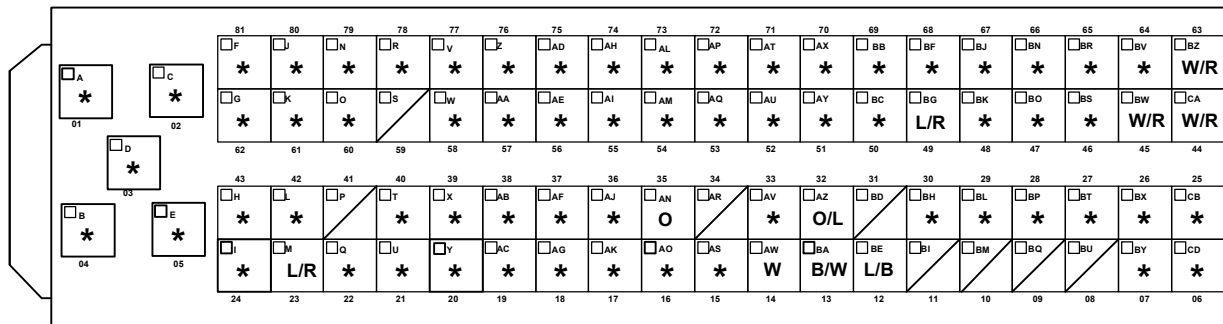


B1-01 真空助力泵




  
B1-02 制动真空度传感器




线束标识:  F  I  E

 
B

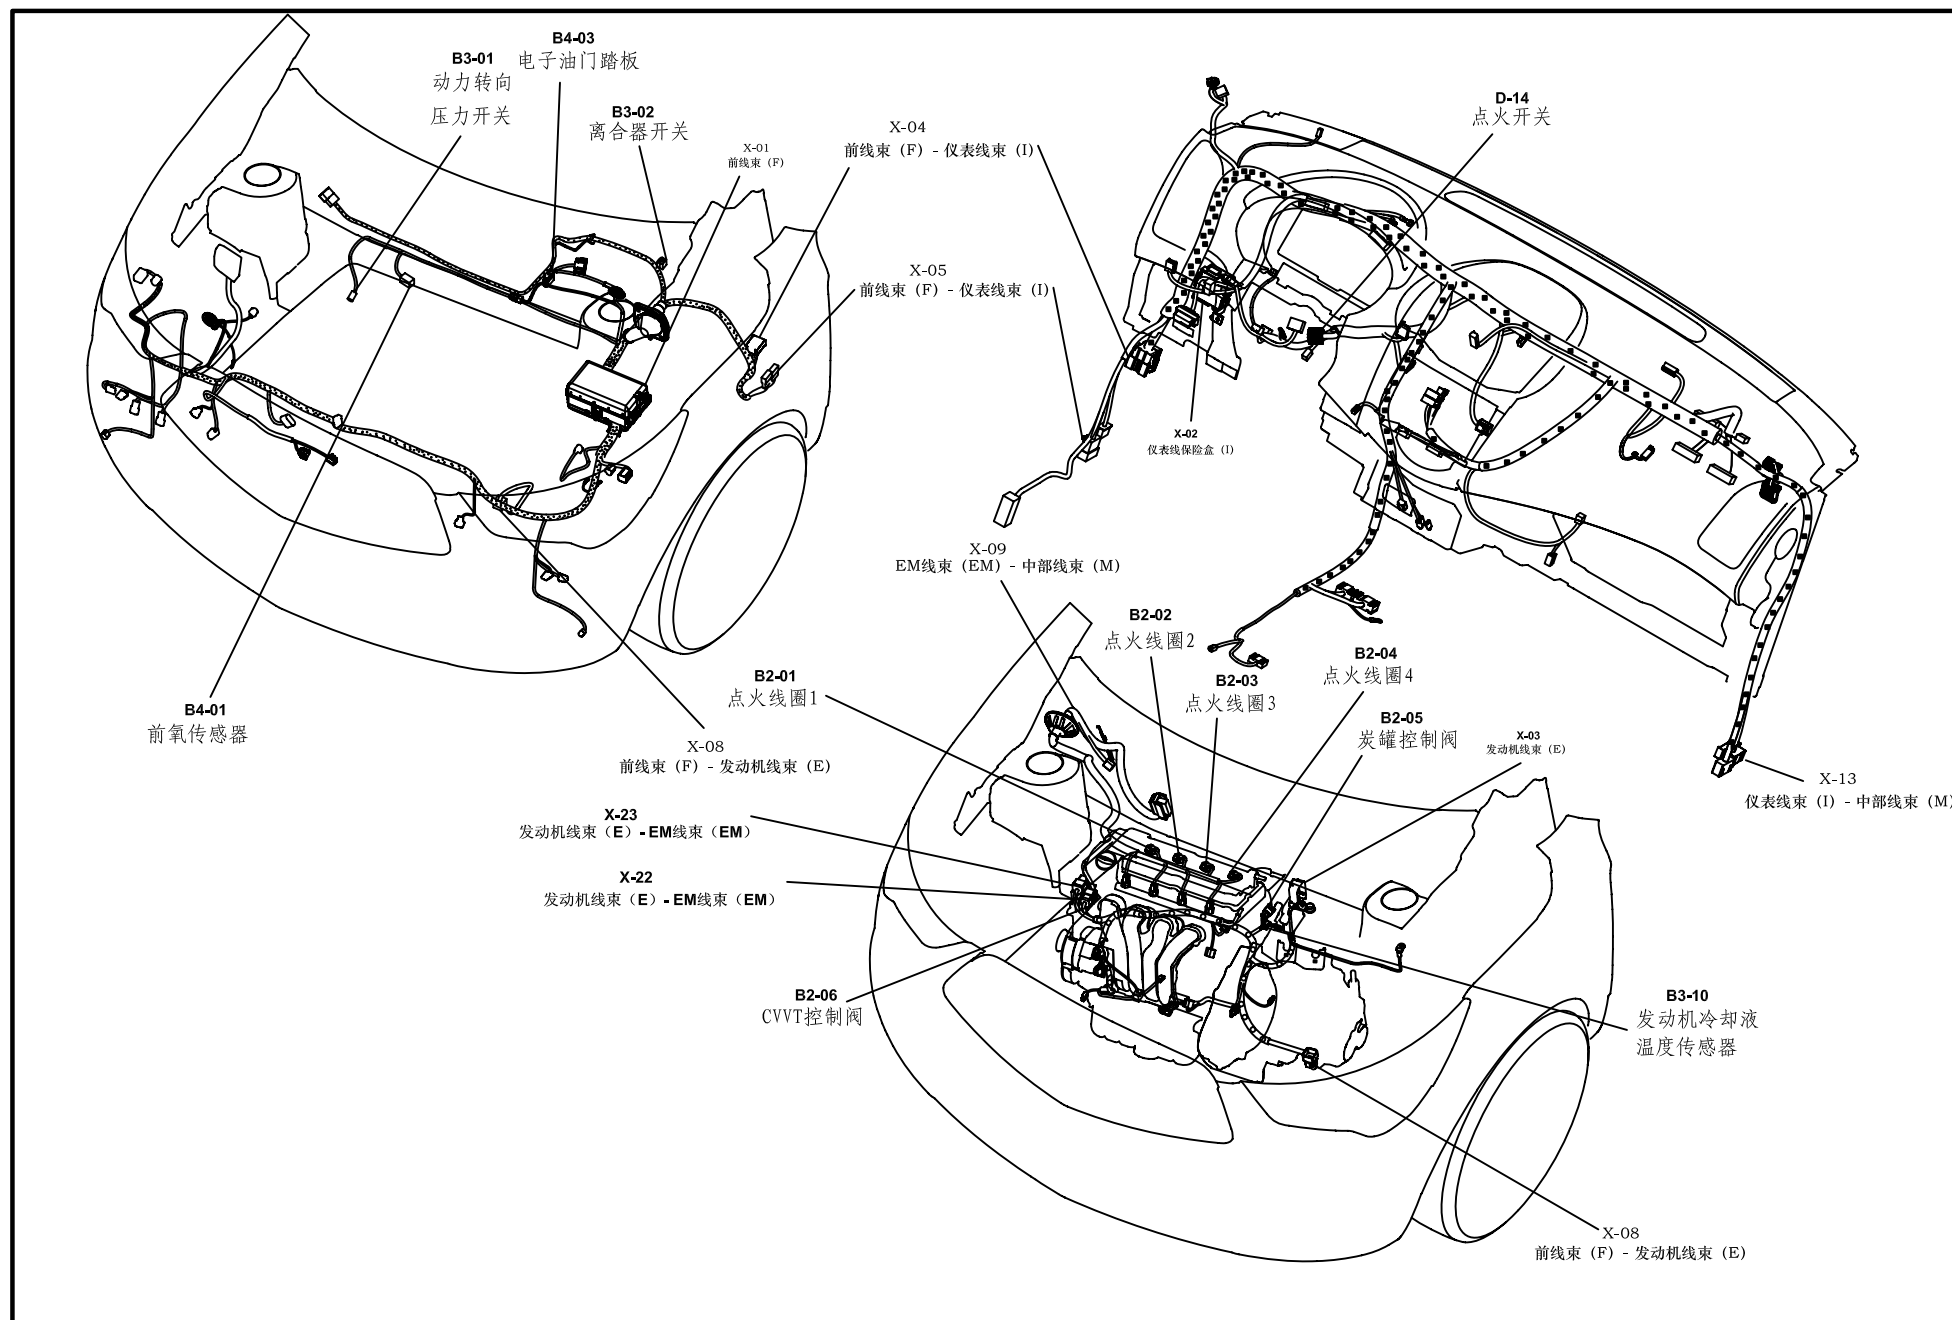


线束标识:  F  I  E

 
B

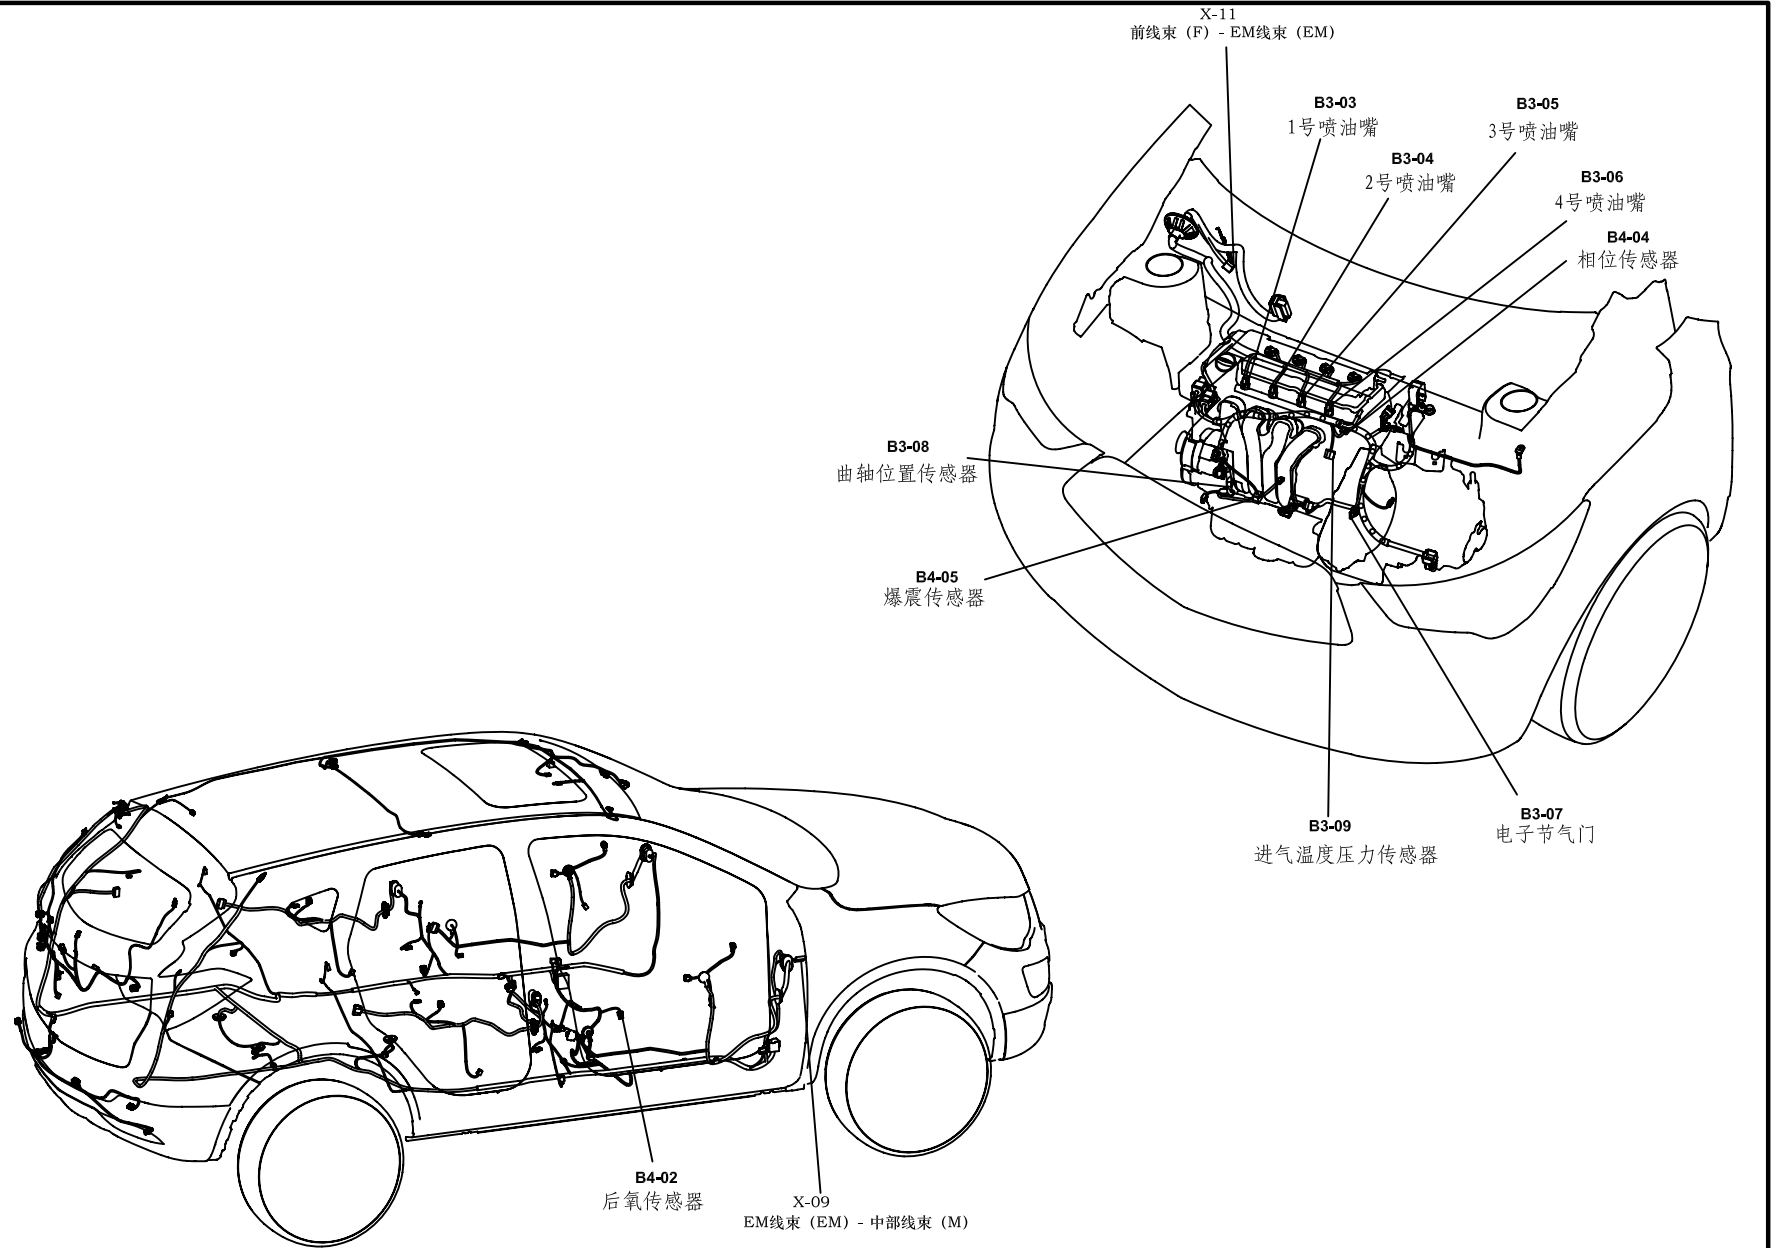


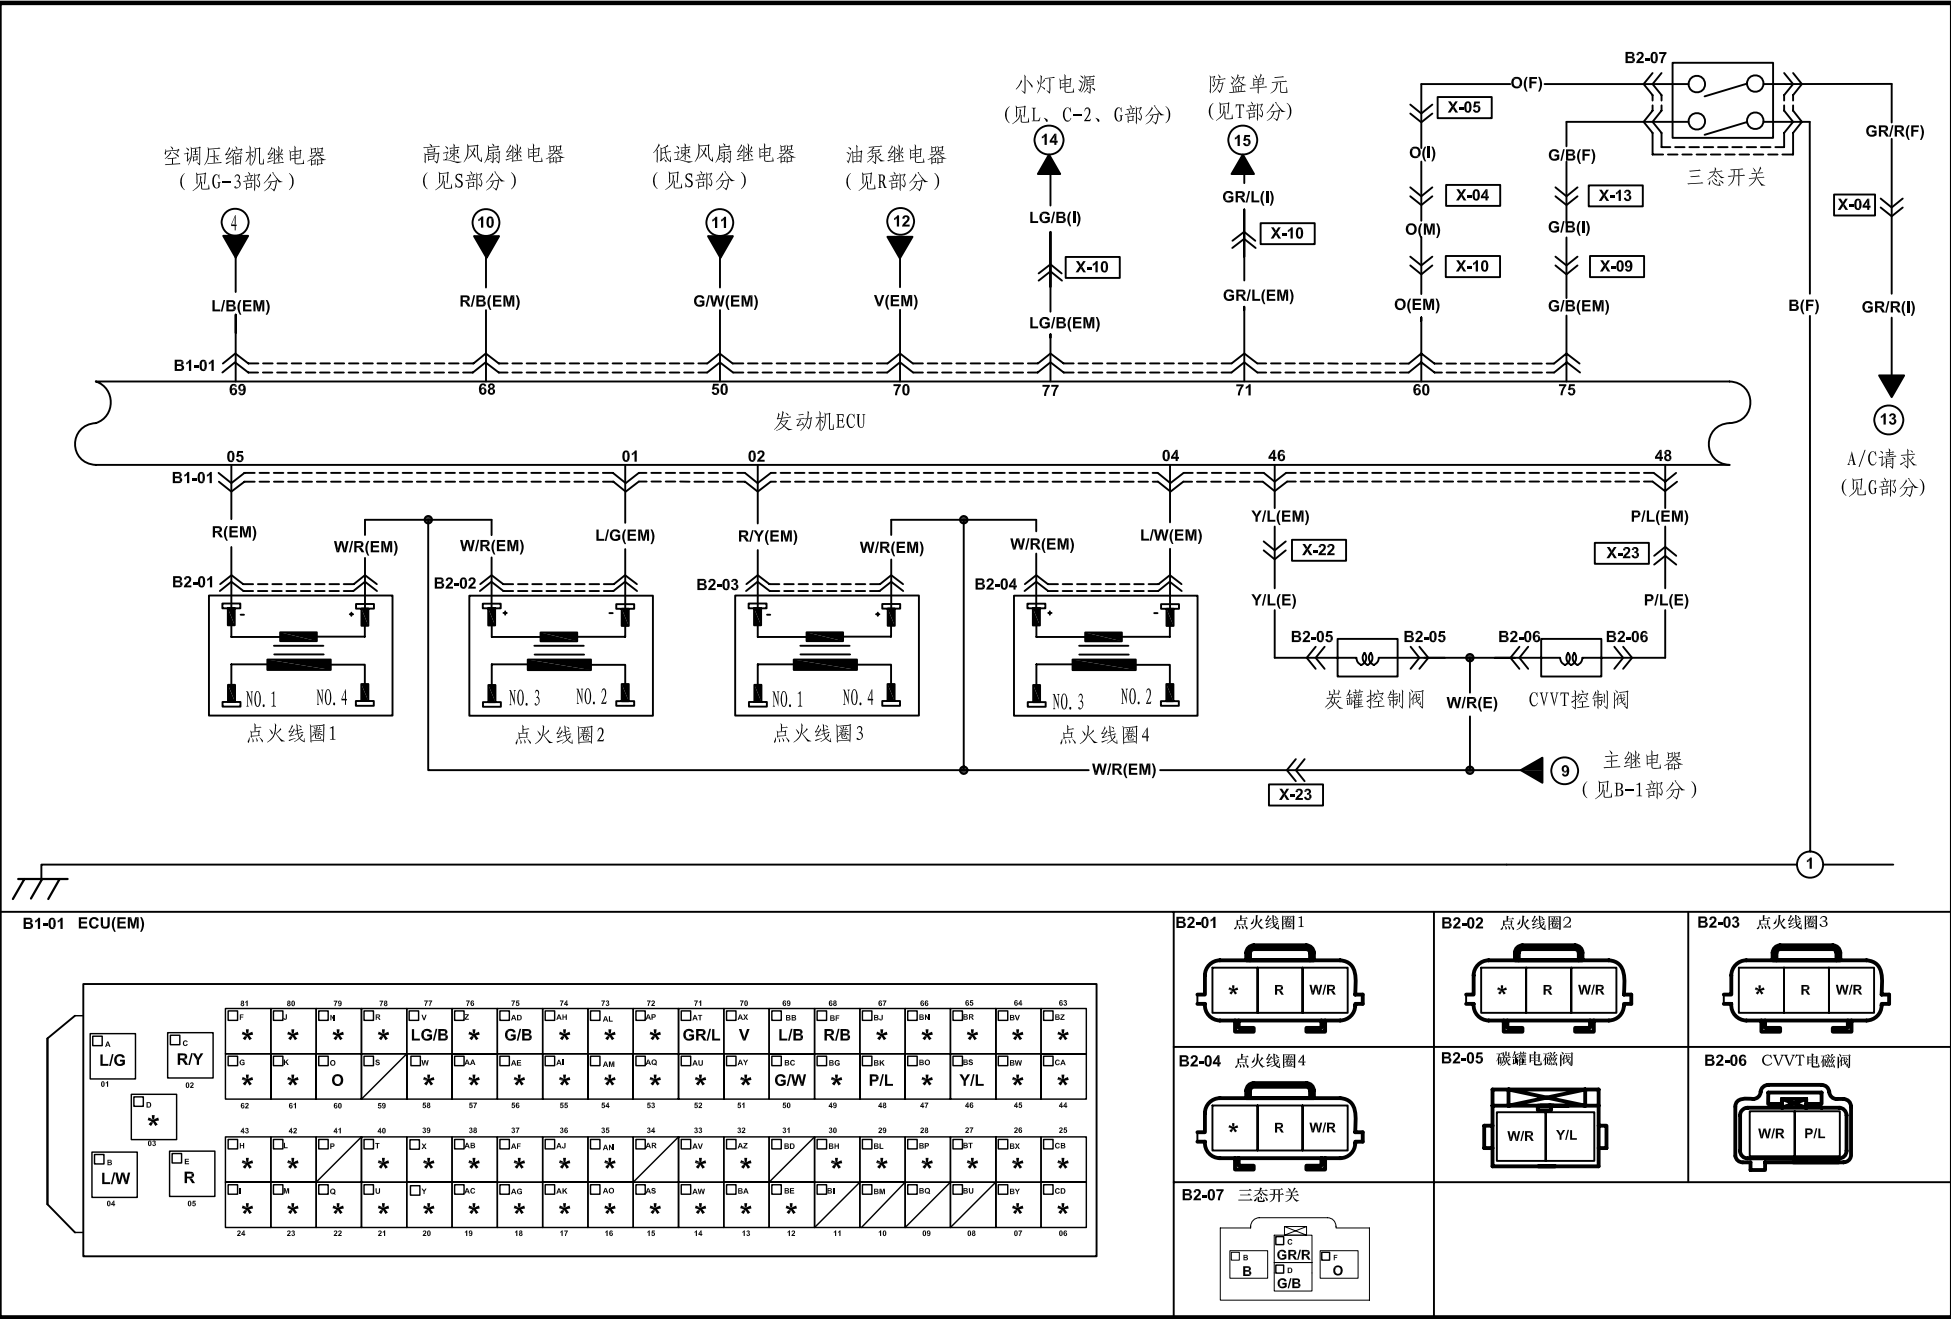


线束标识:  F  I  E

 
B

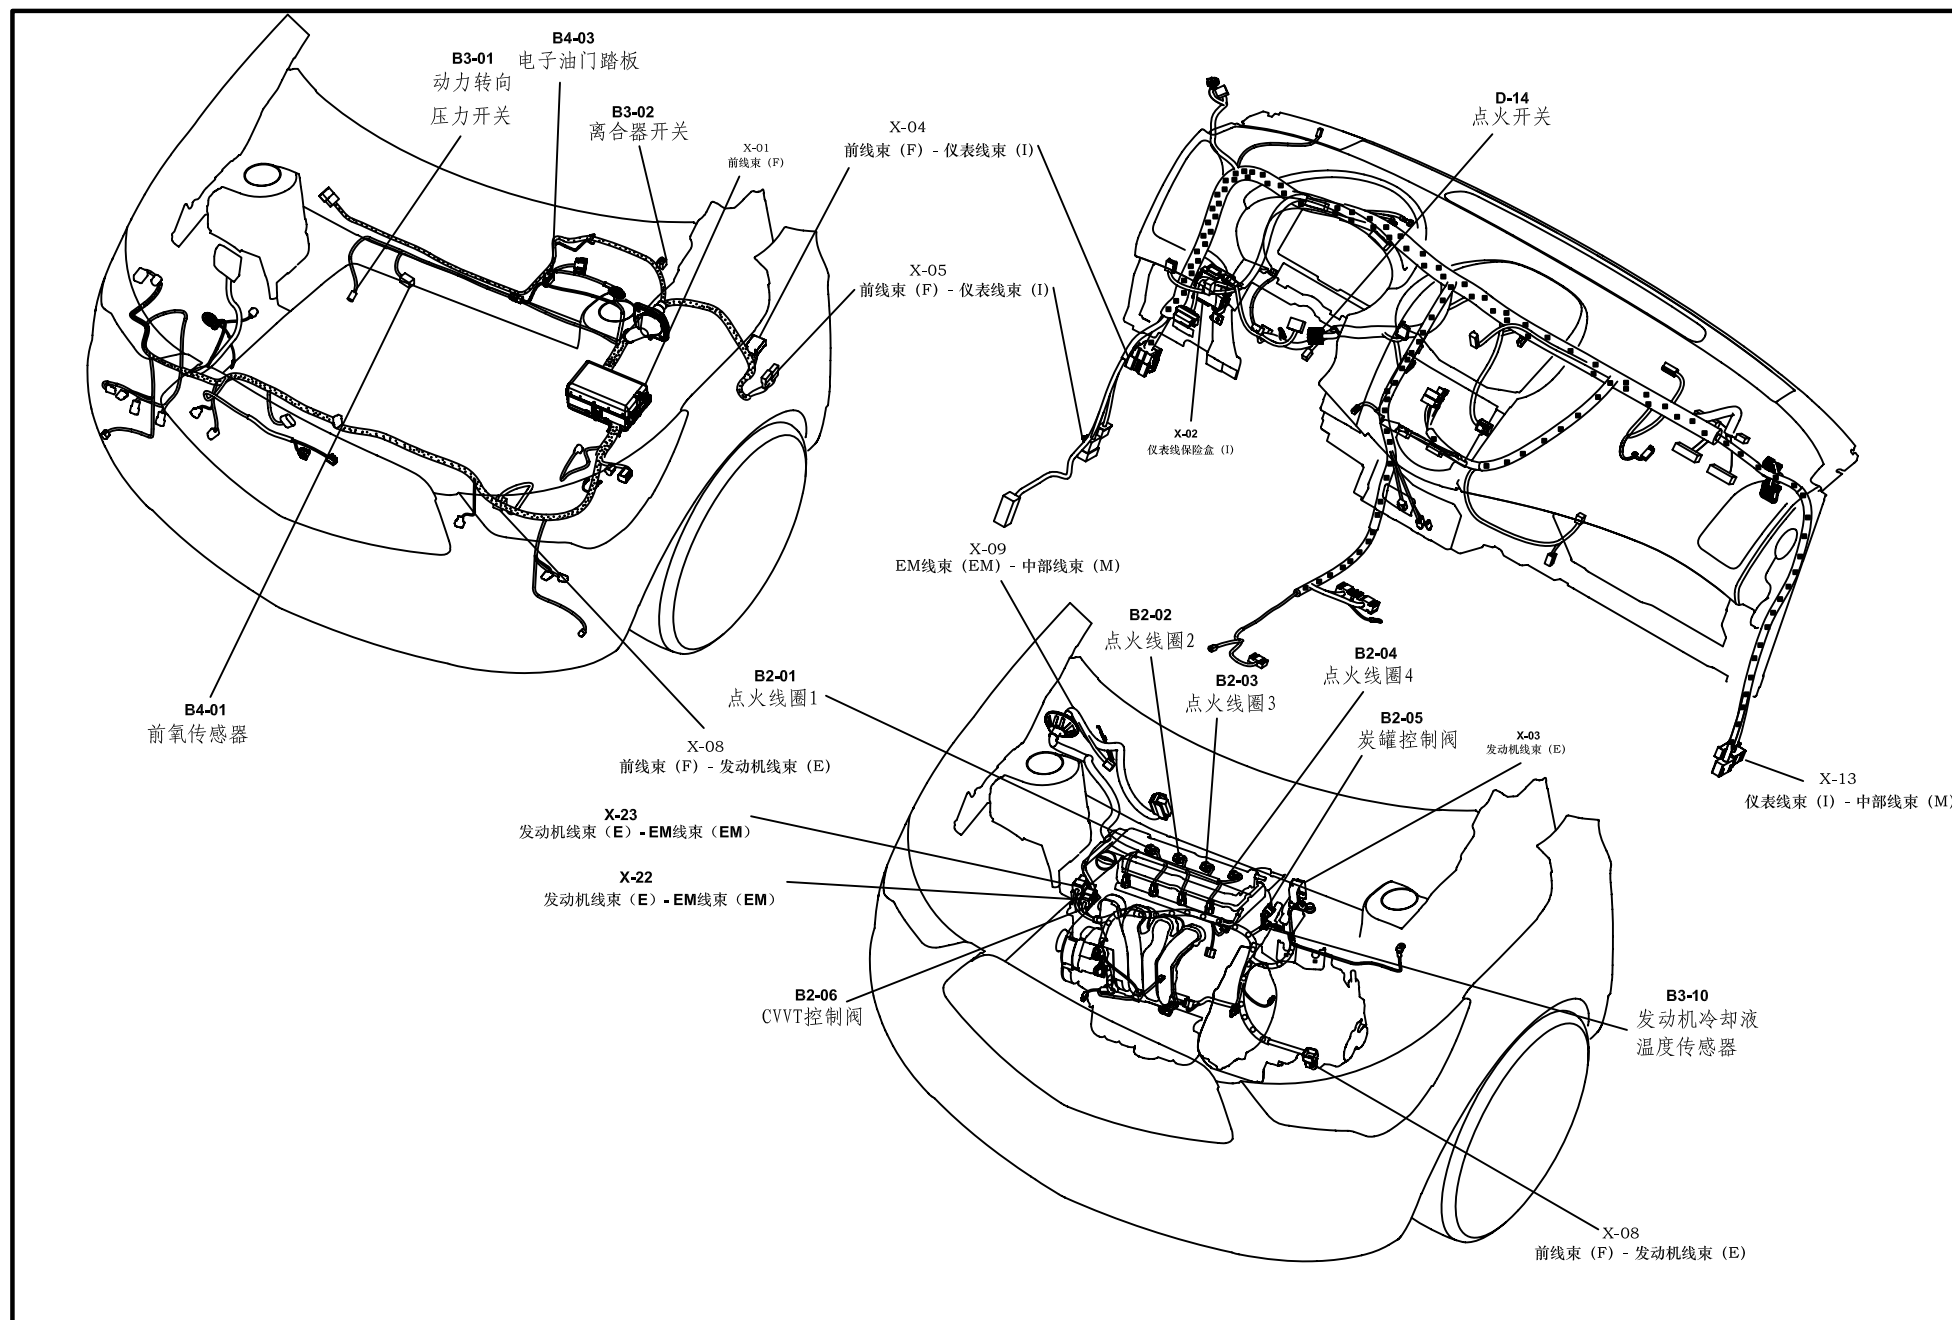



线束标识:  F  I  E


B

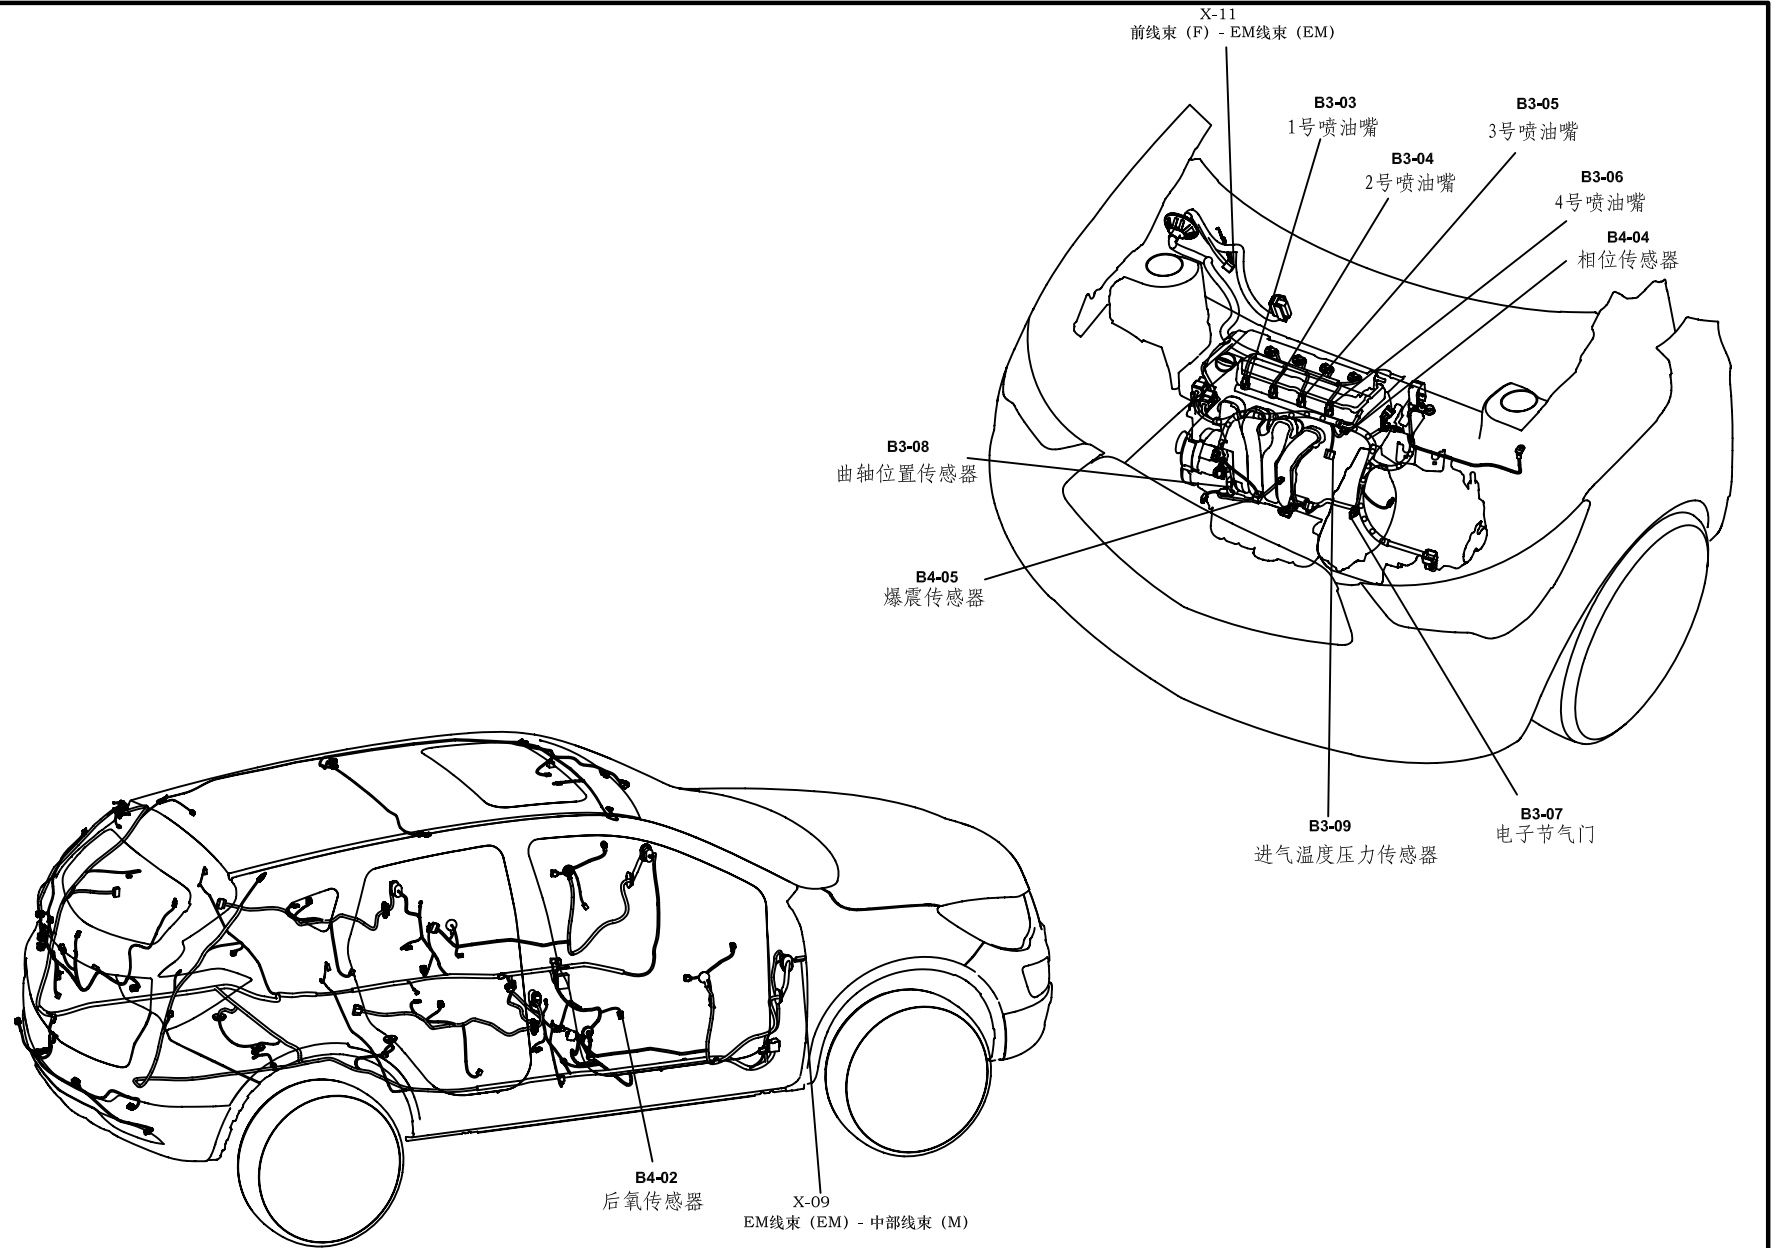

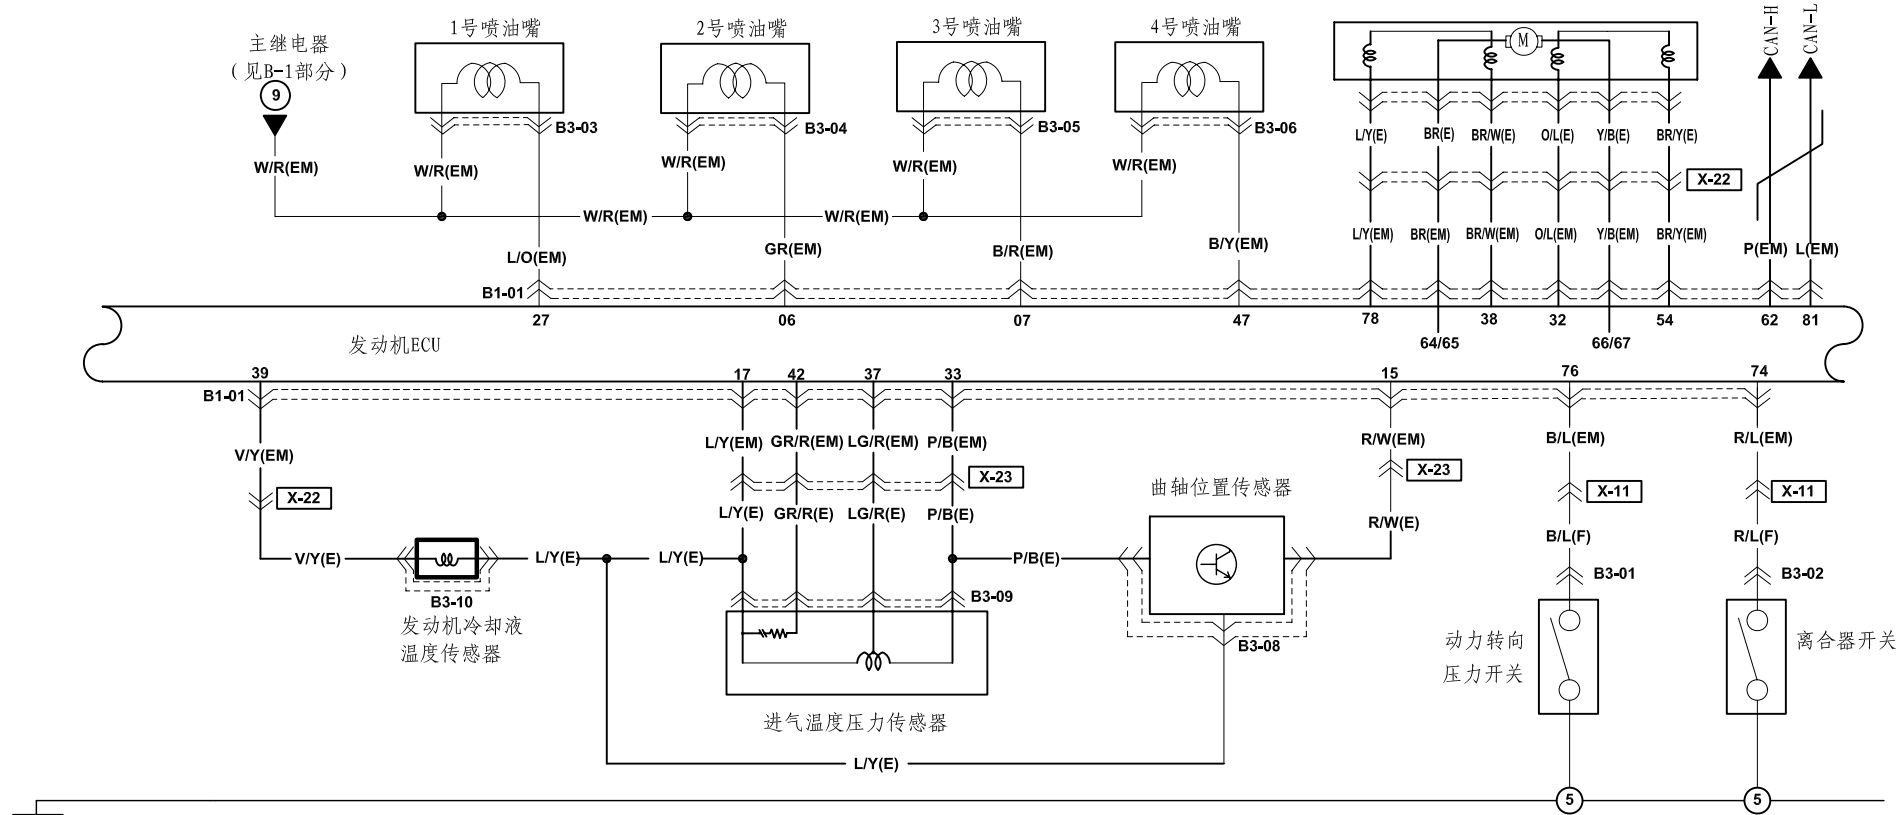



B1-01 ECU(EM)

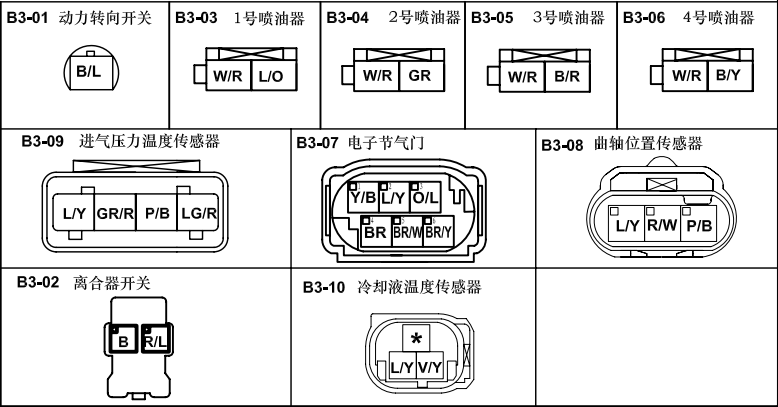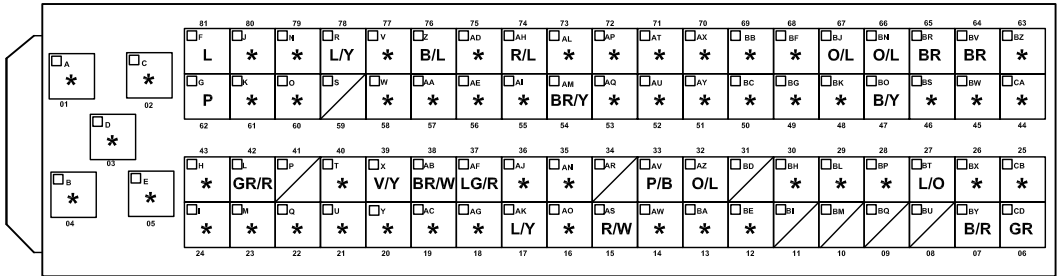

 
线束标识:  F  I  E

 
B

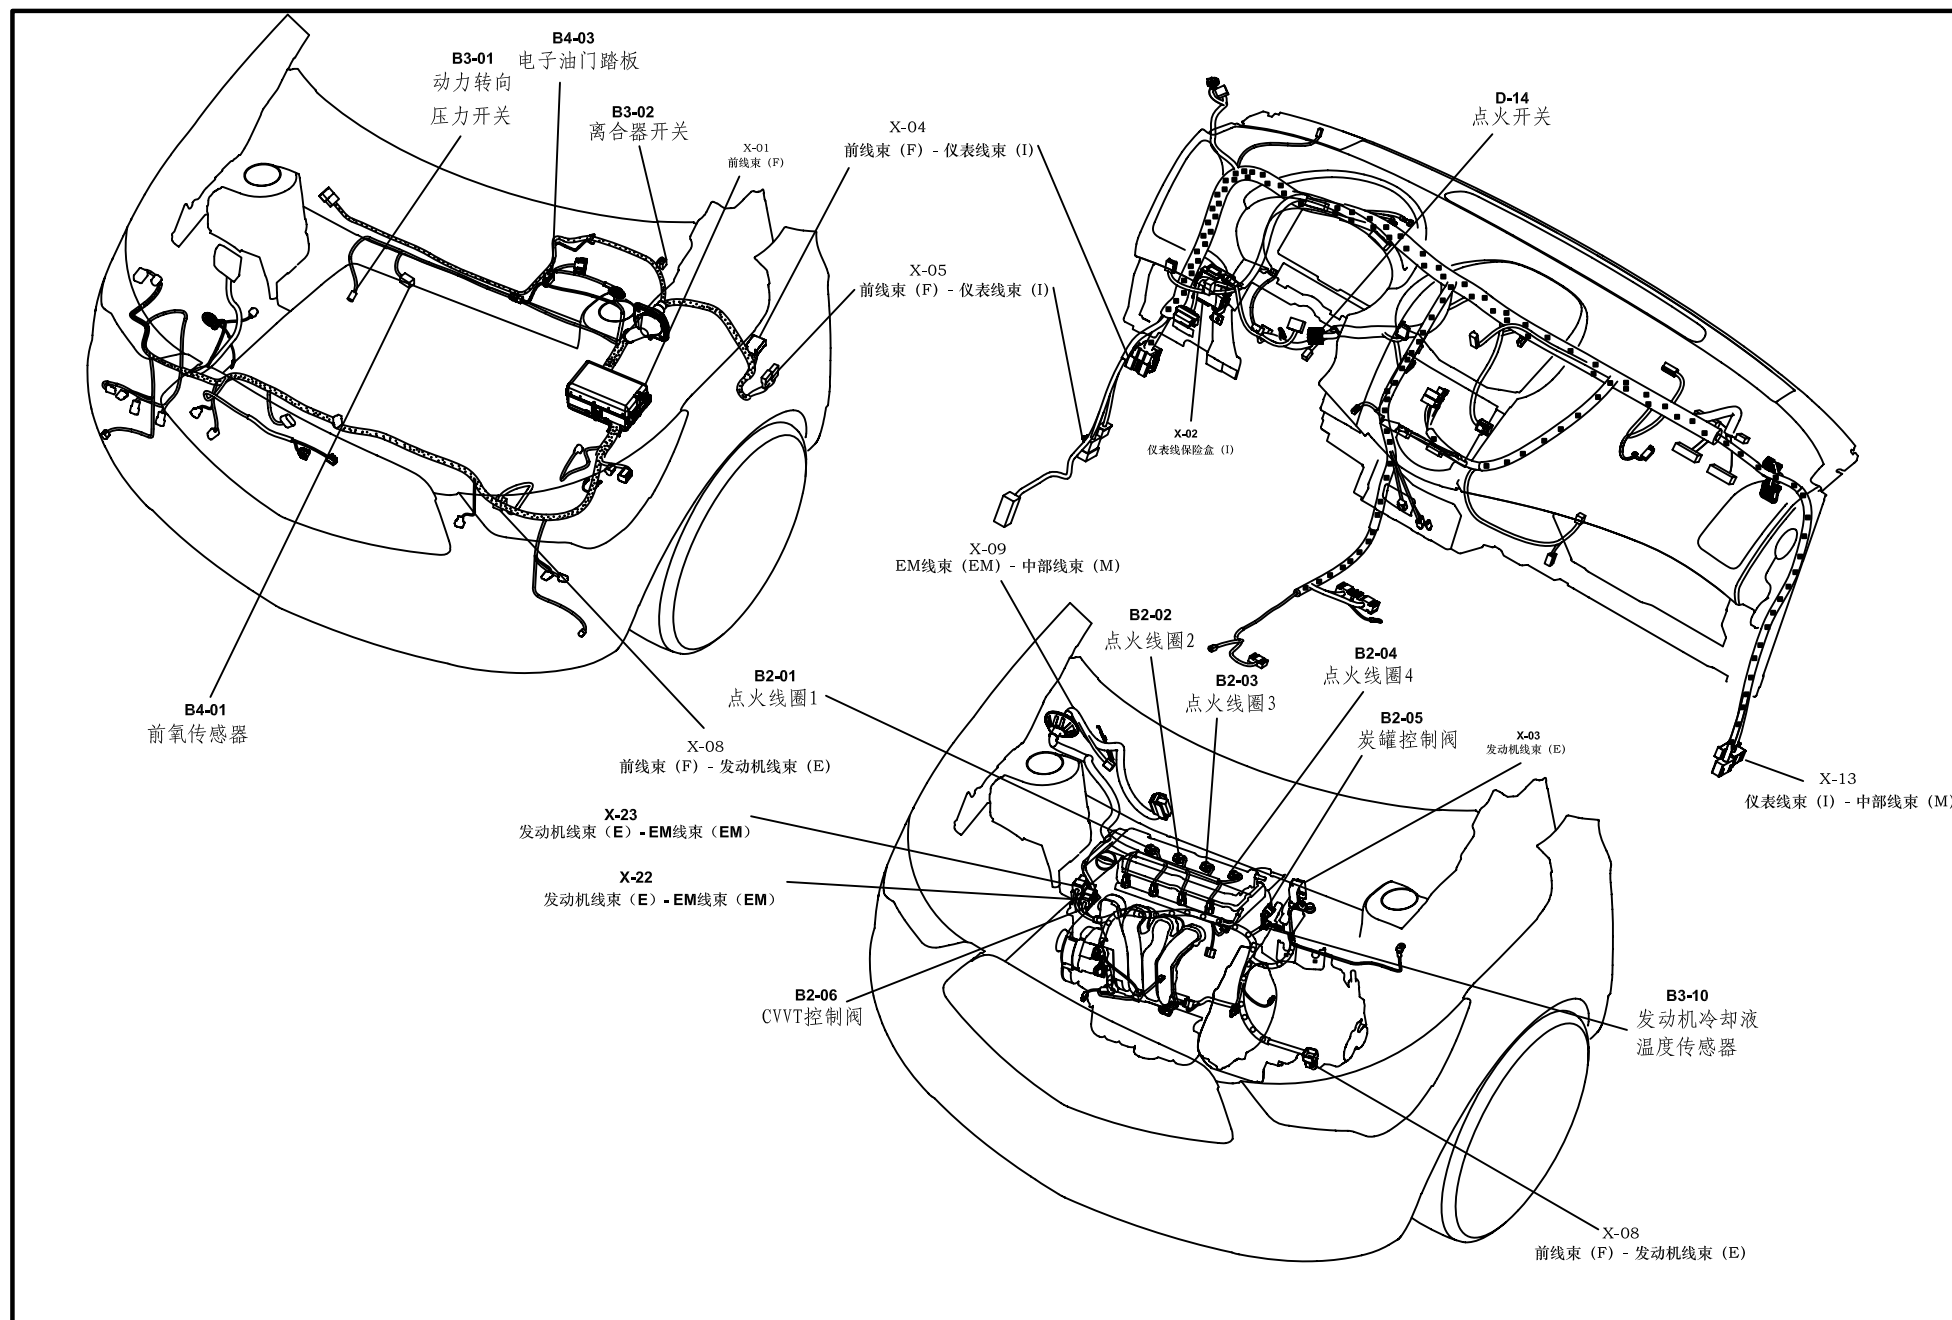

线束标识:  F  I  E

B

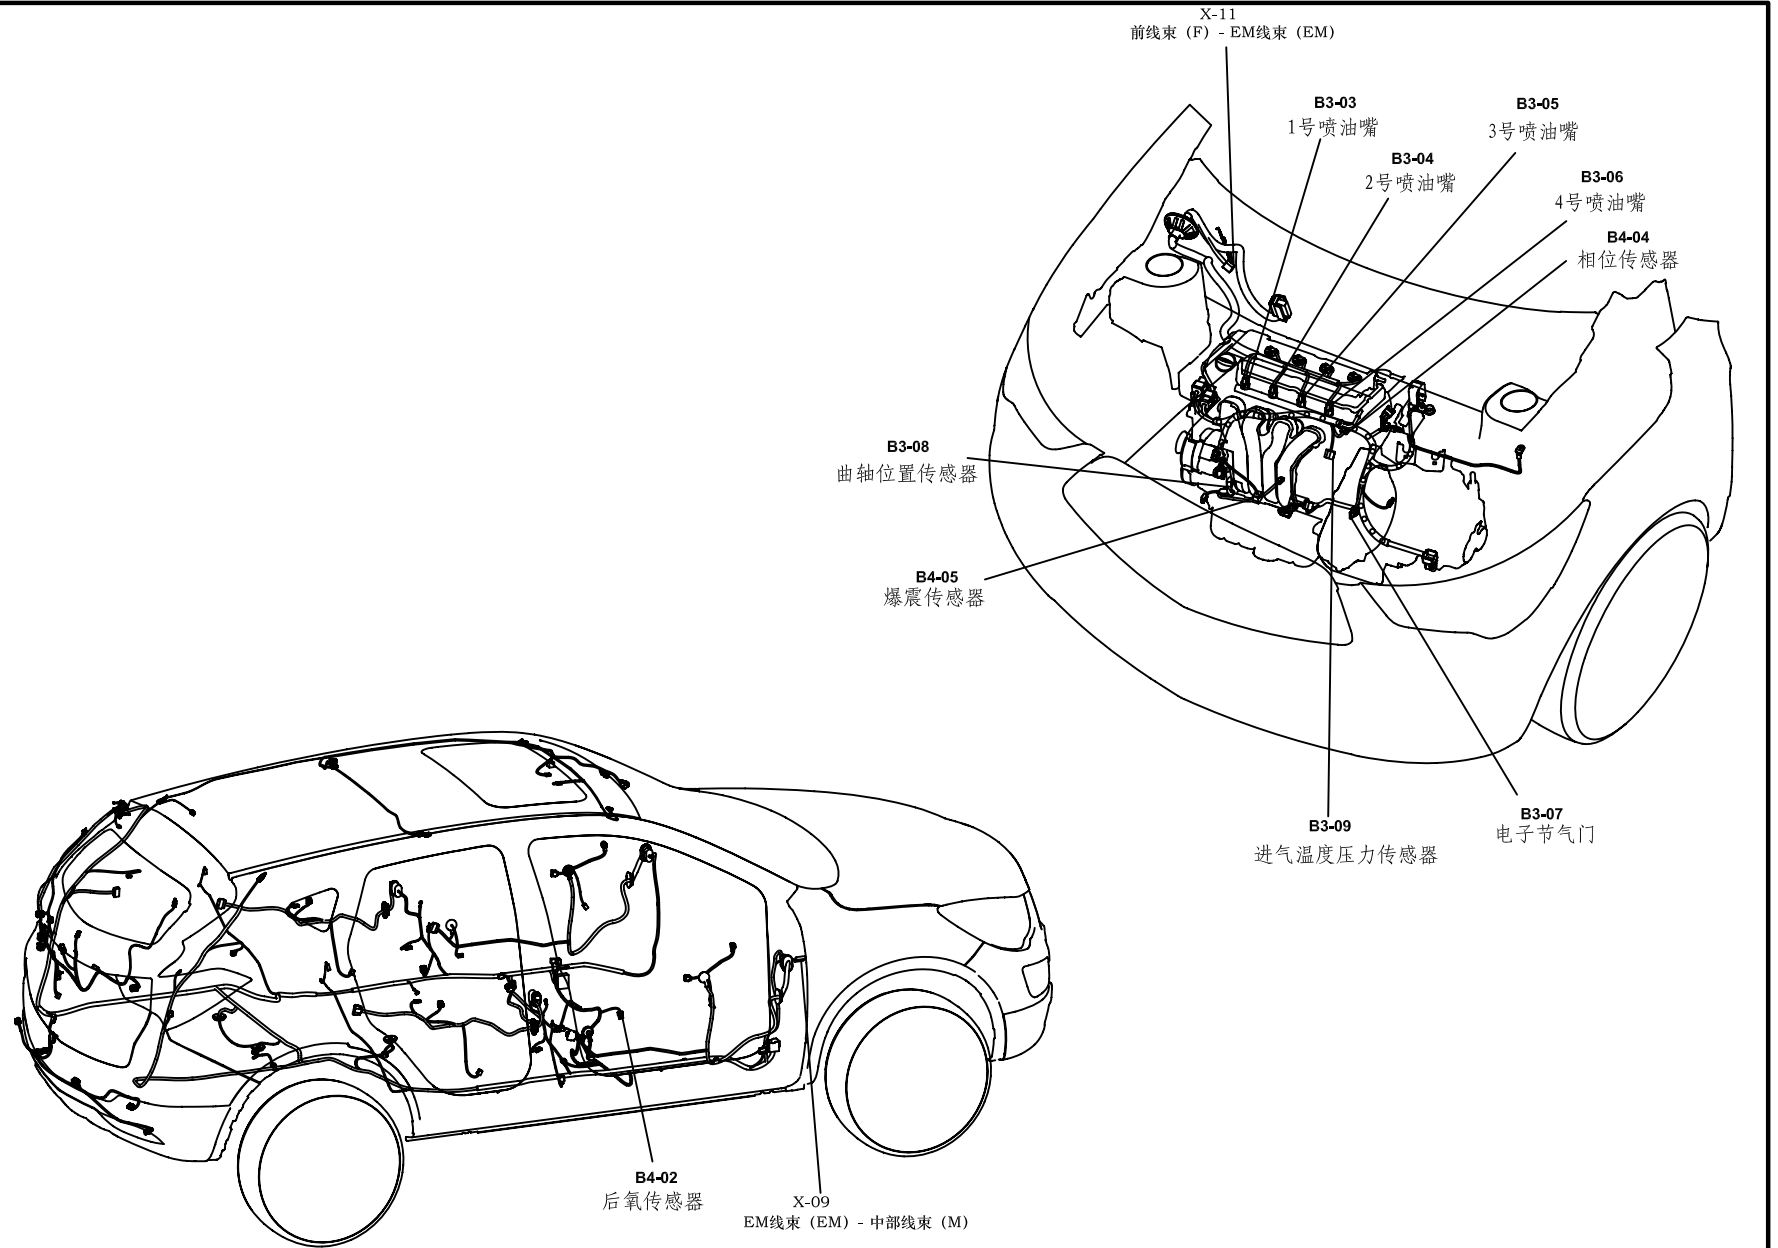

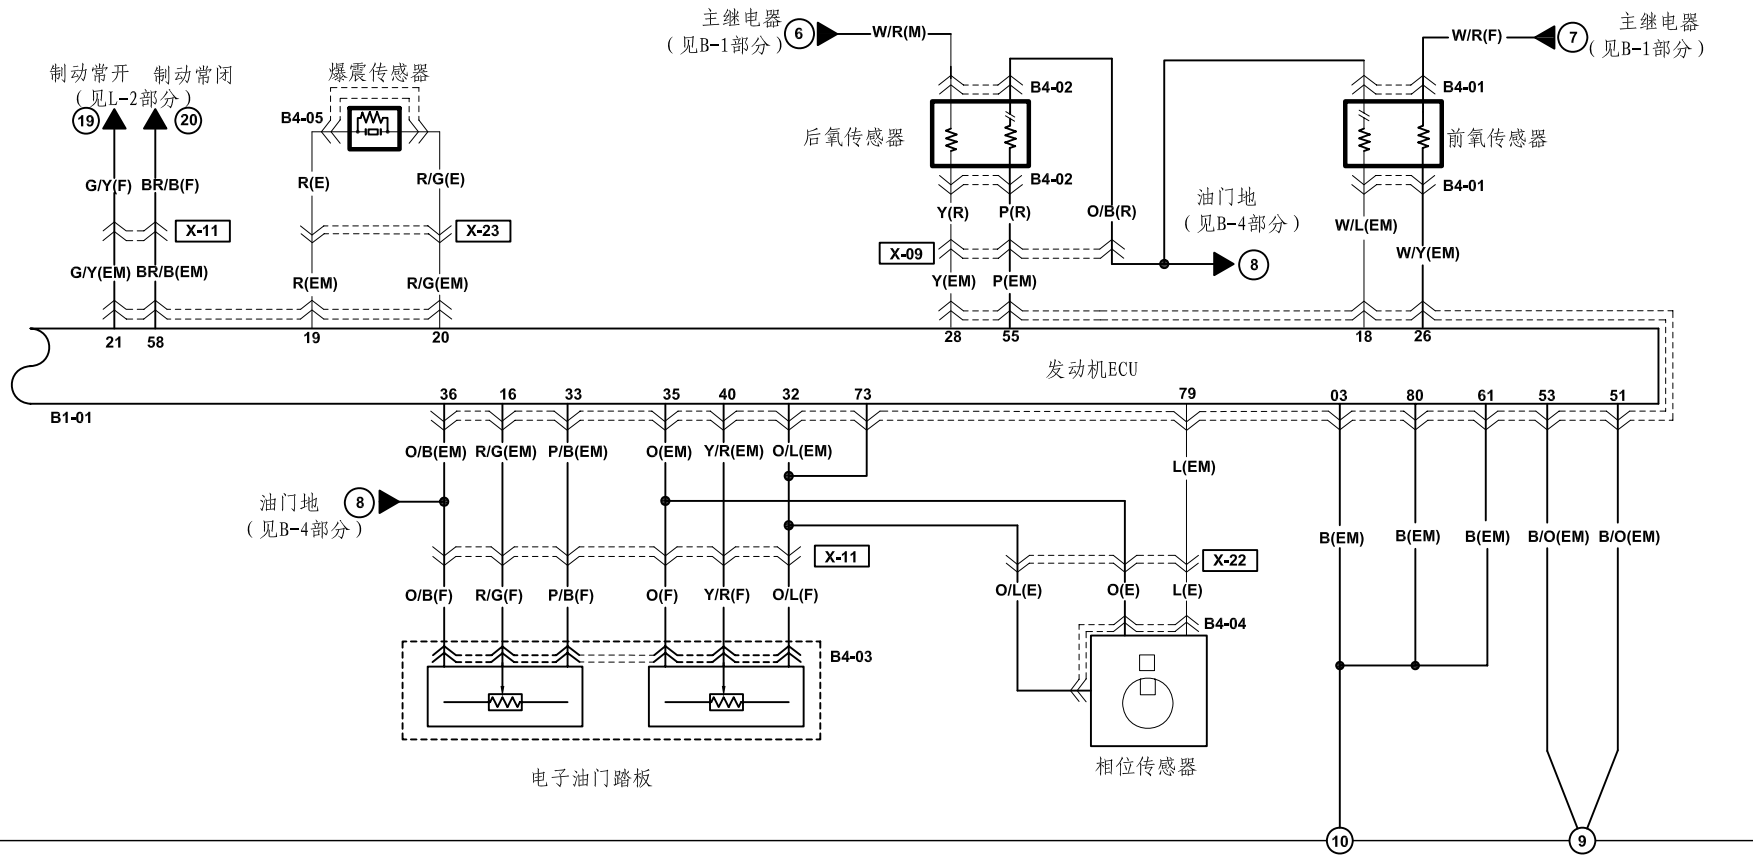

B1-01 ECU(EM)

81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63
F	N	R	V	Z	AD	AH	AL	AP	AT	AX	BB	BF	BJ	BN	BR	BV	BZ	
*	B	L	*	*	*	*	*	O/L	*	*	*	*	*	*	*	*	*	*
G	K	O	S	W	AA	AE	AI	AQ	AU	AY	BC	BG	BK	BO	BS	BW	CA	
*	B	*		BR/B	*	*	P	*	B/O	*	B/O	*	*	*	*	*	*	*
62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44
H	P	T	X	AB	AF	AJ	AN	AR	AV	AZ	BD	BH	BL	BP	BT	BK	CB	
*	*		Y/R	*	*	O/B	O		P/B	O/L			*	Y	*	W/Y	*	
I	M	Q	U	V	AG	AK	AO	AS	AW	BA	BE	BI	BM	BQ	BU	BY	CD	
*	*	*	B/W	R/G	R	W/L	*	R/G	*	*	*					*	*	
24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06

 
B4-01 前氧传感器

B4-02 后氧传感器


B4-03 电子油门踏板


B4-04 相位传感器

B4-05 爆震传感器

线束标识:  F  I  E

 B

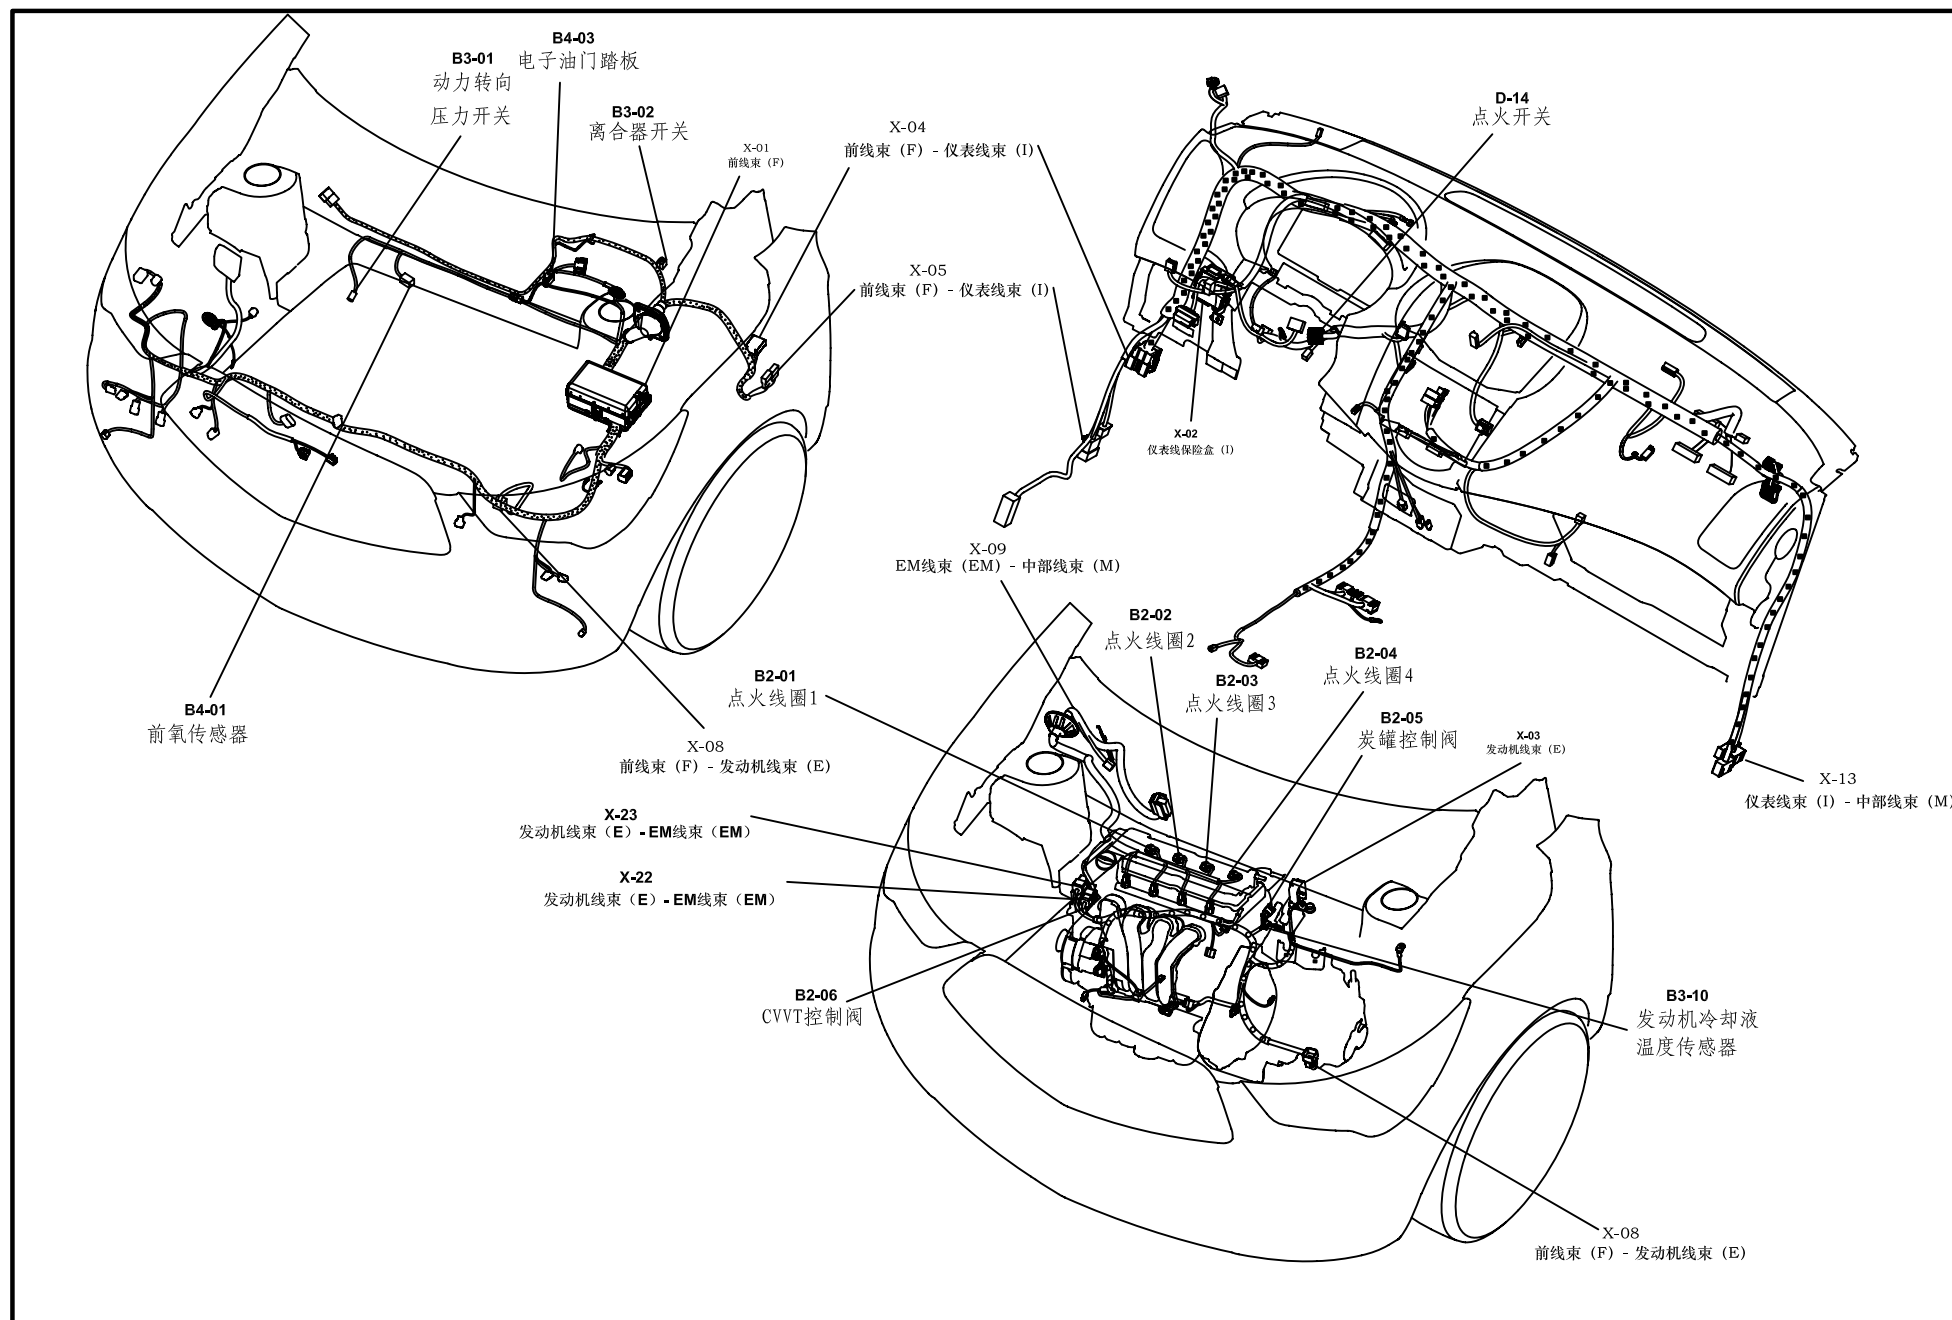

线束标识:  F  I  E

B

