



前舱线束接地点布置图

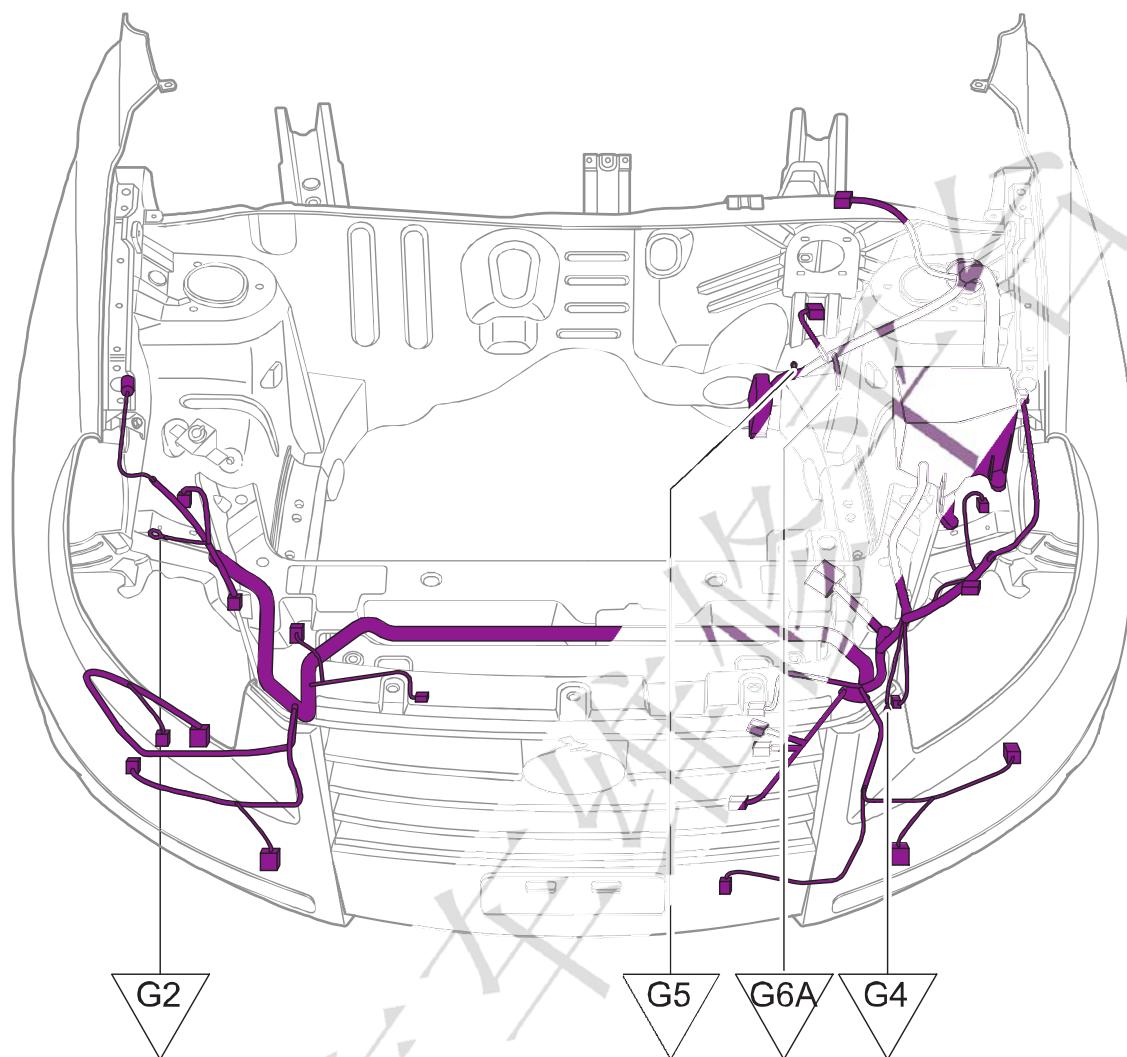


NL13-06018

发动机线束接地点布置图(JLD-4D20)

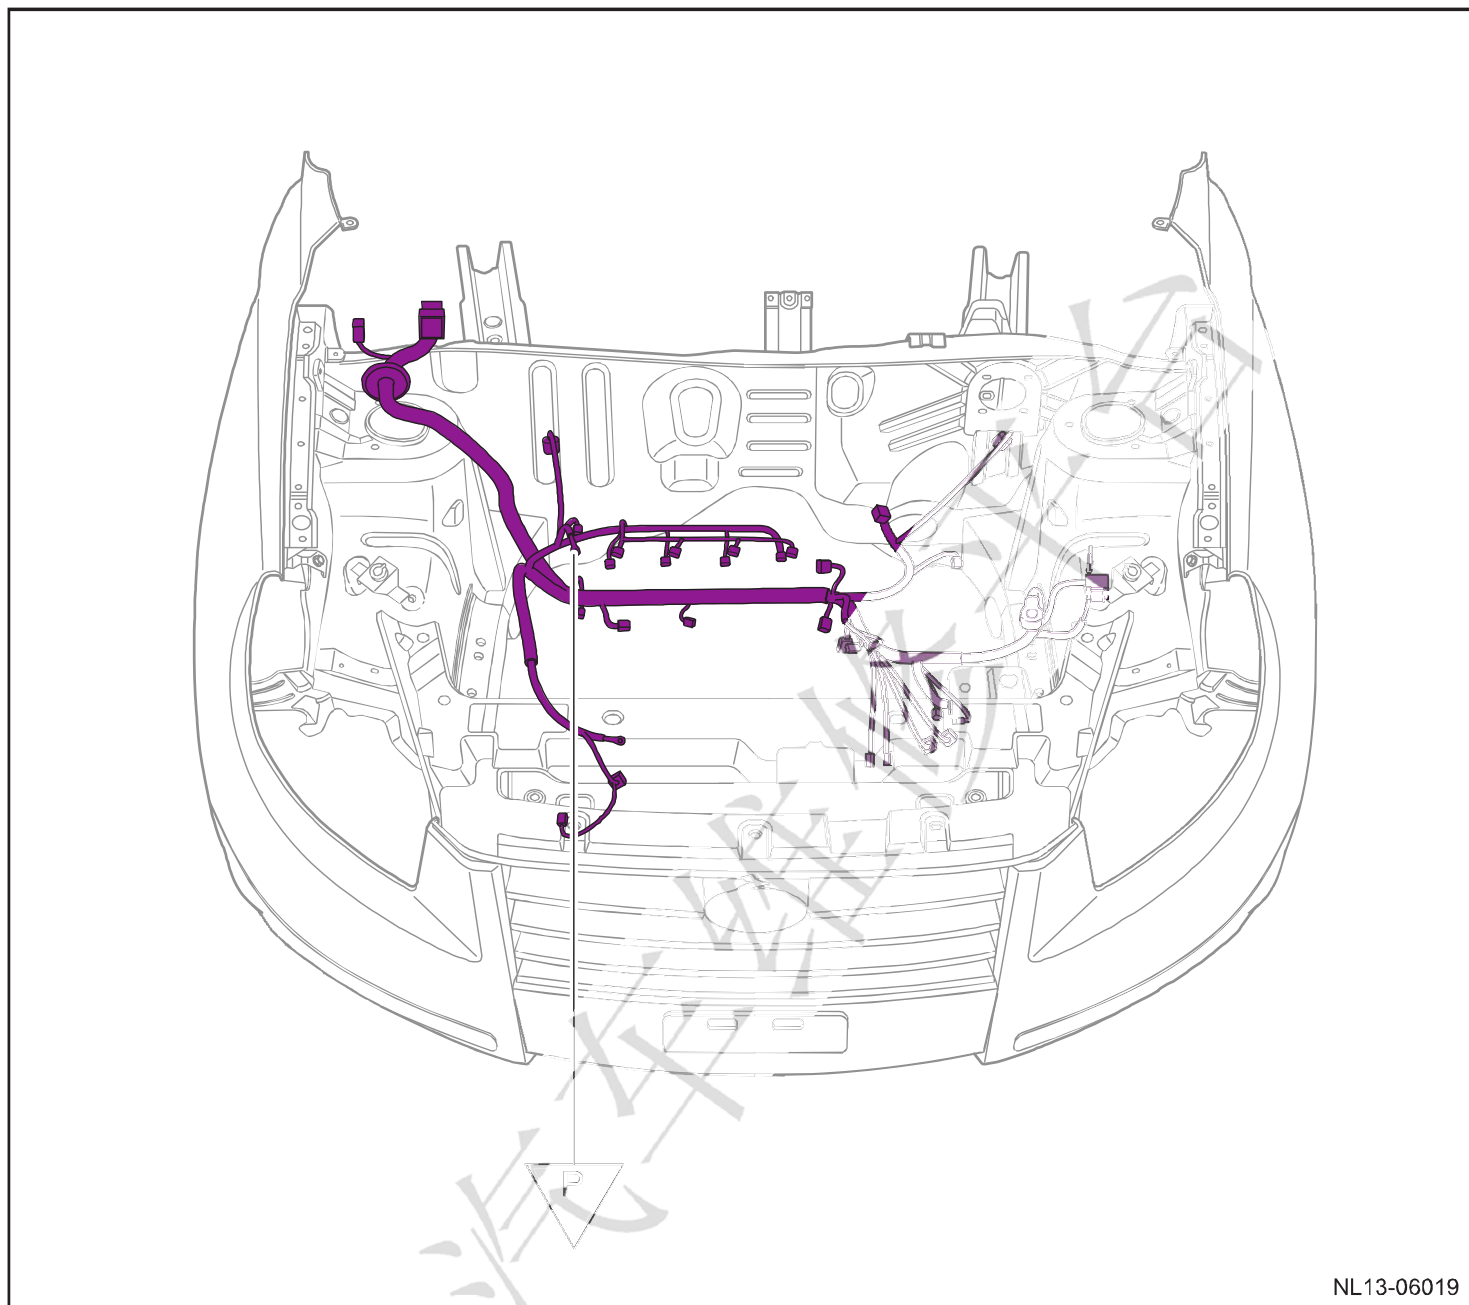


发动机线束接地点布置图(JLC-4G18)

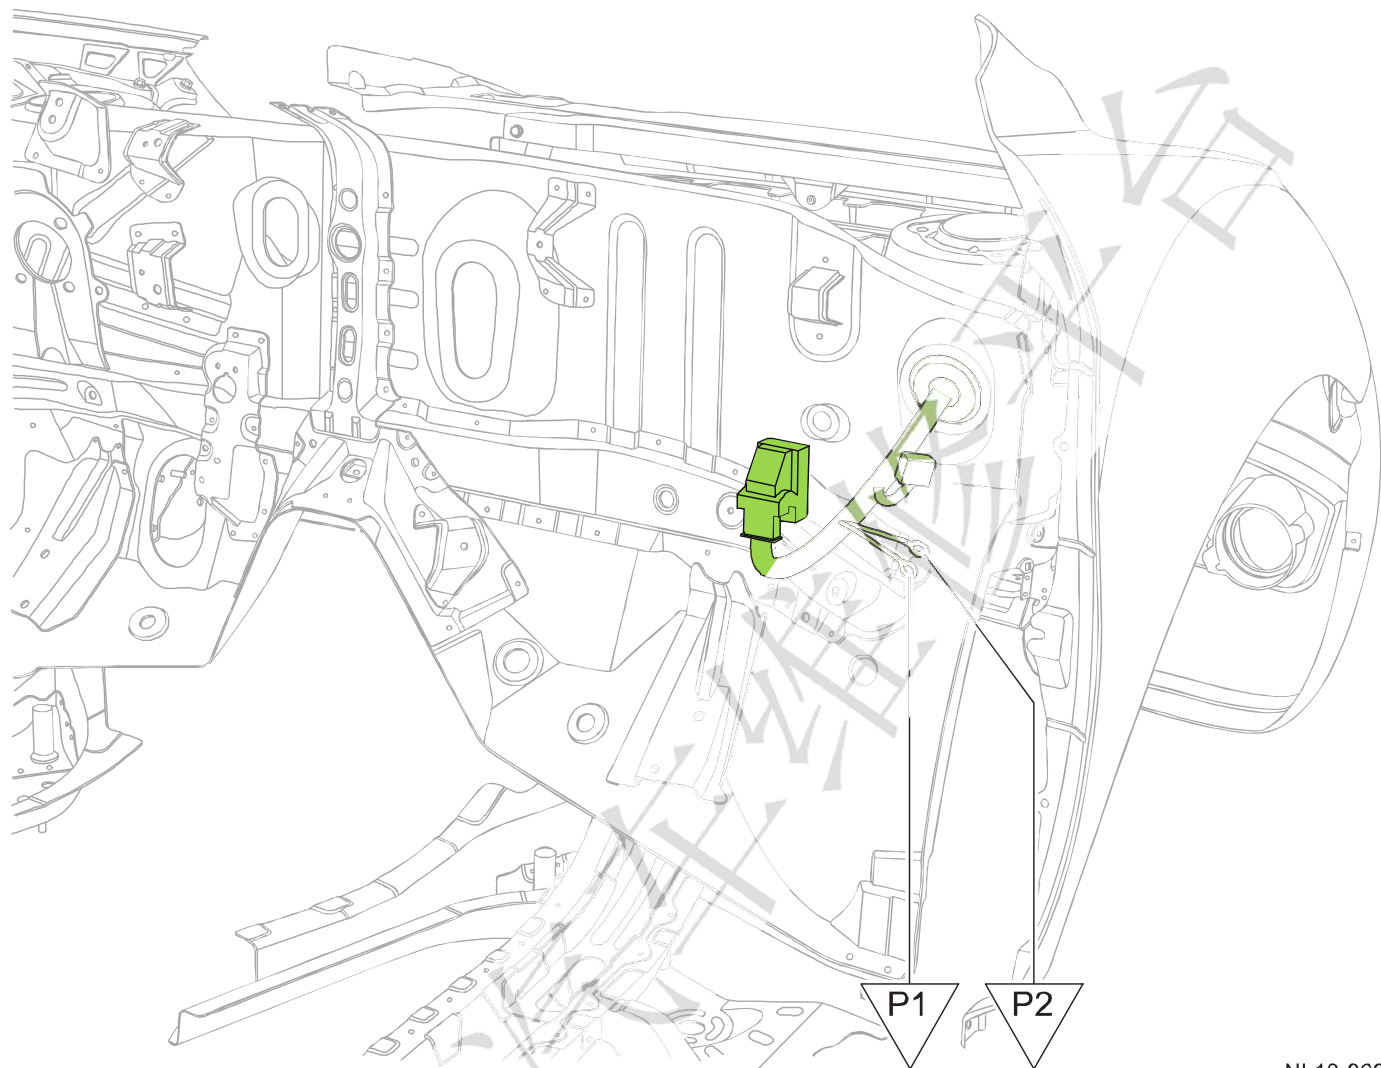


NL13-06022

发动机线束接地点布置图(JLD-4G20)-联电系统

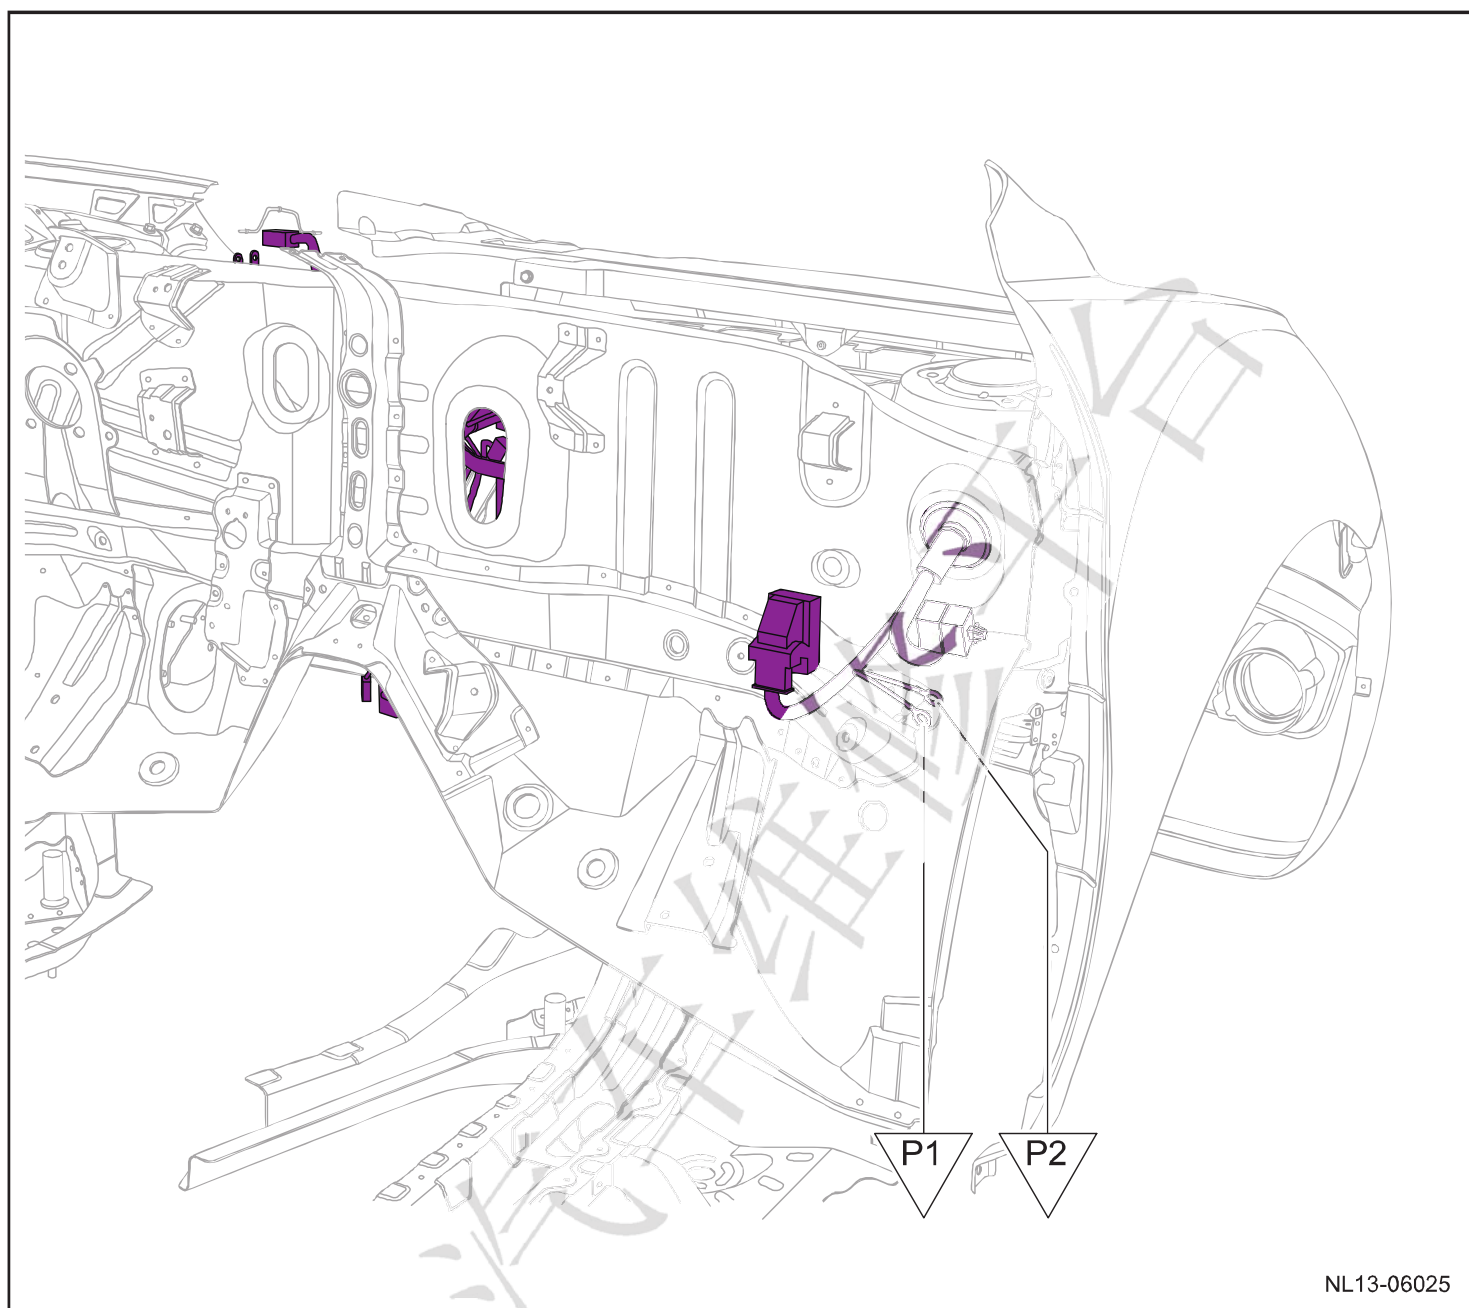


发动机线束接地点布置图(JLD-4G20)-联电系统(续1)

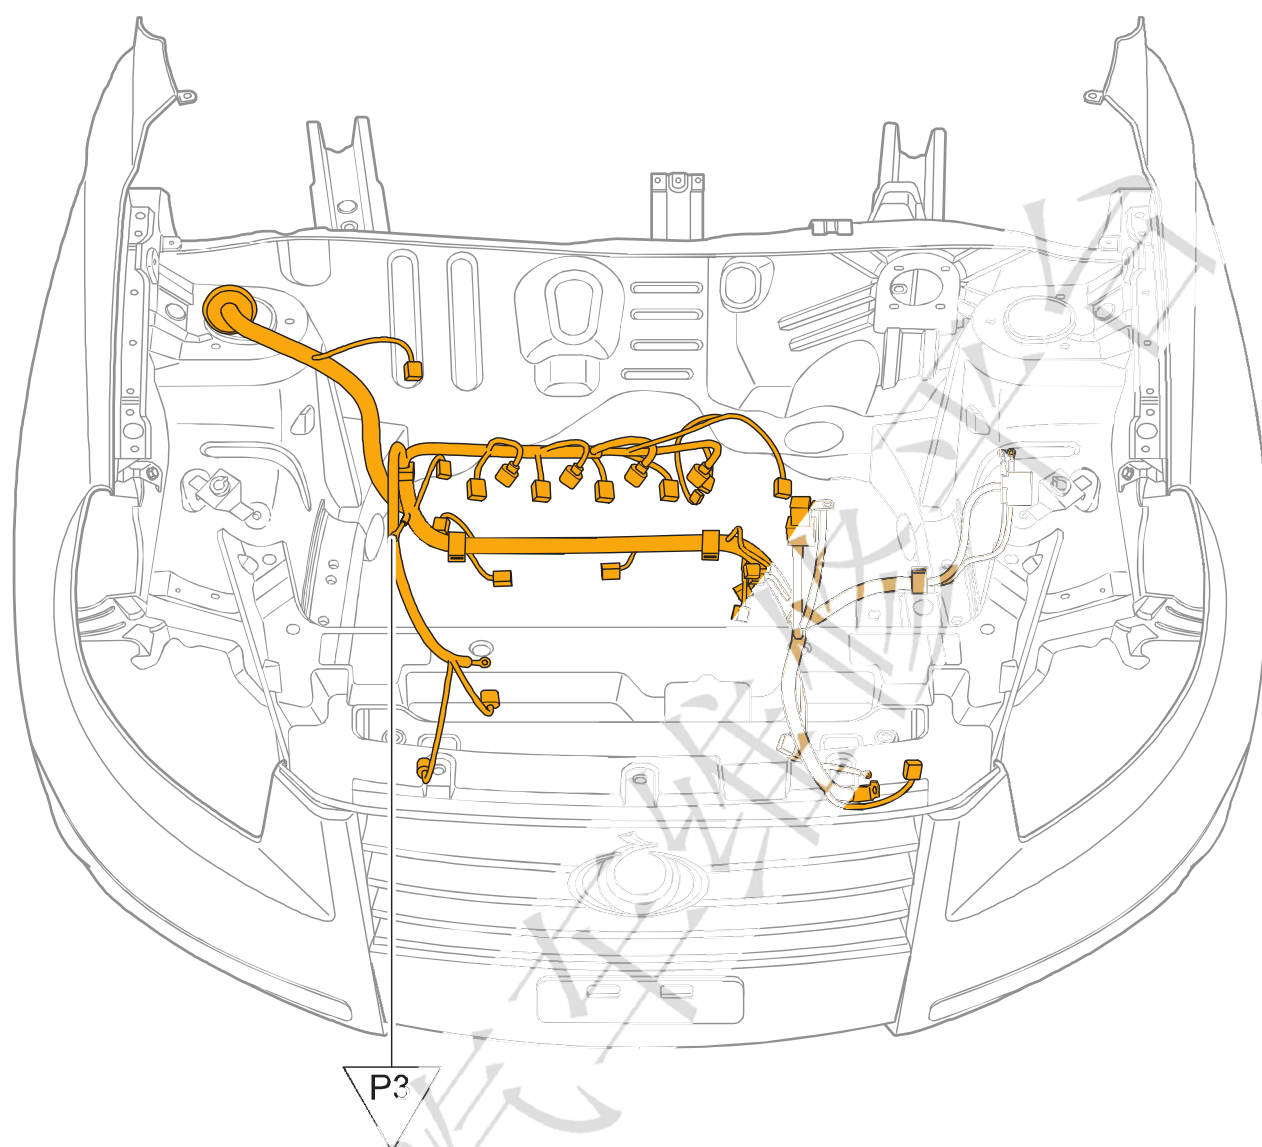


NL13-06024


蓄电池负极线束接地点布置图

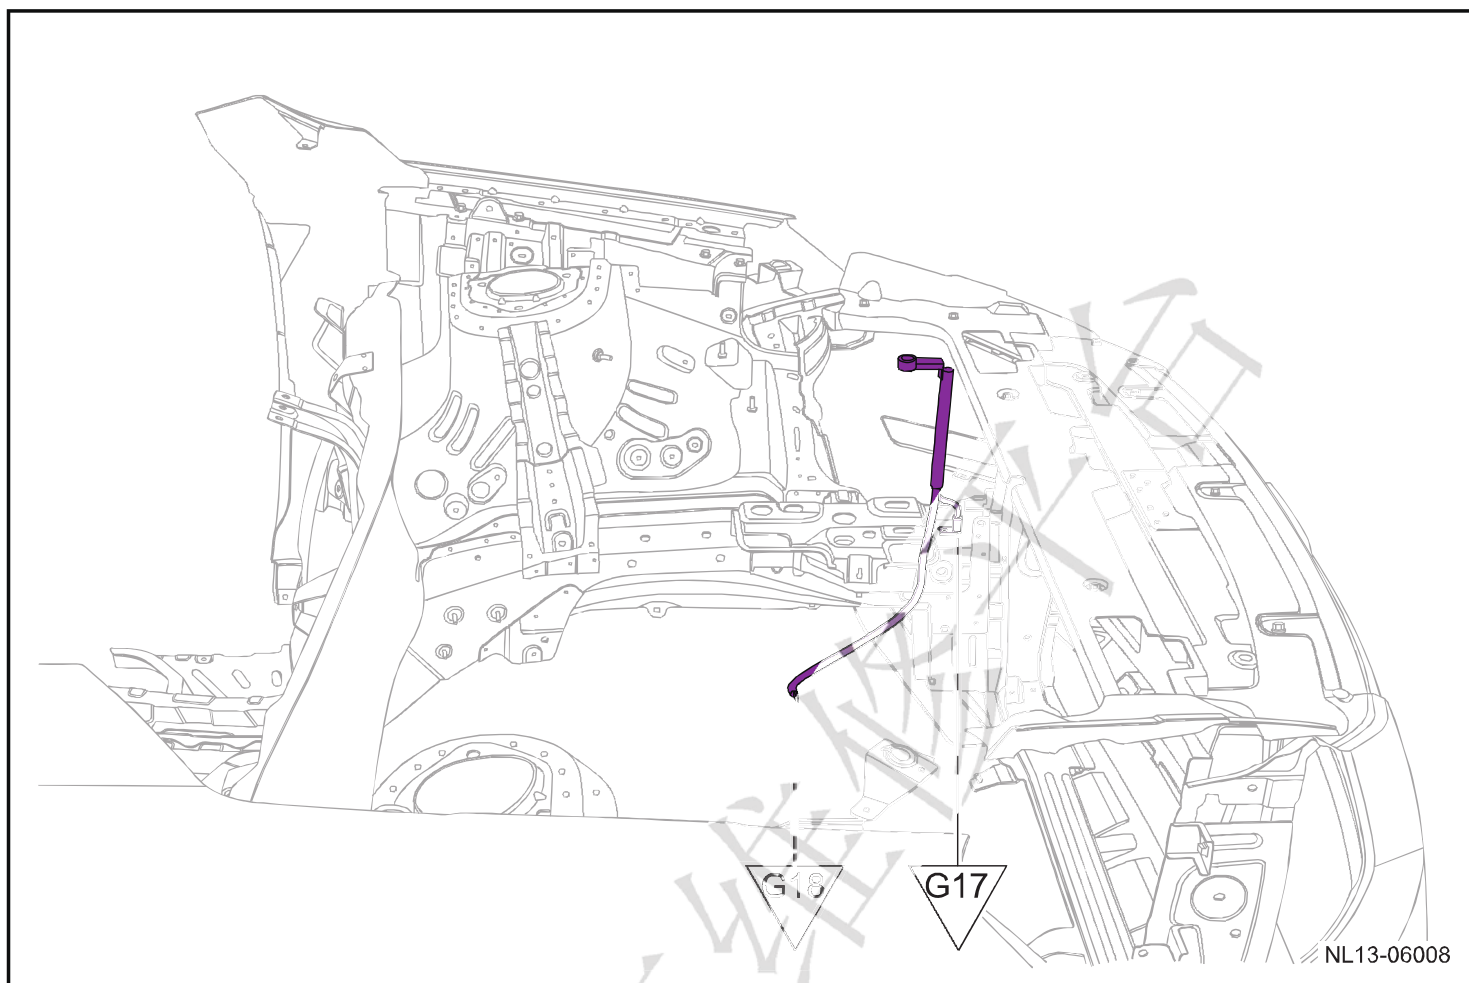


仪表线束接地点布置图

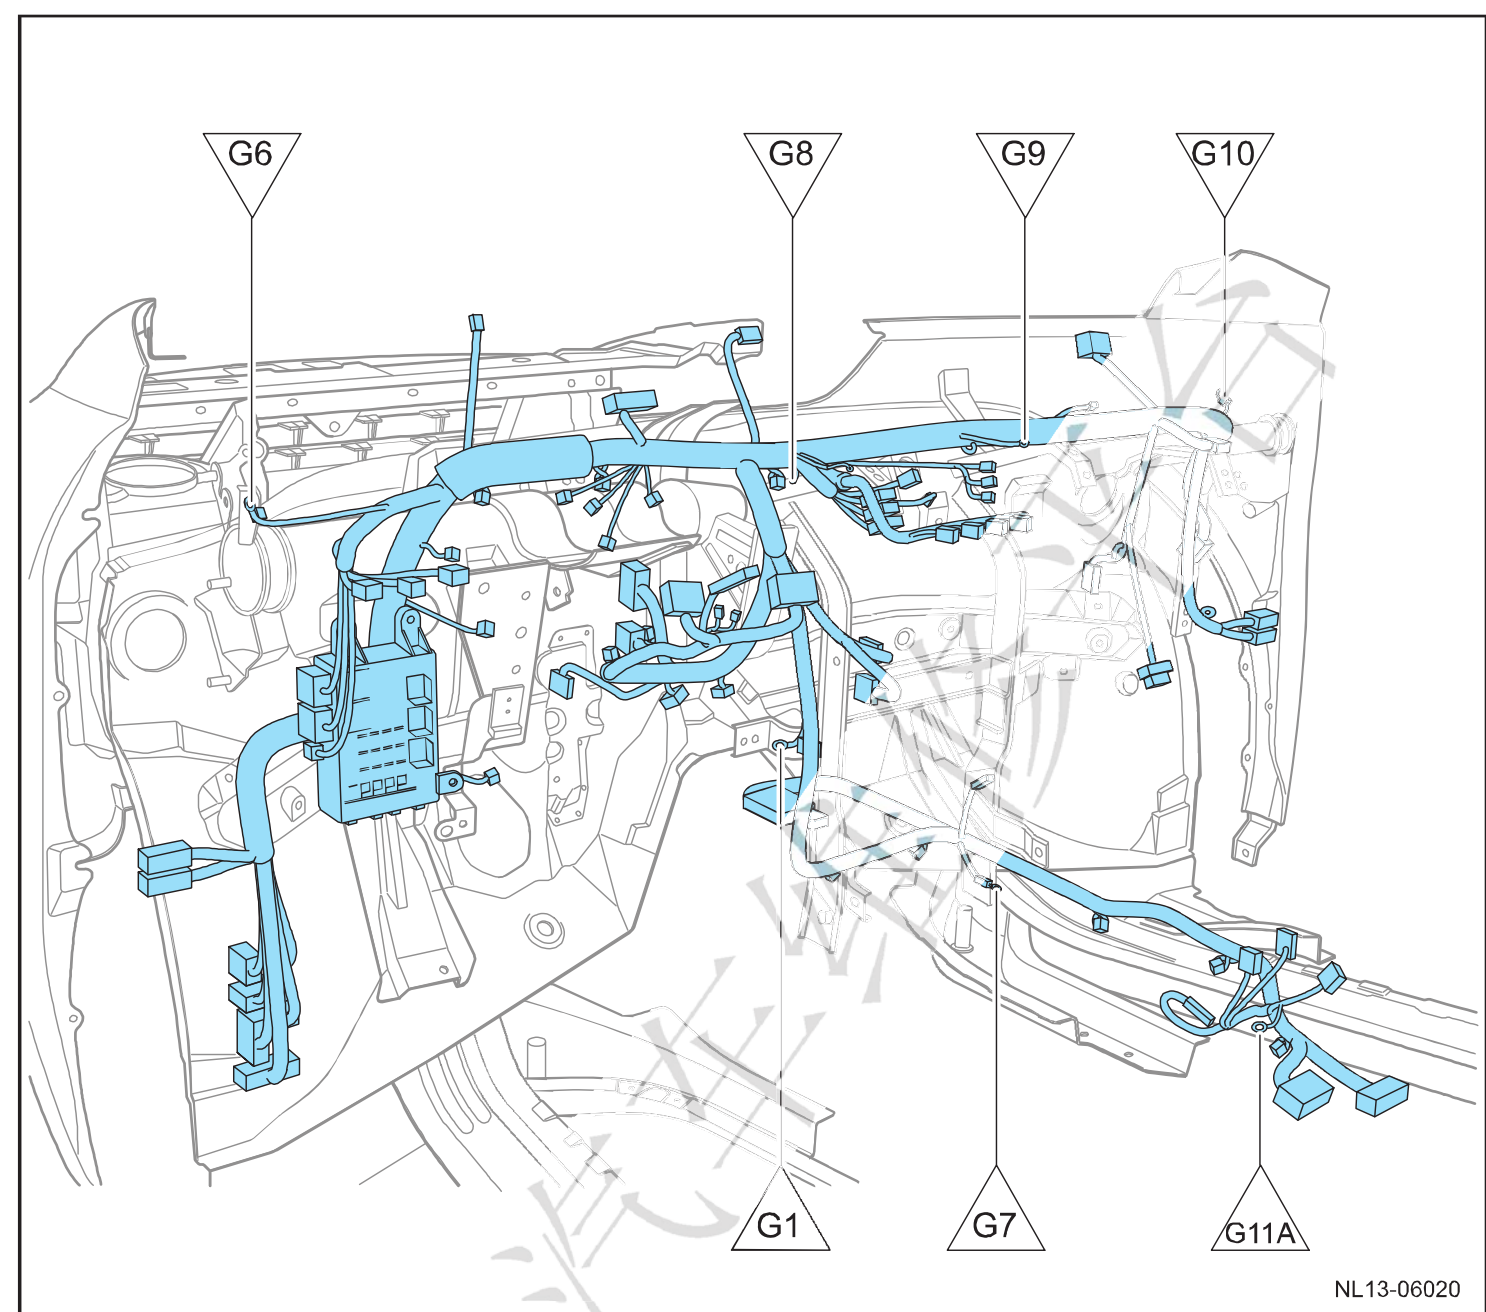

底板线束接地点布置图

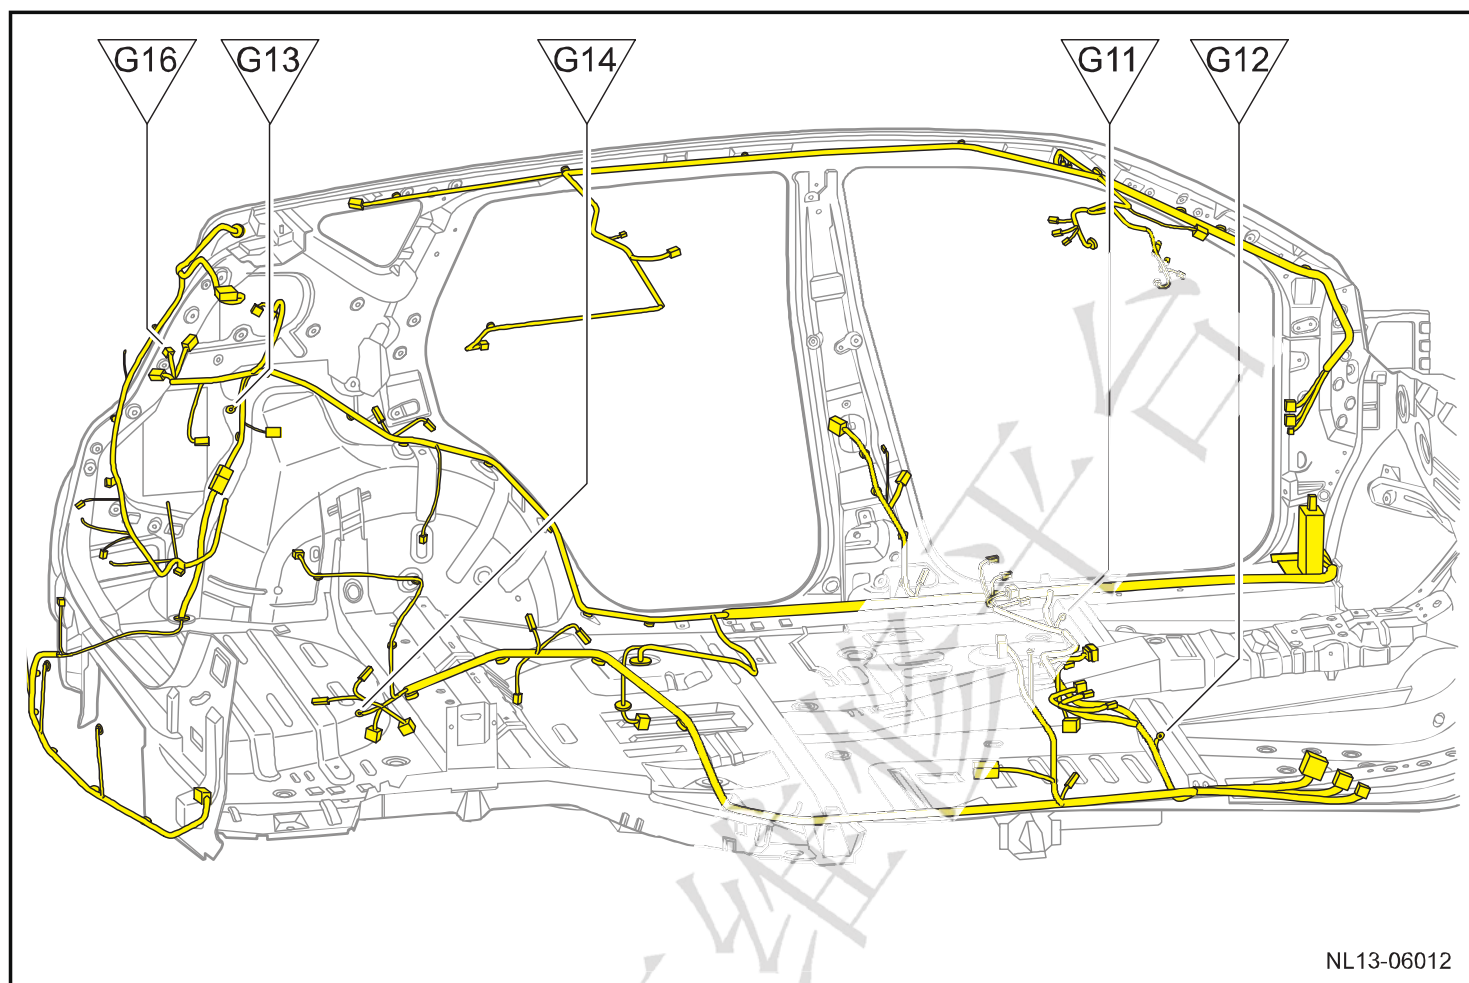


接地线路图1（G6）

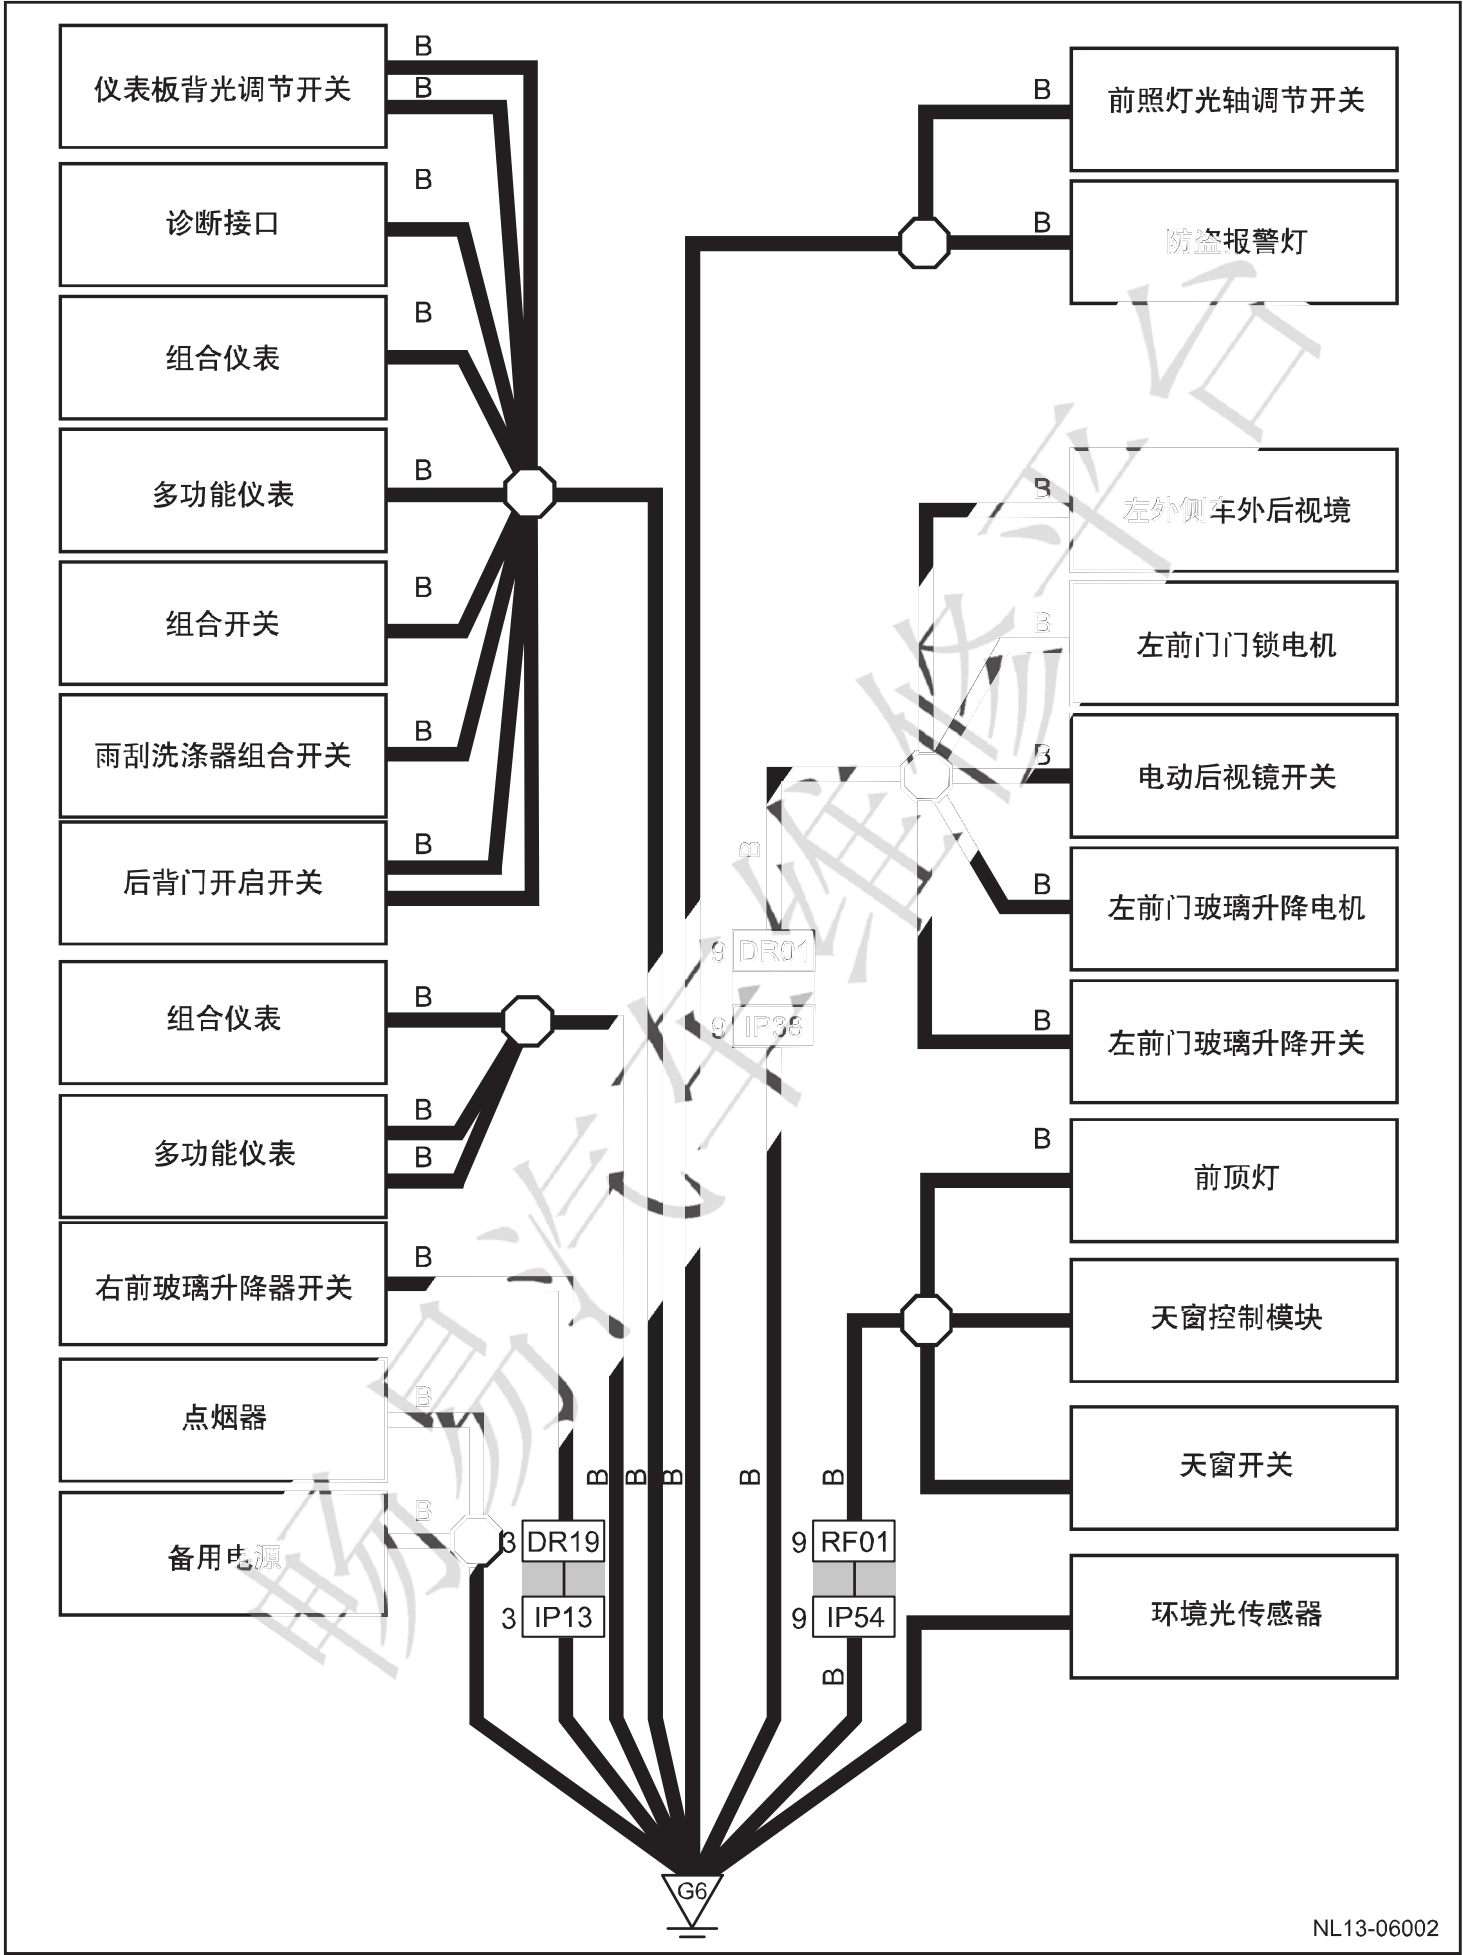


NL13-06002

接地线路图2 (G5, G6A, G7, G10, P, P1, P2, P3)

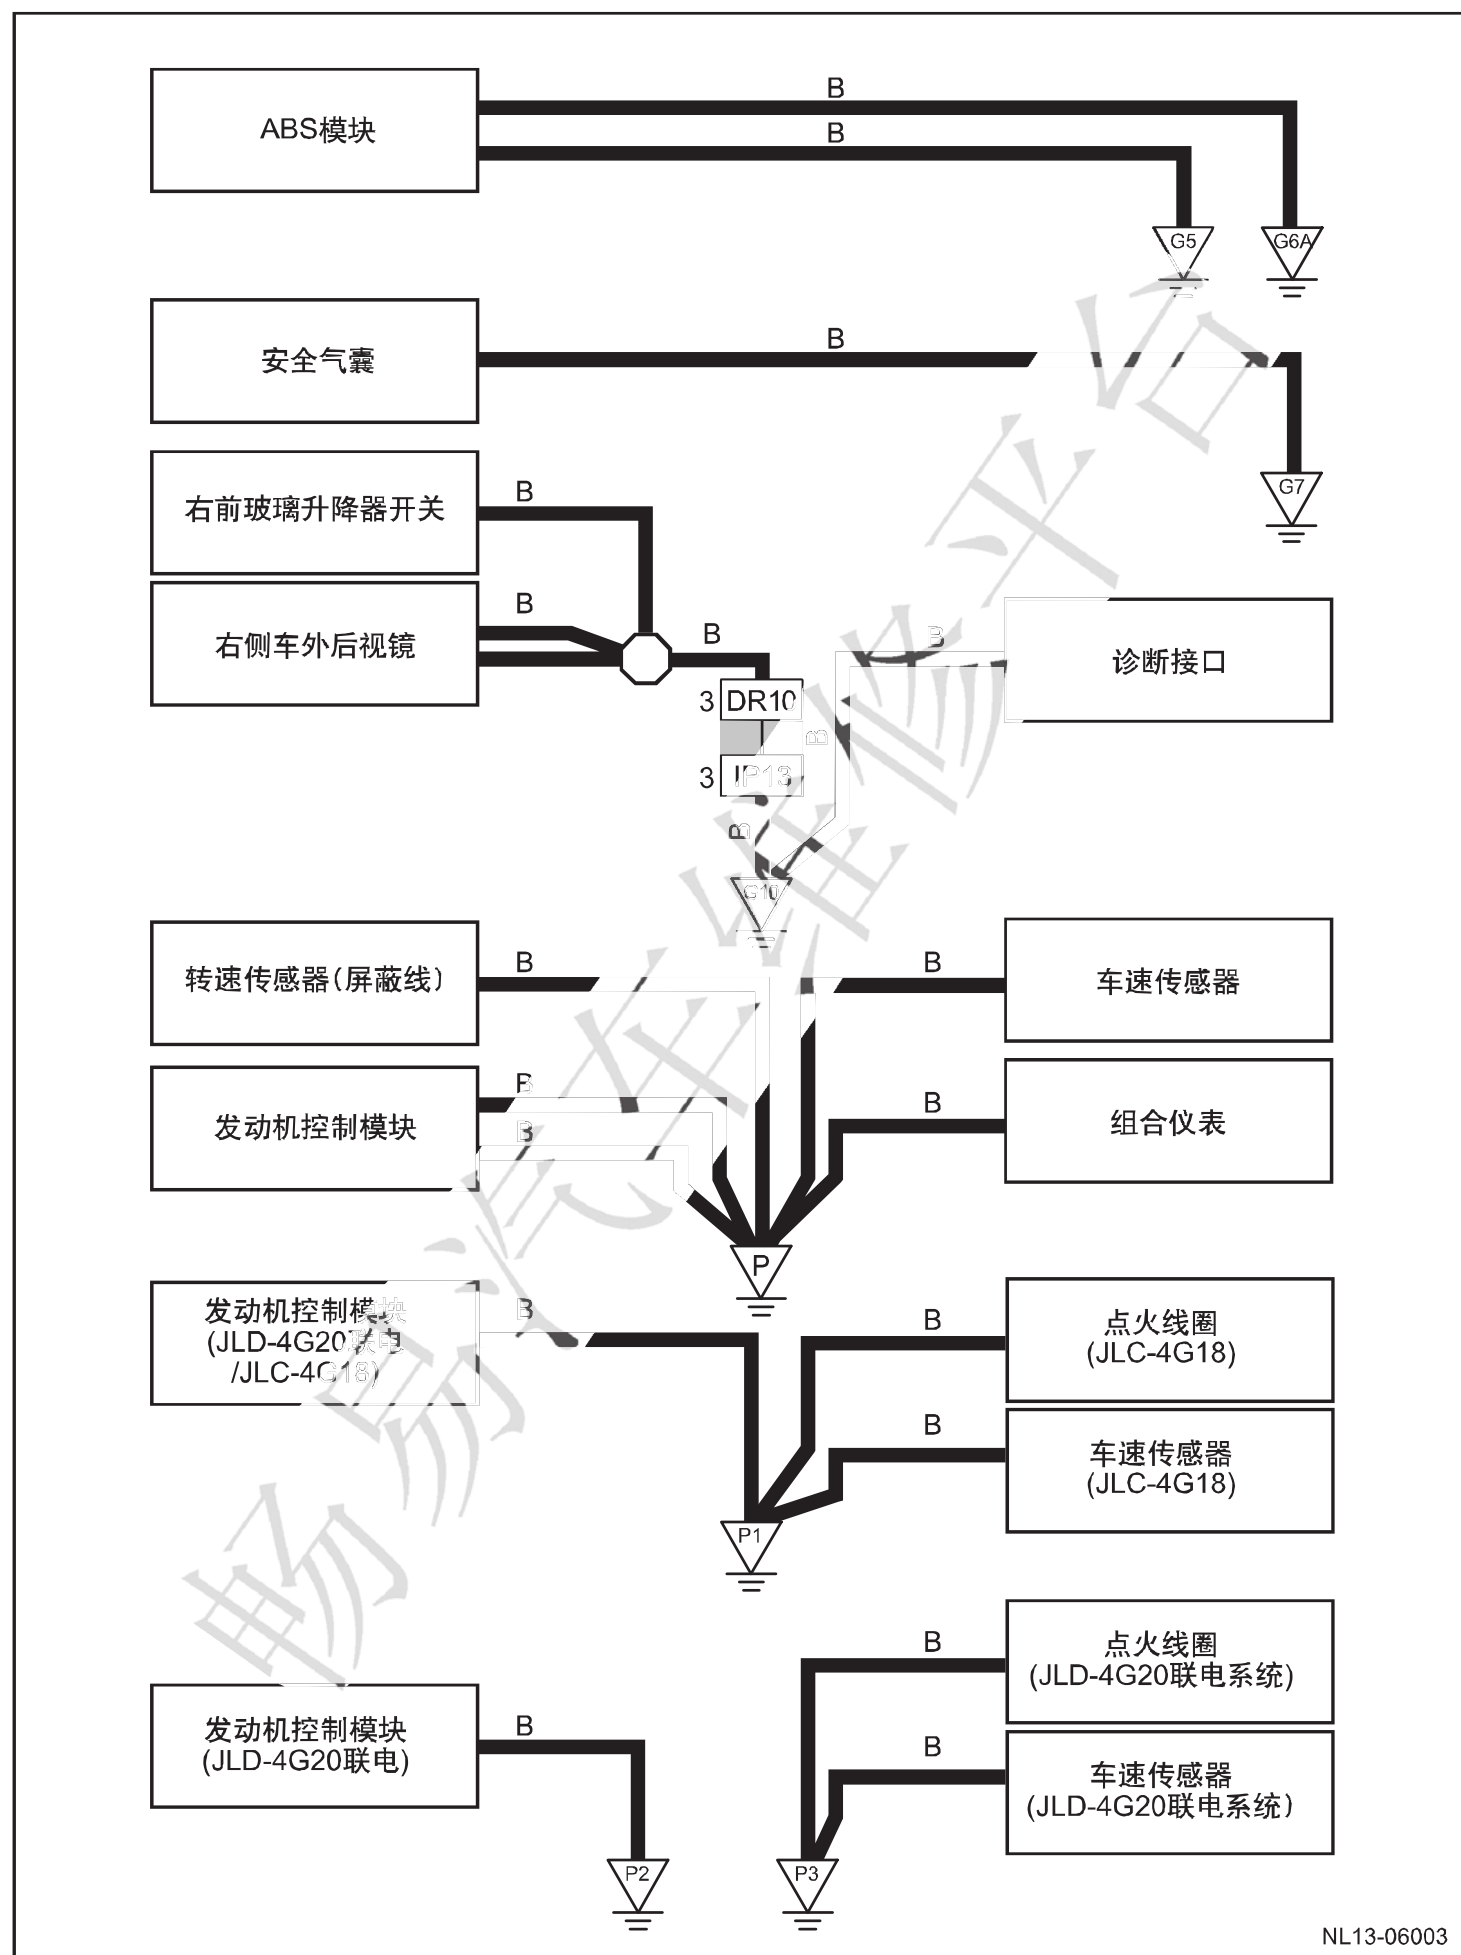


NL13-06003

接地线路图3（G11，G12）

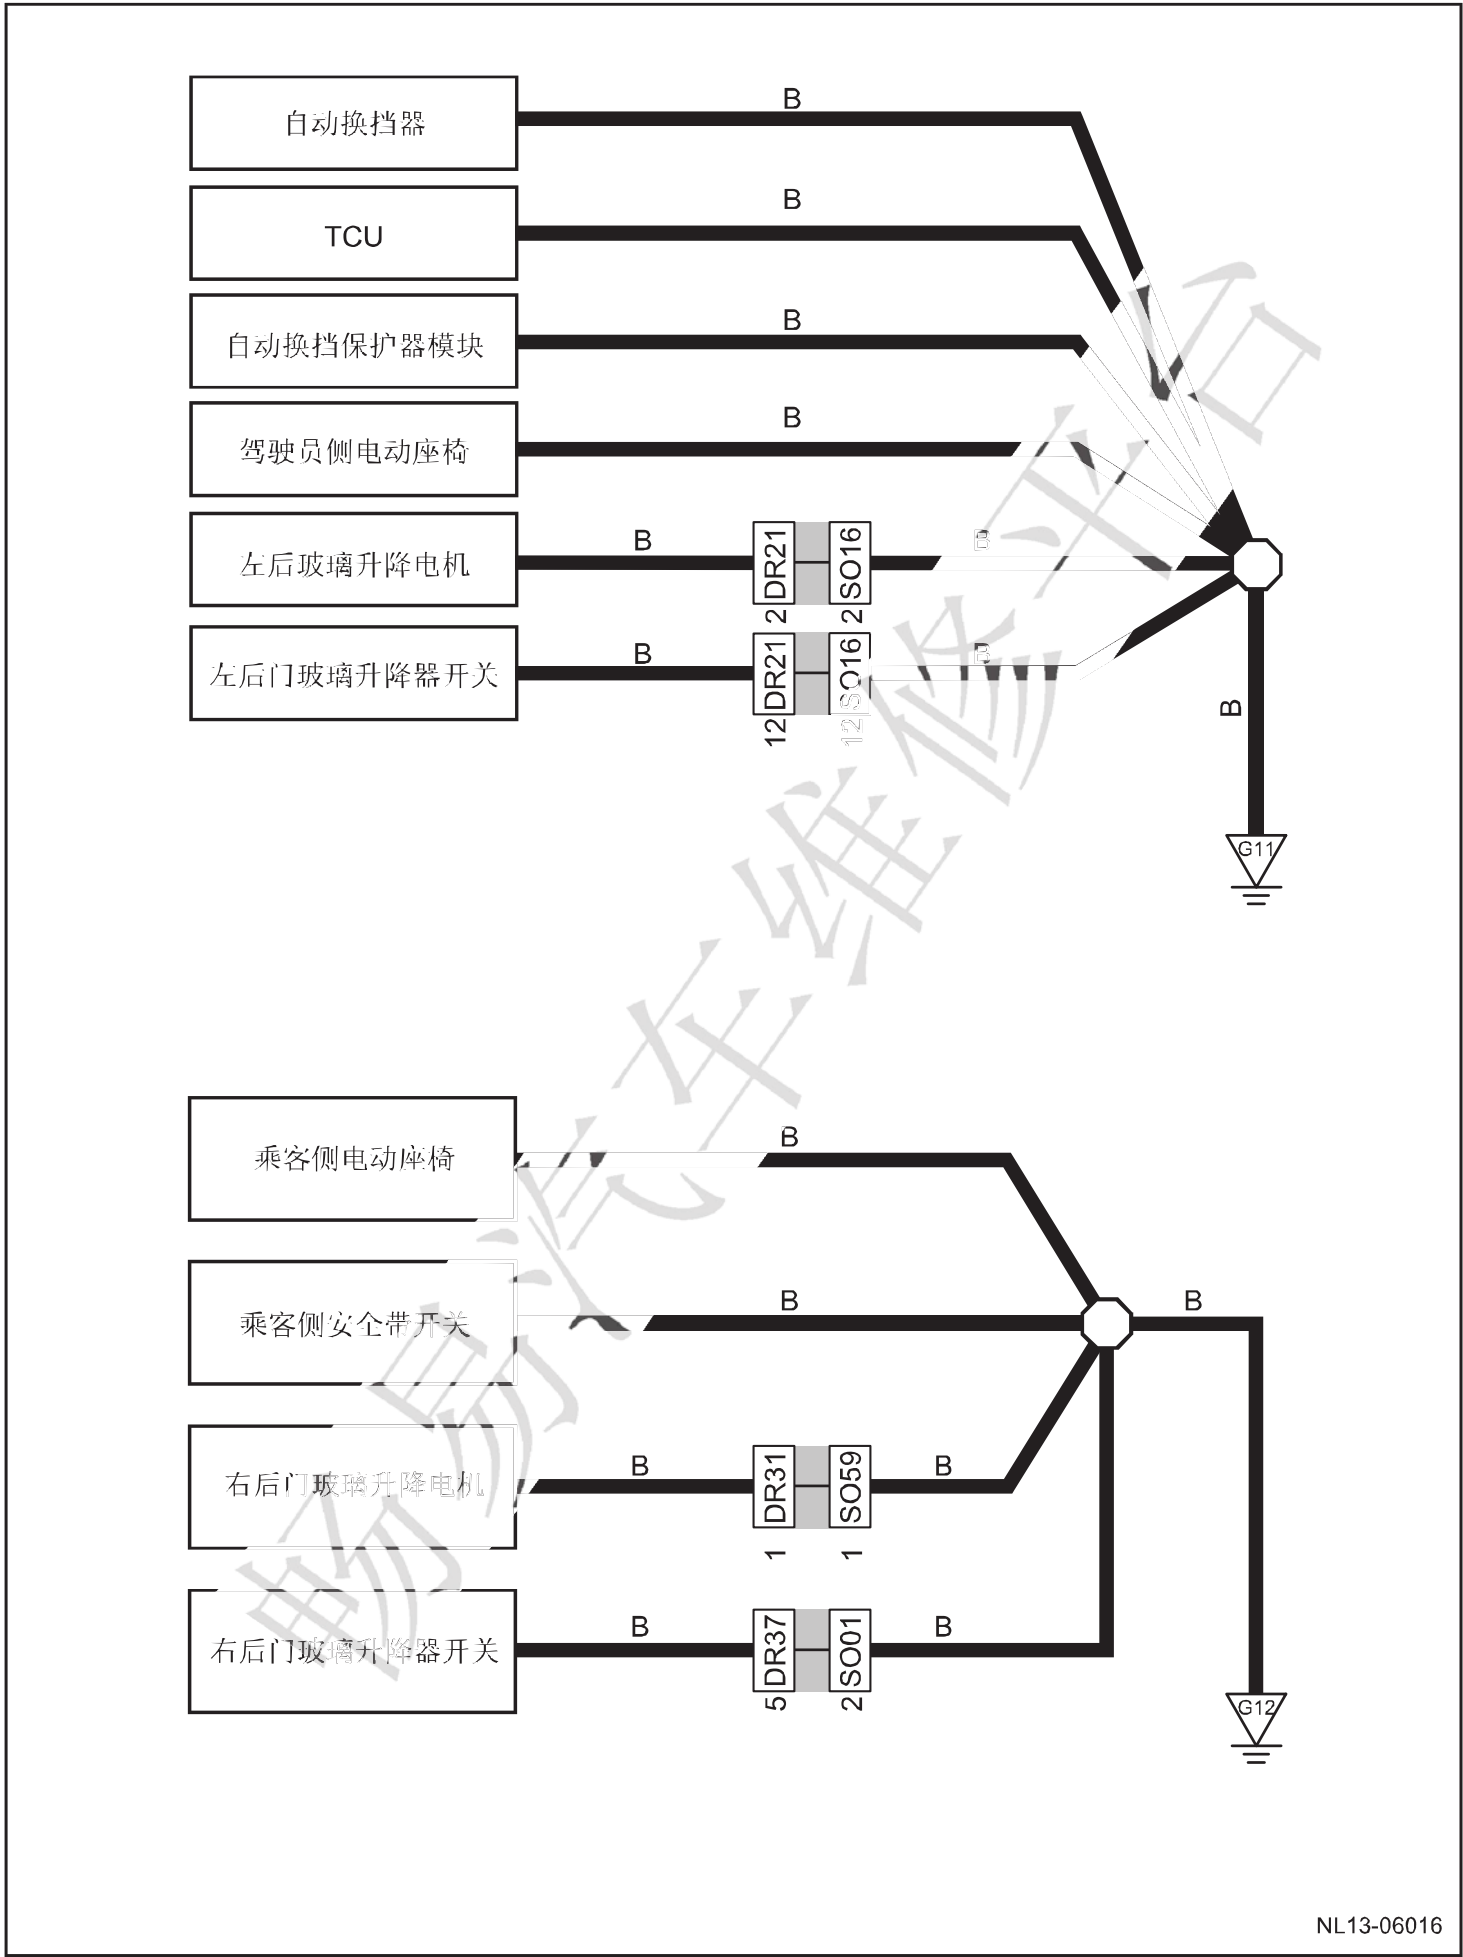


NL13-06016

接地线路图4 (G2, G4)

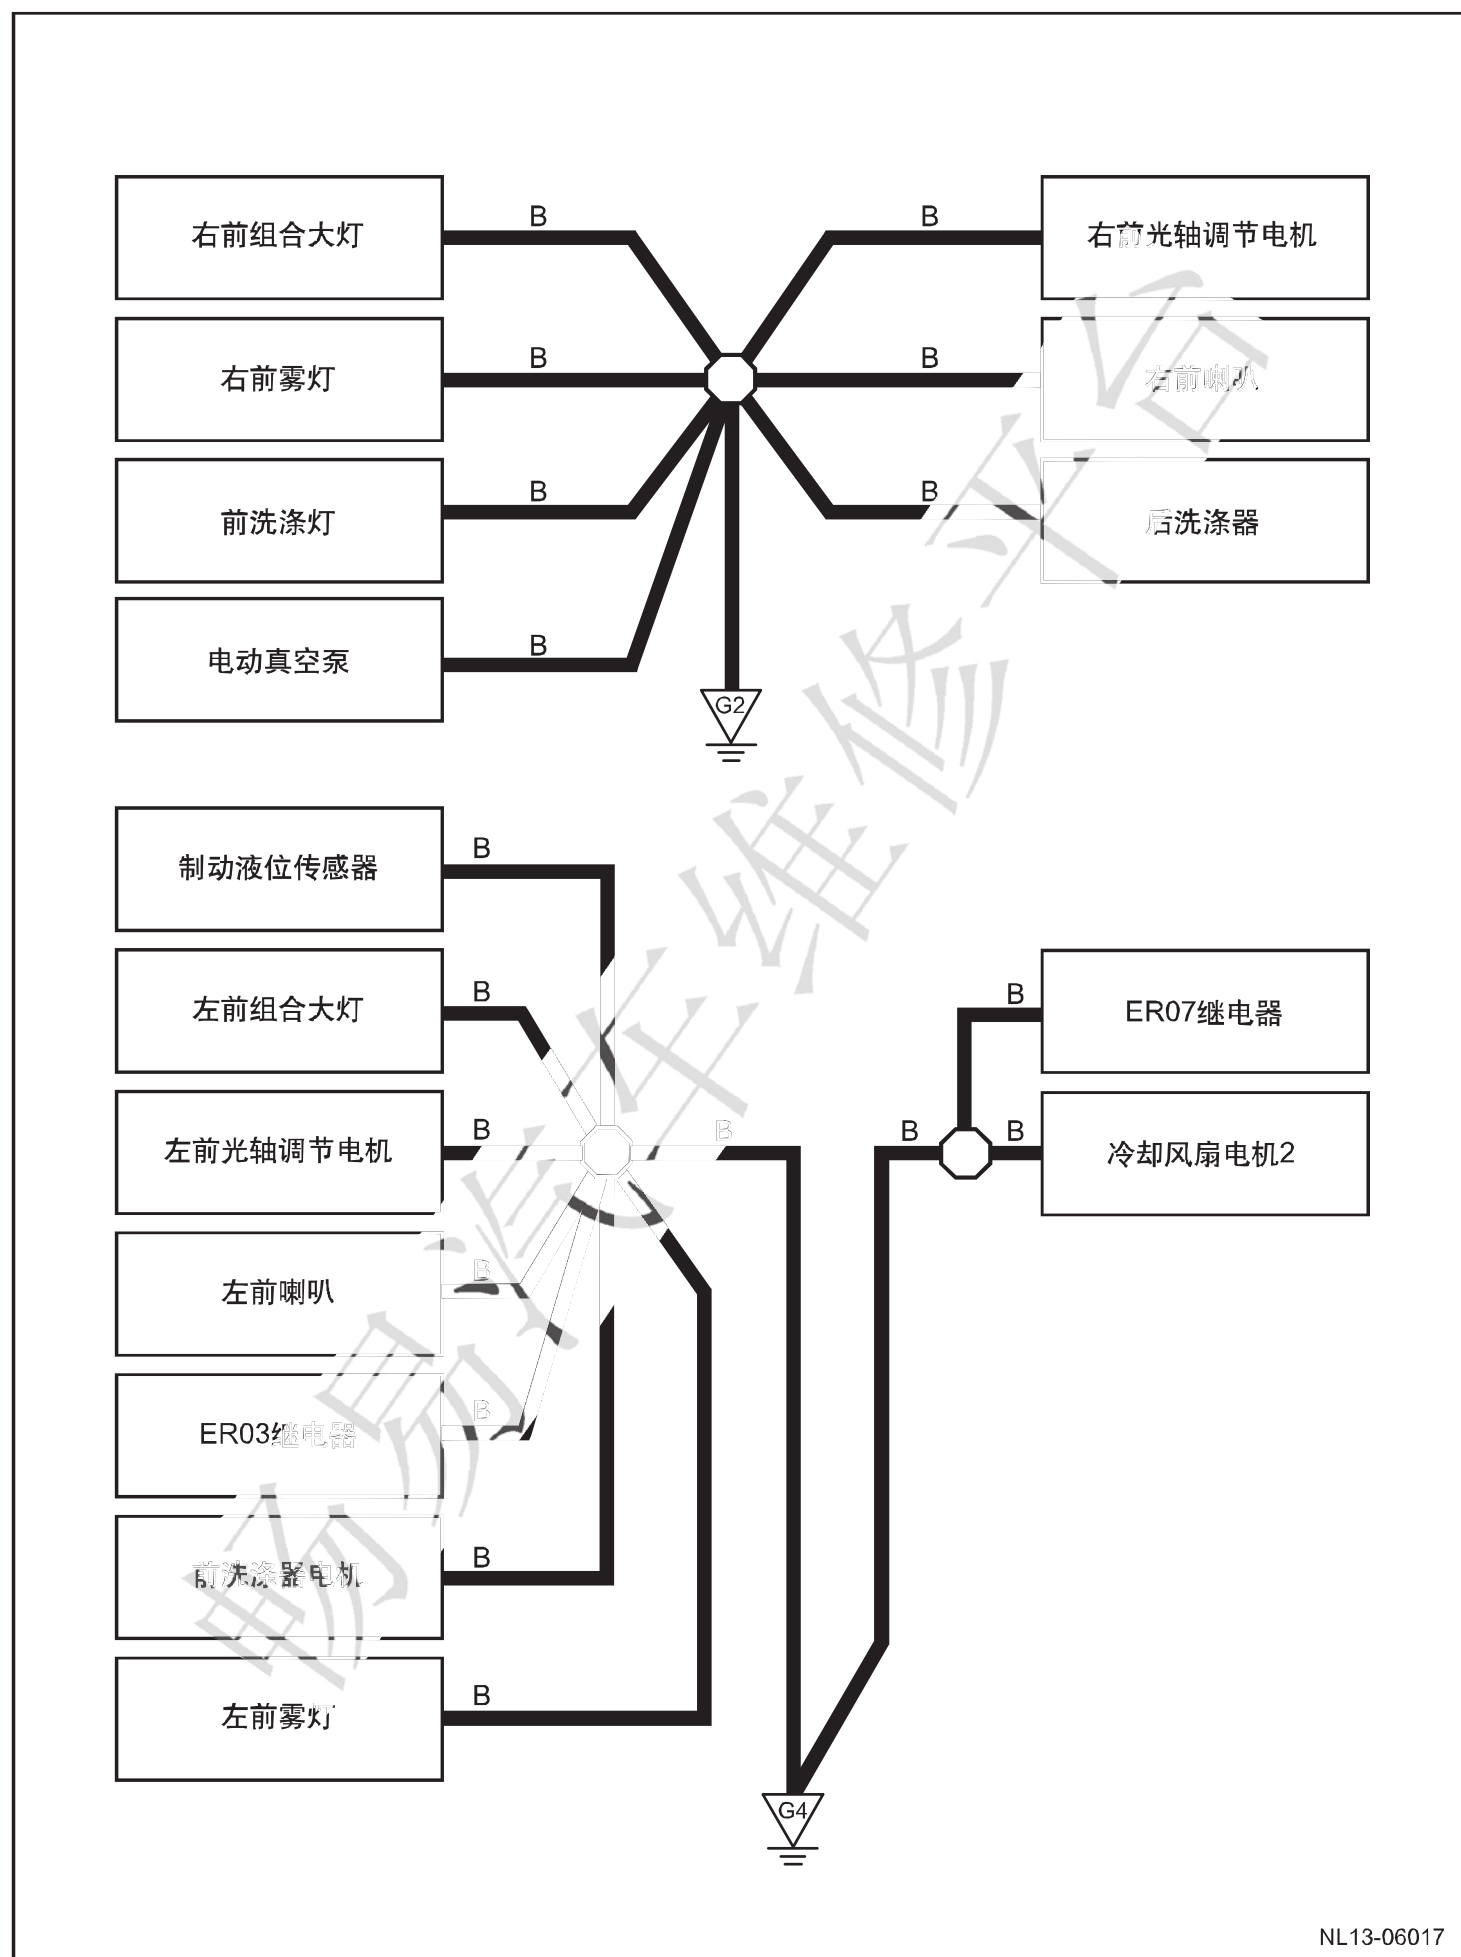


NL13-06017

接地线路图5（G9，G13，G14）

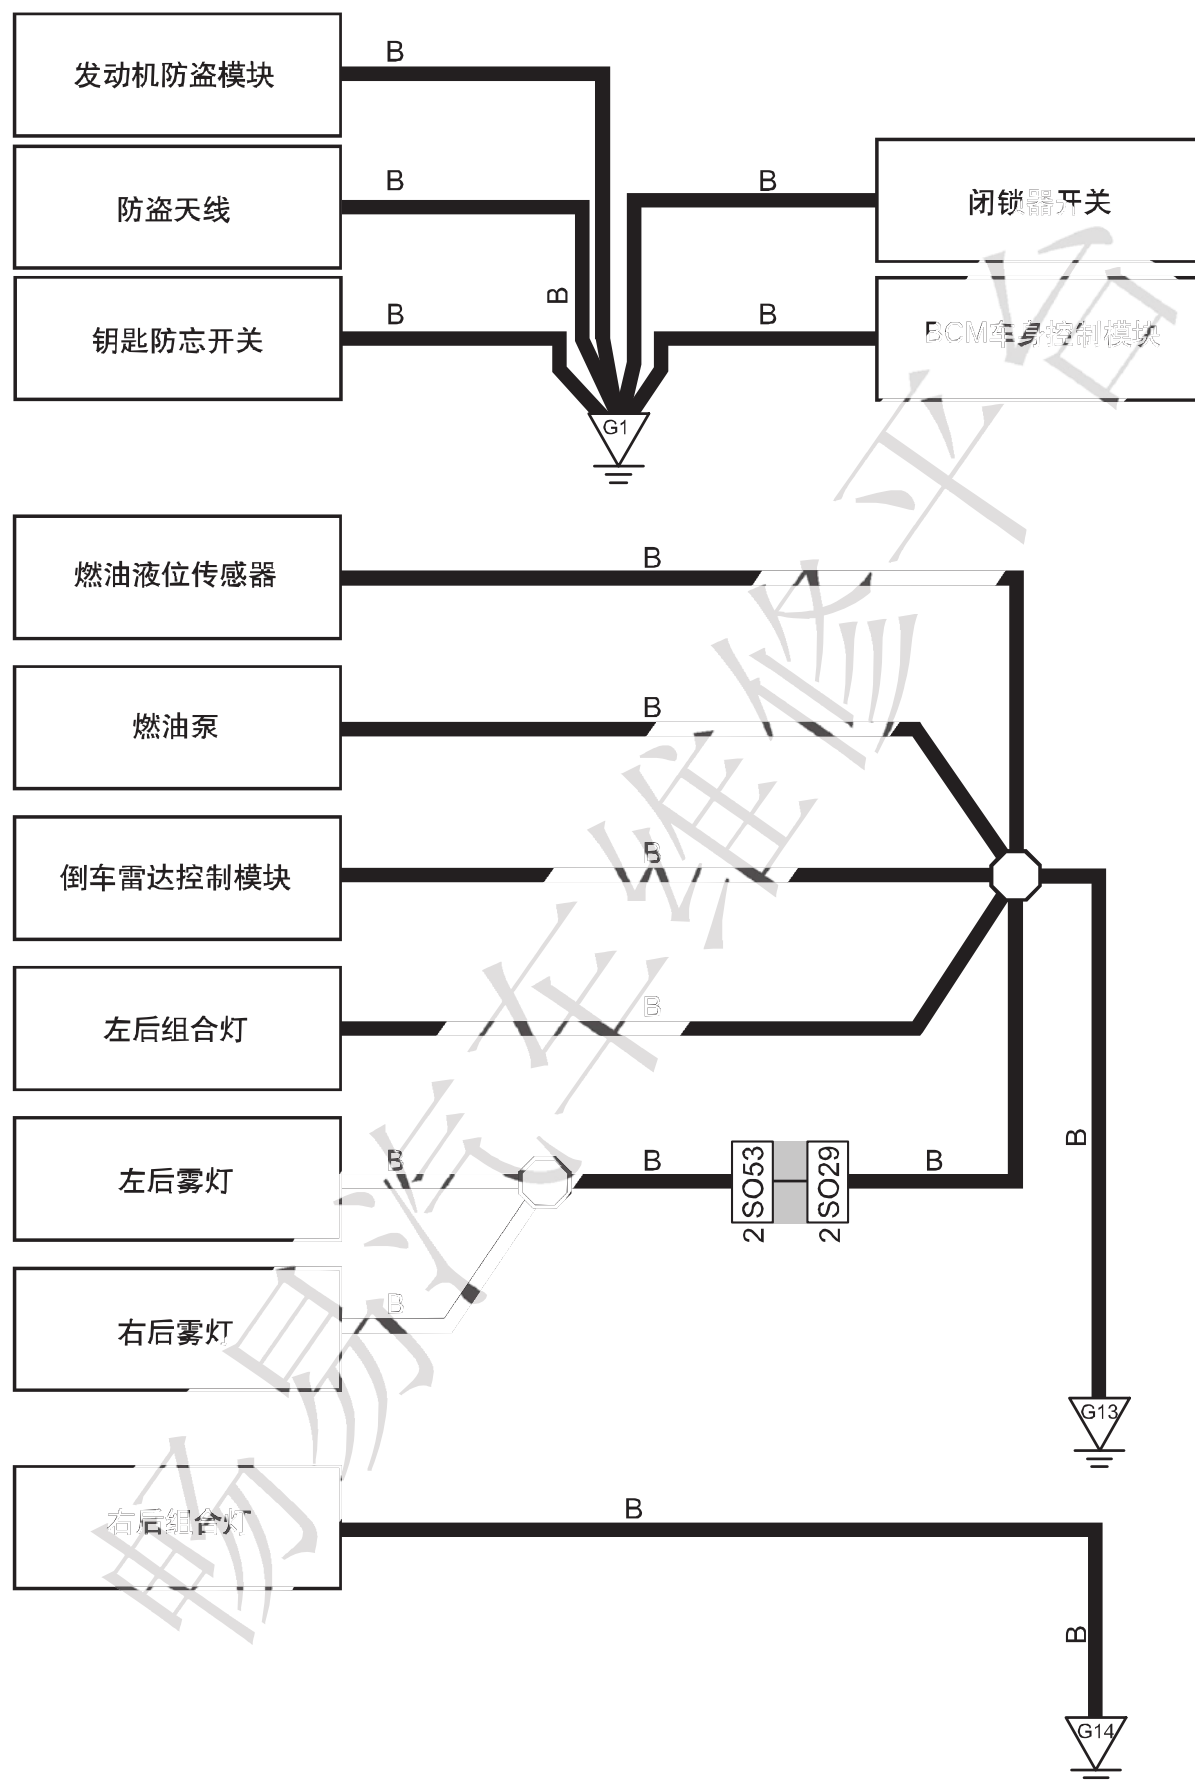

NL13-06006

接地线路图6 (G8, G15, G16)

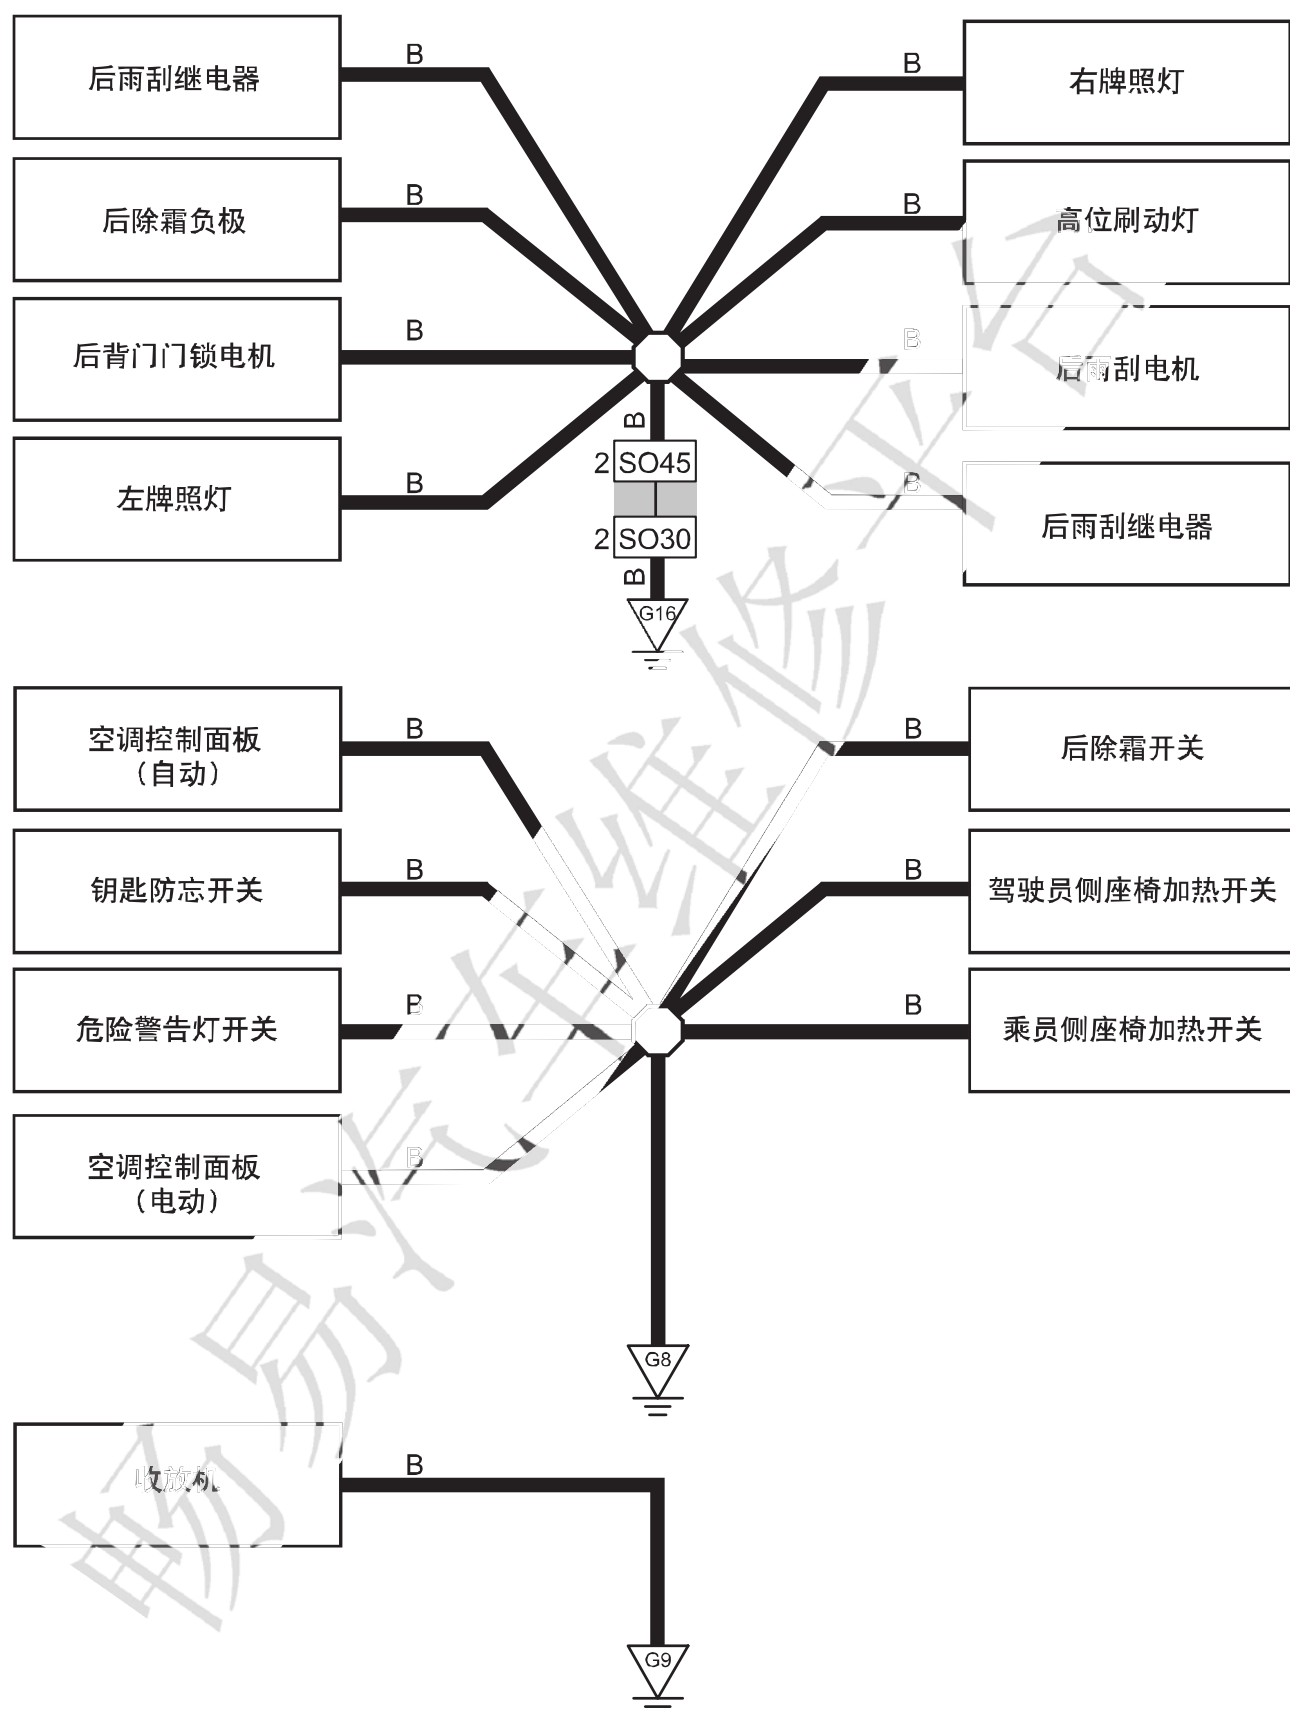

NL13-06005