




蓄电池负极线束接地点布置

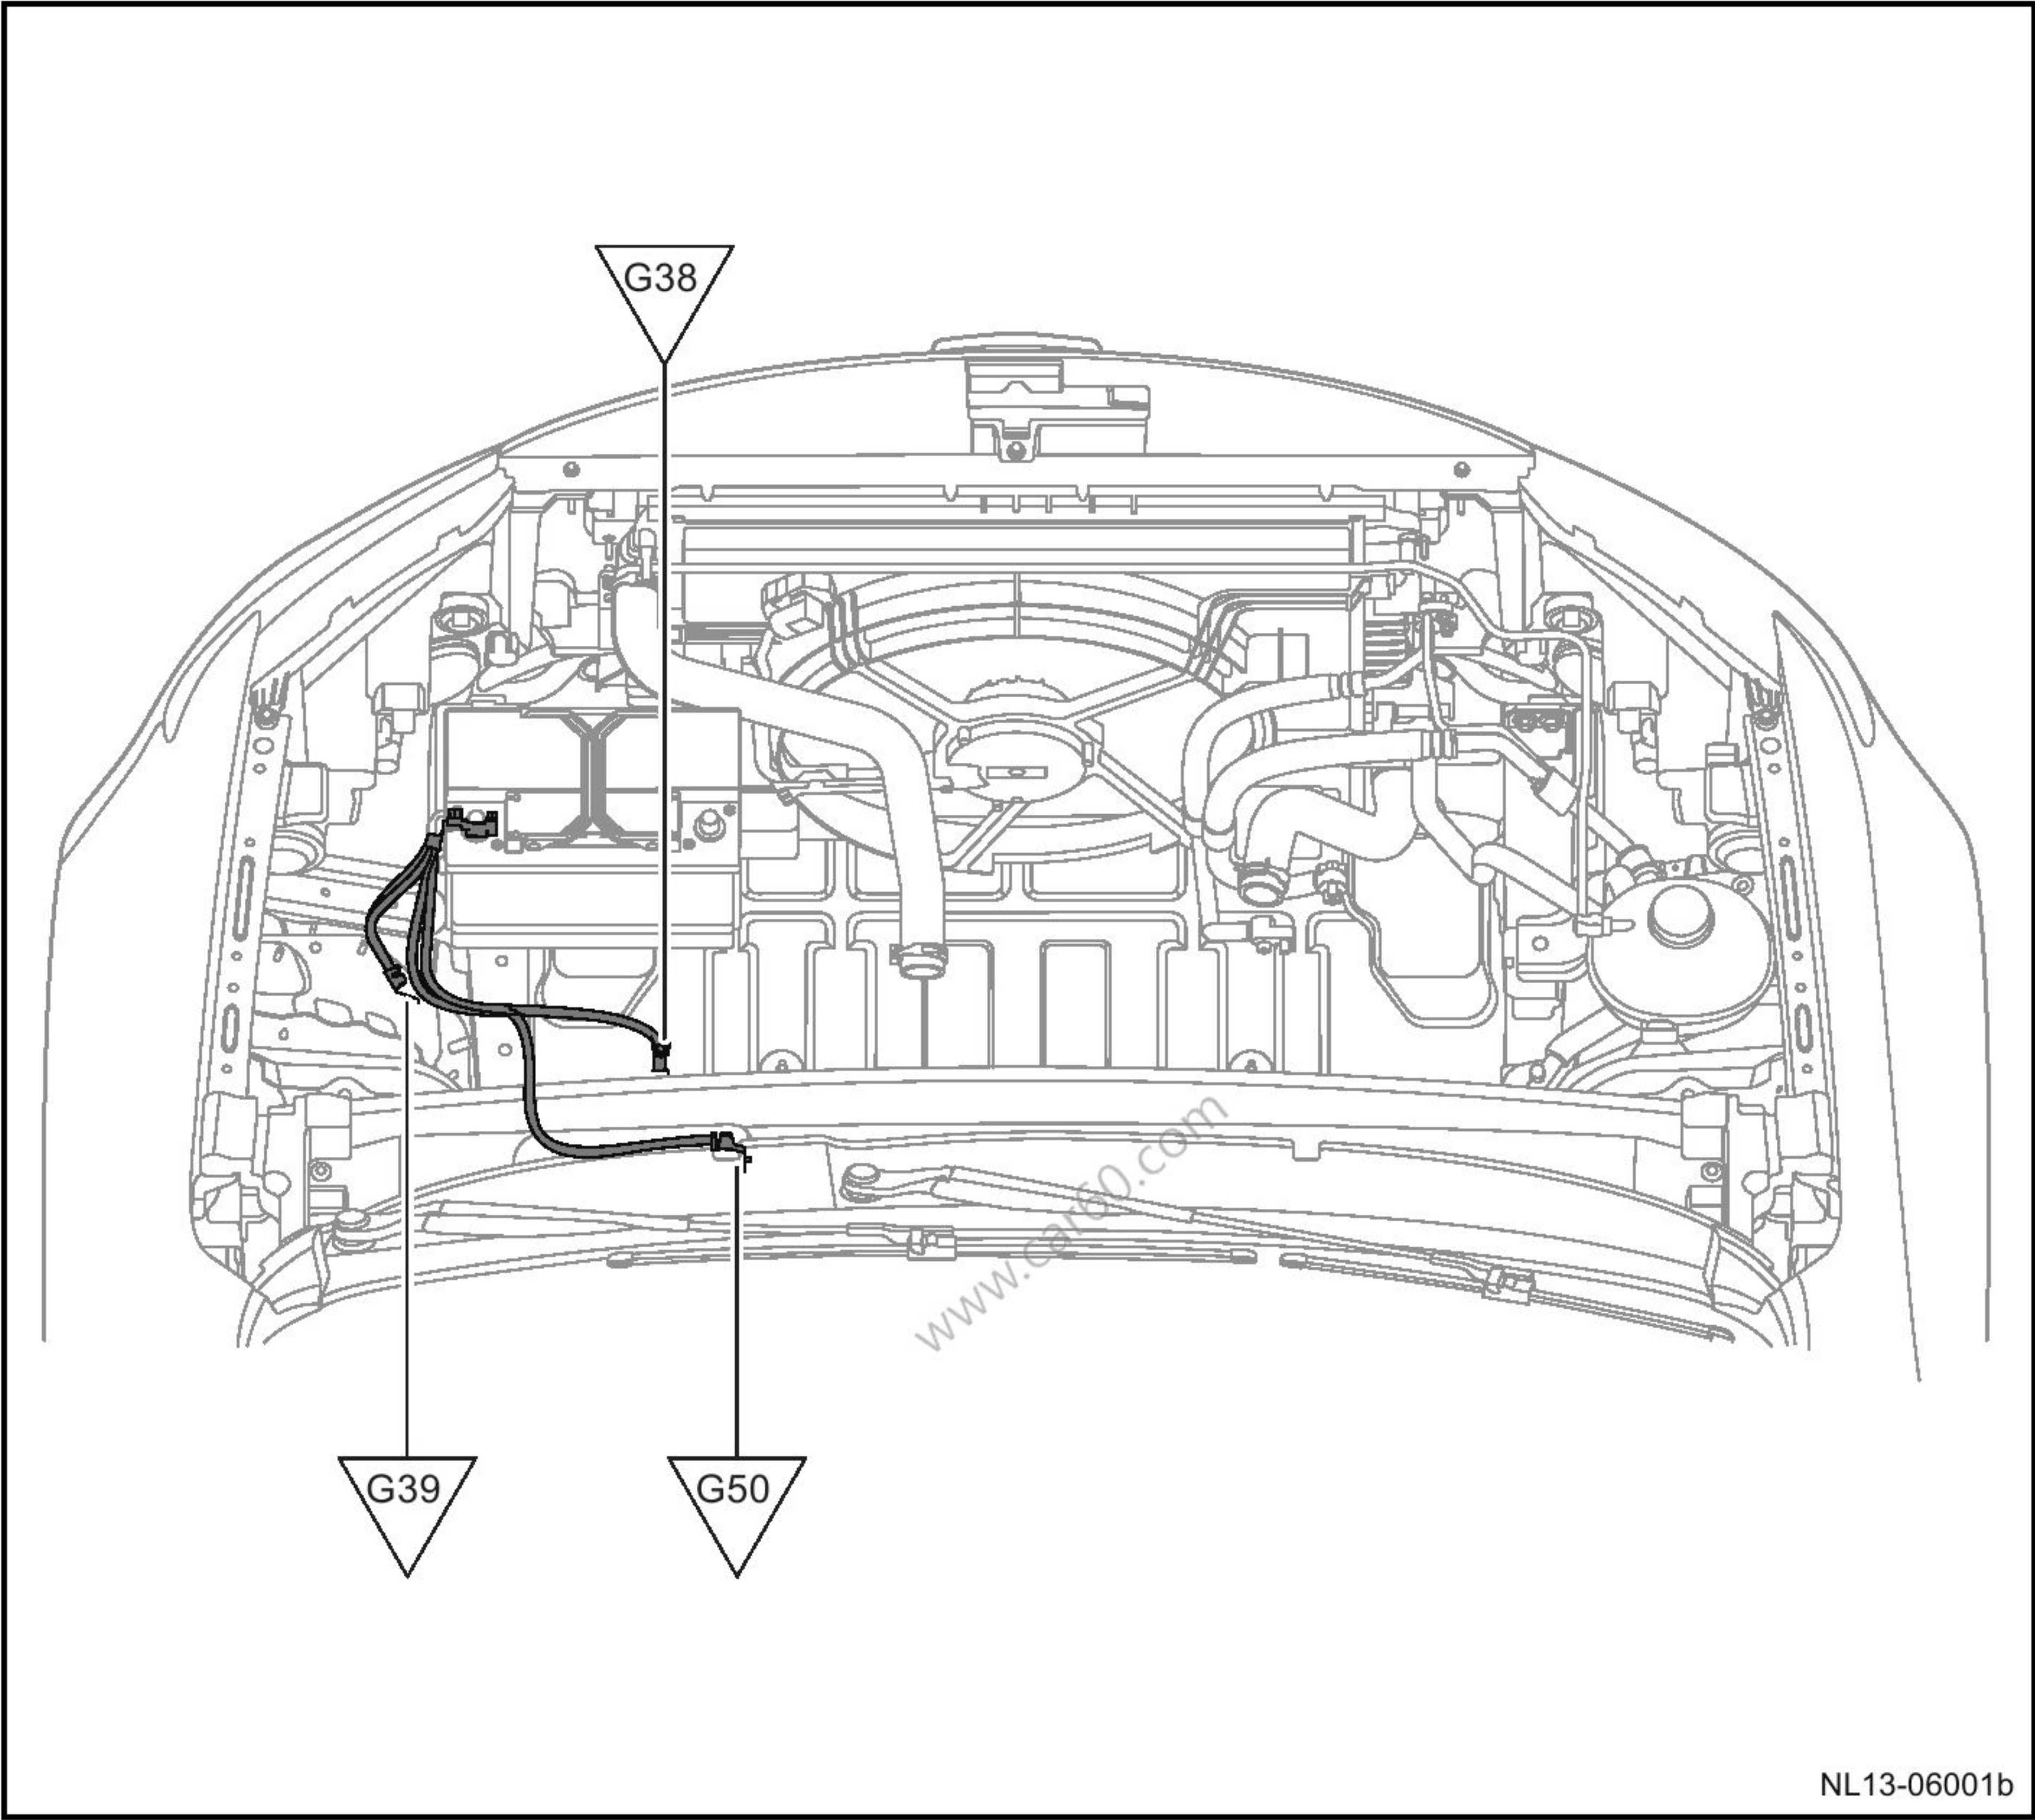


发动机舱线束接地点布置

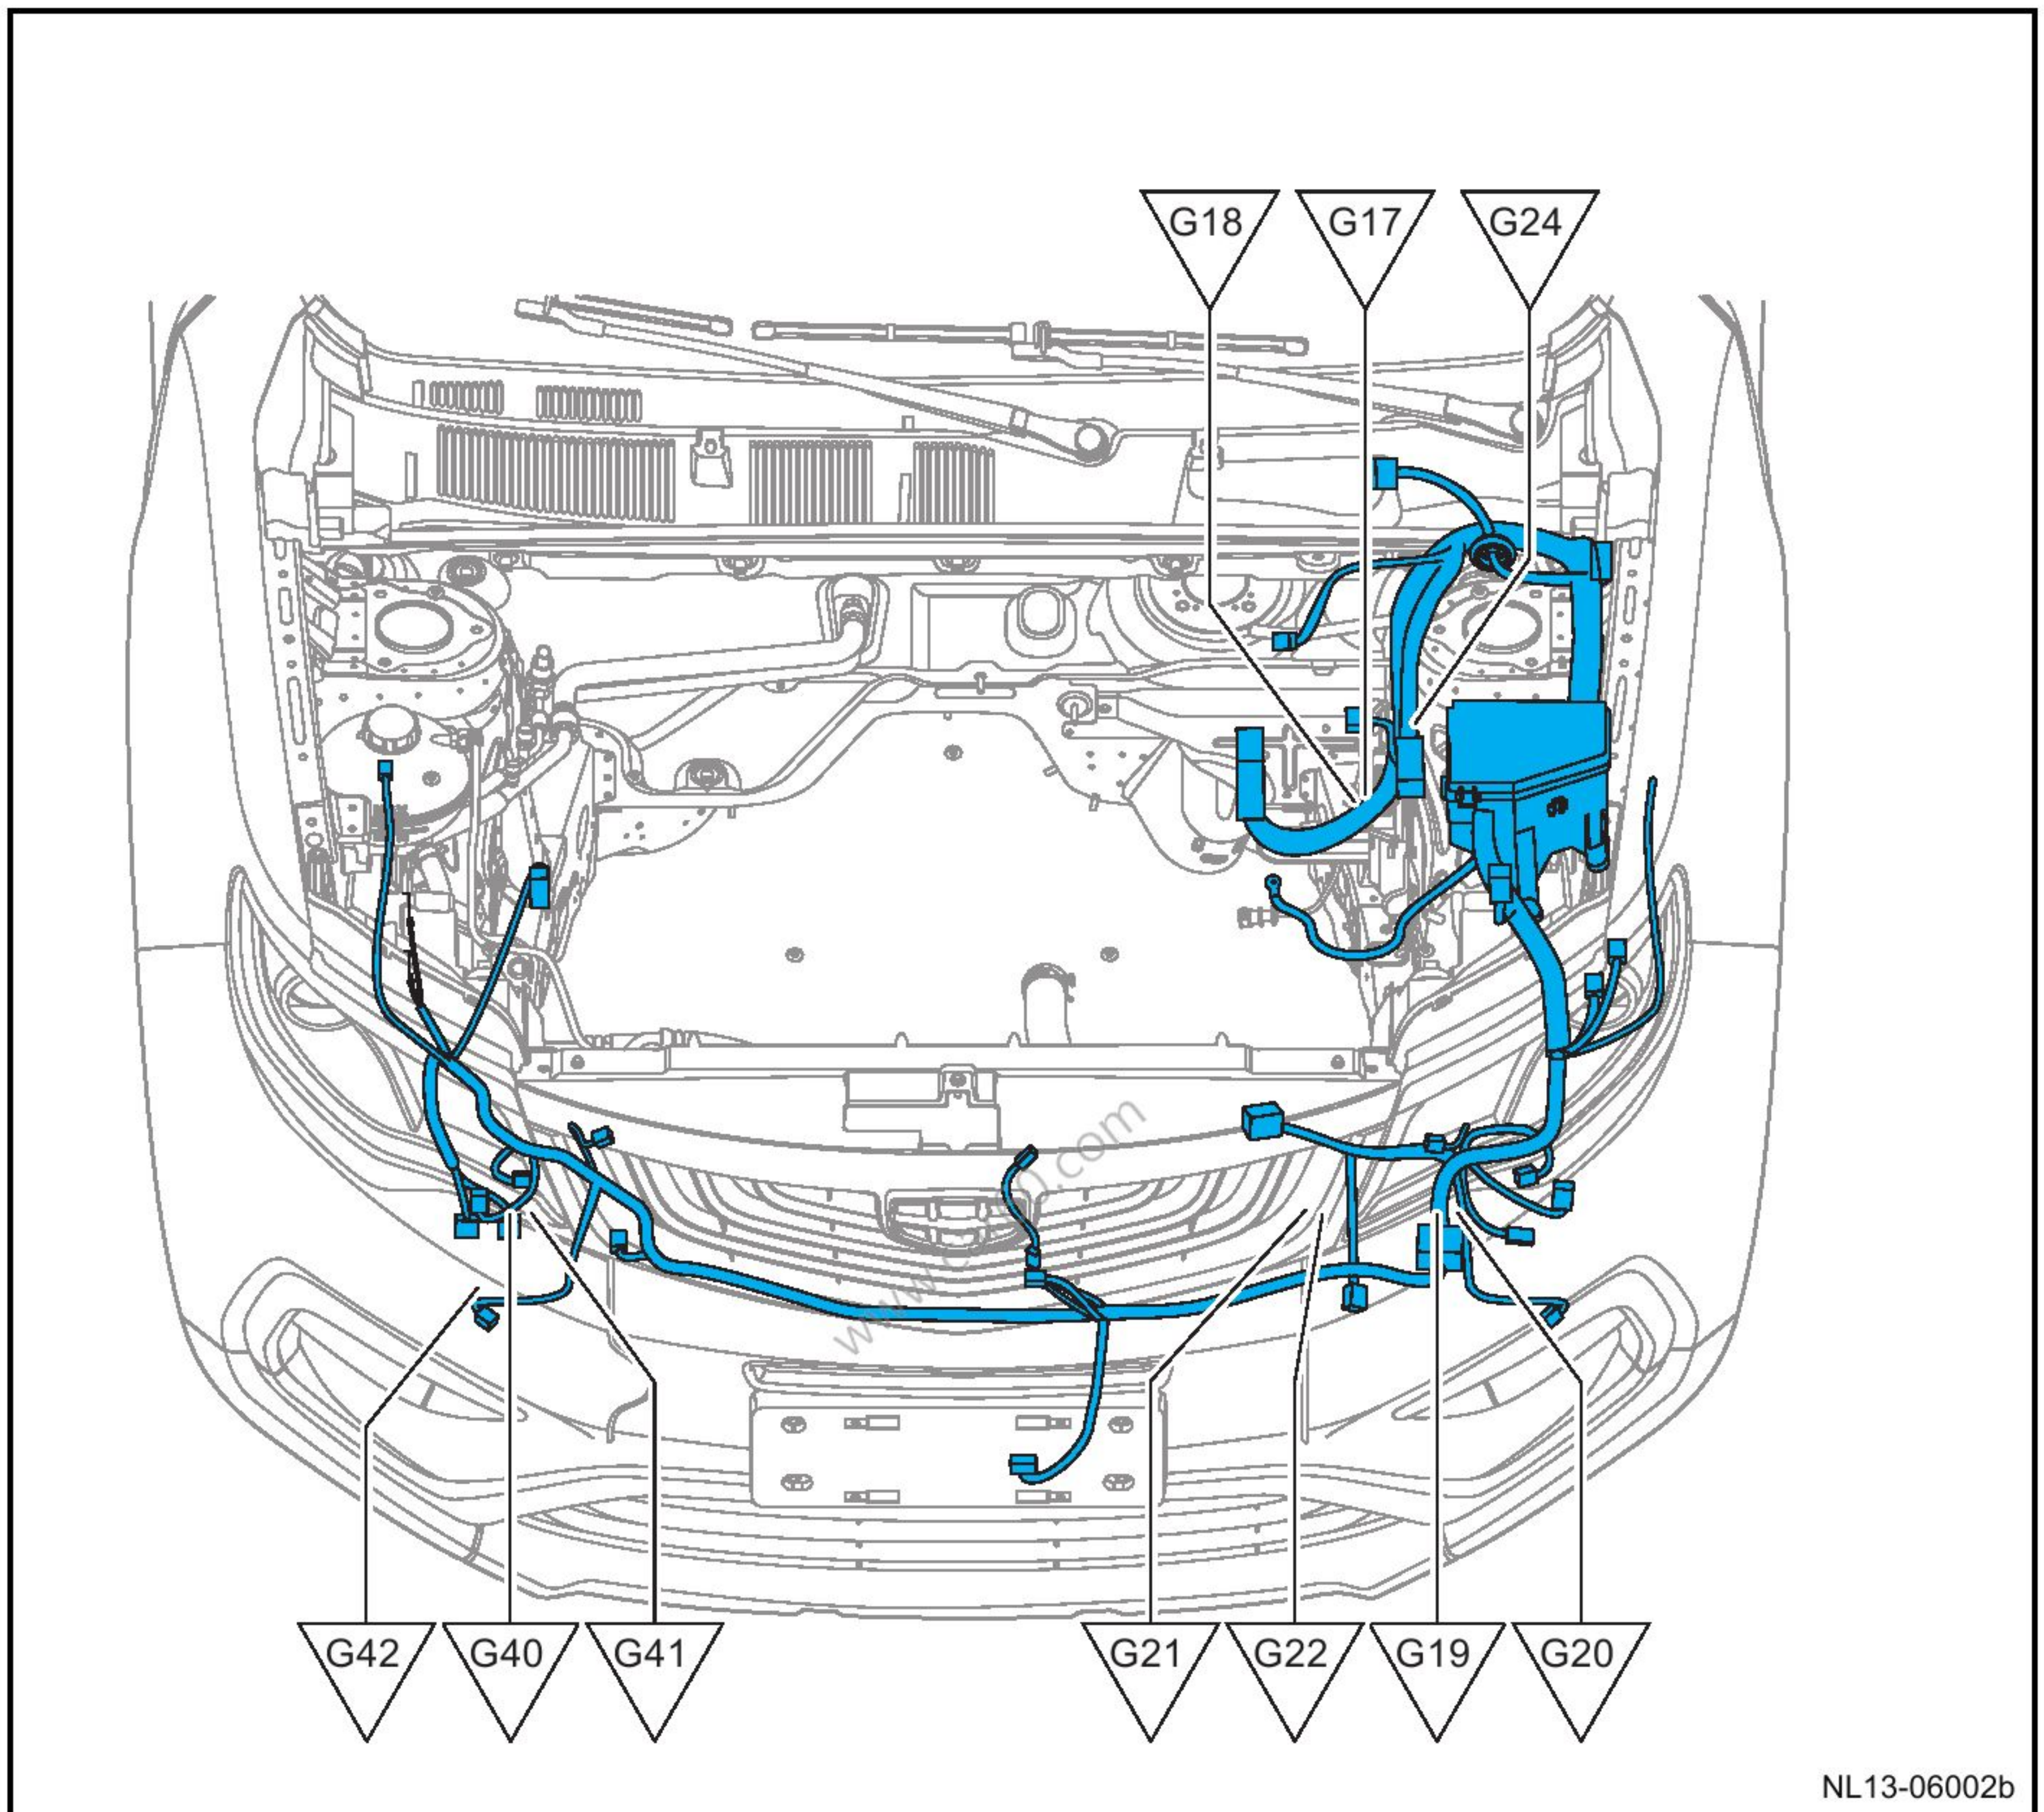


发动机舱线束接地点布置（续）

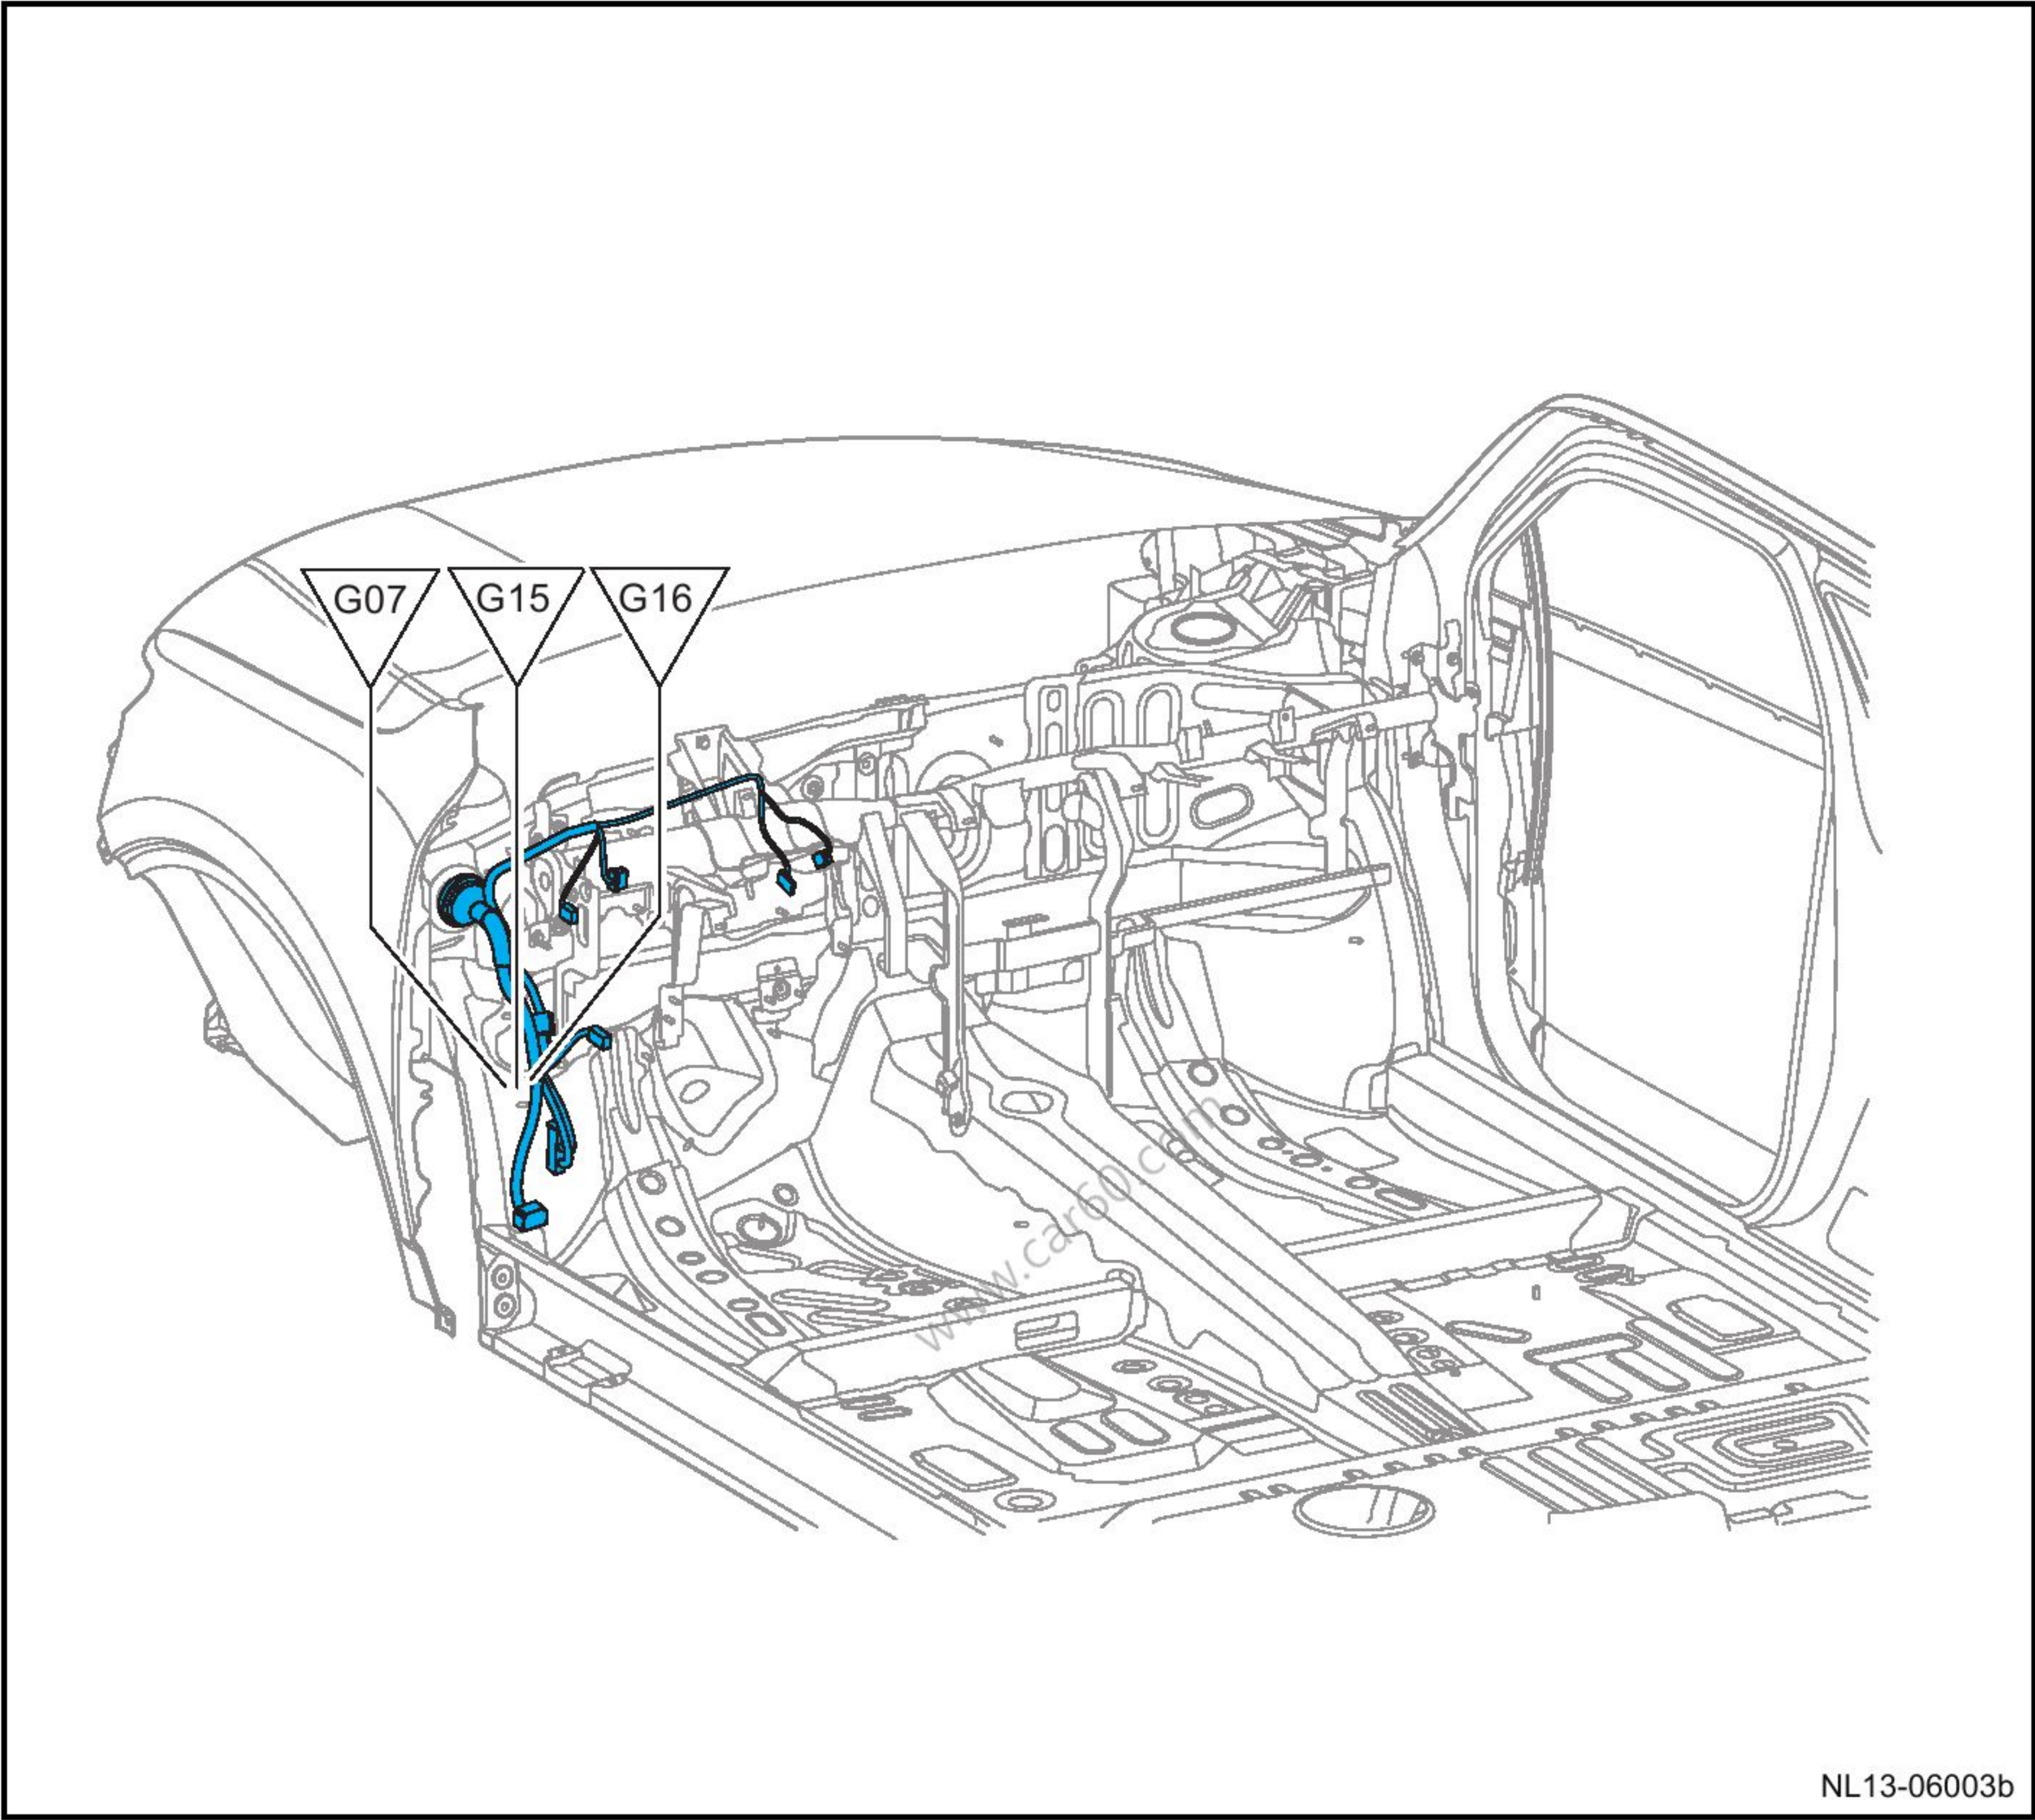


发动机线束接地点布置 (JLE-4G18TD)

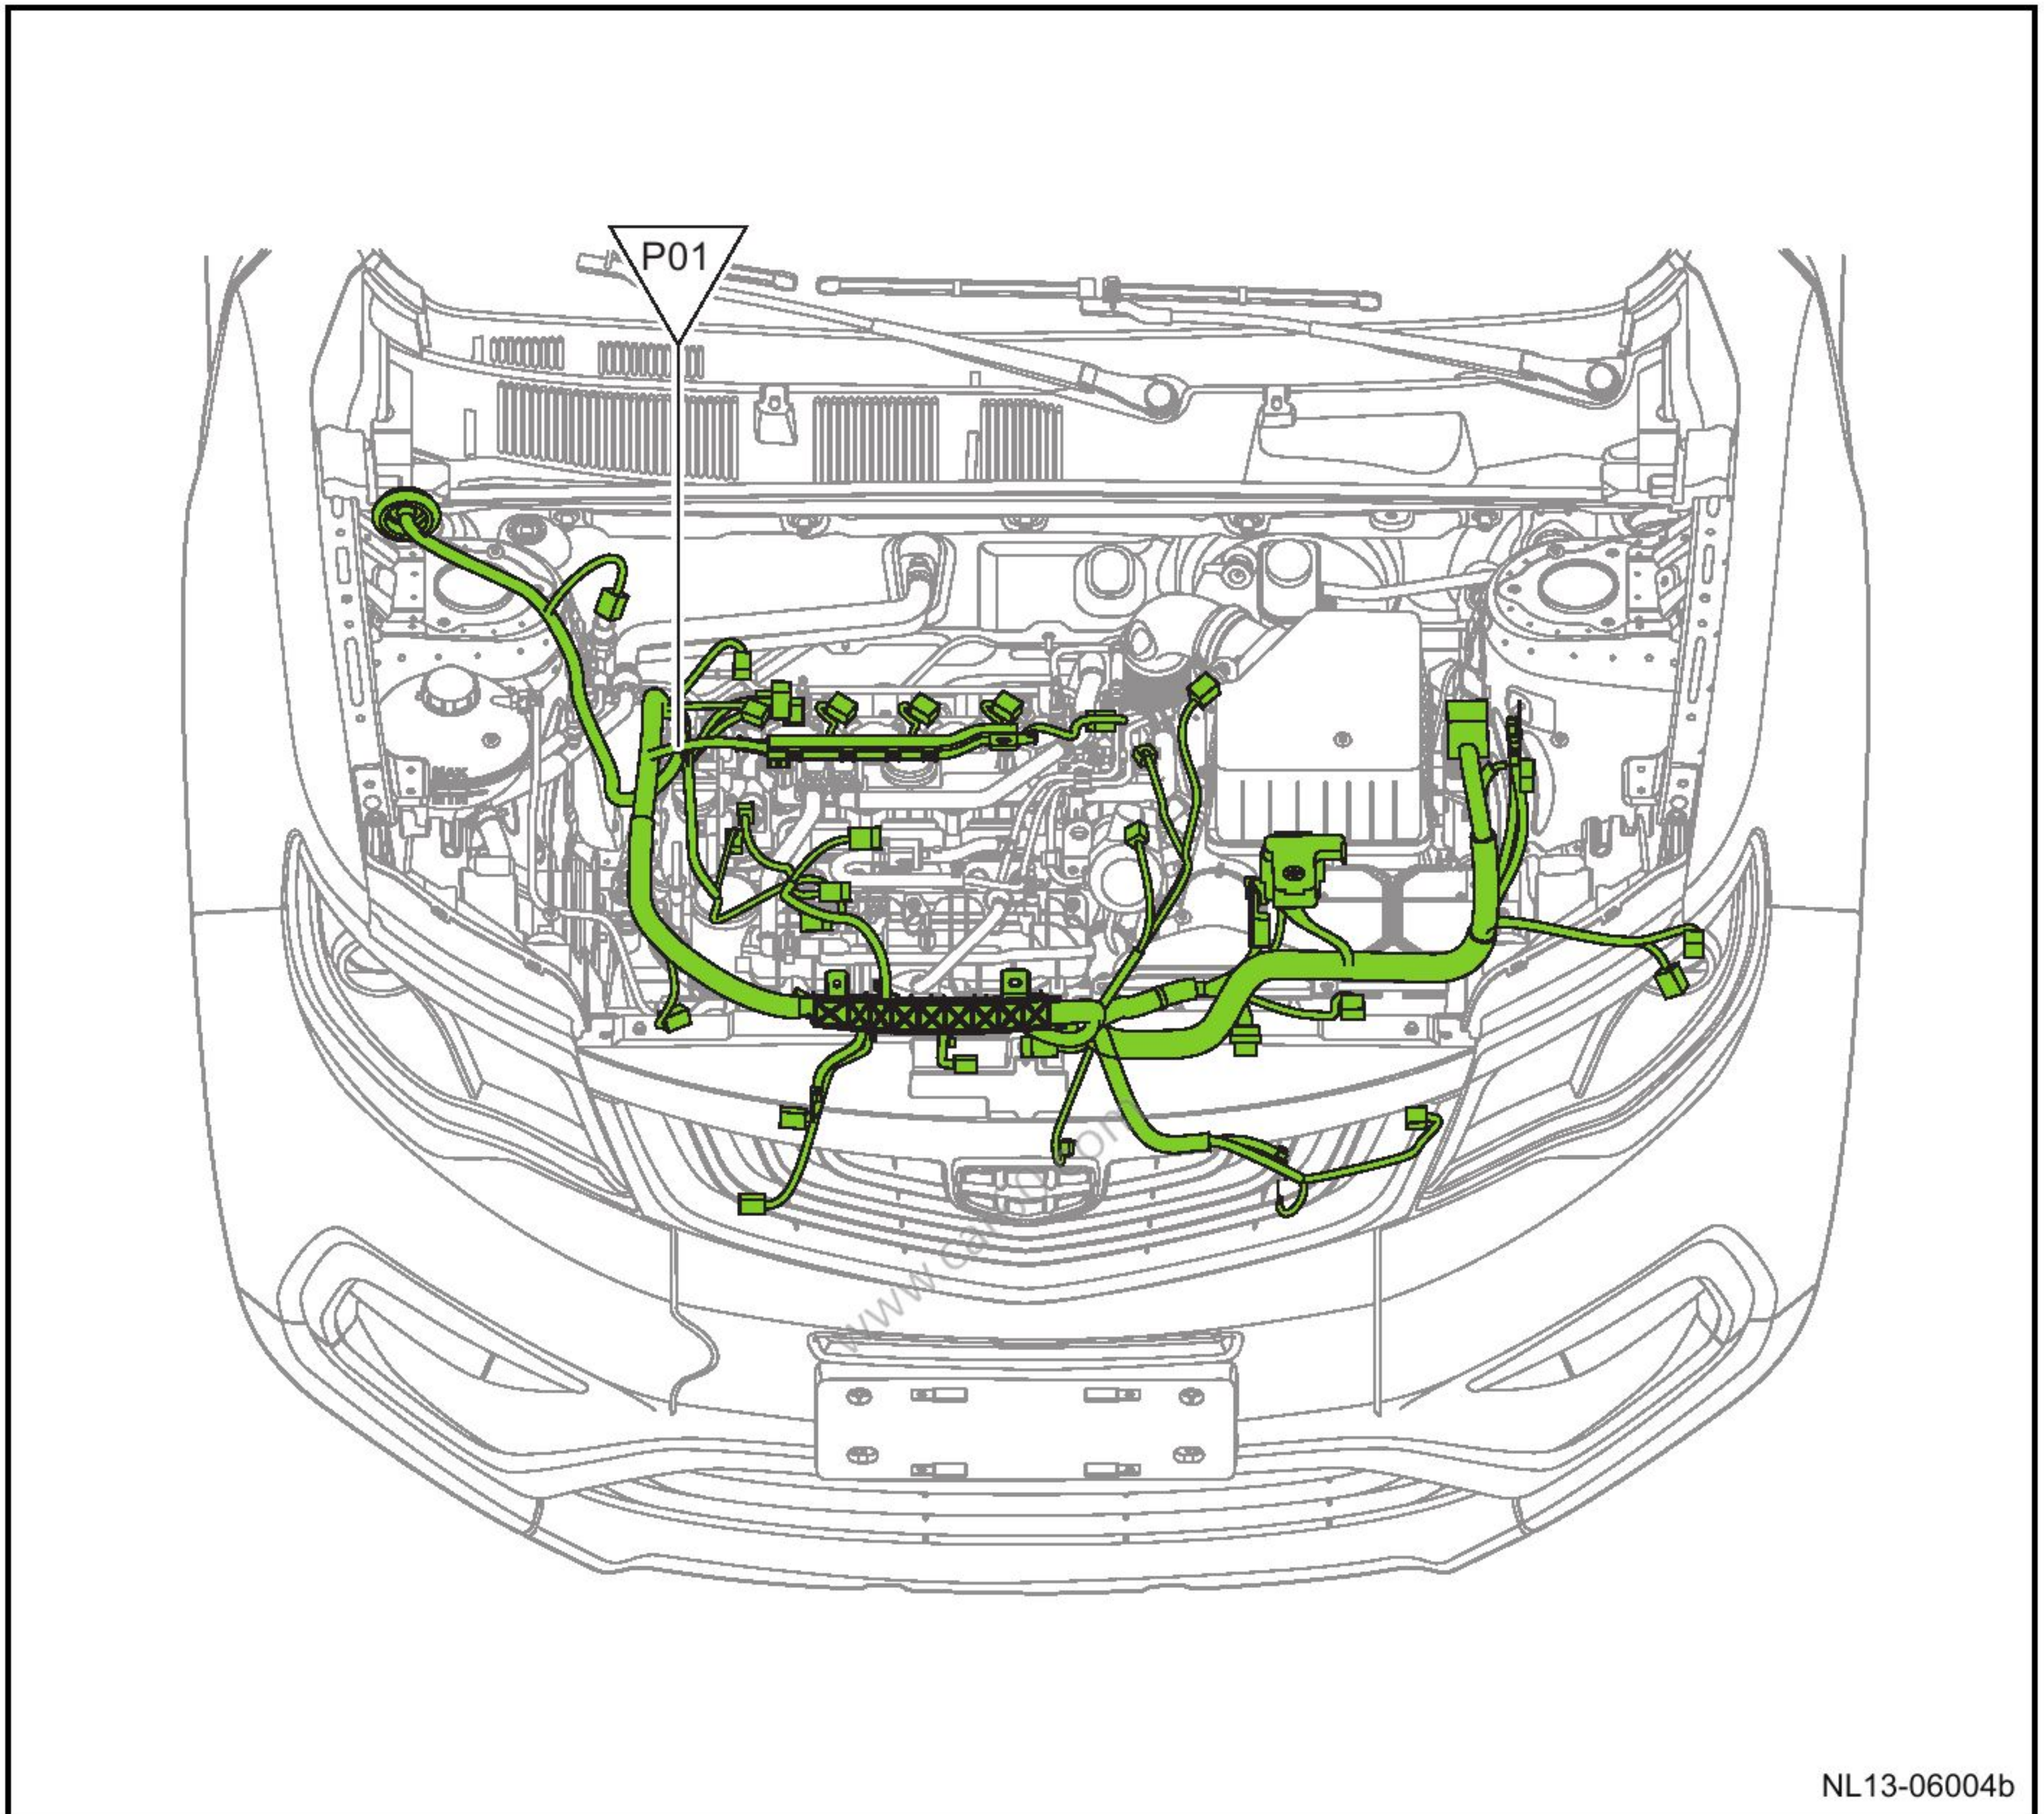

发动机线束接地点布置 (JLD-4G20)

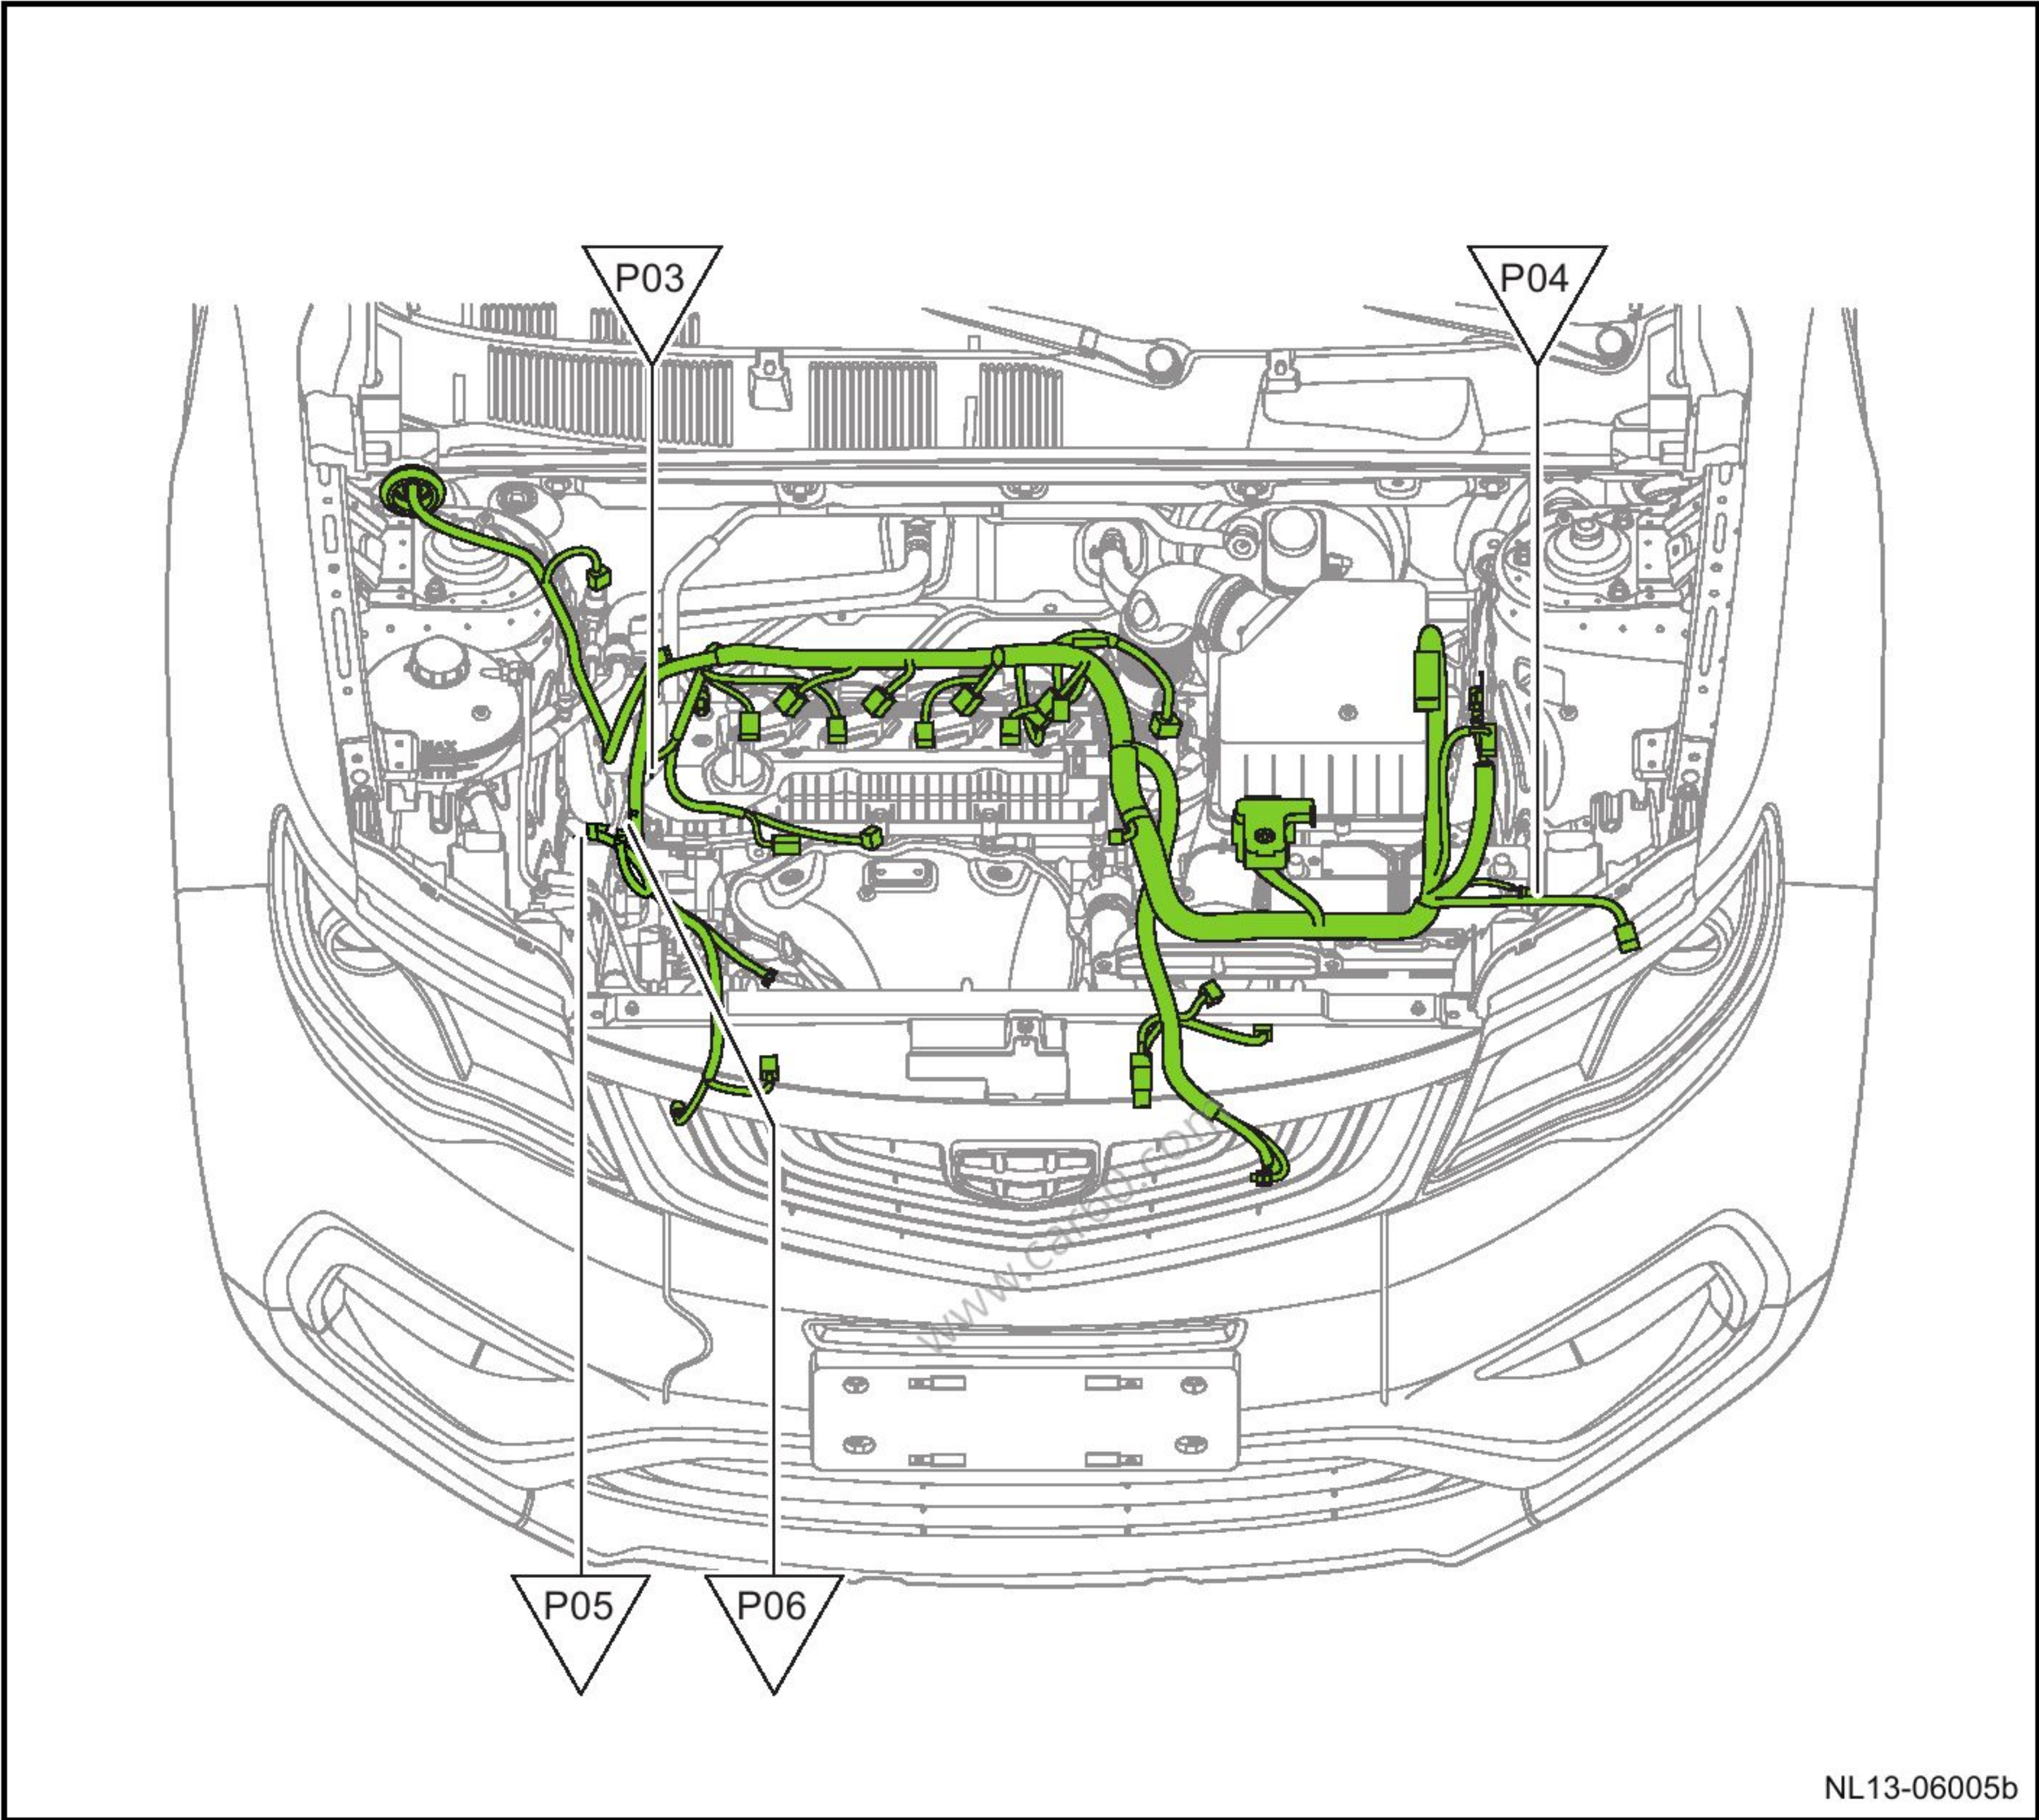


仪表线束接地点布置

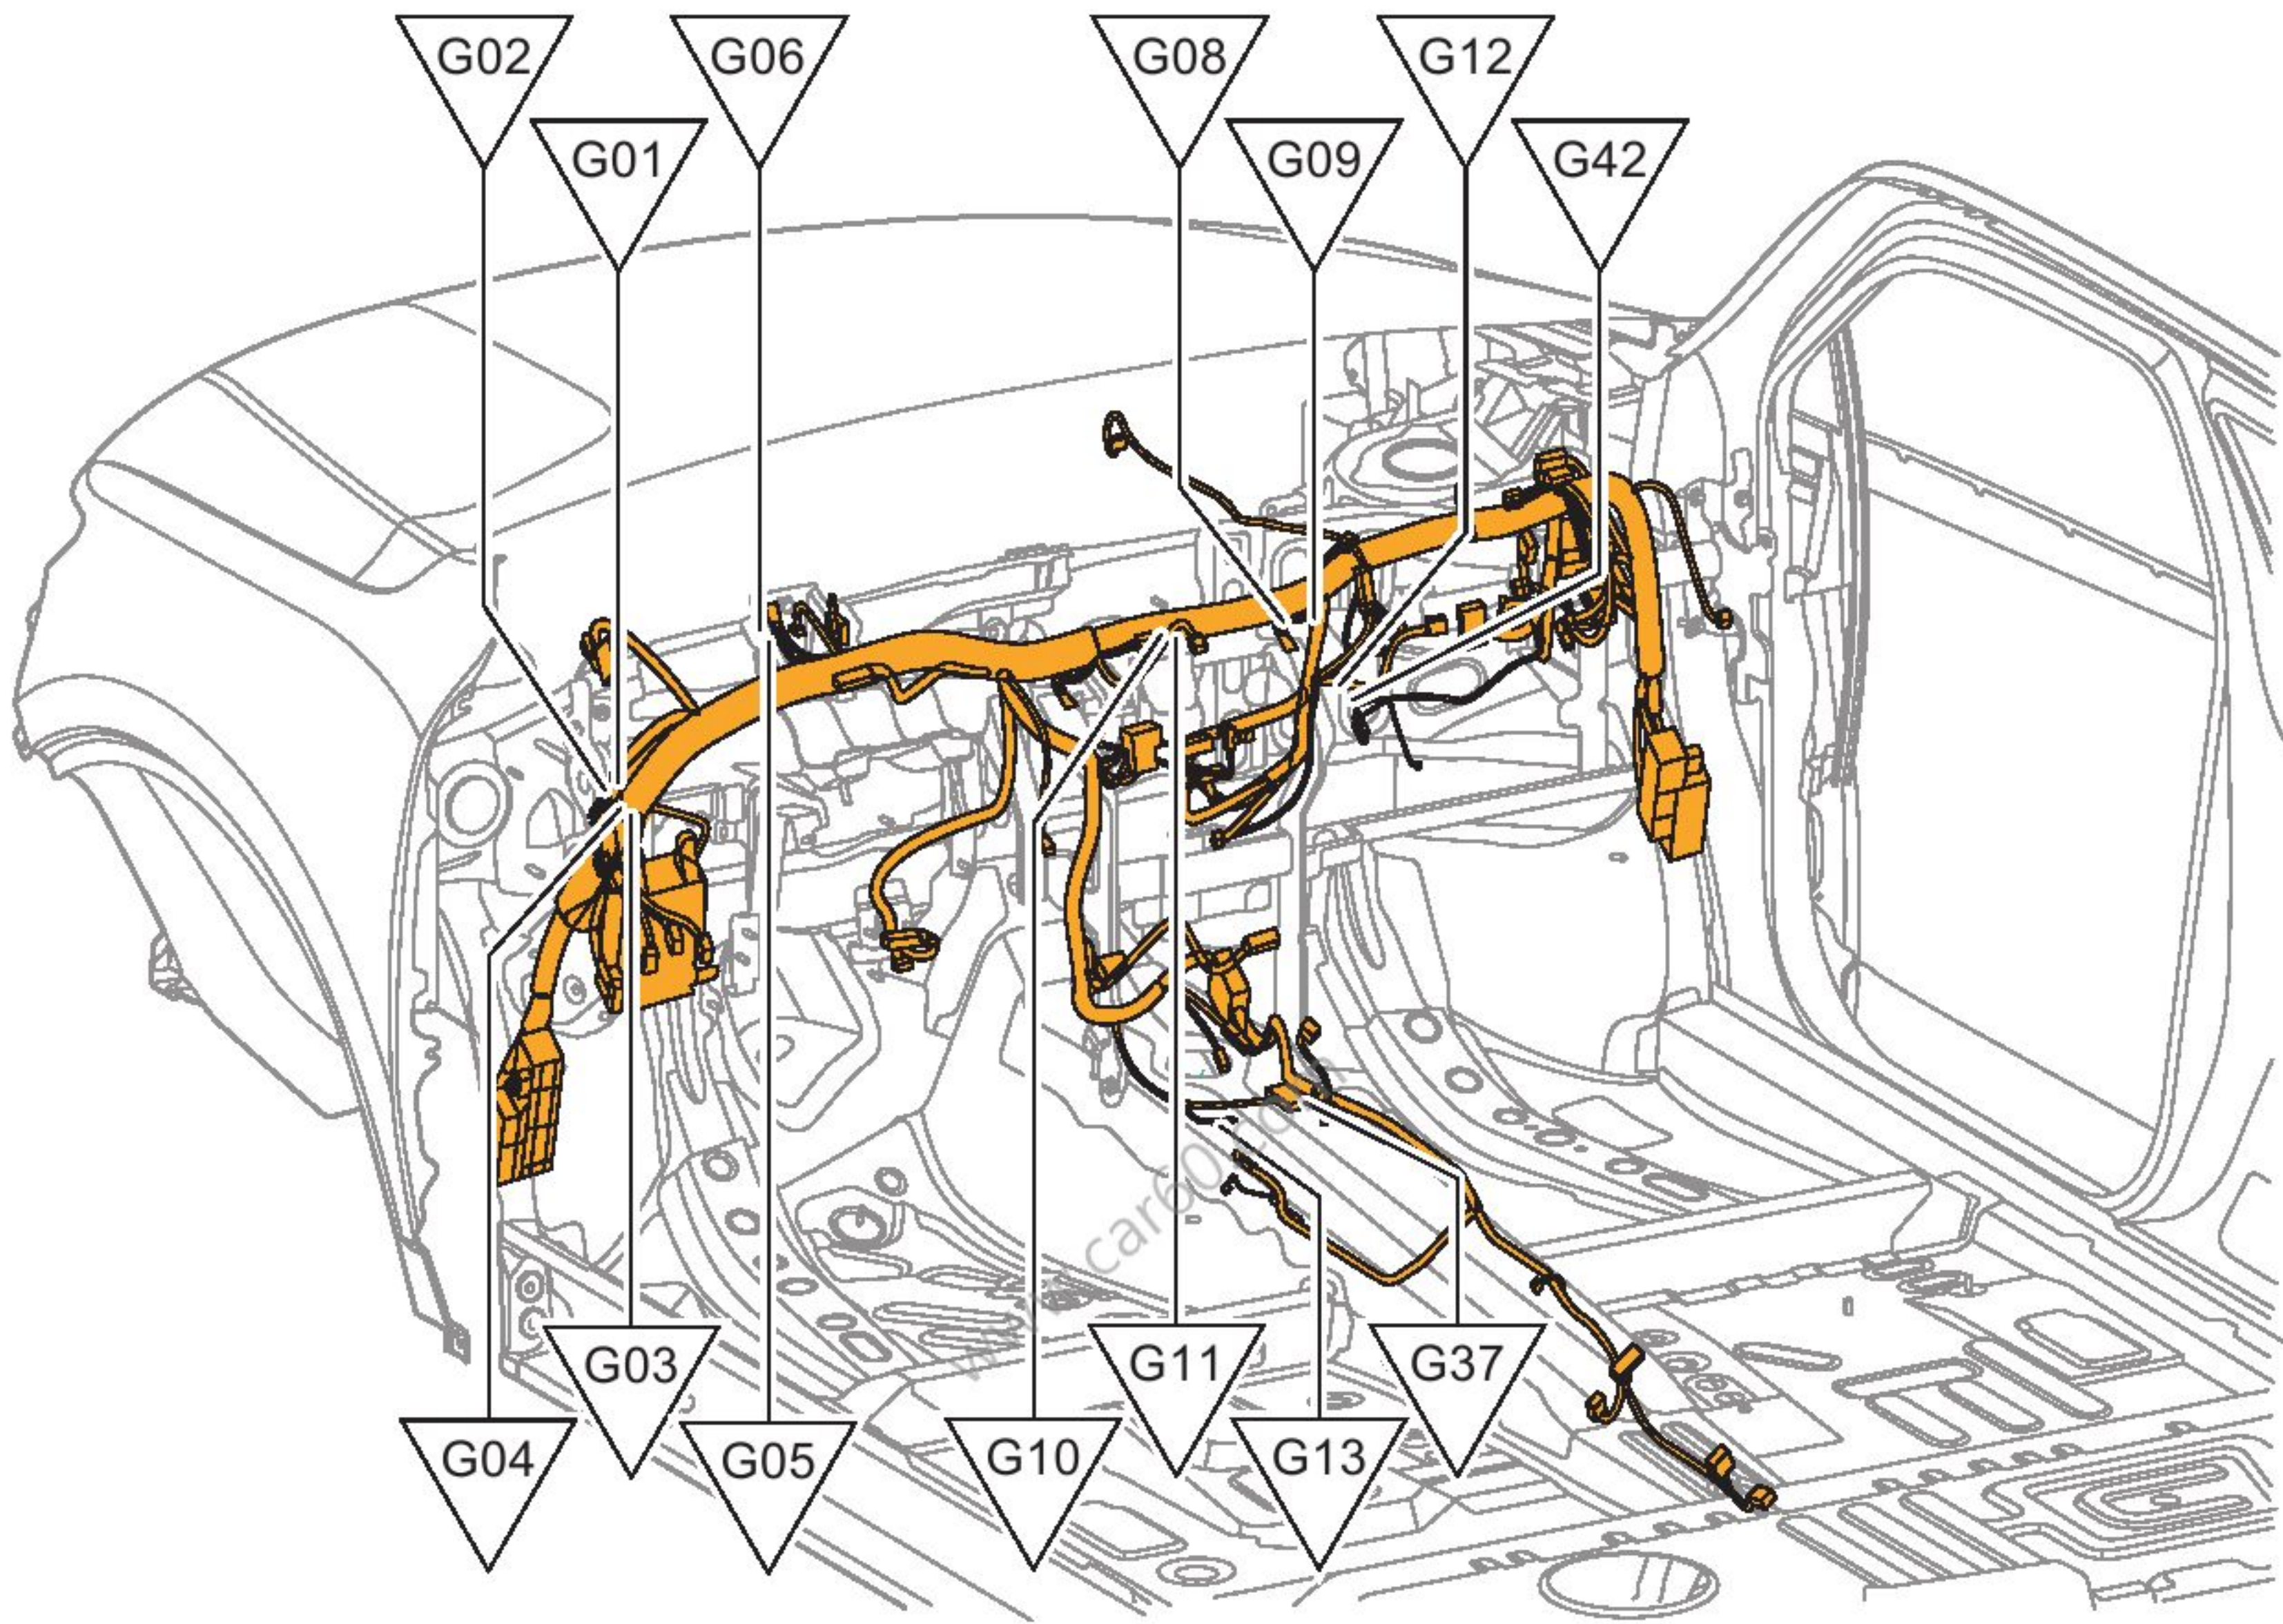


NL13-06007b

底板线束接地点布置

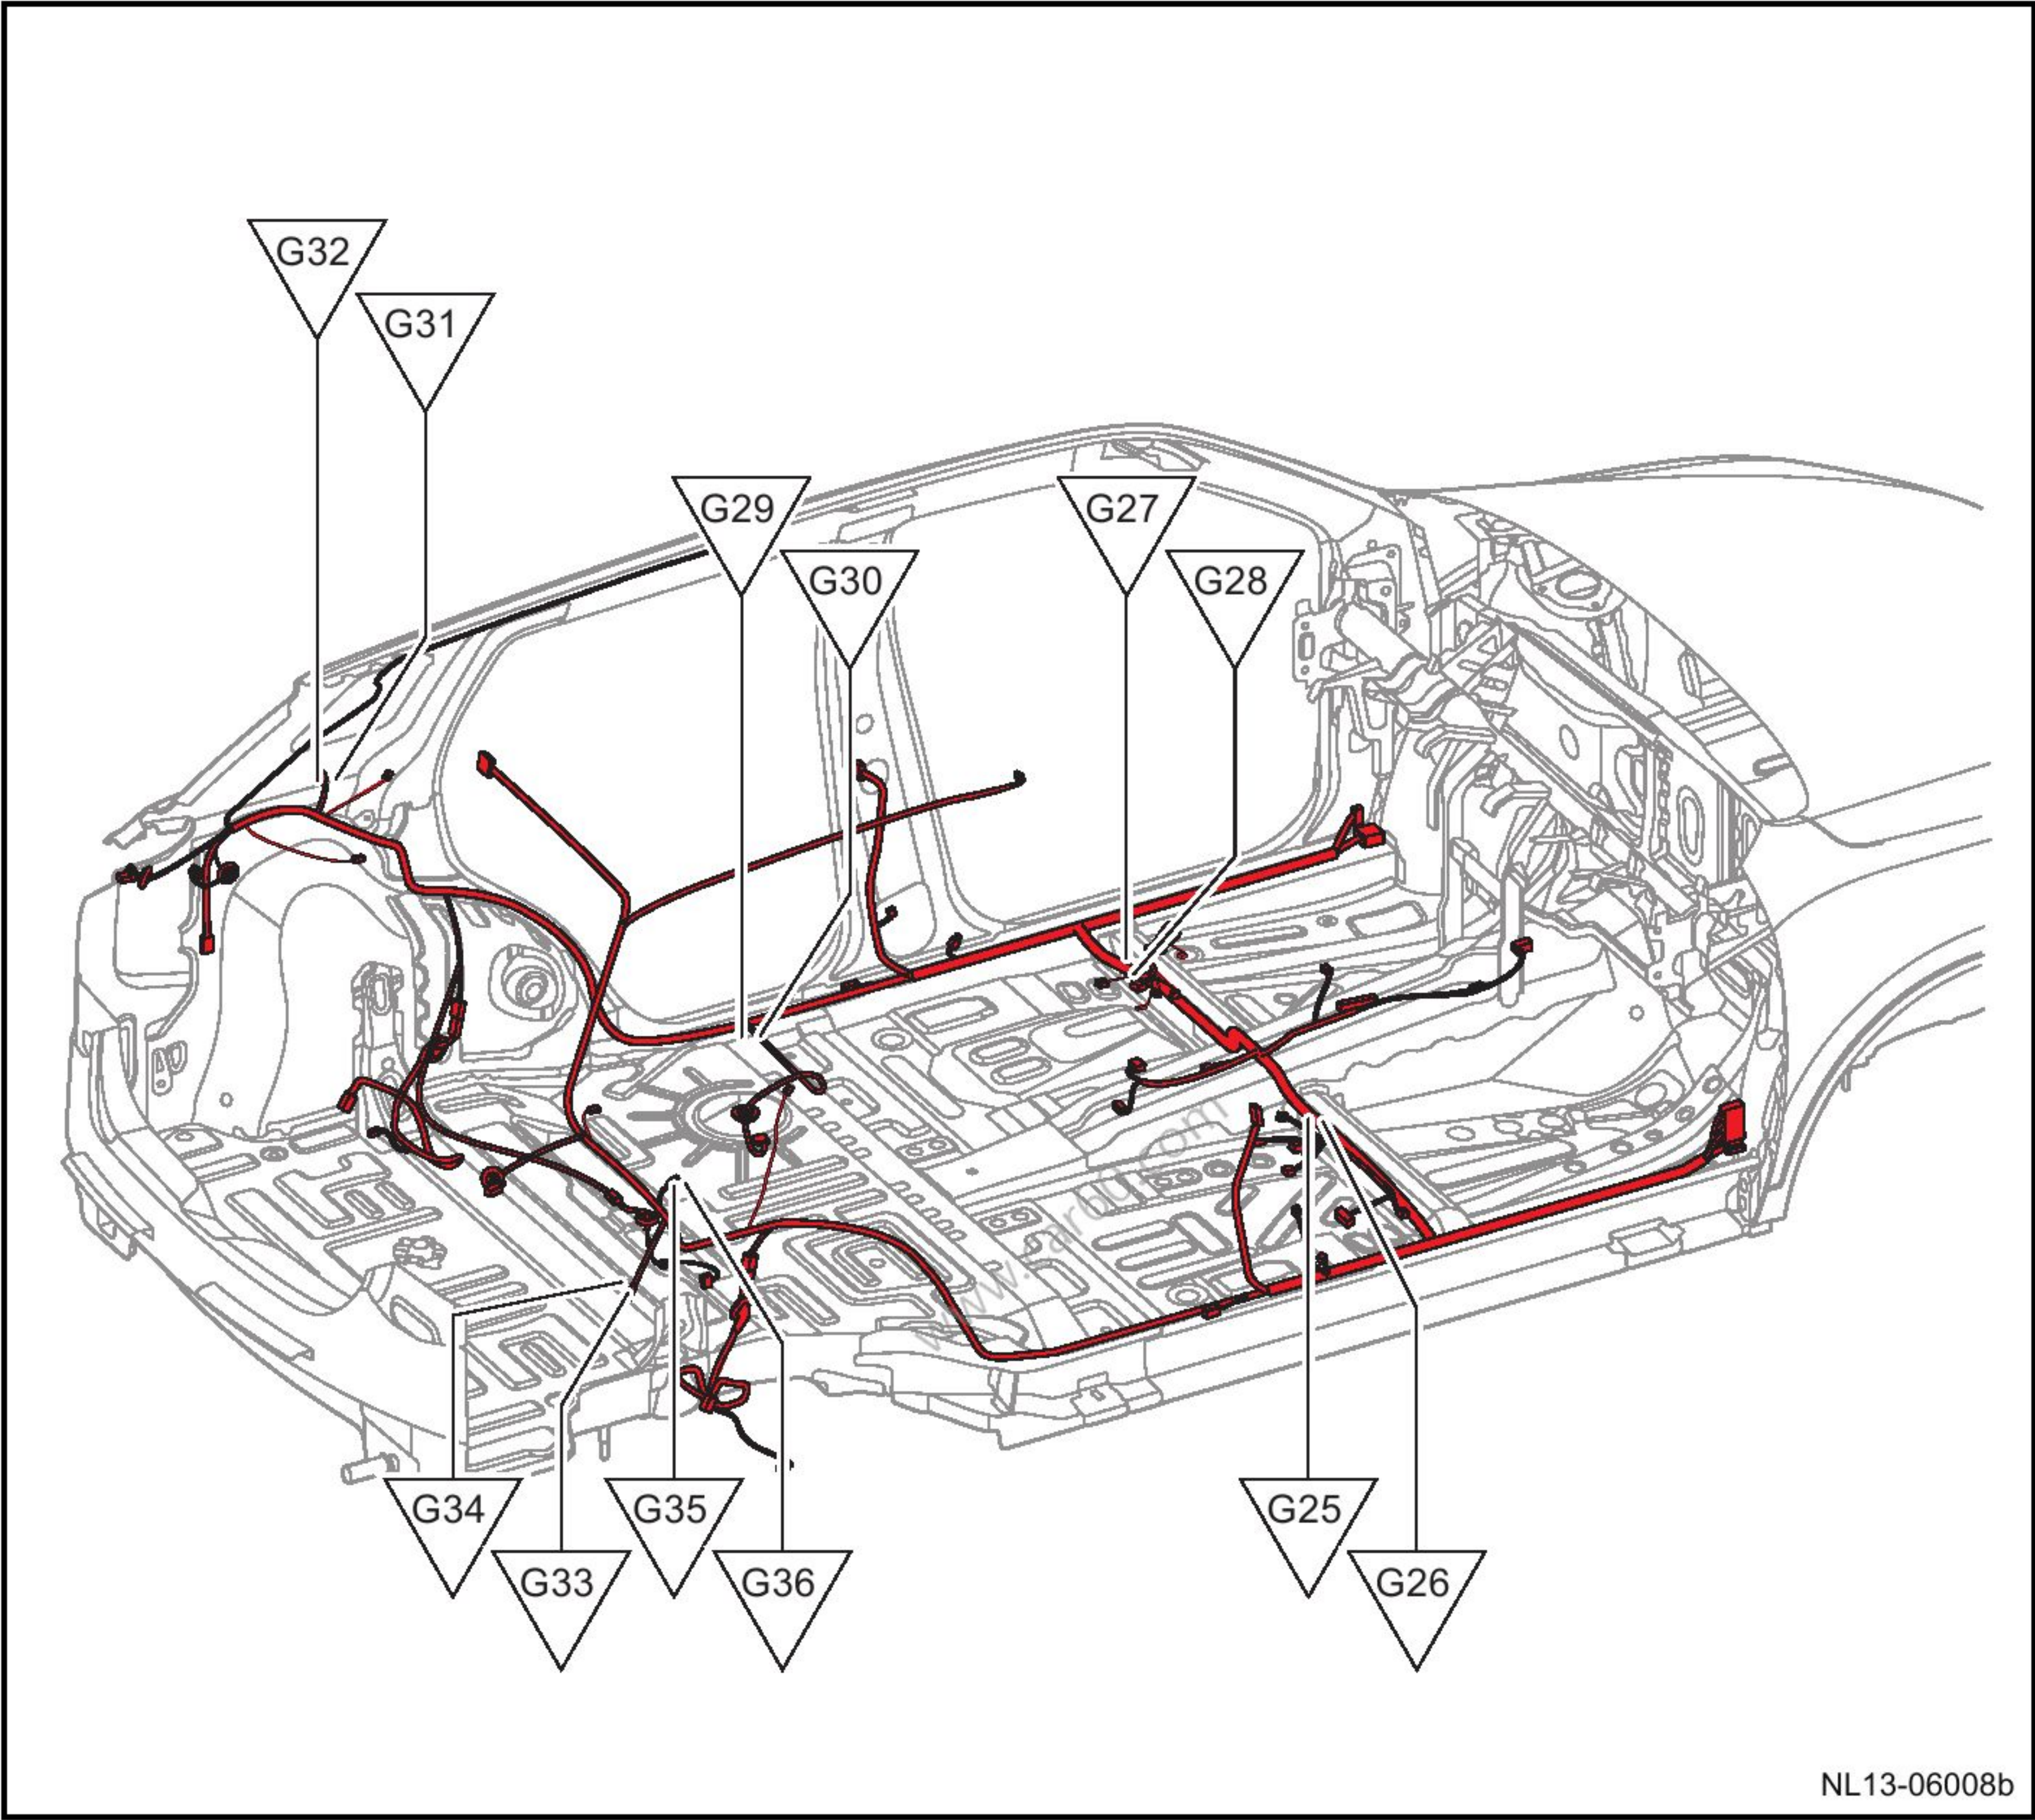


NL13-06008b

底板线束接地点布置 (续)

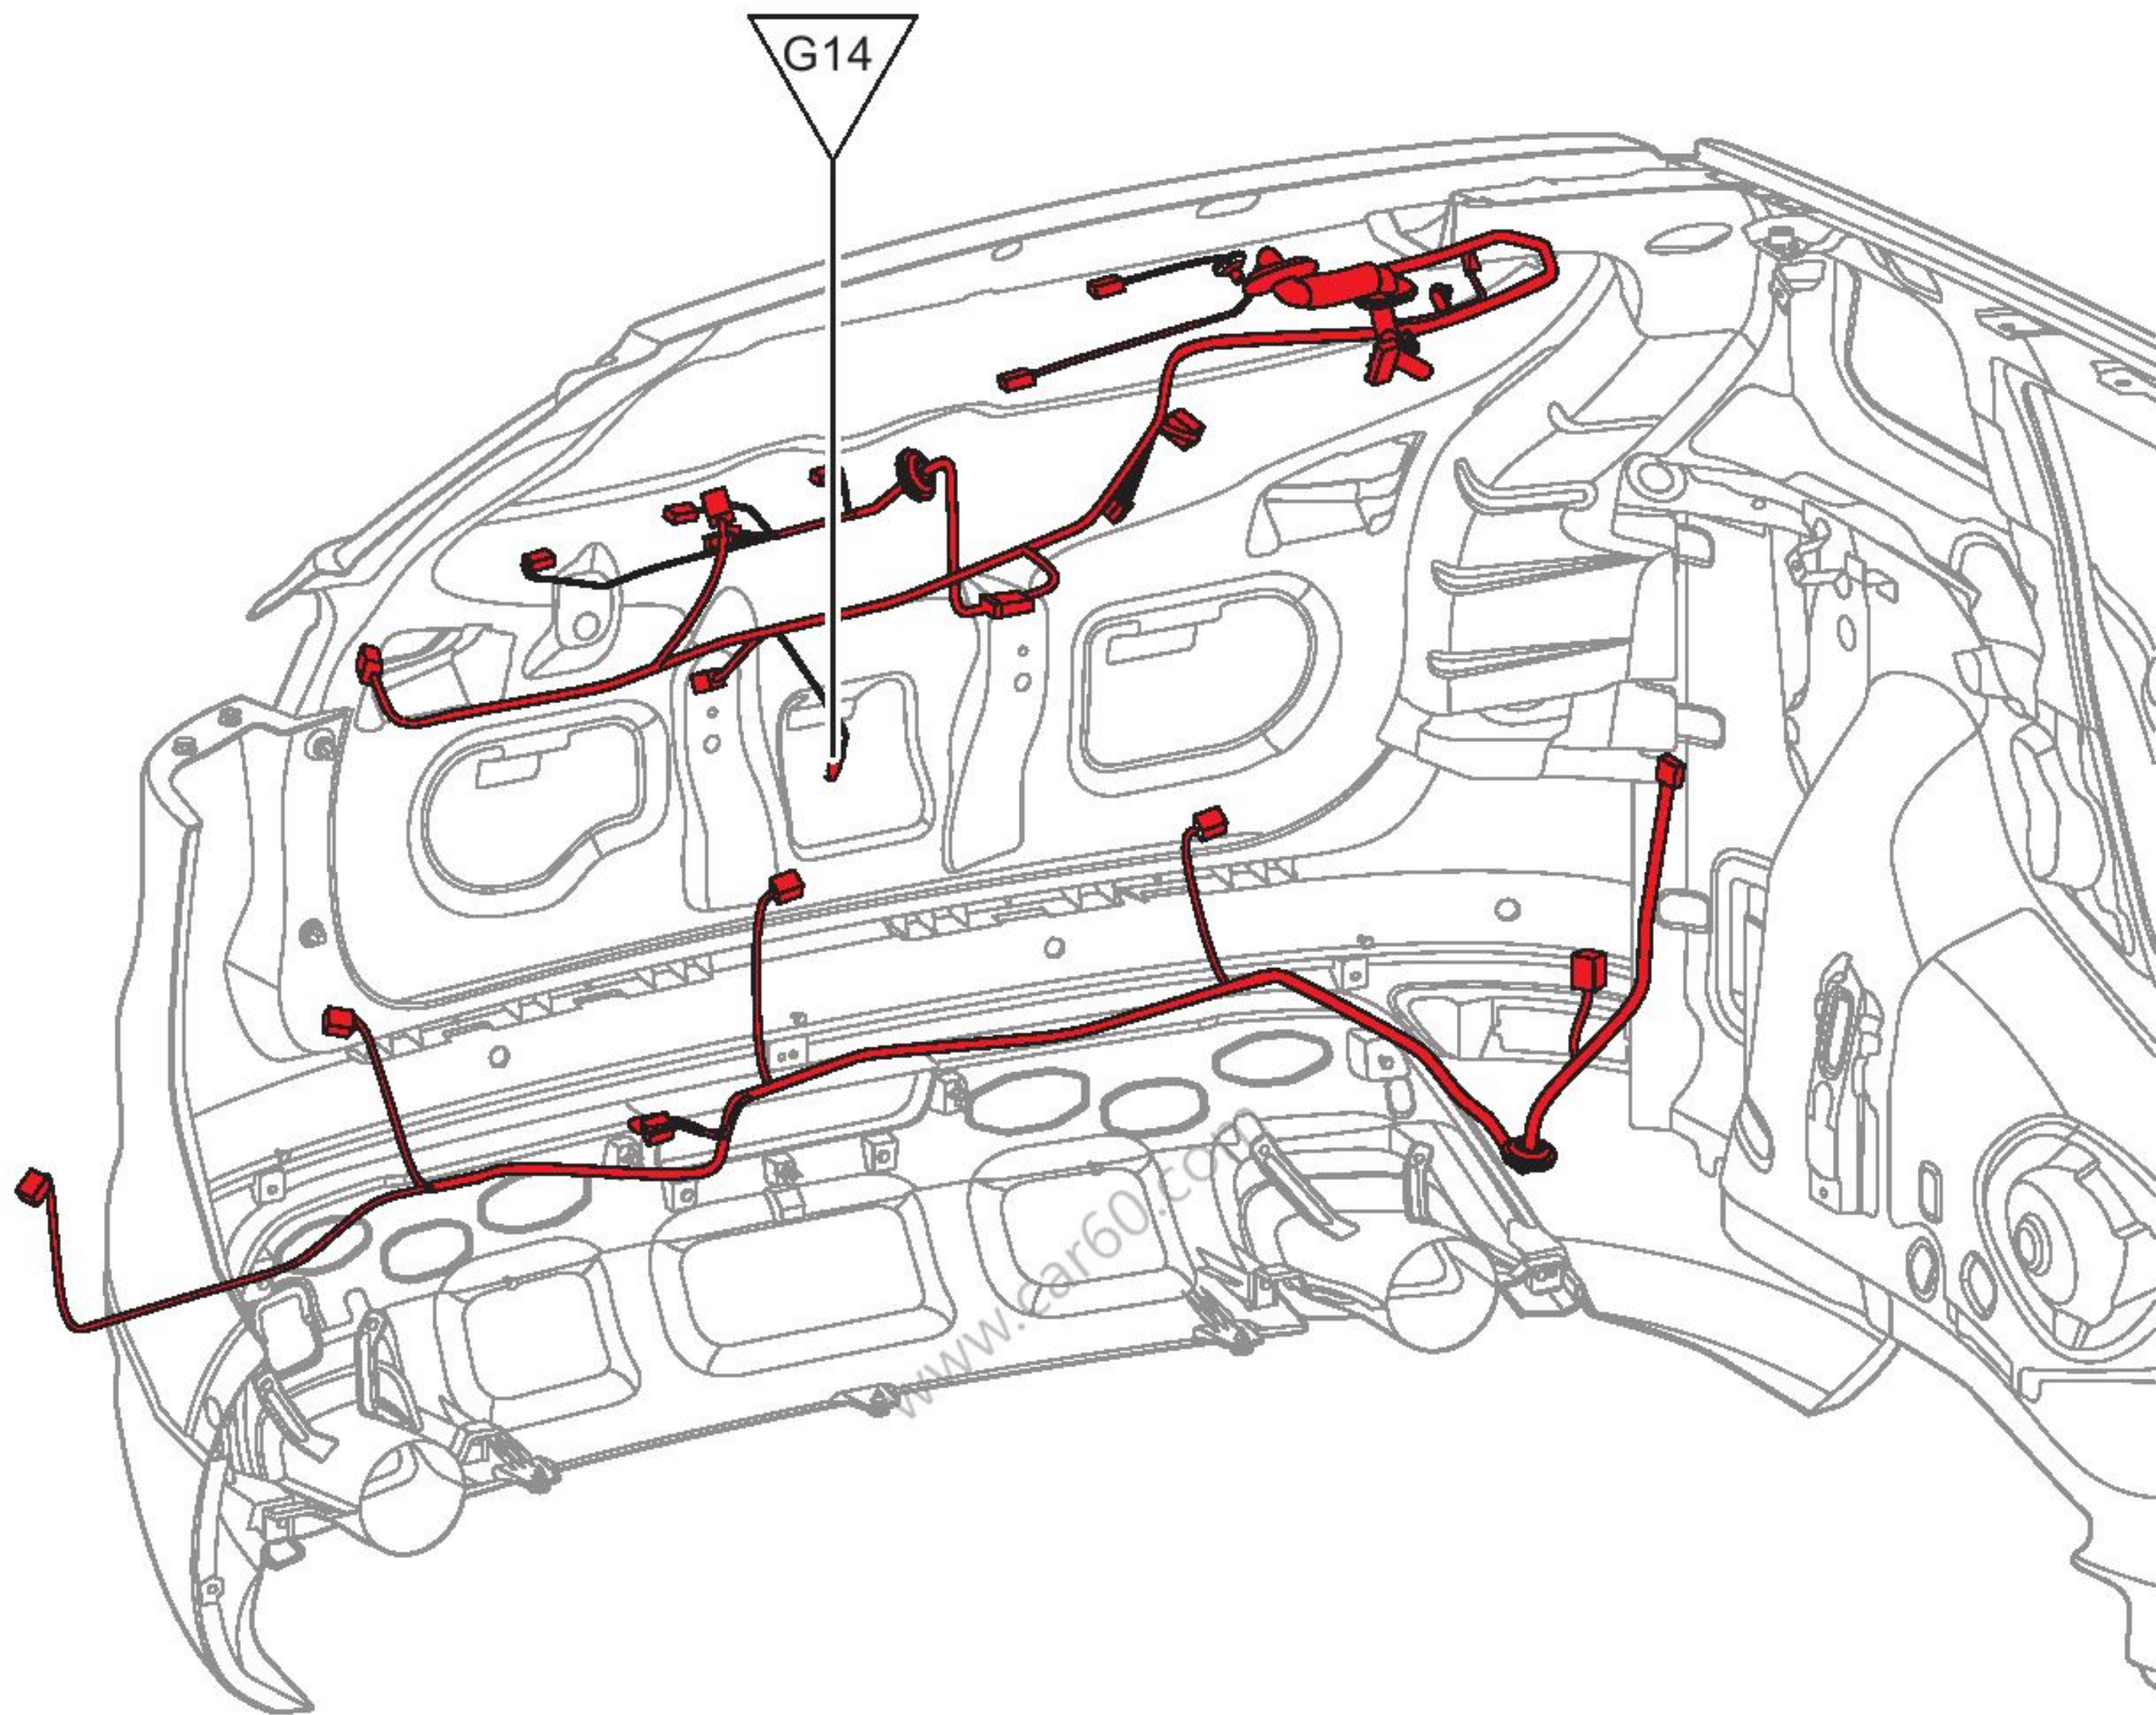


NL13-06009b

接地点线路图 1 (G01,G02)

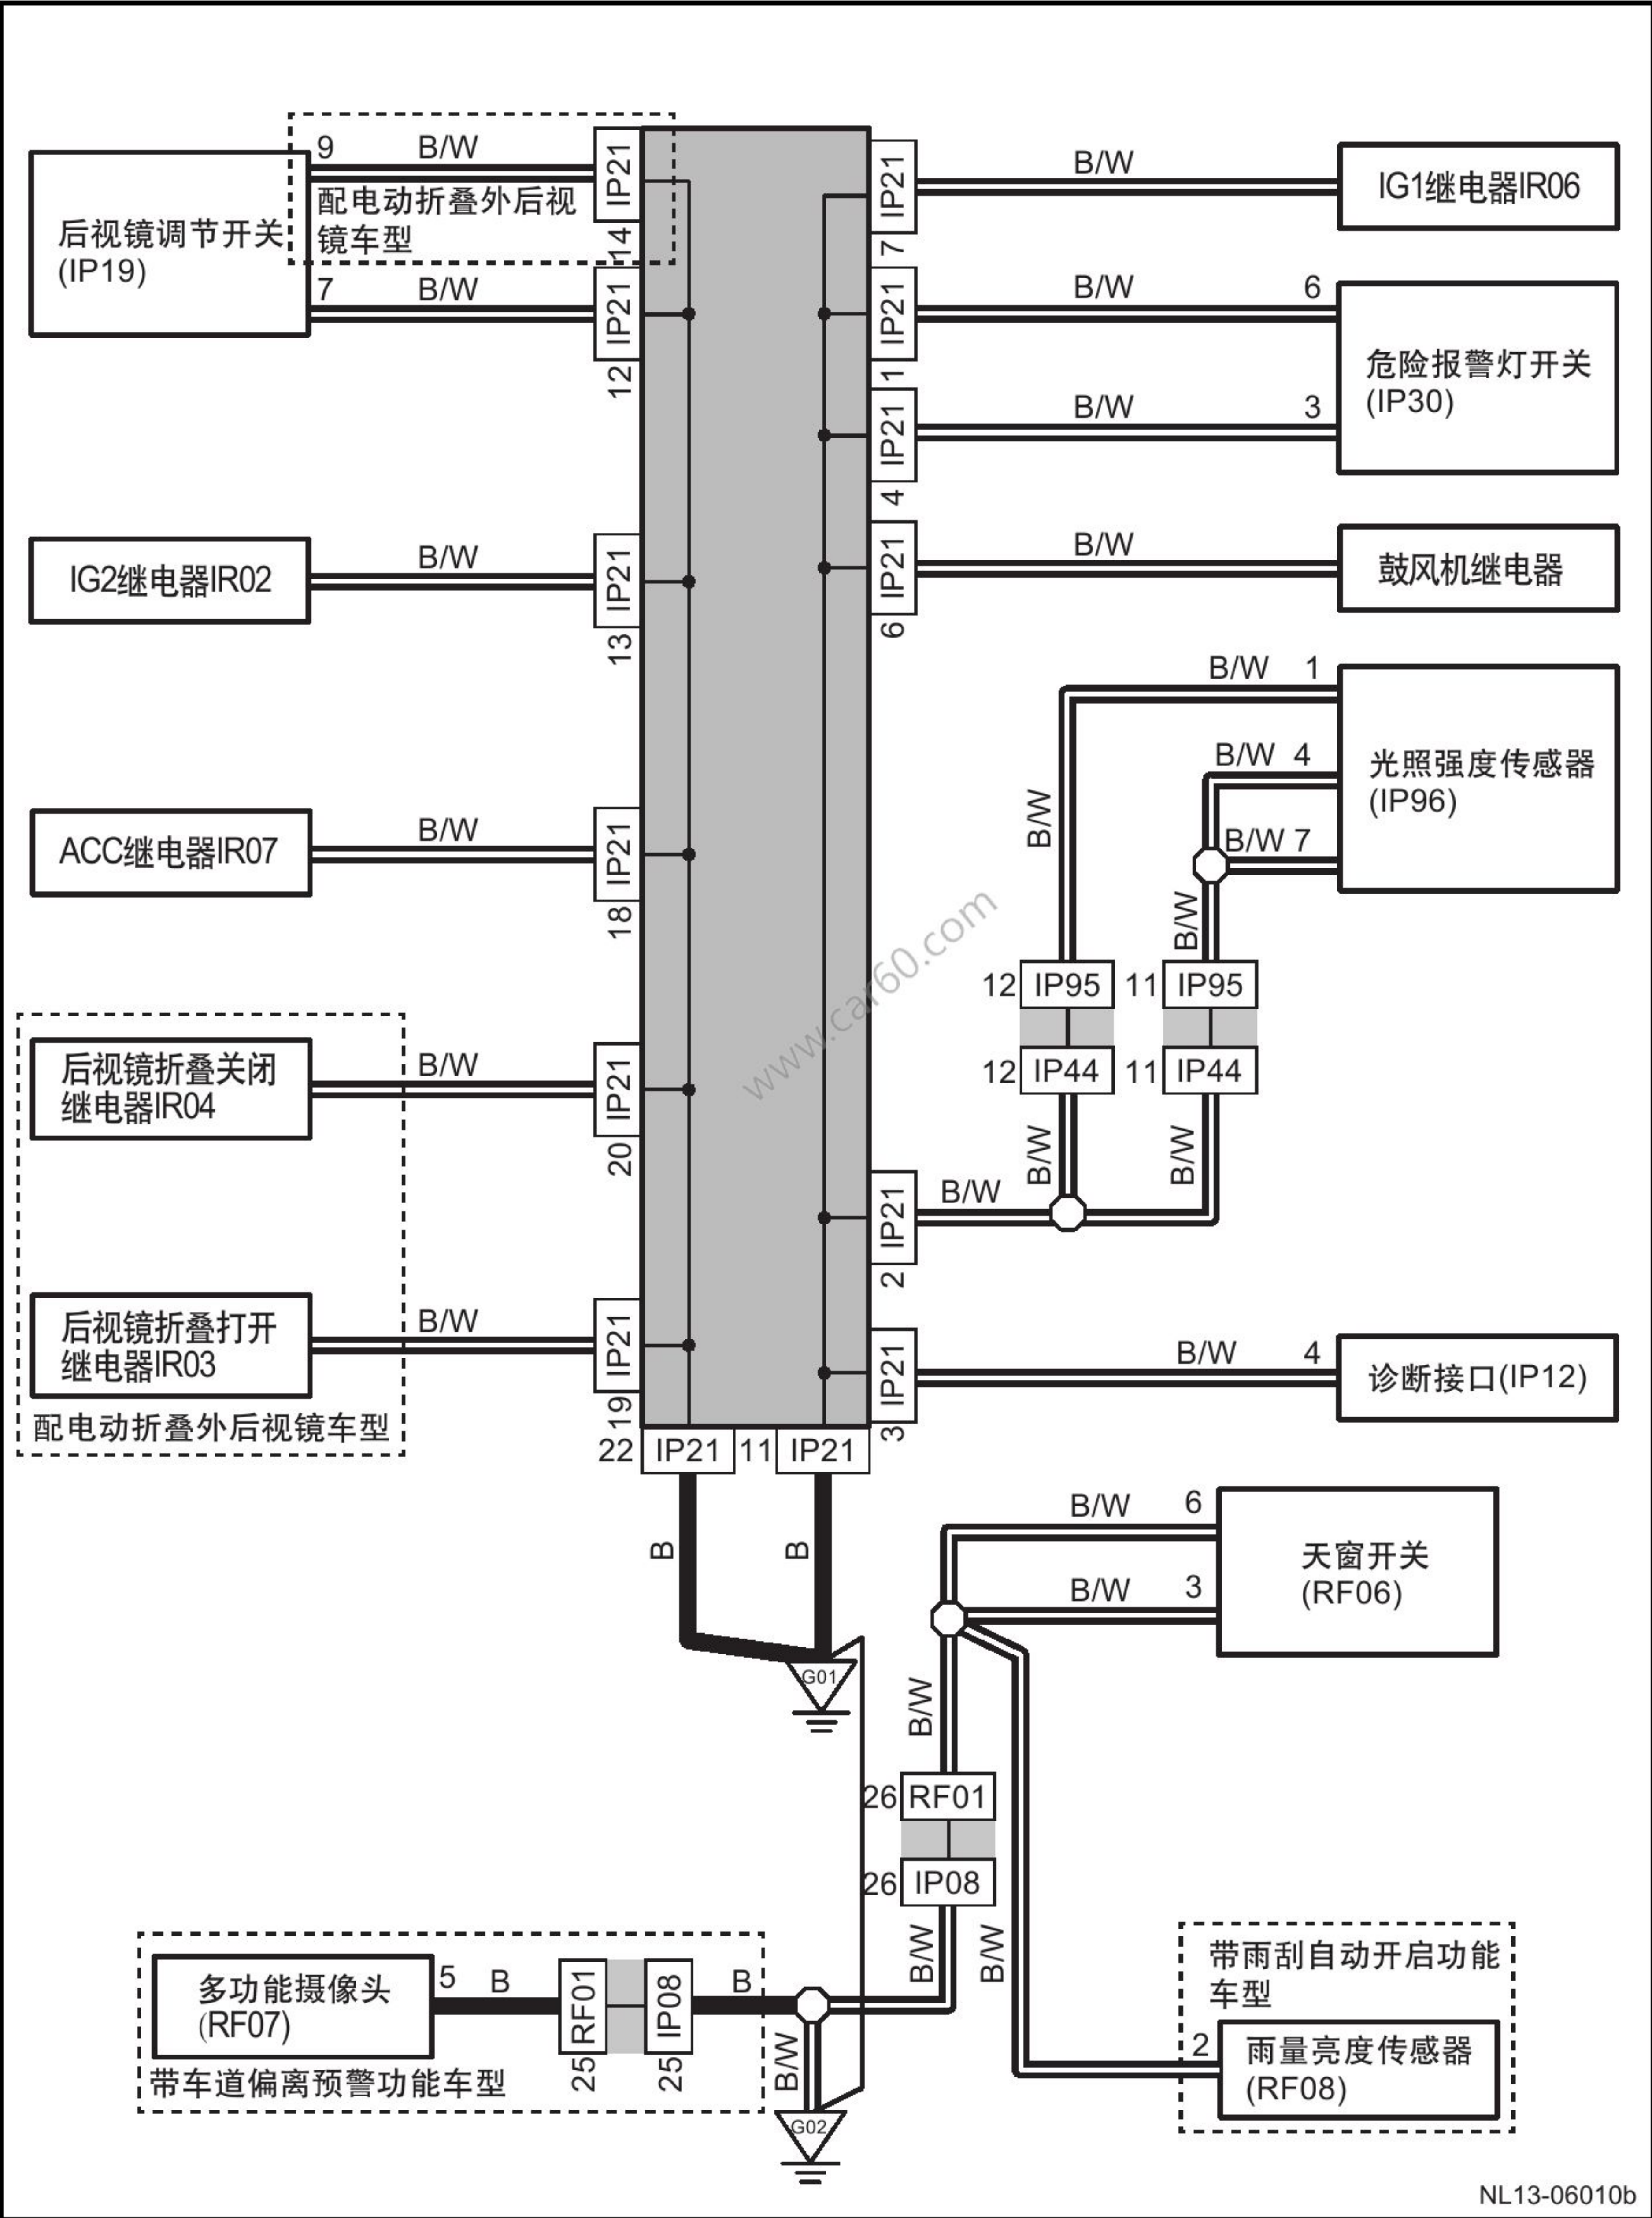


NL13-06010b


接地点线路图 2 (G03,G04,G05,G06,G07,G13)

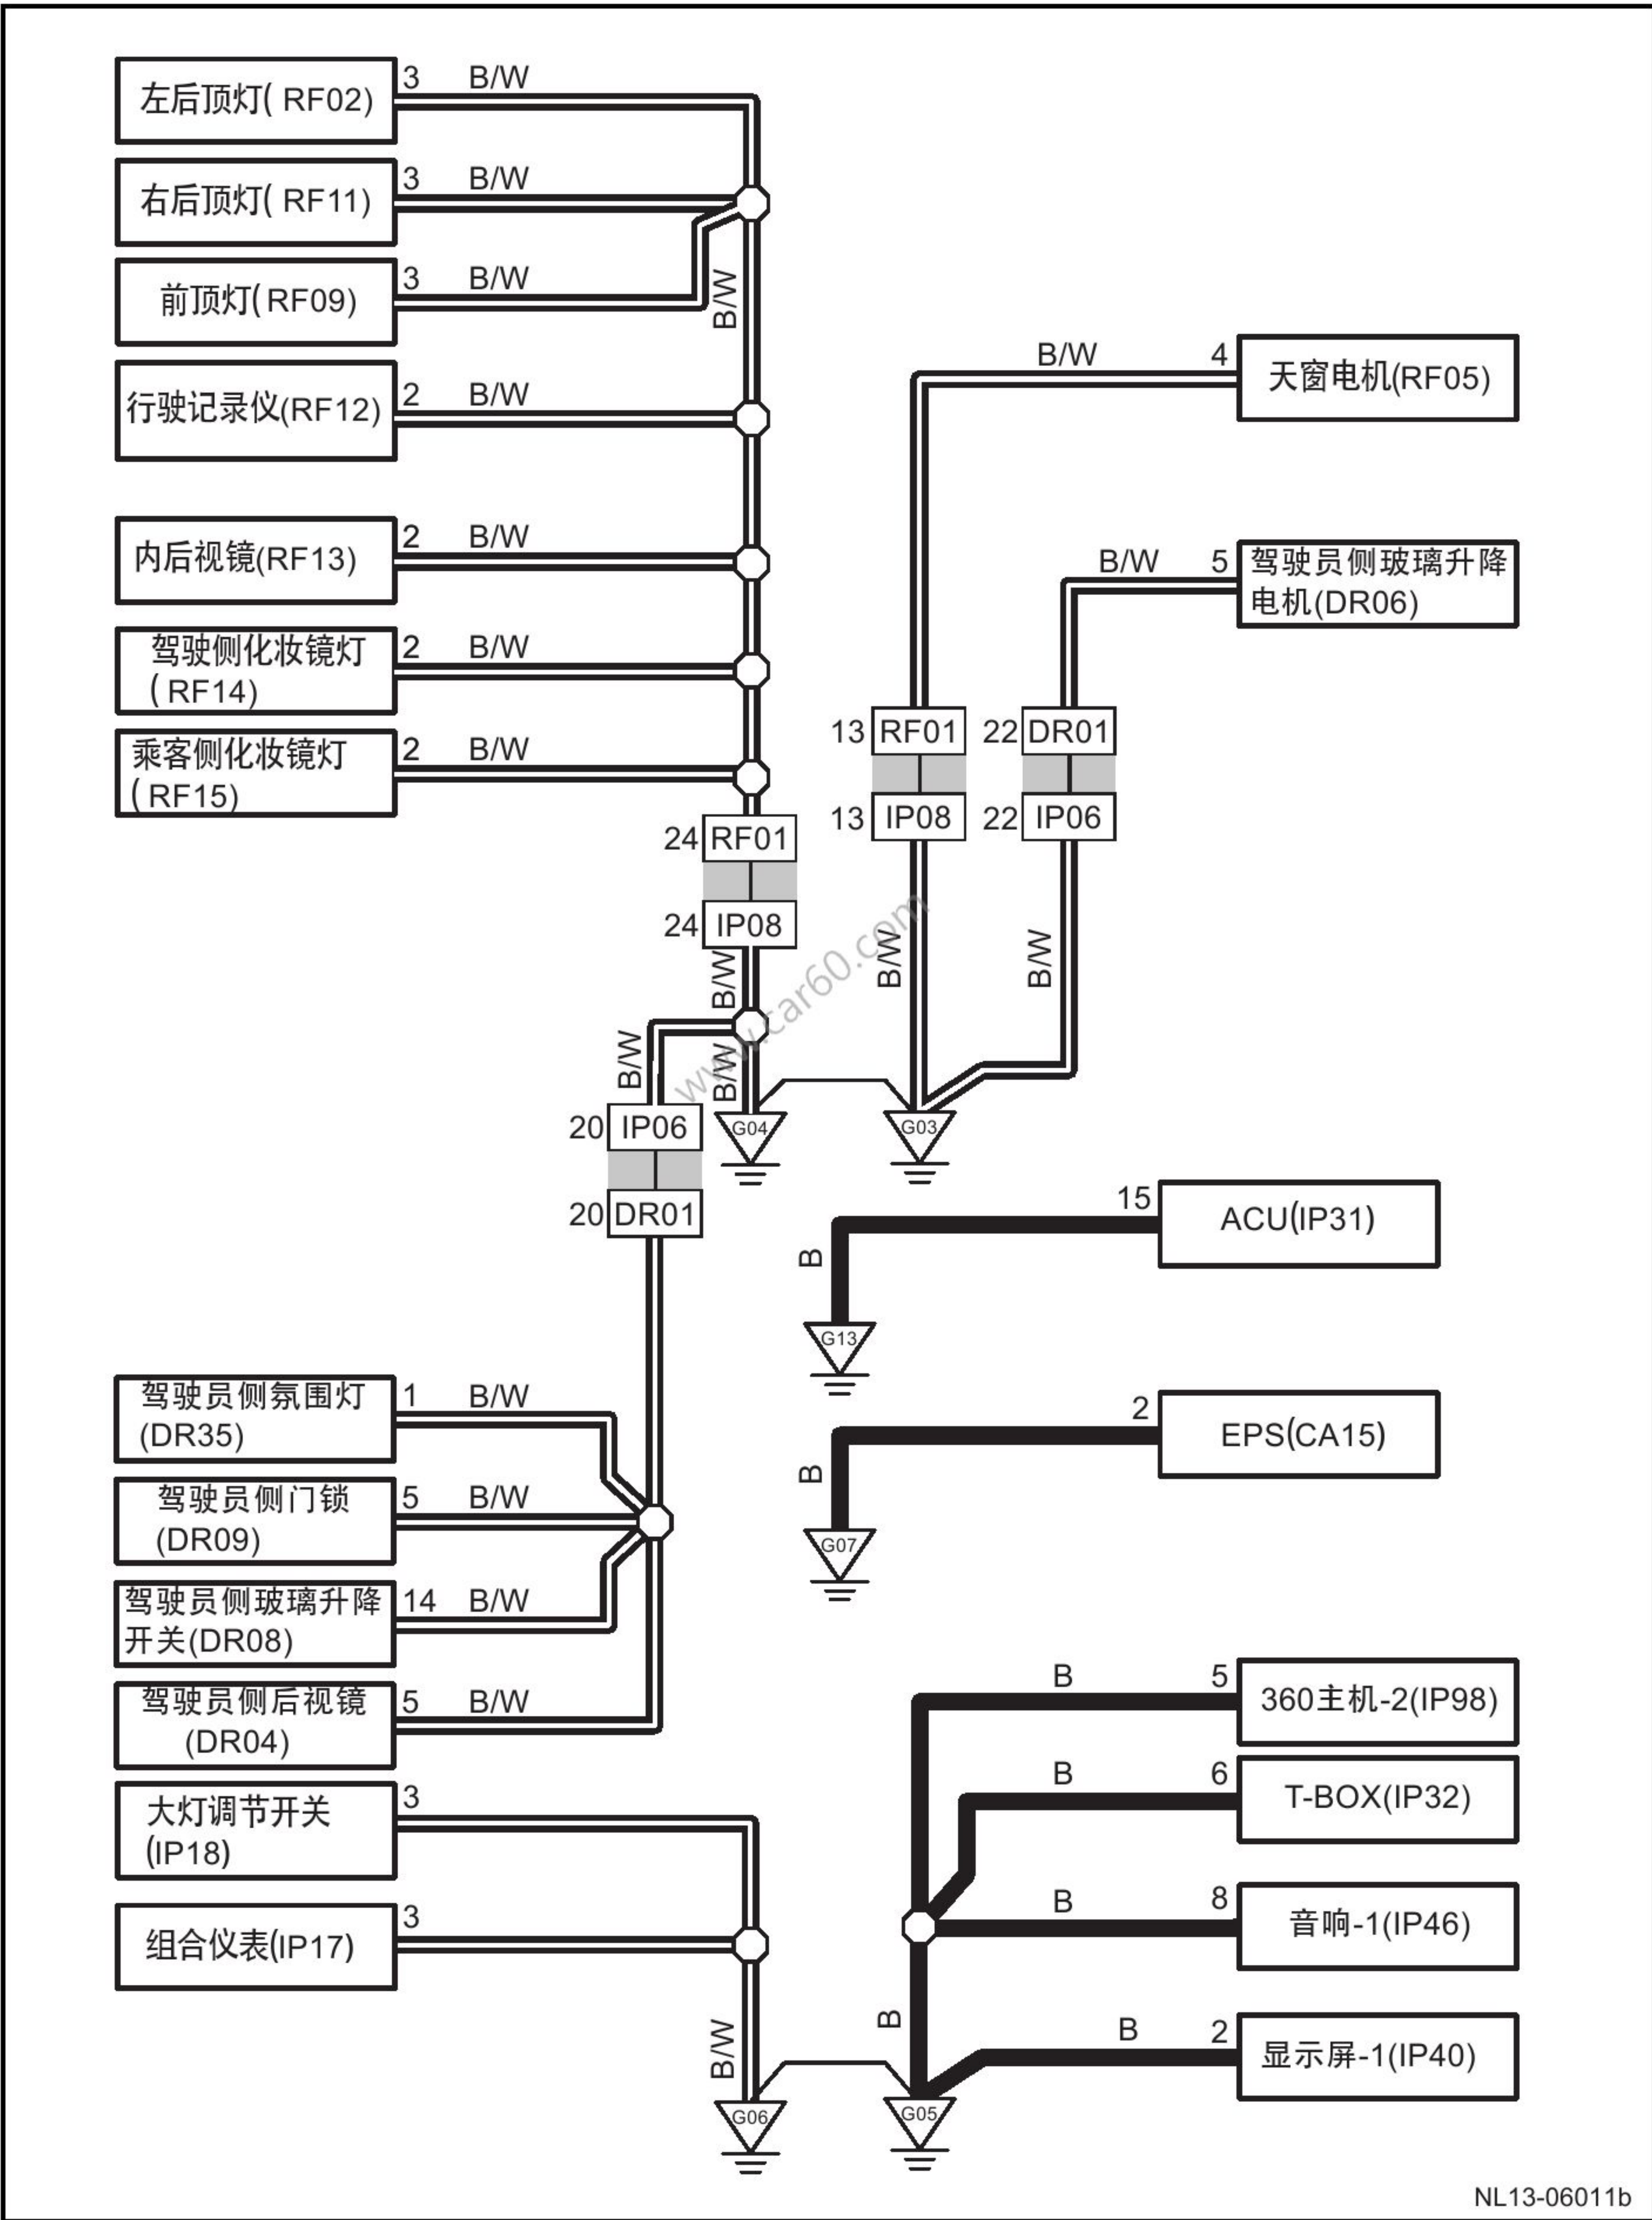


NL13-06011b

 


接地点线路图 4 (G14,G33,G34,G35,G36)

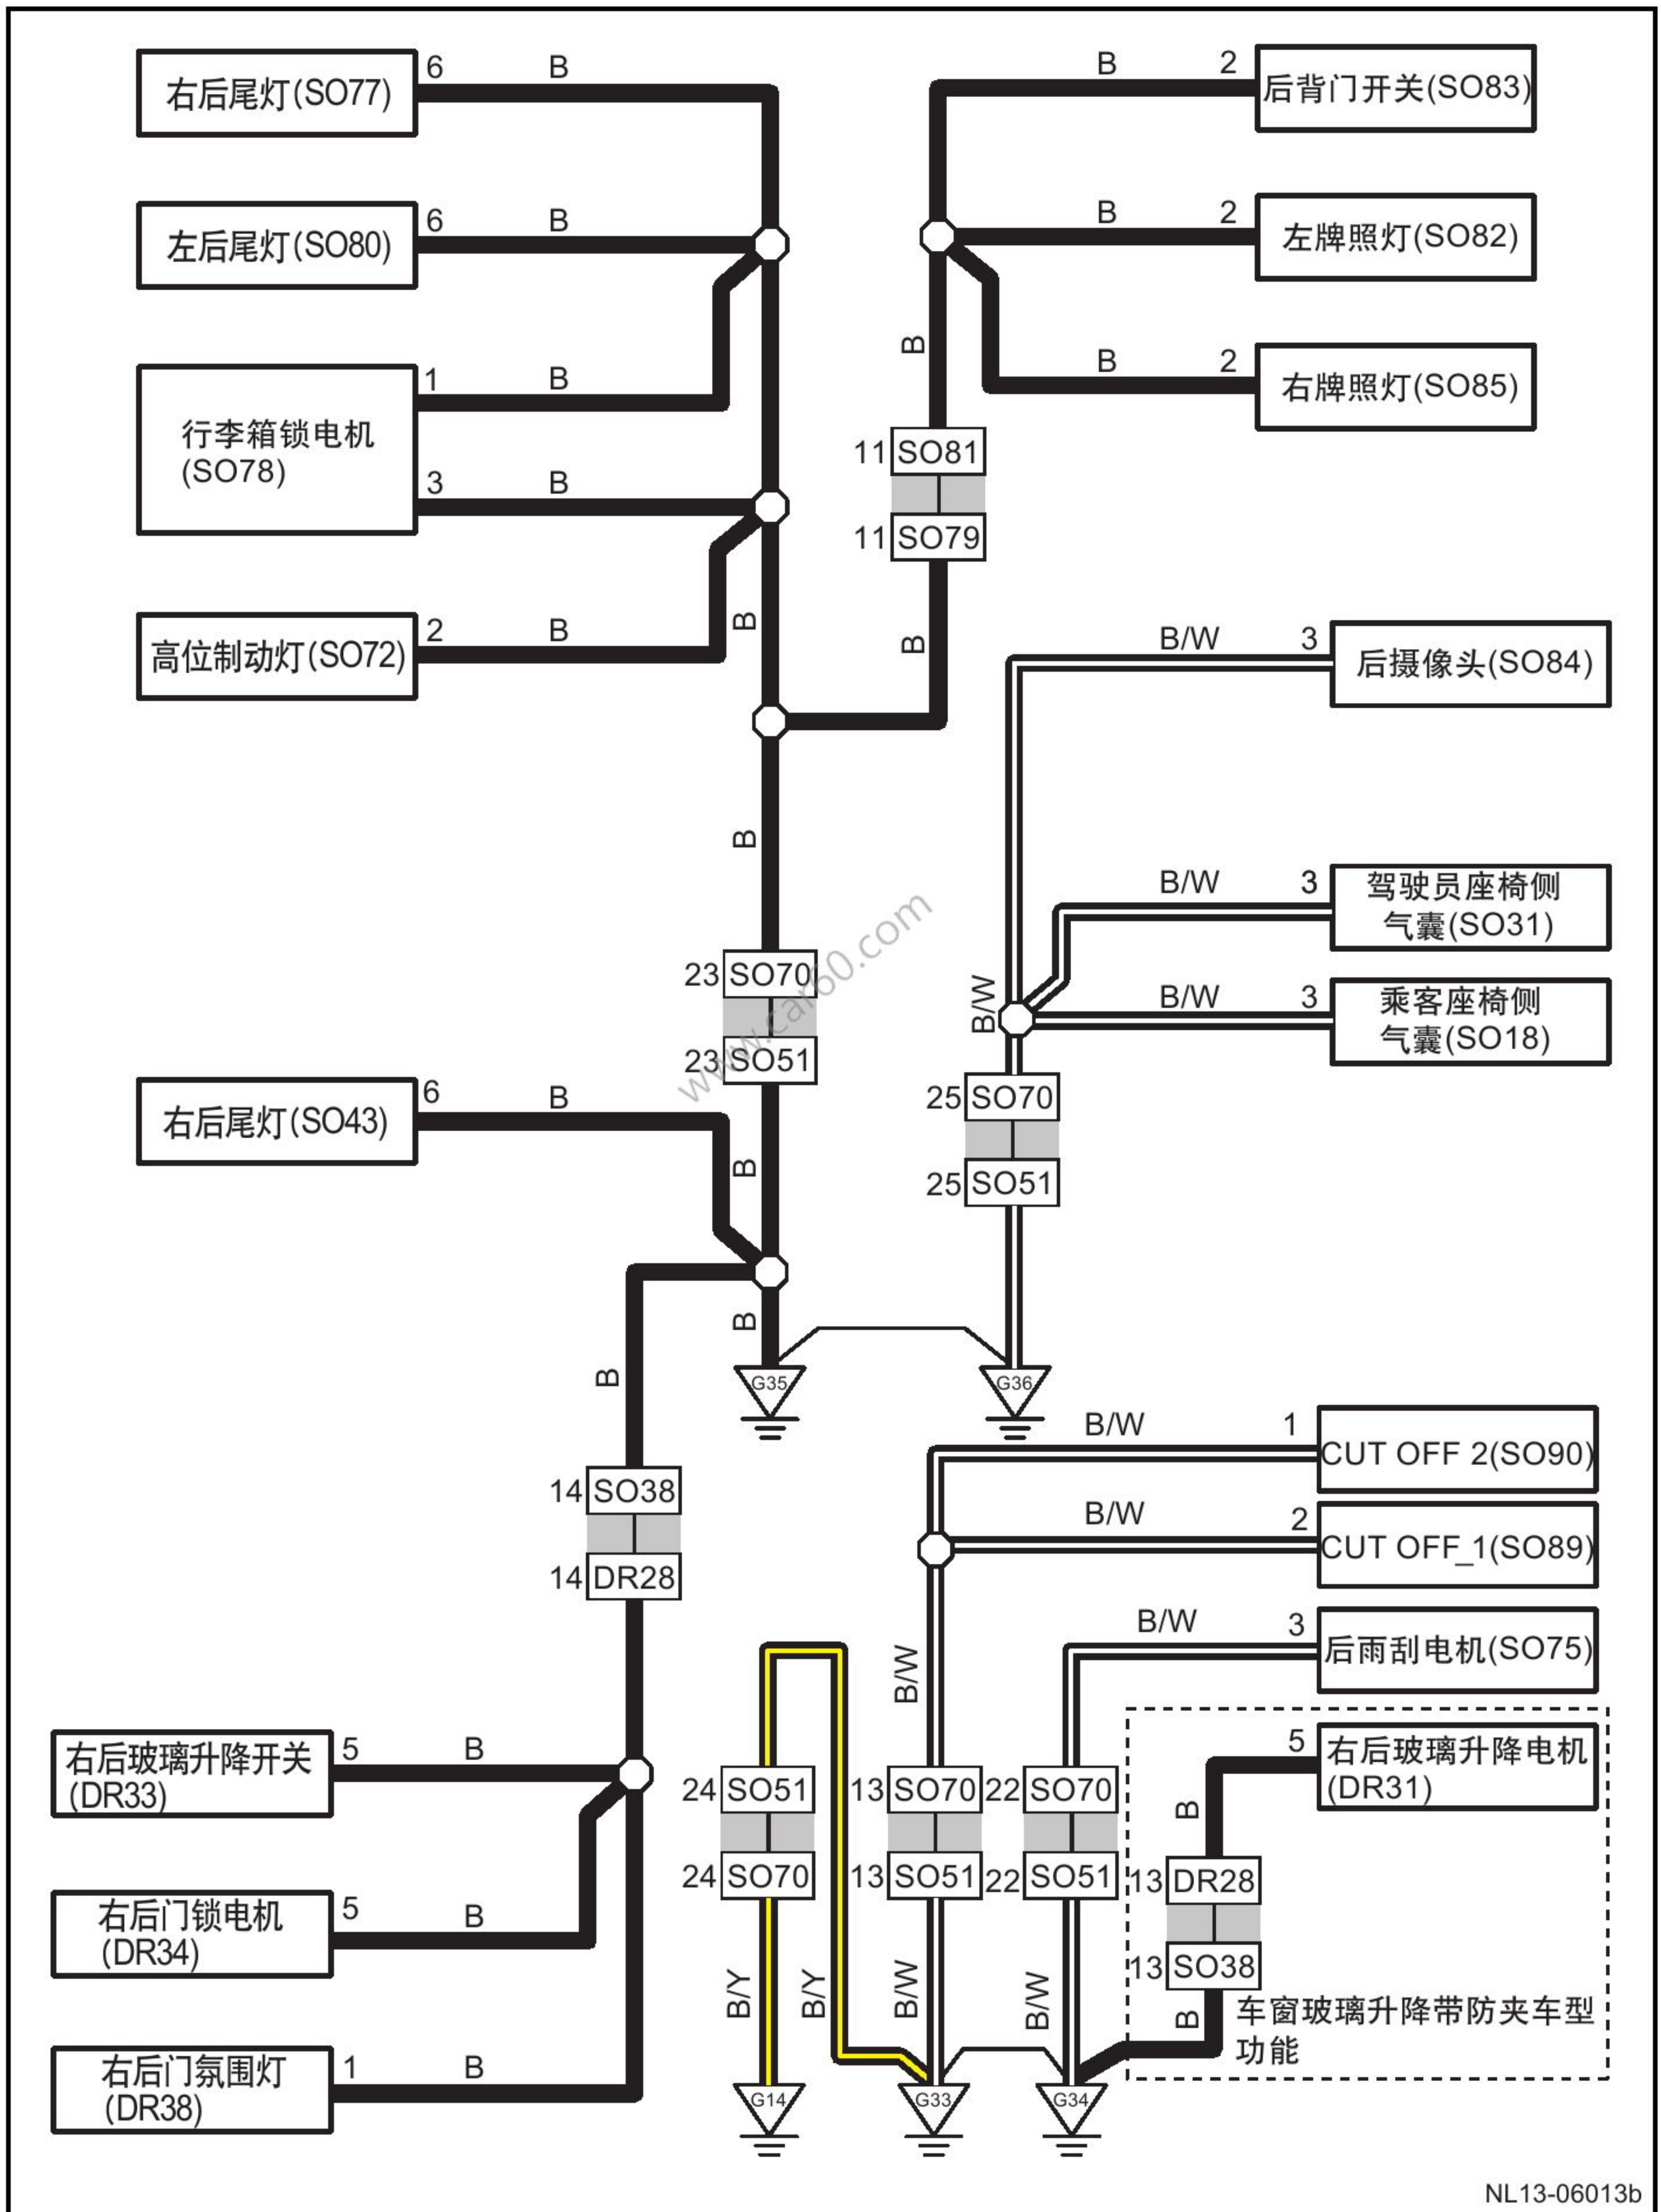


接地点线路图 5 (G15,G16,G40,G41,G42)

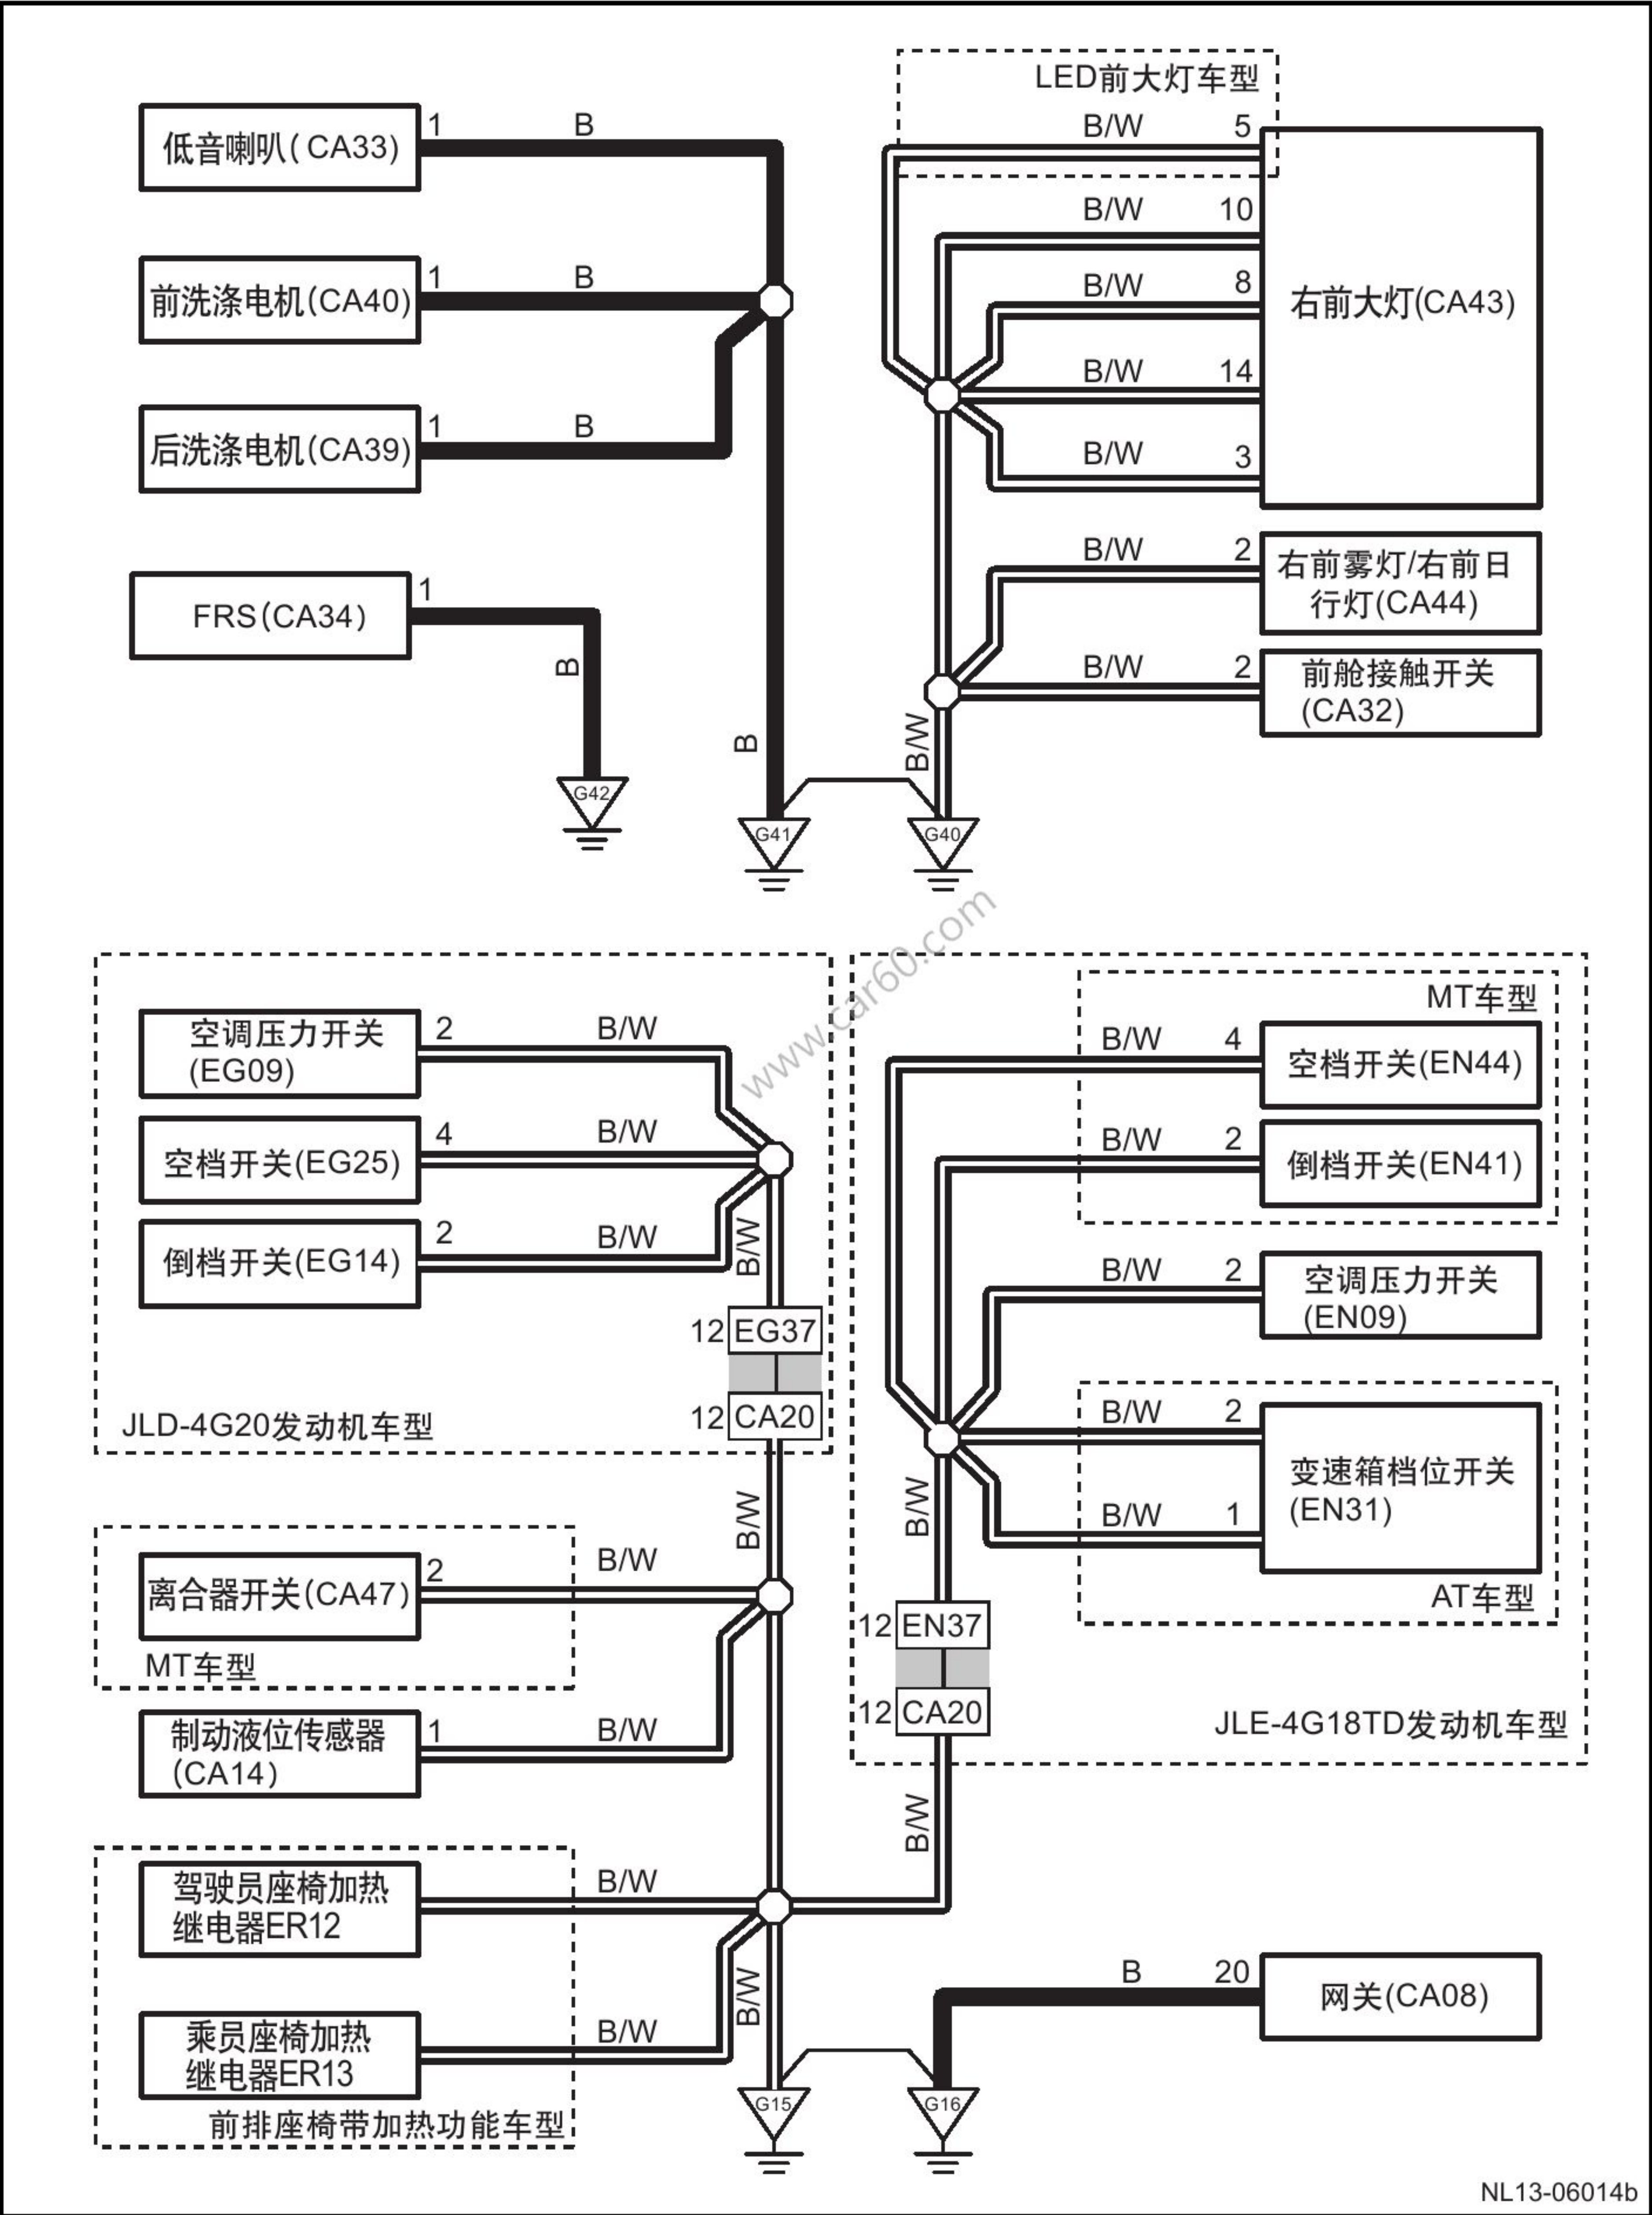

接地点线路图 6 (G17,G18,G19,G20,G21,G22,G24,G27,G28)

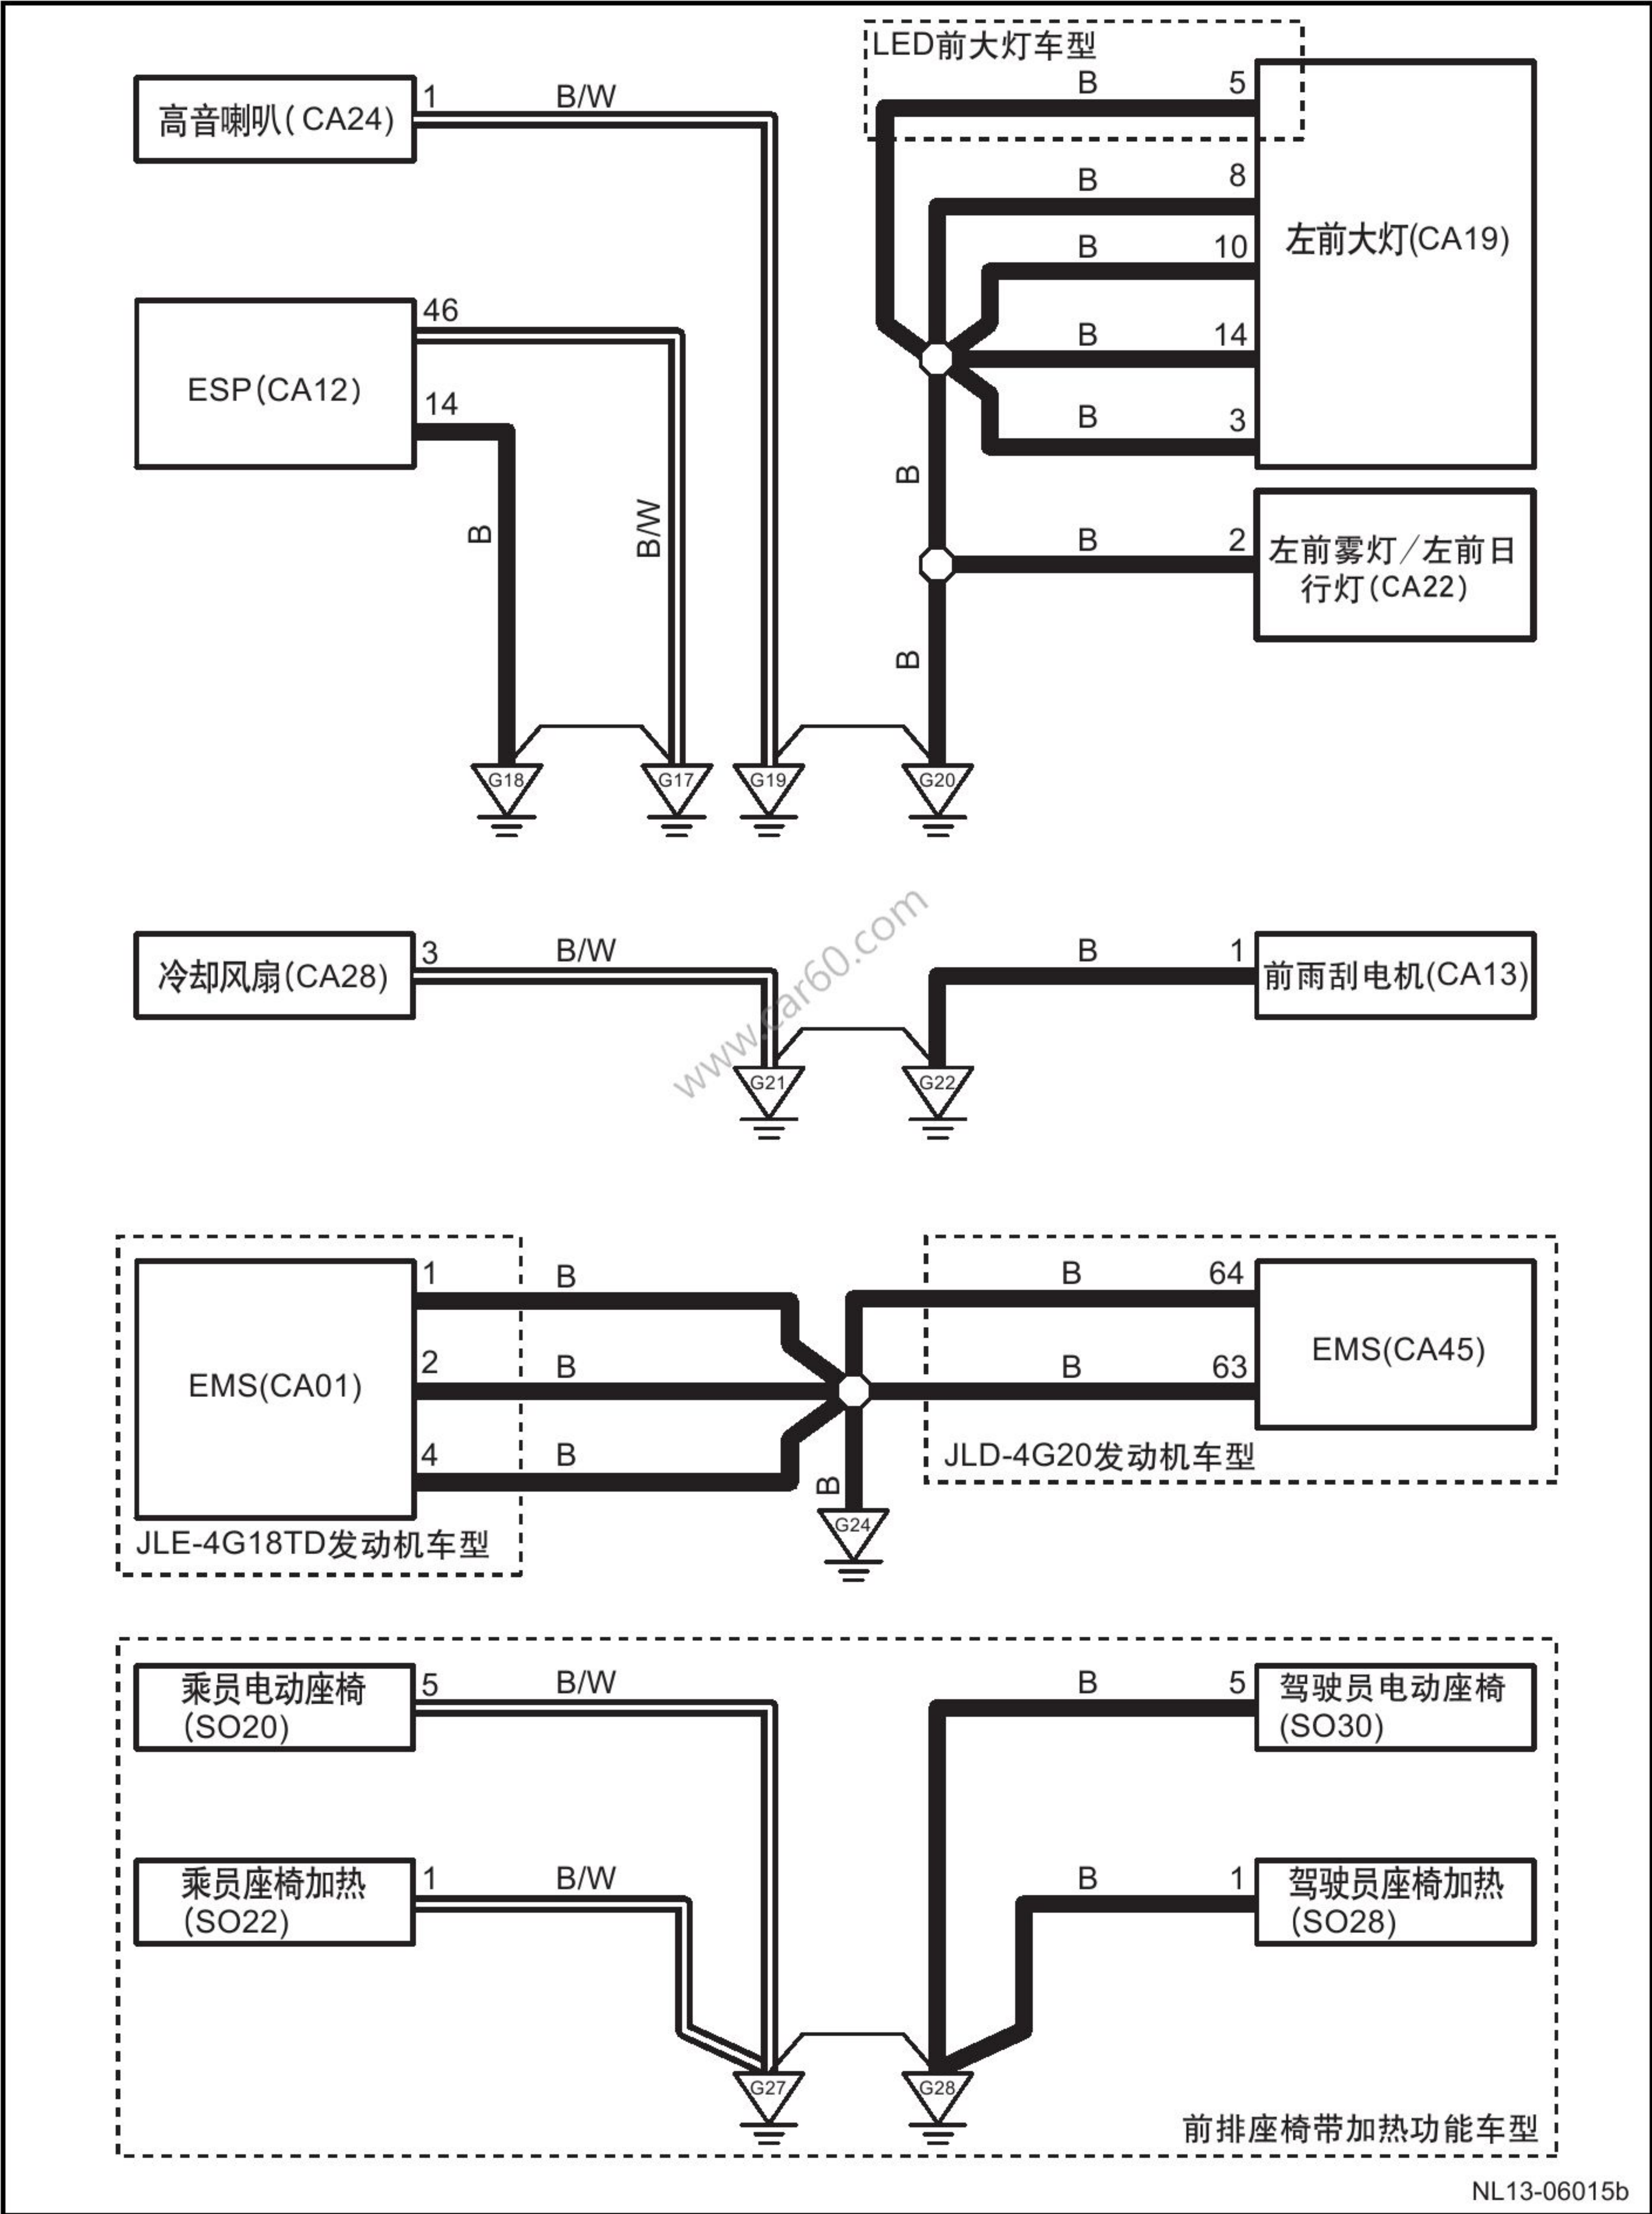


接地点线路图 7 (G25,G26,G29,G30,G31,G32)

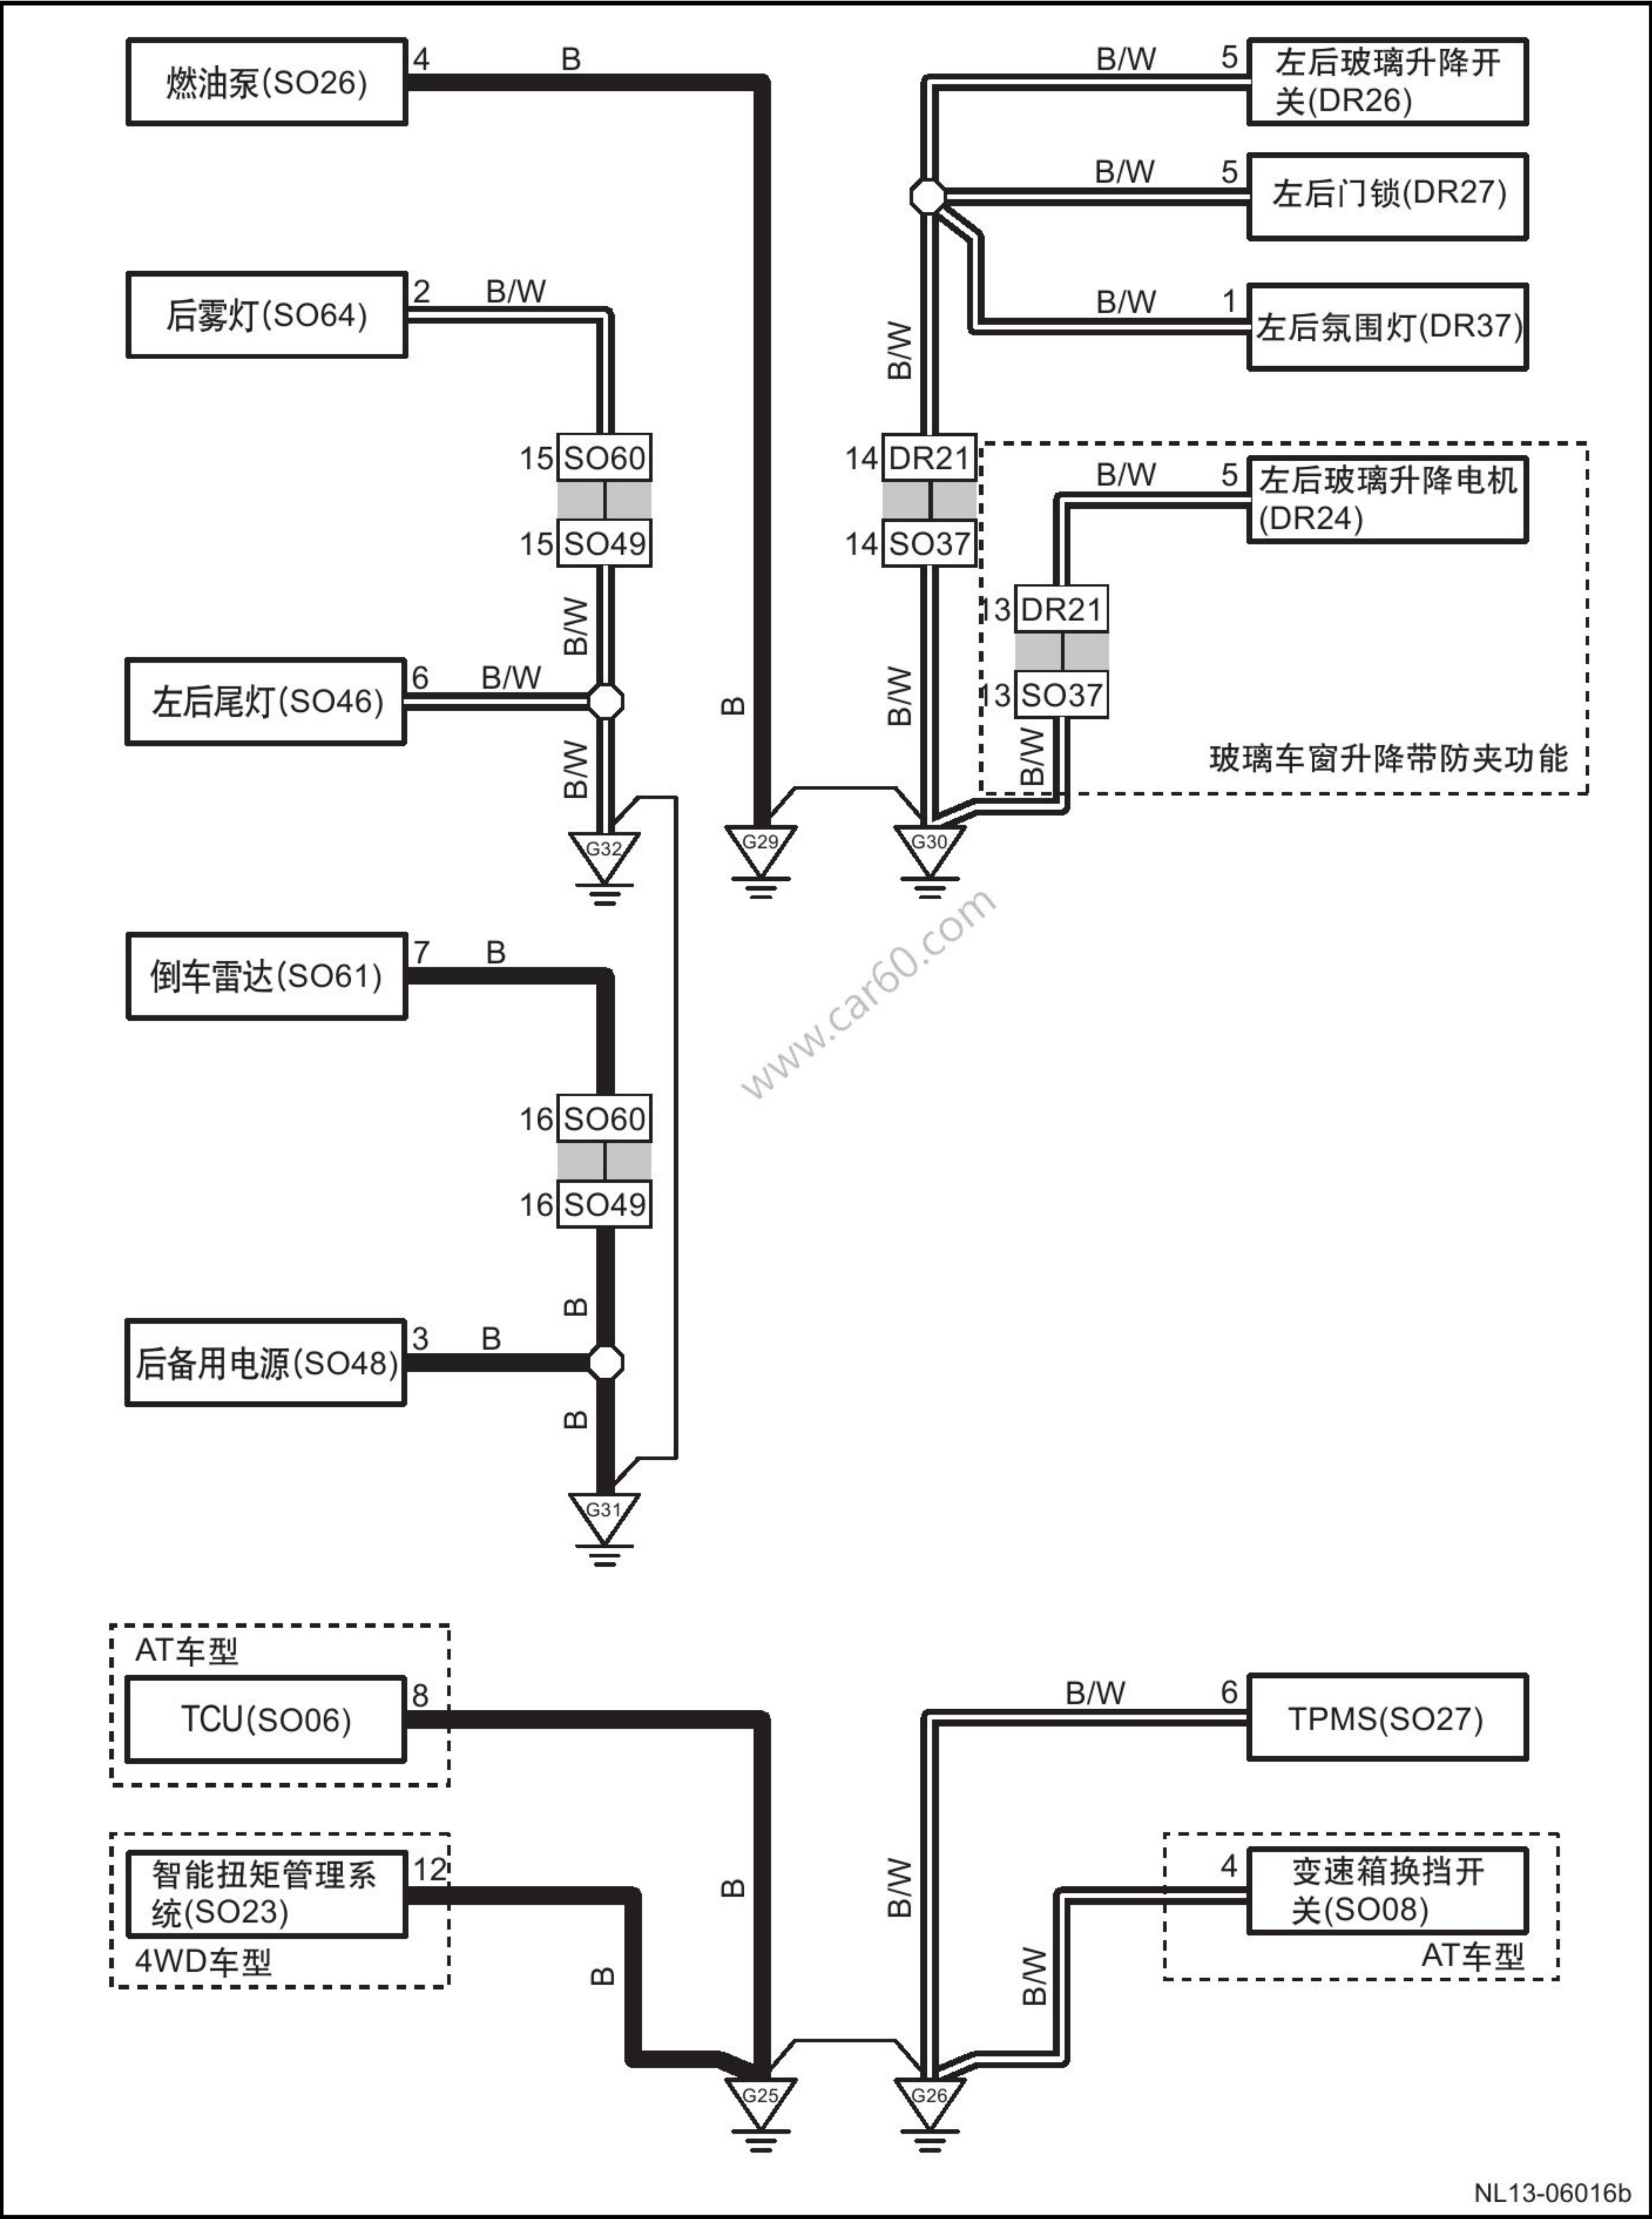

NL13-06016b

接地点线路图 8 (G37)

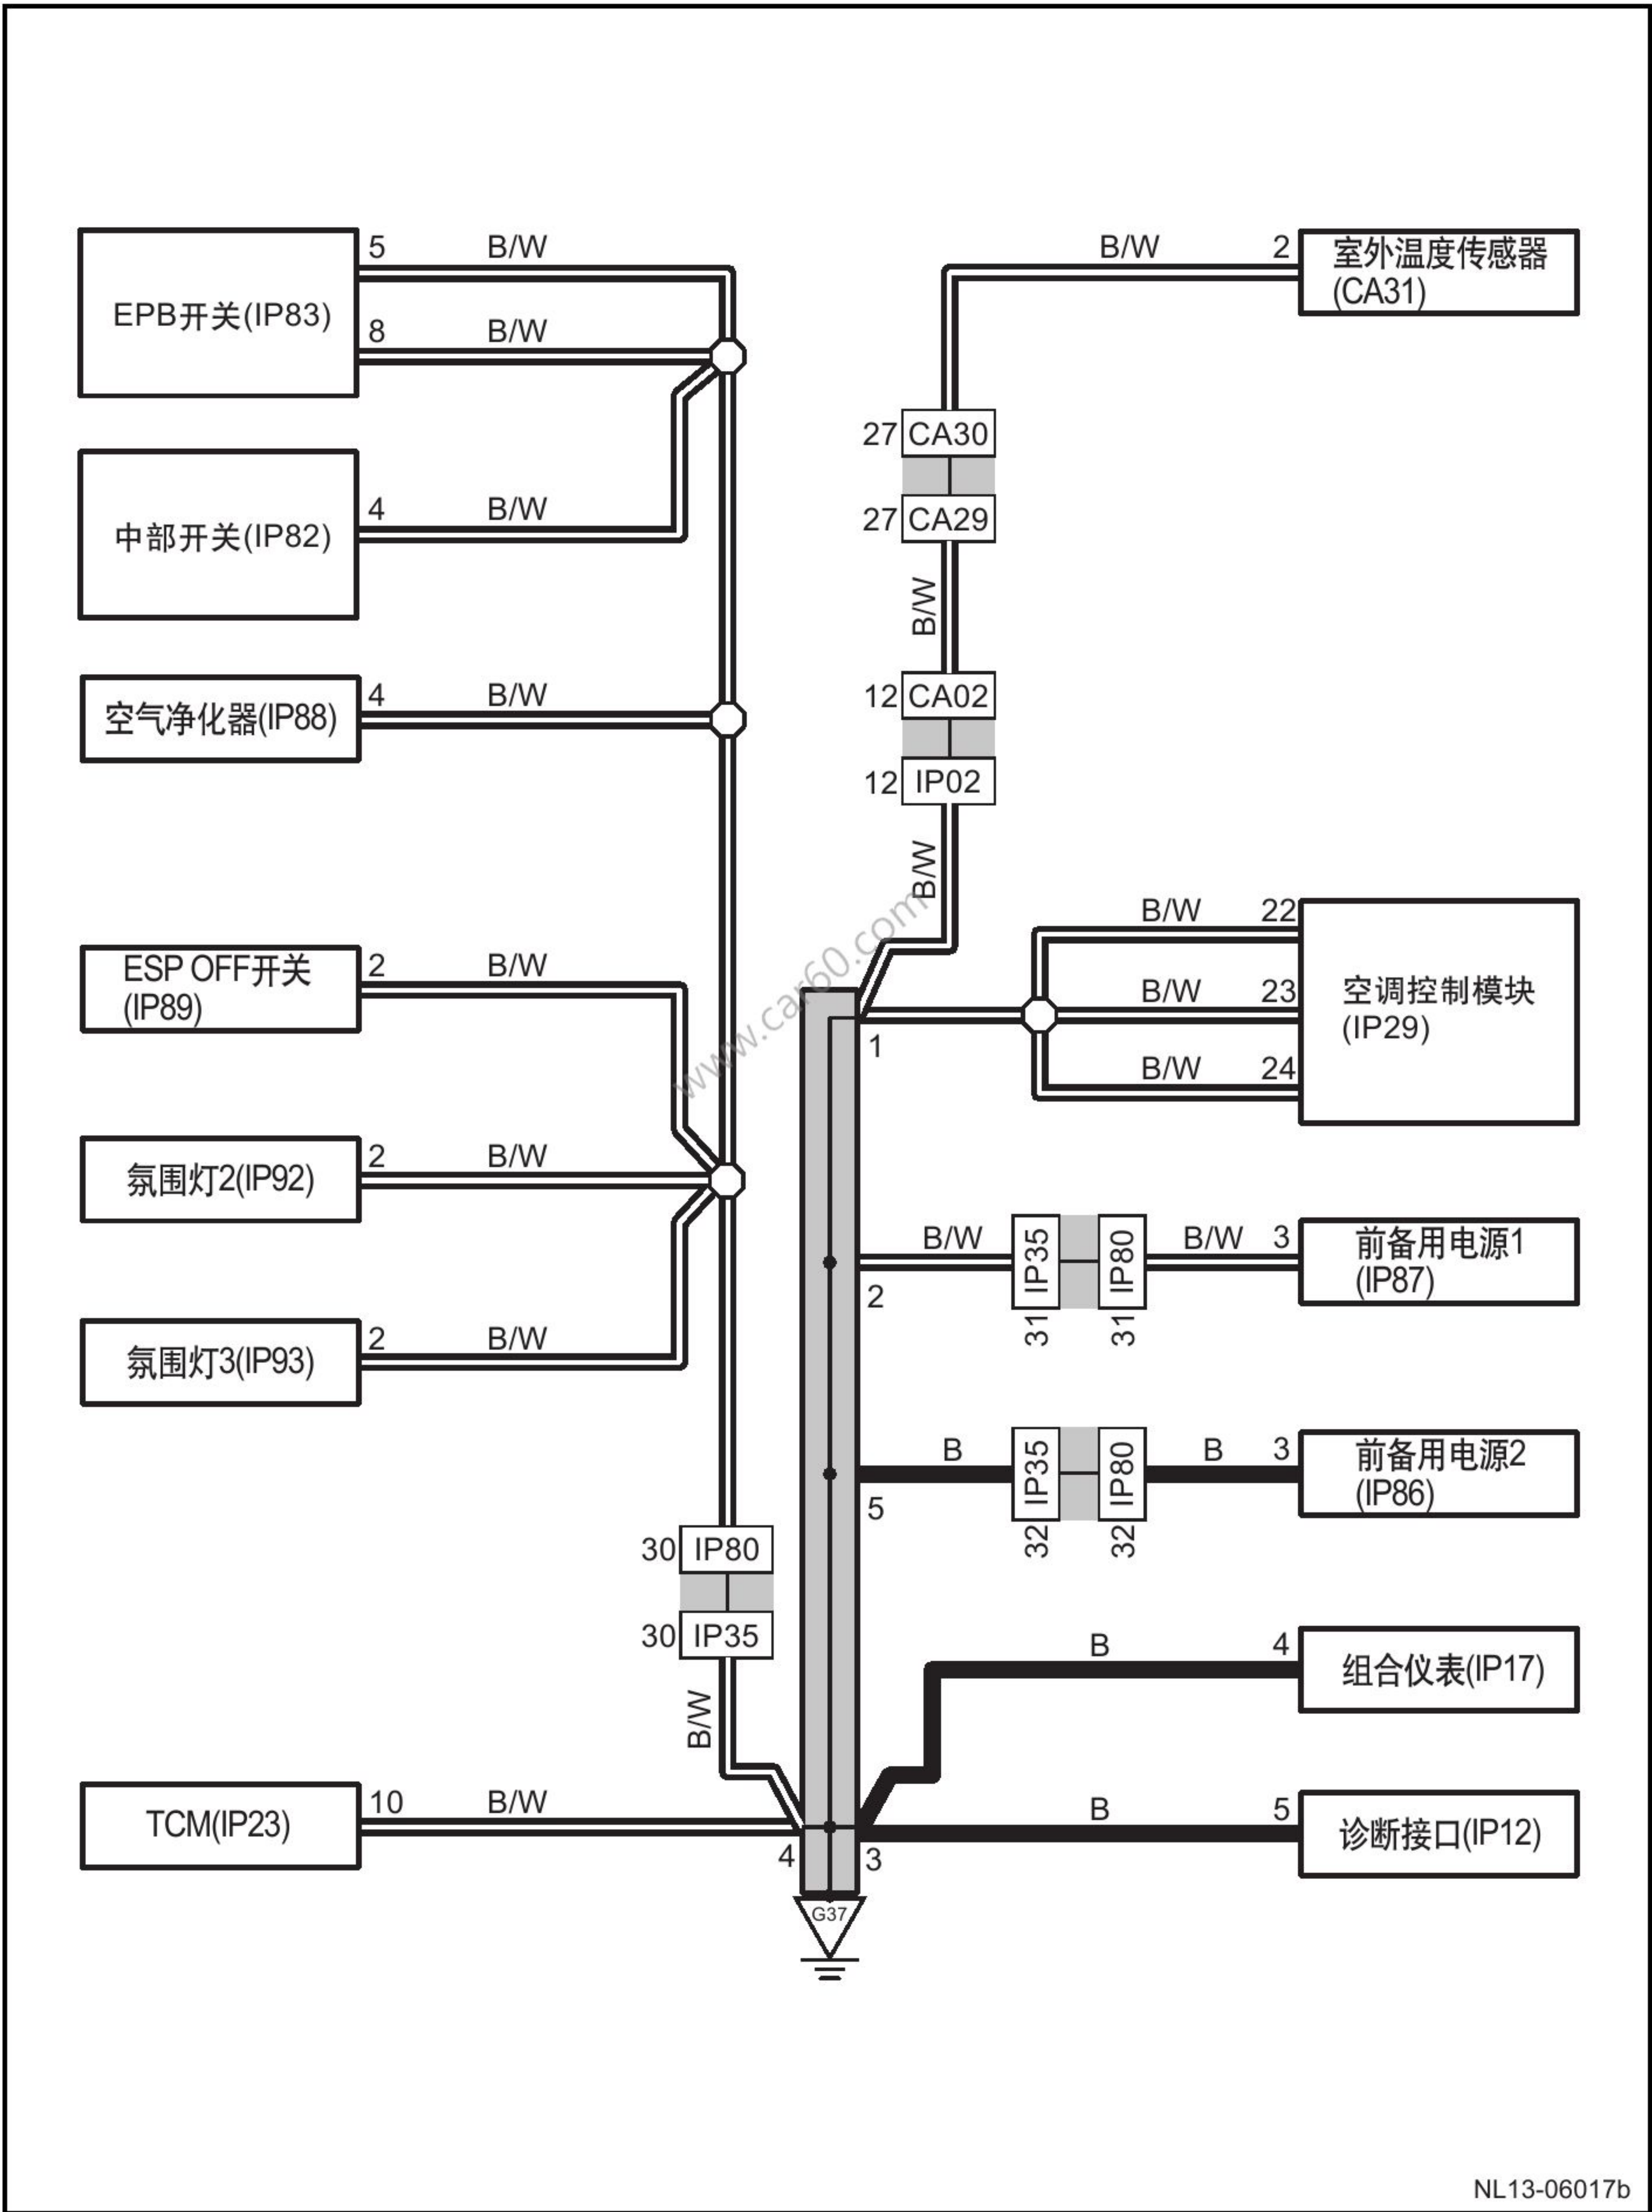

NL13-06017b

接地点线路图 9 (P1,P3,P4, P5, P6)

