

安全保护装置

9.1 警告和注意事项.....	9-3	9.2.5.22 B105595 B105695.....	9-56
9.1.1 警告和注意事项.....	9-3	9.2.5.23 U007300 U012287 U015587 U010087	
9.1.1.1 注意事项.....	9-3	U010187 B00D296.....	9-57
9.2 安全控制.....	9-4	9.2.5.24 U100116 U100117.....	9-60
9.2.1 规格.....	9-4	9.2.5.25 警告灯持续点亮.....	9-63
9.2.1.1 扭矩规格.....	9-4	9.2.5.26 警告灯不亮.....	9-68
9.2.2 描述和操作.....	9-5	9.2.6 拆卸与安装.....	9-72
9.2.2.1 系统说明.....	9-5	9.2.6.1 气囊电子控制单元.....	9-72
9.2.3 部件位置.....	9-7	9.2.6.2 拆卸(带侧气囊).....	9-74
9.2.3.1 部件位置.....	9-7	9.2.6.3 驾驶员气囊.....	9-76
9.2.4 电气原理示意图.....	9-8	9.2.6.4 乘员气囊.....	9-78
9.2.4.1 系统图.....	9-8	9.2.6.5 乘客检测传感器.....	9-80
9.2.5 诊断信息和步骤.....	9-9	9.2.6.6 侧气帘.....	9-82
9.2.5.1 如何进行故障排除分析.....	9-9	9.2.6.7 时钟弹簧.....	9-84
9.2.5.2 故障症状表.....	9-10	9.2.6.8 正面碰撞传感器.....	9-86
9.2.5.3 ECU端子.....	9-10	9.2.6.9 侧面碰撞传感器.....	9-88
9.2.5.4 诊断系统.....	9-13	9.2.6.10 乘员气囊开关.....	9-89
9.2.5.5 检查清除.....	9-14	9.2.6.11 侧气囊.....	9-91
9.2.5.6 检查模式步骤.....	9-14	9.2.7 专用工具和设备.....	9-94
9.2.5.7 诊断故障代码一览表.....	9-14	9.2.7.1 设备.....	9-94
9.2.5.8 B000111 B000112 B00011A B00011B		9.3 安全带.....	9-95
B00014A B000195.....	9-17	9.3.1 规格.....	9-95
9.2.5.9 B000211 B000212 B00021A B00021B		9.3.1.1 扭矩规格.....	9-95
B00024A B000295.....	9-20	9.3.2 描述和操作.....	9-96
9.2.5.10 B007011 B007012 B00701A B00701B		9.3.2.1 前排座椅安全带系统.....	9-96
B00704A B007095.....	9-23	9.3.2.2 后排座椅安全带系统.....	9-96
9.2.5.11 B007211 B007212 B00721A B00721B		9.3.3 部件位置.....	9-97
B00724A B007295.....	9-26	9.3.3.1 部件位置.....	9-97
9.2.5.12 B002011 B002012 B00201A B00201B		9.3.4 电气原理示意图.....	9-98
B00204A B002095.....	9-28	9.3.4.1 系统图.....	9-98
9.2.5.13 B002811 B002812 B00281A B00281B		9.3.5 诊断信息和步骤.....	9-99
B00284A B002895.....	9-31	9.3.5.1 如何进行故障排除分析.....	9-99
9.2.5.14 B007311 B007312 B00731A B00731B		9.3.5.2 故障症状表.....	9-100
B00734A B007395.....	9-35	9.3.5.3 ECU端子.....	9-100
9.2.5.15 B007511 B007512 B00751A B00751B		9.3.5.4 诊断系统.....	9-103
B00754A B007595.....	9-37	9.3.5.5 数据表主动测试.....	9-103
9.2.5.16 B009111 B009155 B009167 B009181		9.3.5.6 车上检查.....	9-103
B009113 B009186.....	9-40	9.3.5.7 驾驶员座椅安全带警告灯不工作.....	9-104
9.2.5.17 B009611 B009655 B009667 B009681		9.3.5.8 前乘员座椅安全带警告灯故障.....	9-106
B009613 B009686.....	9-43	9.3.6 拆卸与安装.....	9-112
9.2.5.18 B009011 B009055 B009067 B009081		9.3.6.1 前排安全带锁扣总成(提醒线束).....	9-112
B009013 B009086 B009028.....	9-46	9.3.6.2 后排安全带锁扣总成.....	9-113
9.2.5.19 B009511 B009555 B009567 B009581		9.3.6.3 后排中间安全带总成.....	9-115
B009513 B009586 B009528.....	9-49	9.3.6.4 后排座椅侧安全带总成.....	9-119
9.2.5.20 B00DF11 B00DF12 B00DF13		9.3.6.5 前排安全带总成(预紧 限力).....	9-121
B00DF07.....	9-52		
9.2.5.21 B120168 B120200 B120392 B120009			
B120354.....	9-55		

9.3.6.6 前排安全带高度调节器	9-122
9.3.7 专用工具和设备	9-125
9.3.7.1 设备	9-125