




蓄电池负极线束接地点布置图

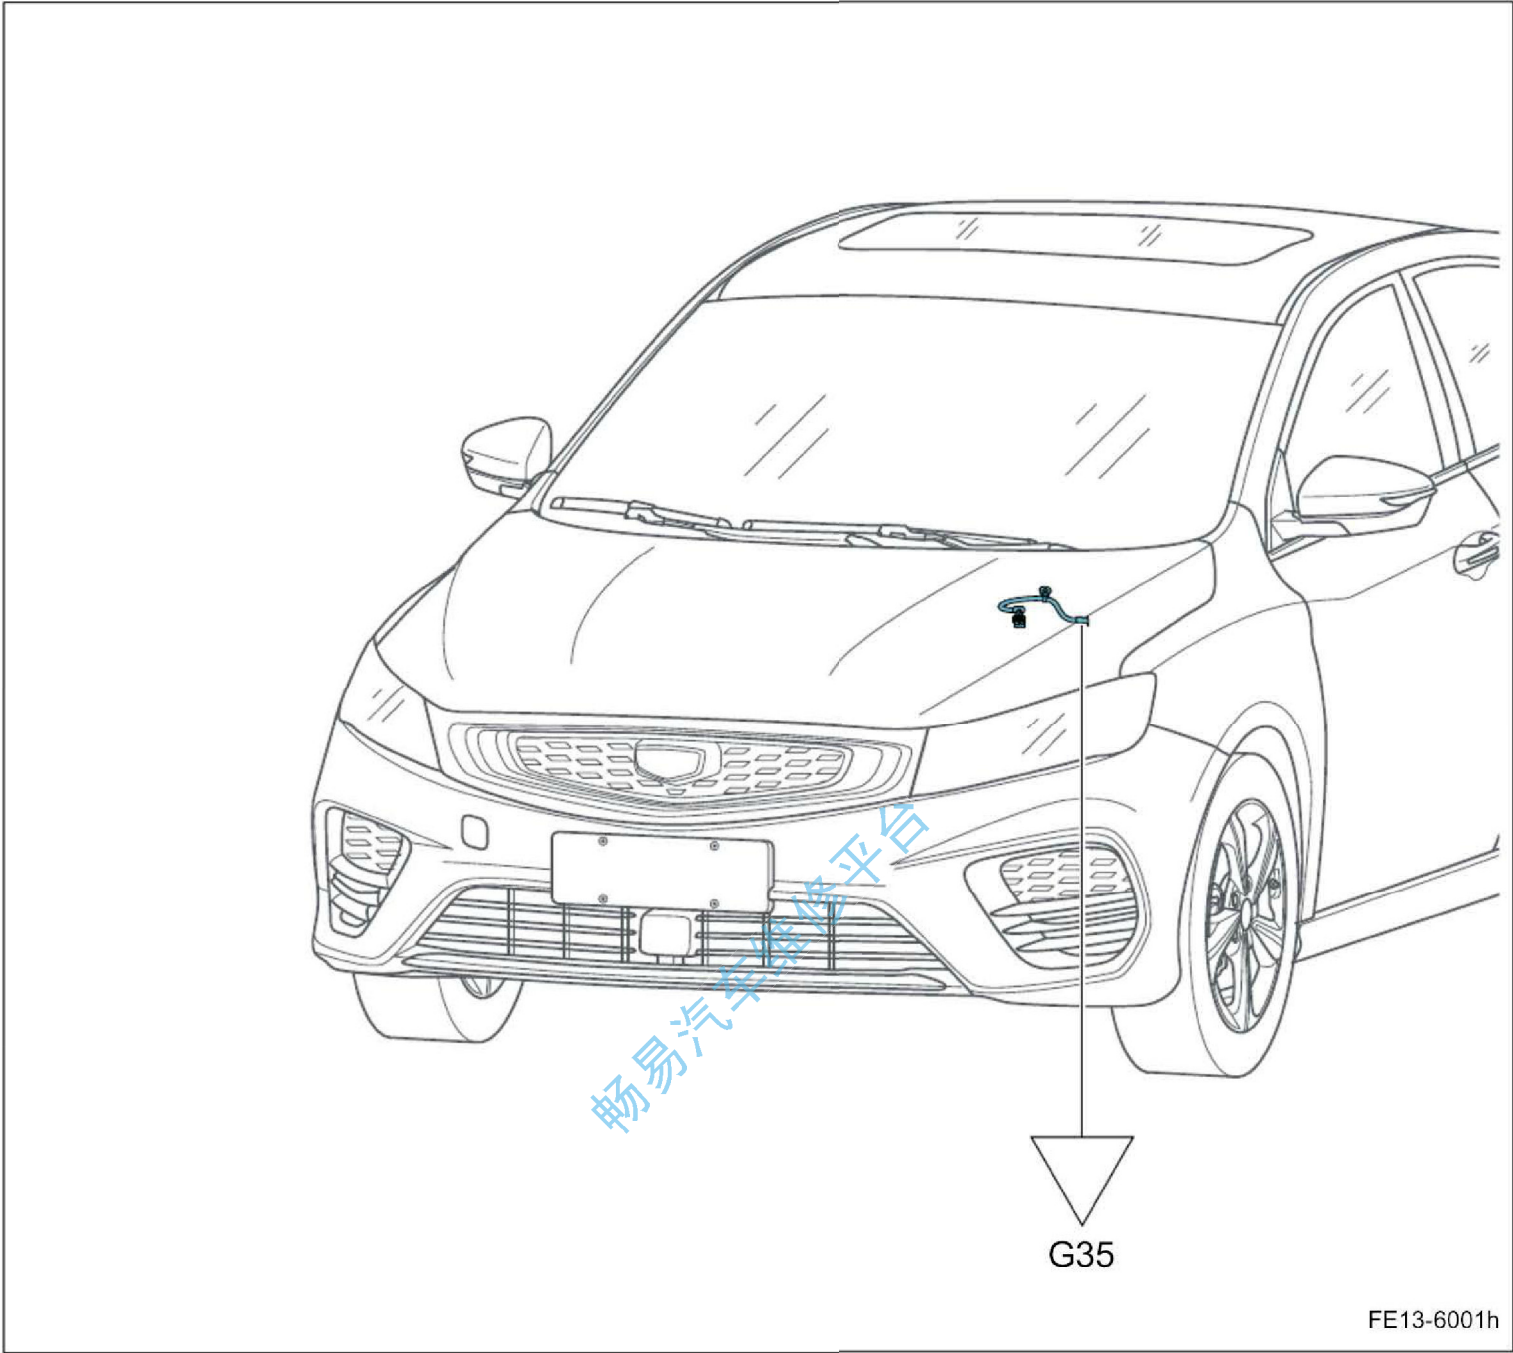


前机舱线束接地点布置图

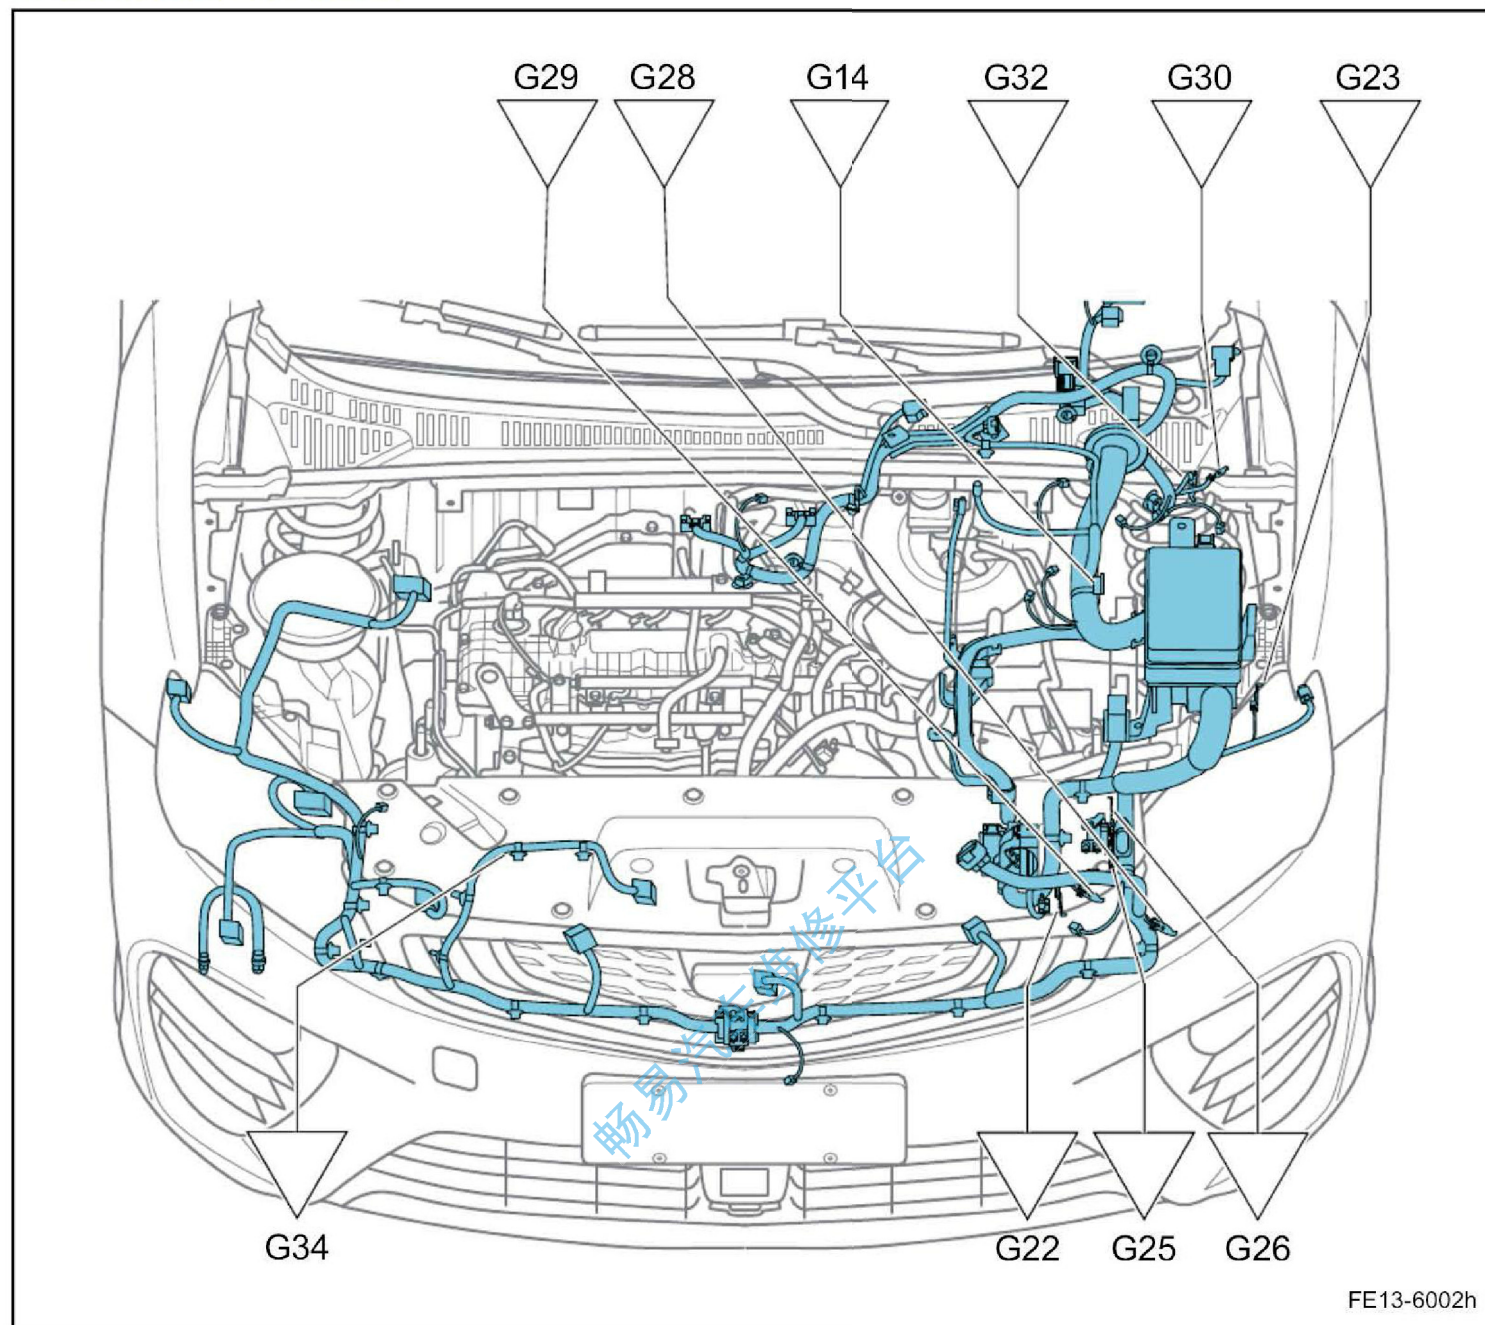

发动机线束接地点布置图 (JLF-3G10TD)

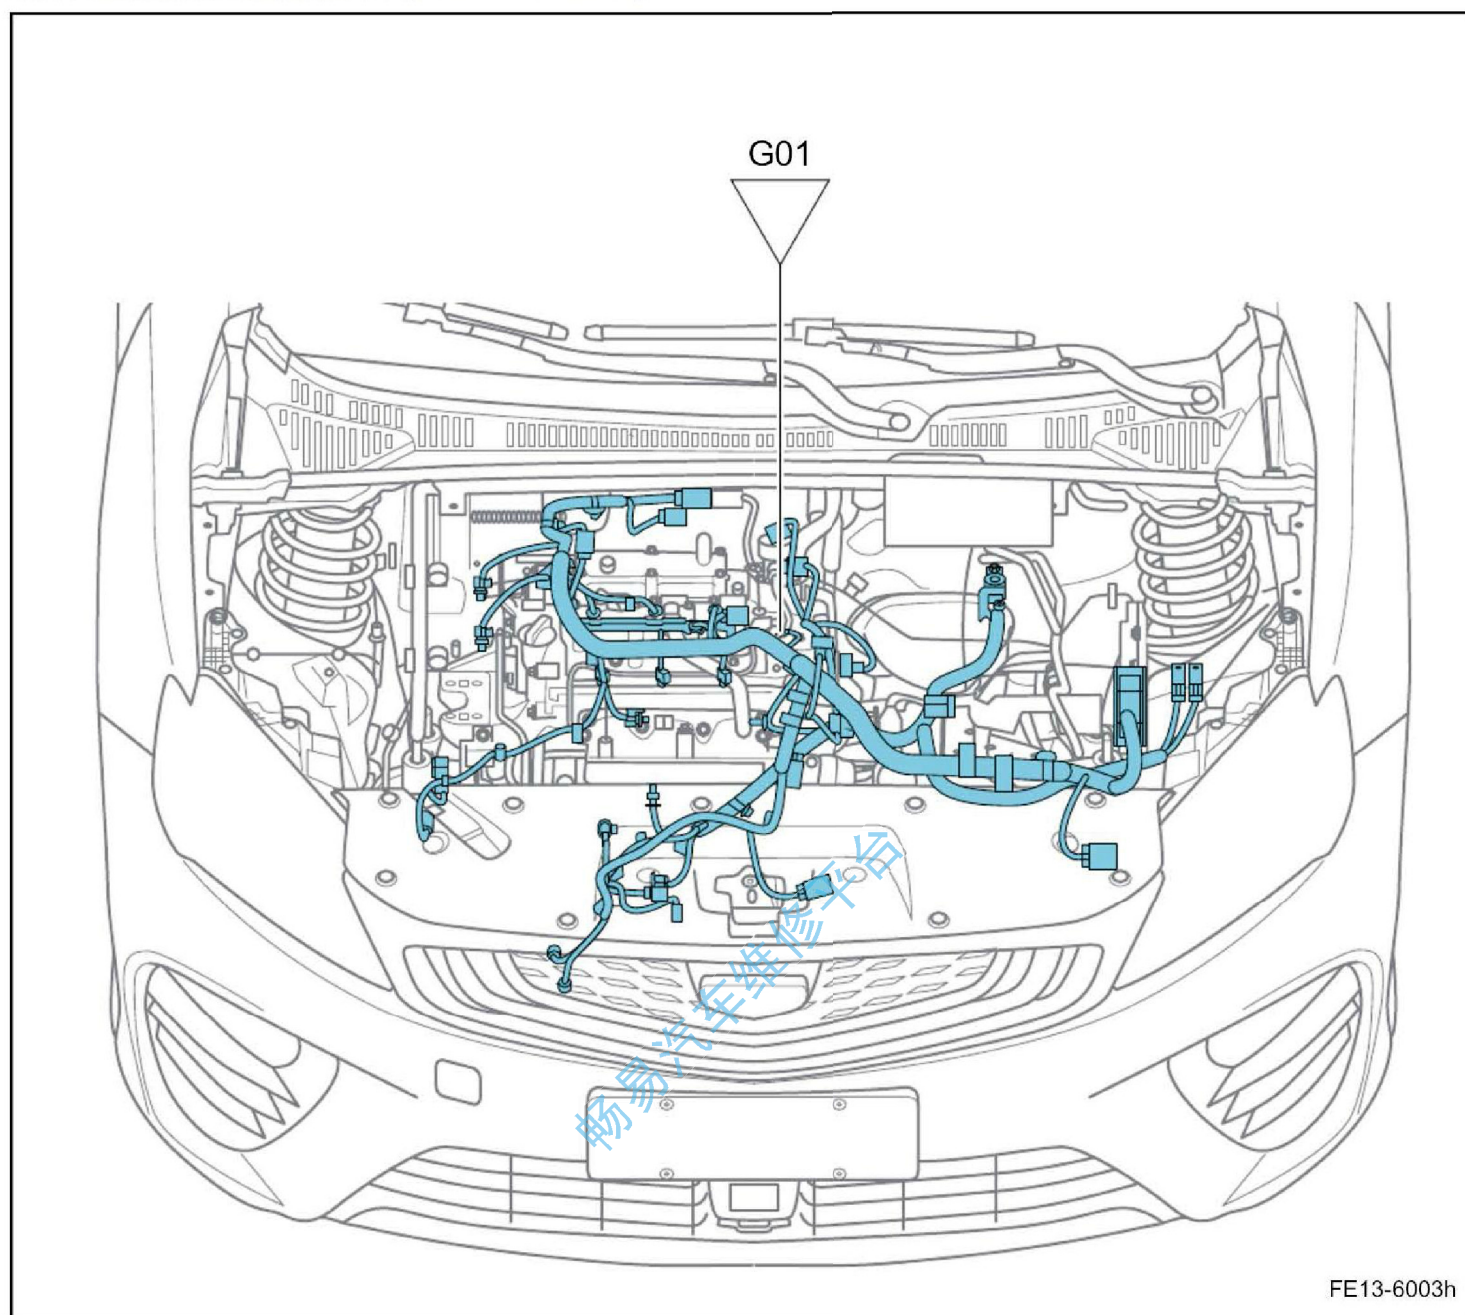


发动机线束接地点布置图 (JLB-4G14T)

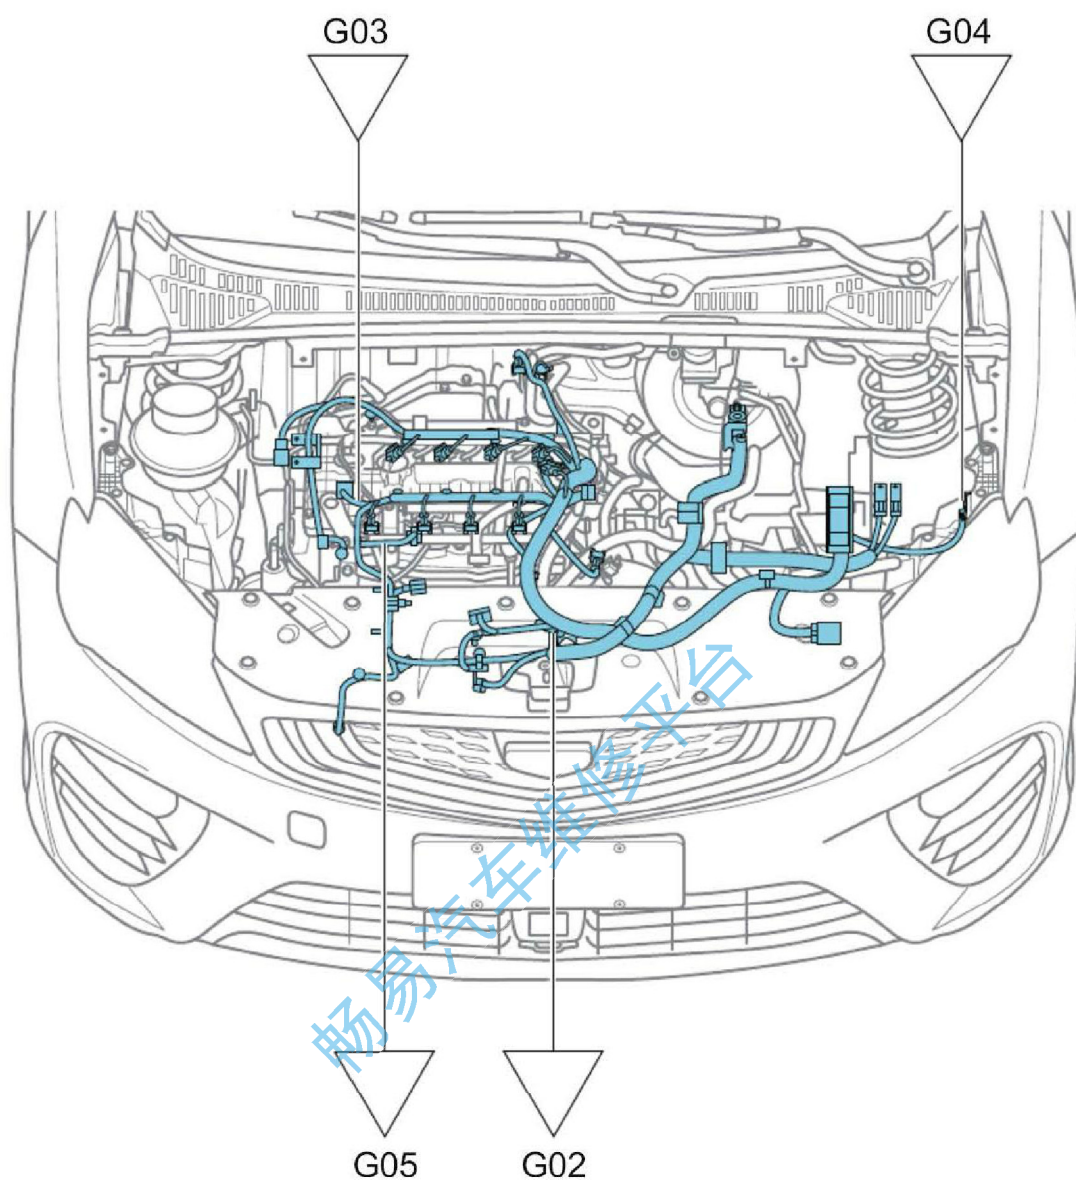


FE13-6004h


仪表线束接地点布置图

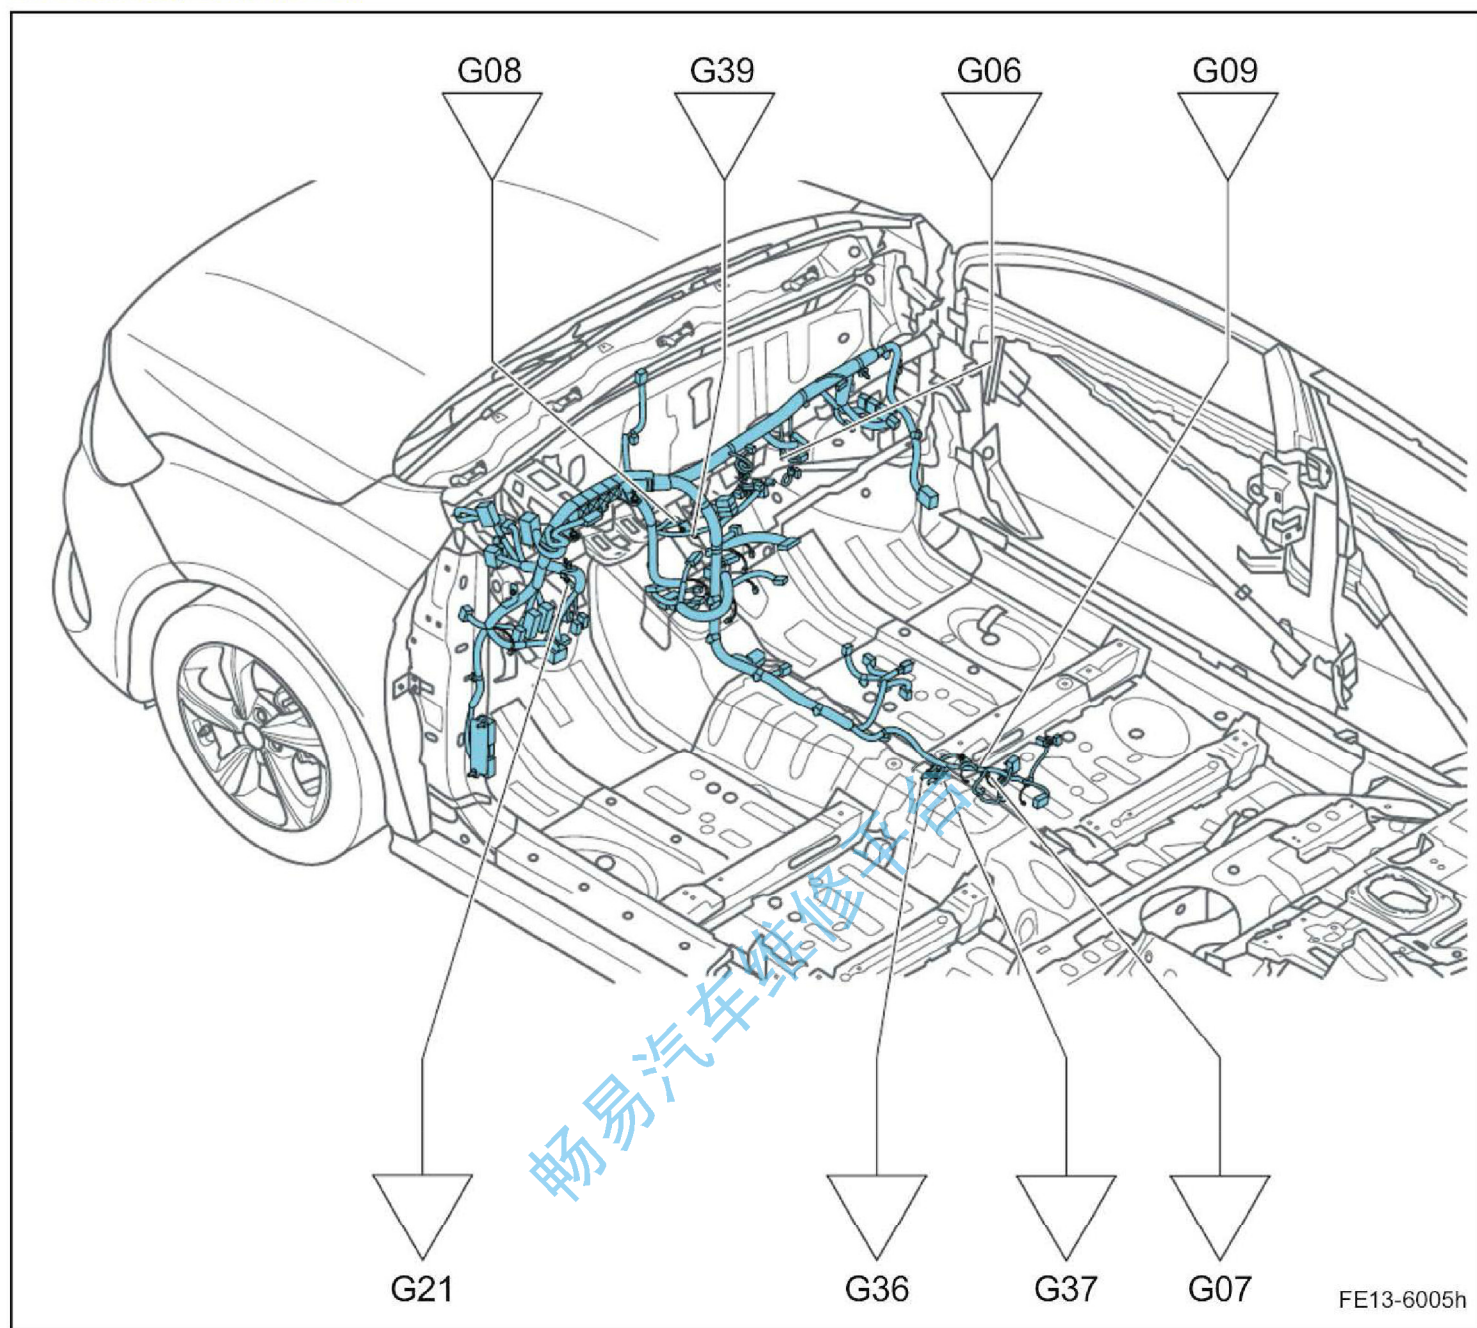


底板线束接地点布置图

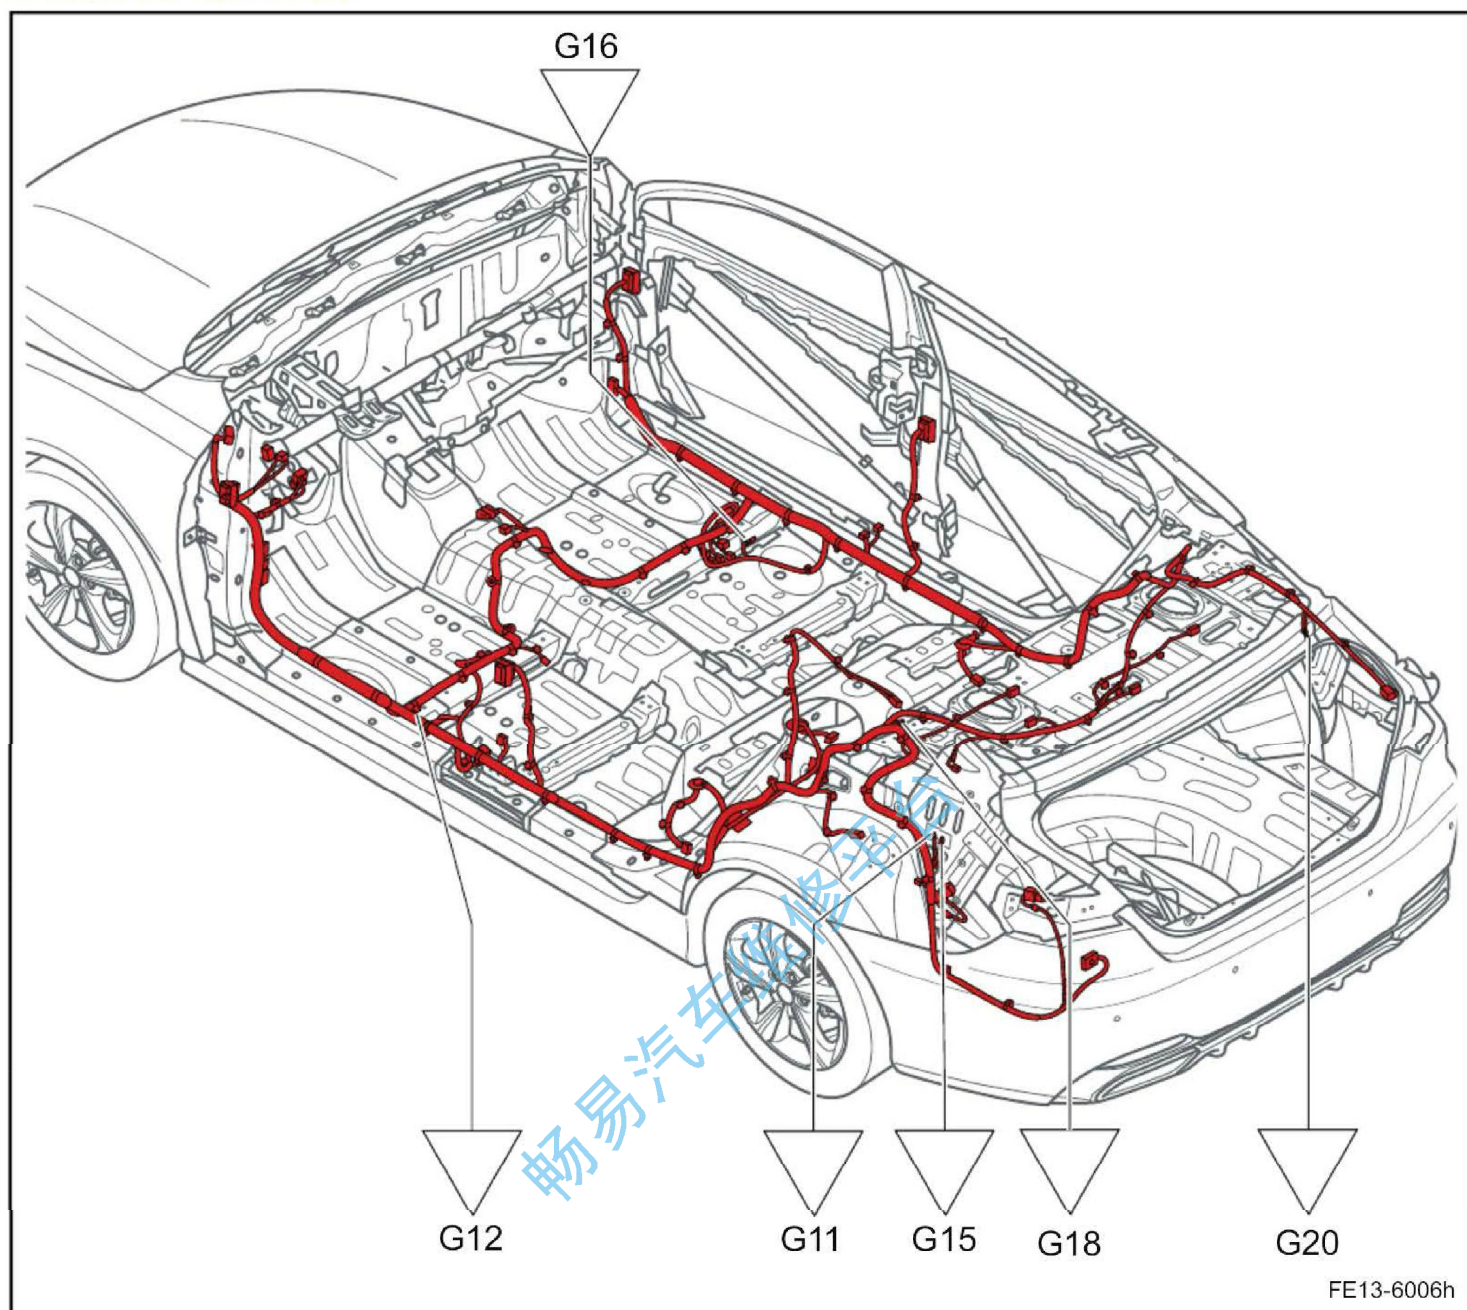

接地线路图1 (G01、G02、G04、G06、G07)

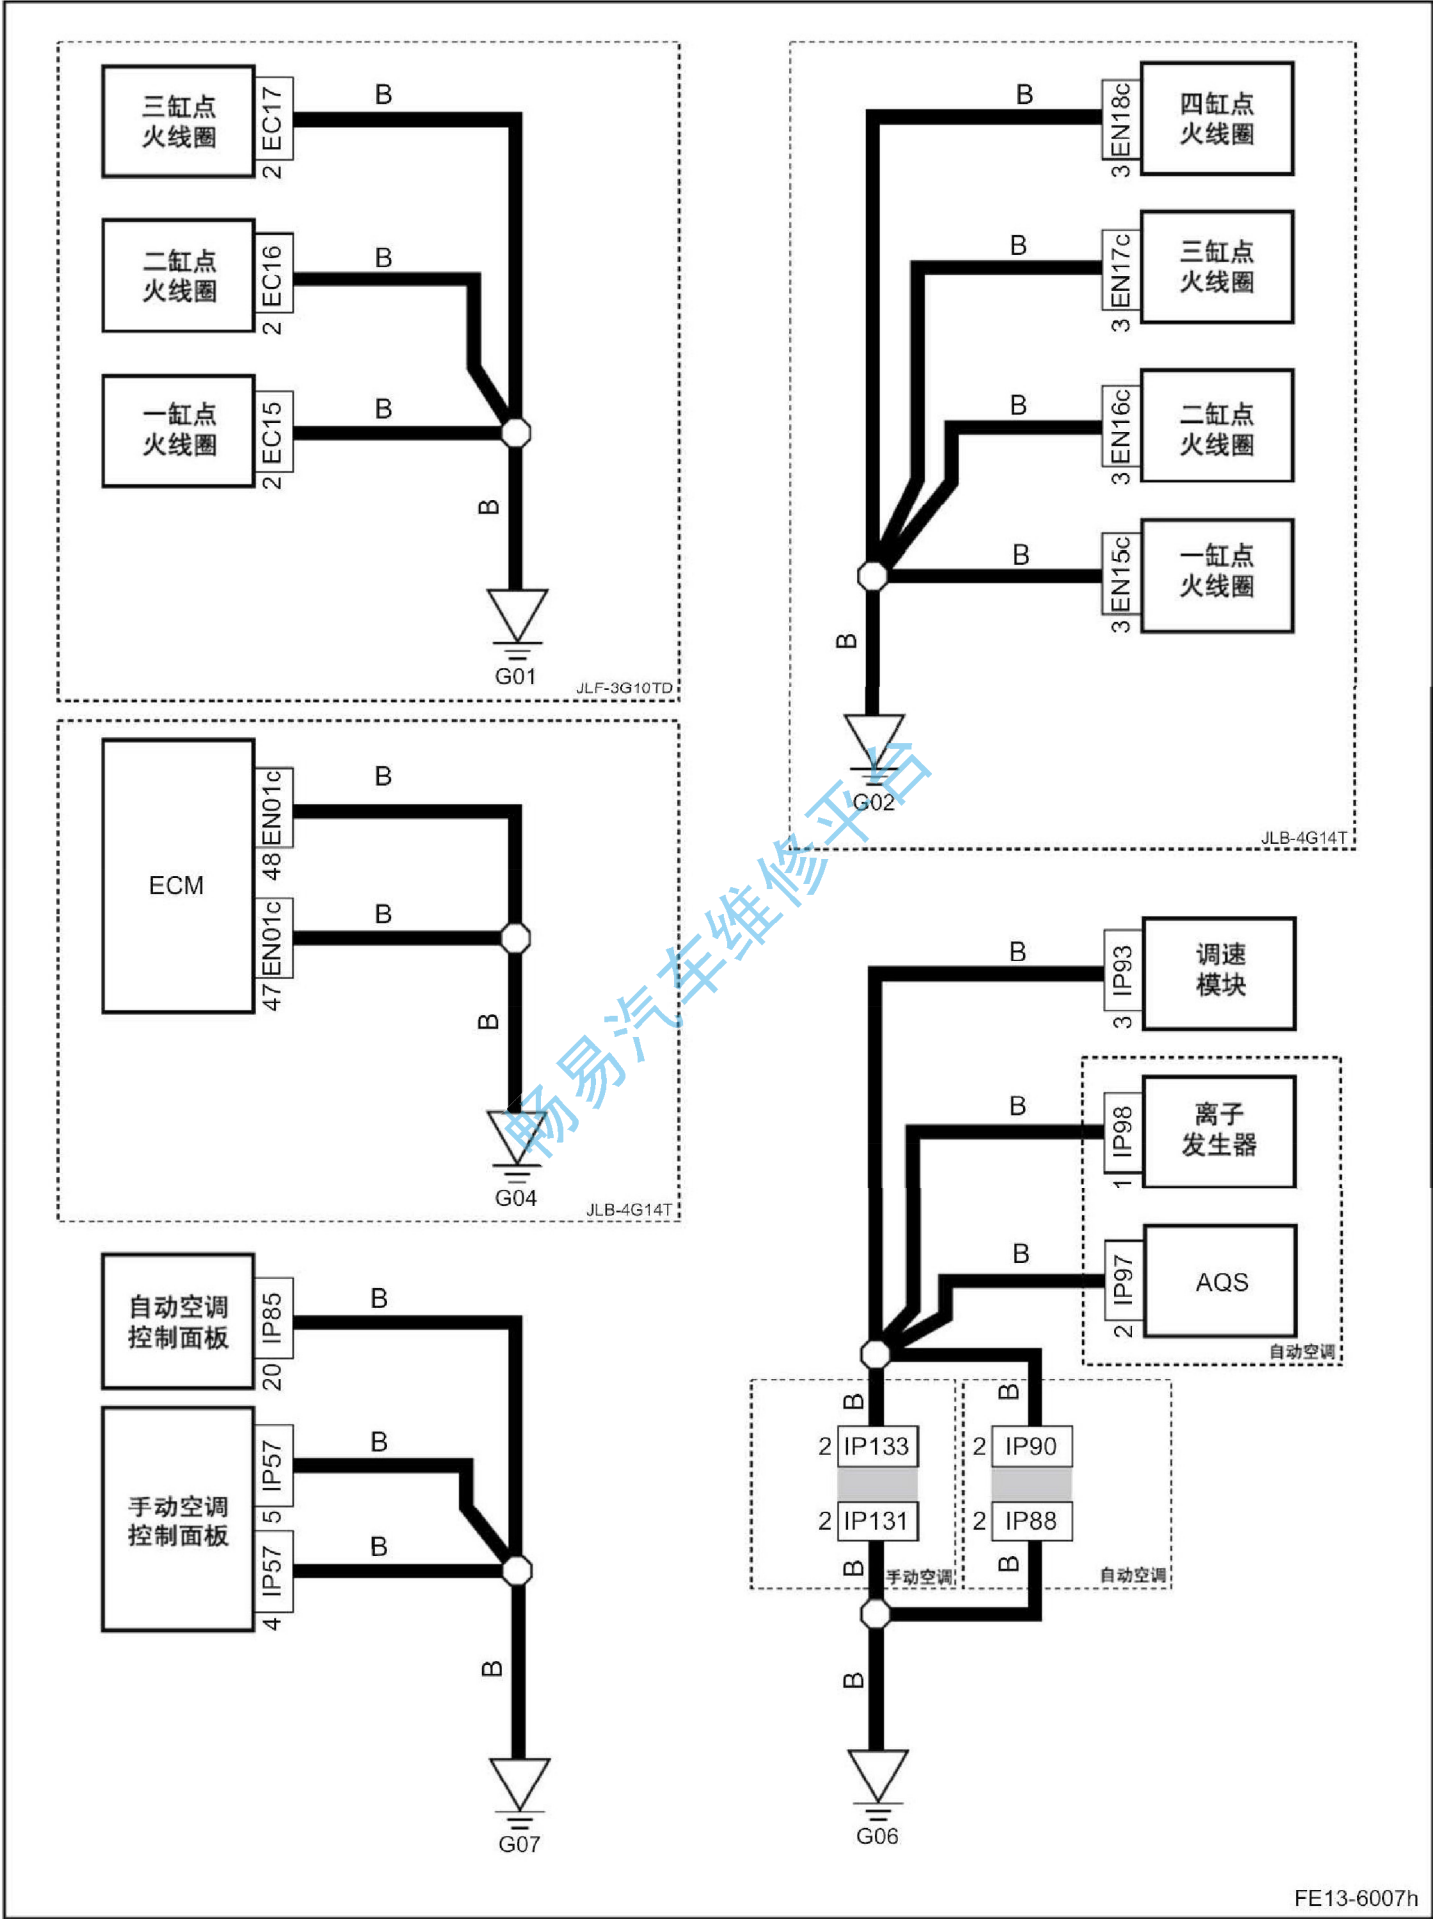


接地线路图2 (G08)

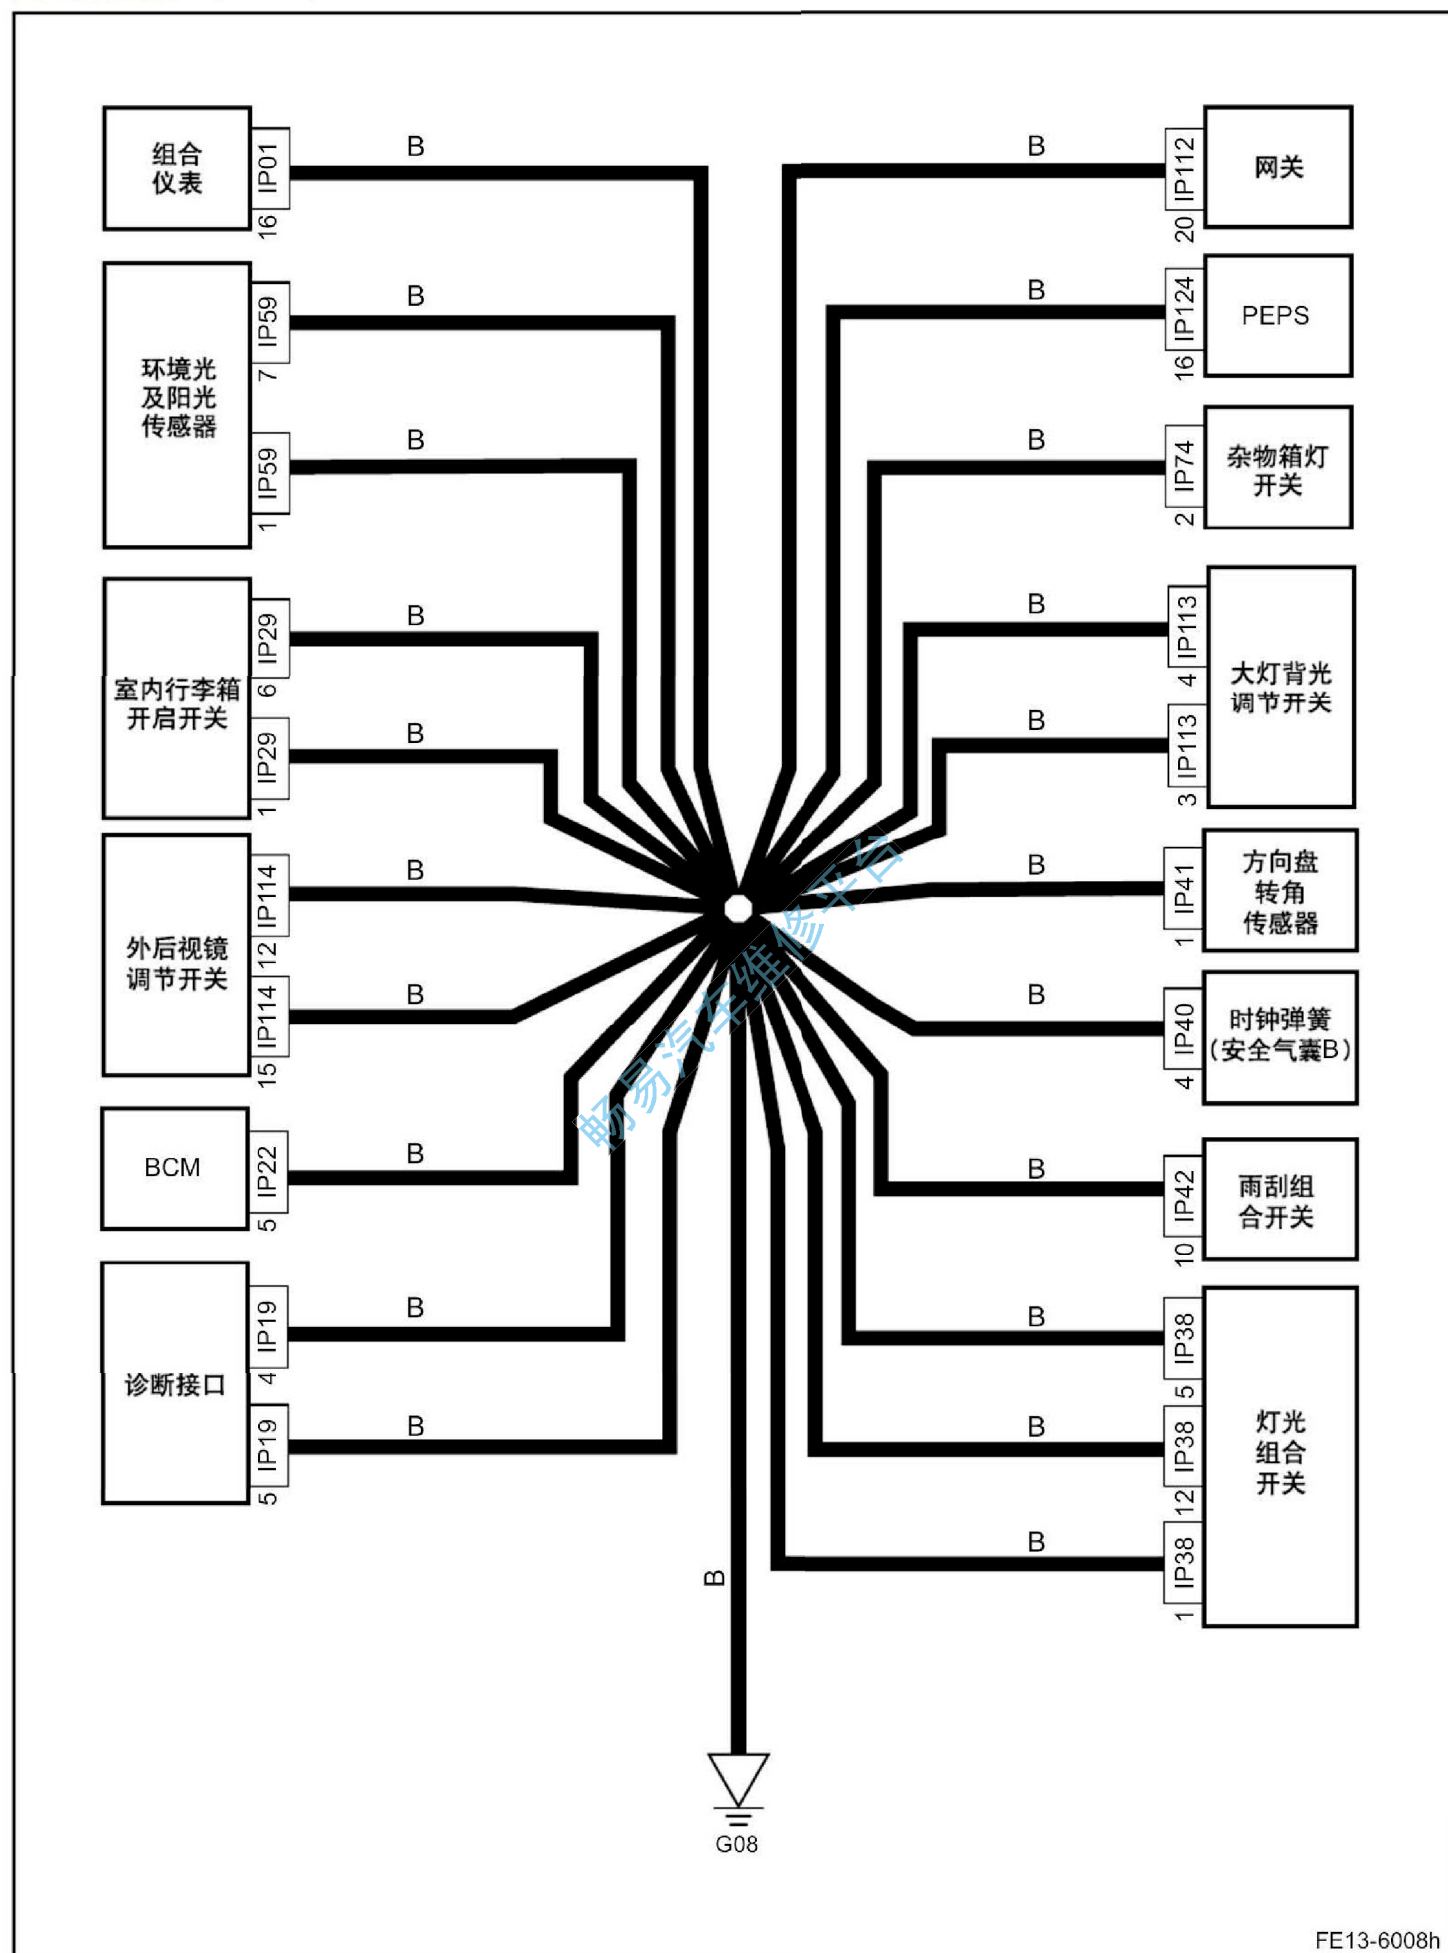


FE13-6008h

接地线路图3 (G09、G11)

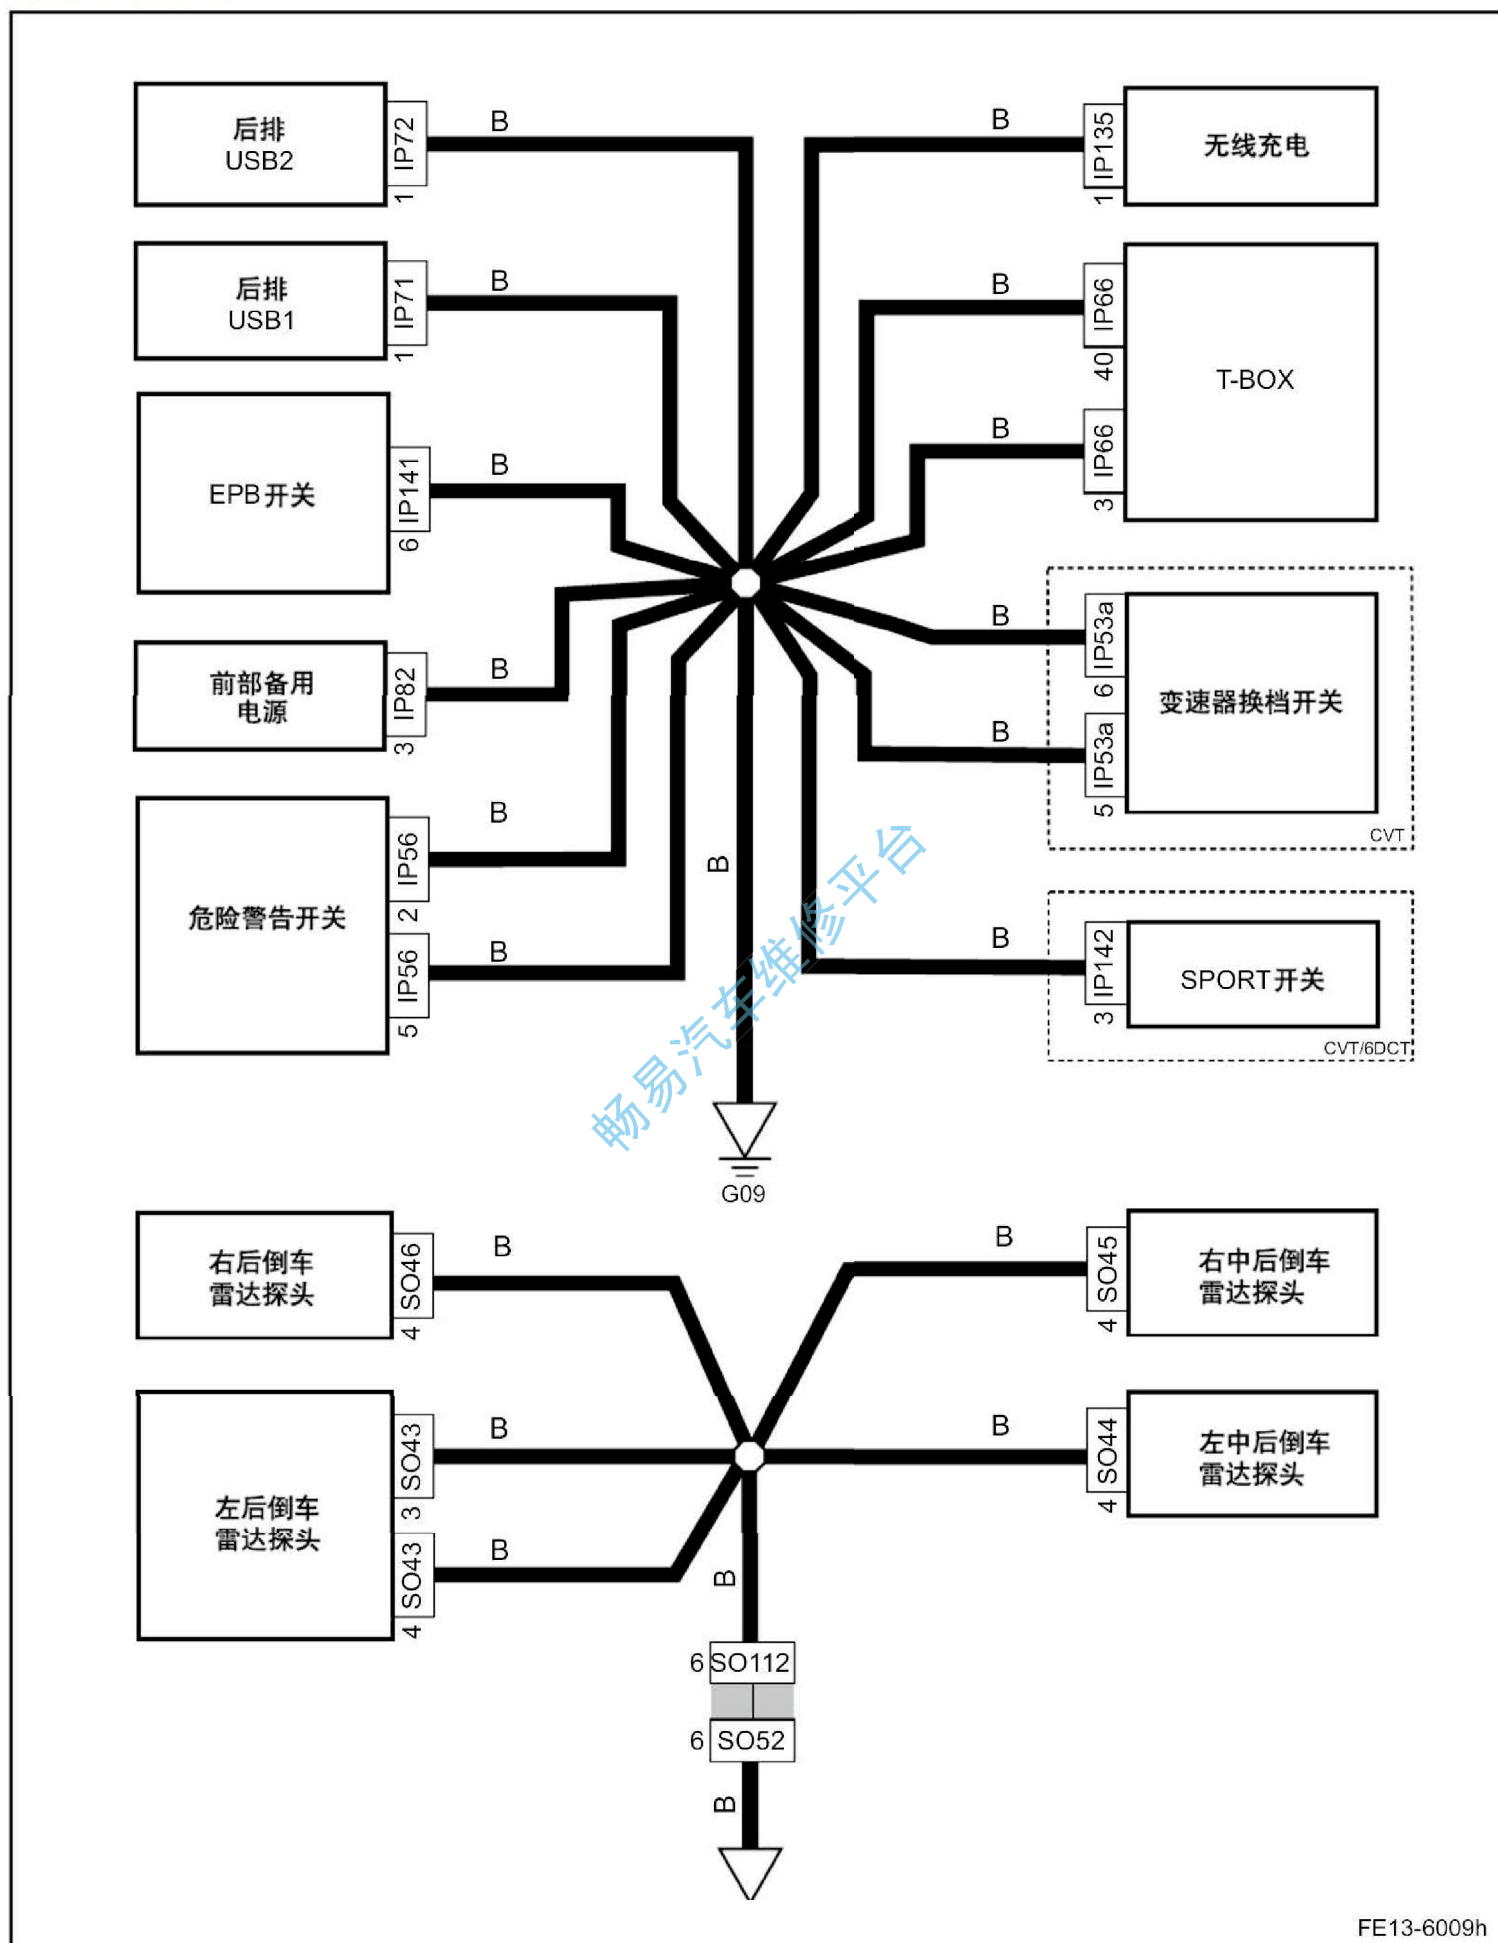


接地线路图4 (G12、G14)

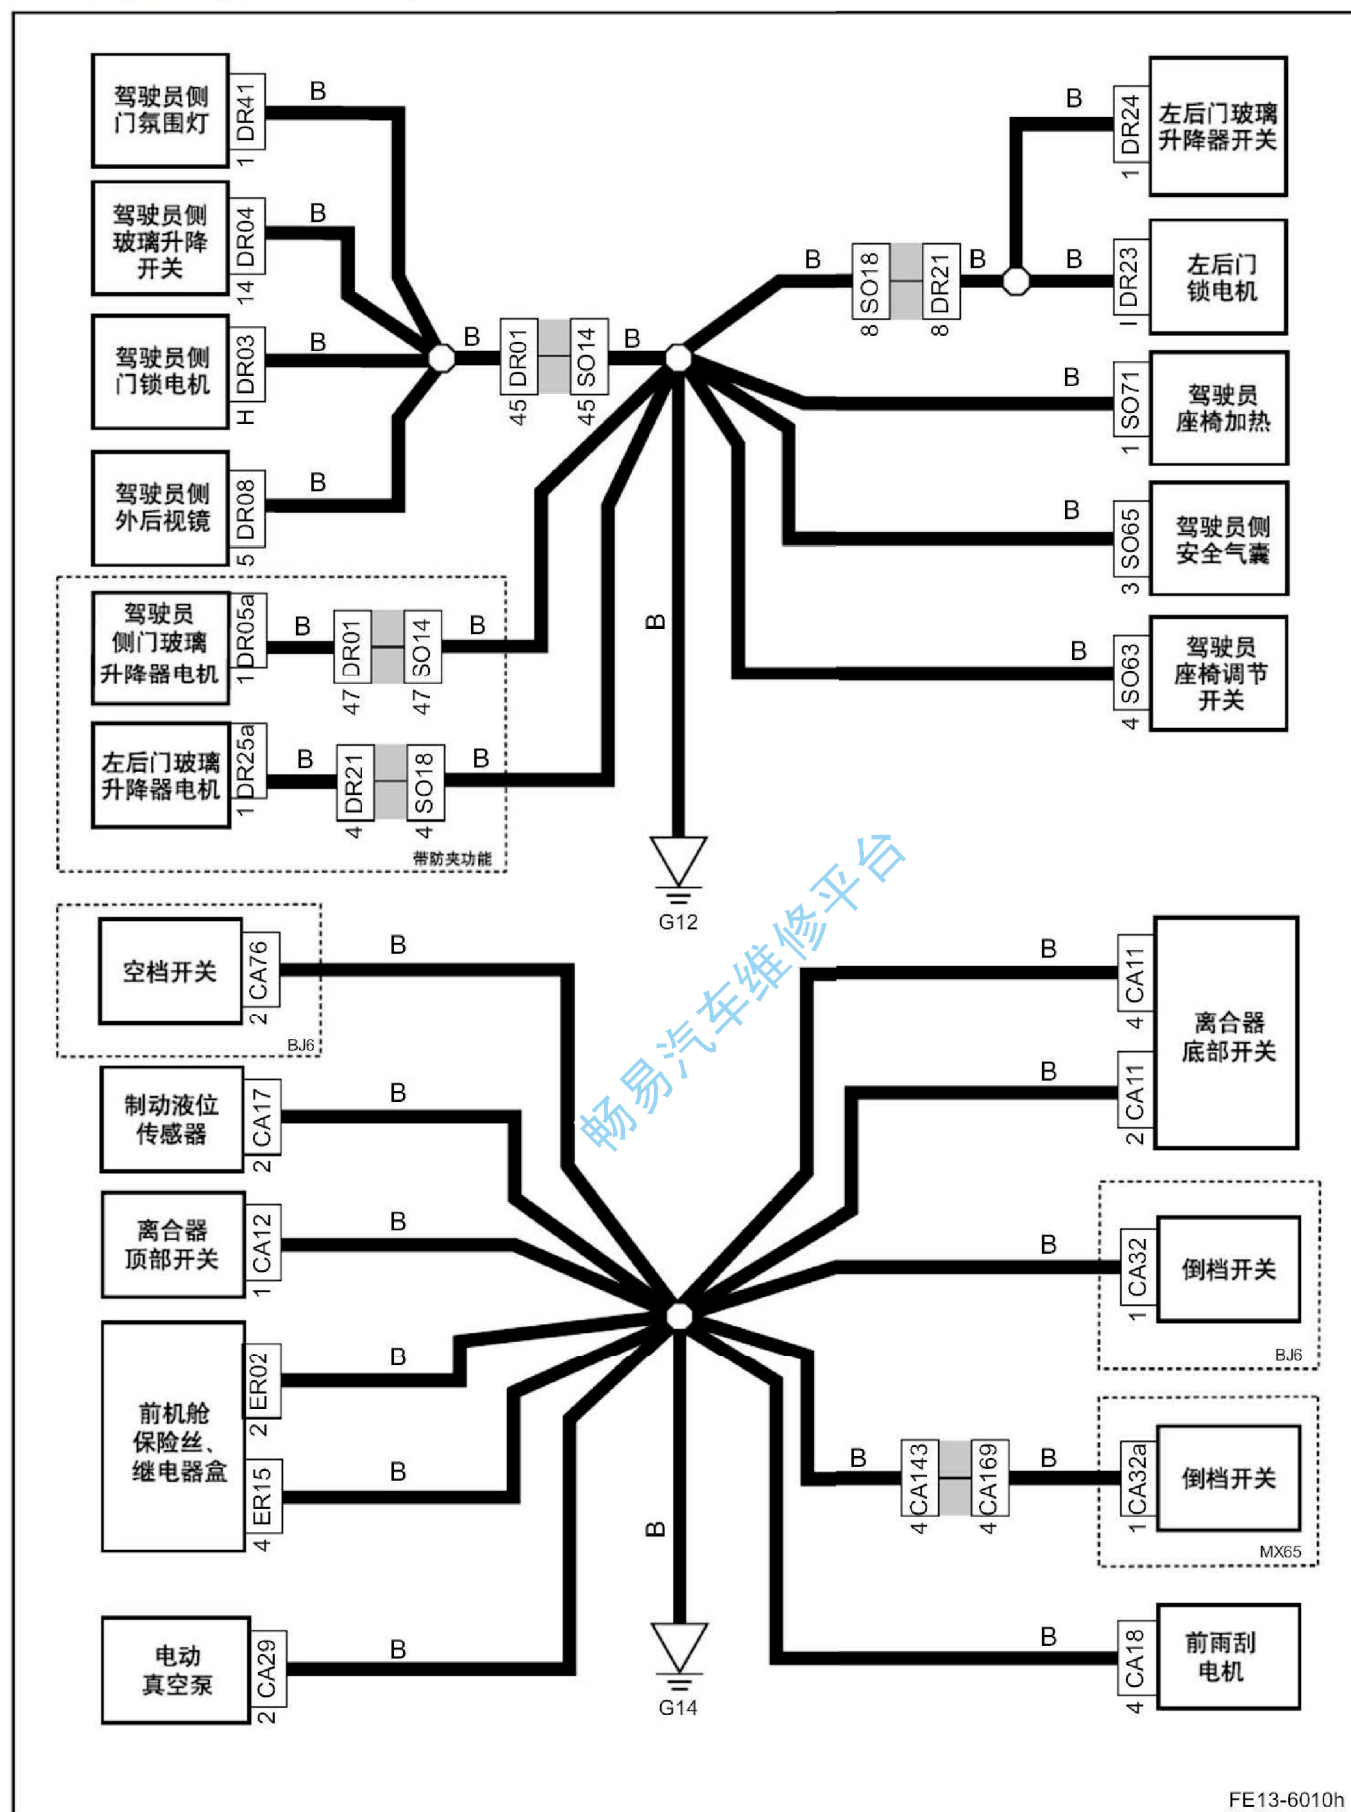


FE13-6010h


接地线路图5 (G15、G16)

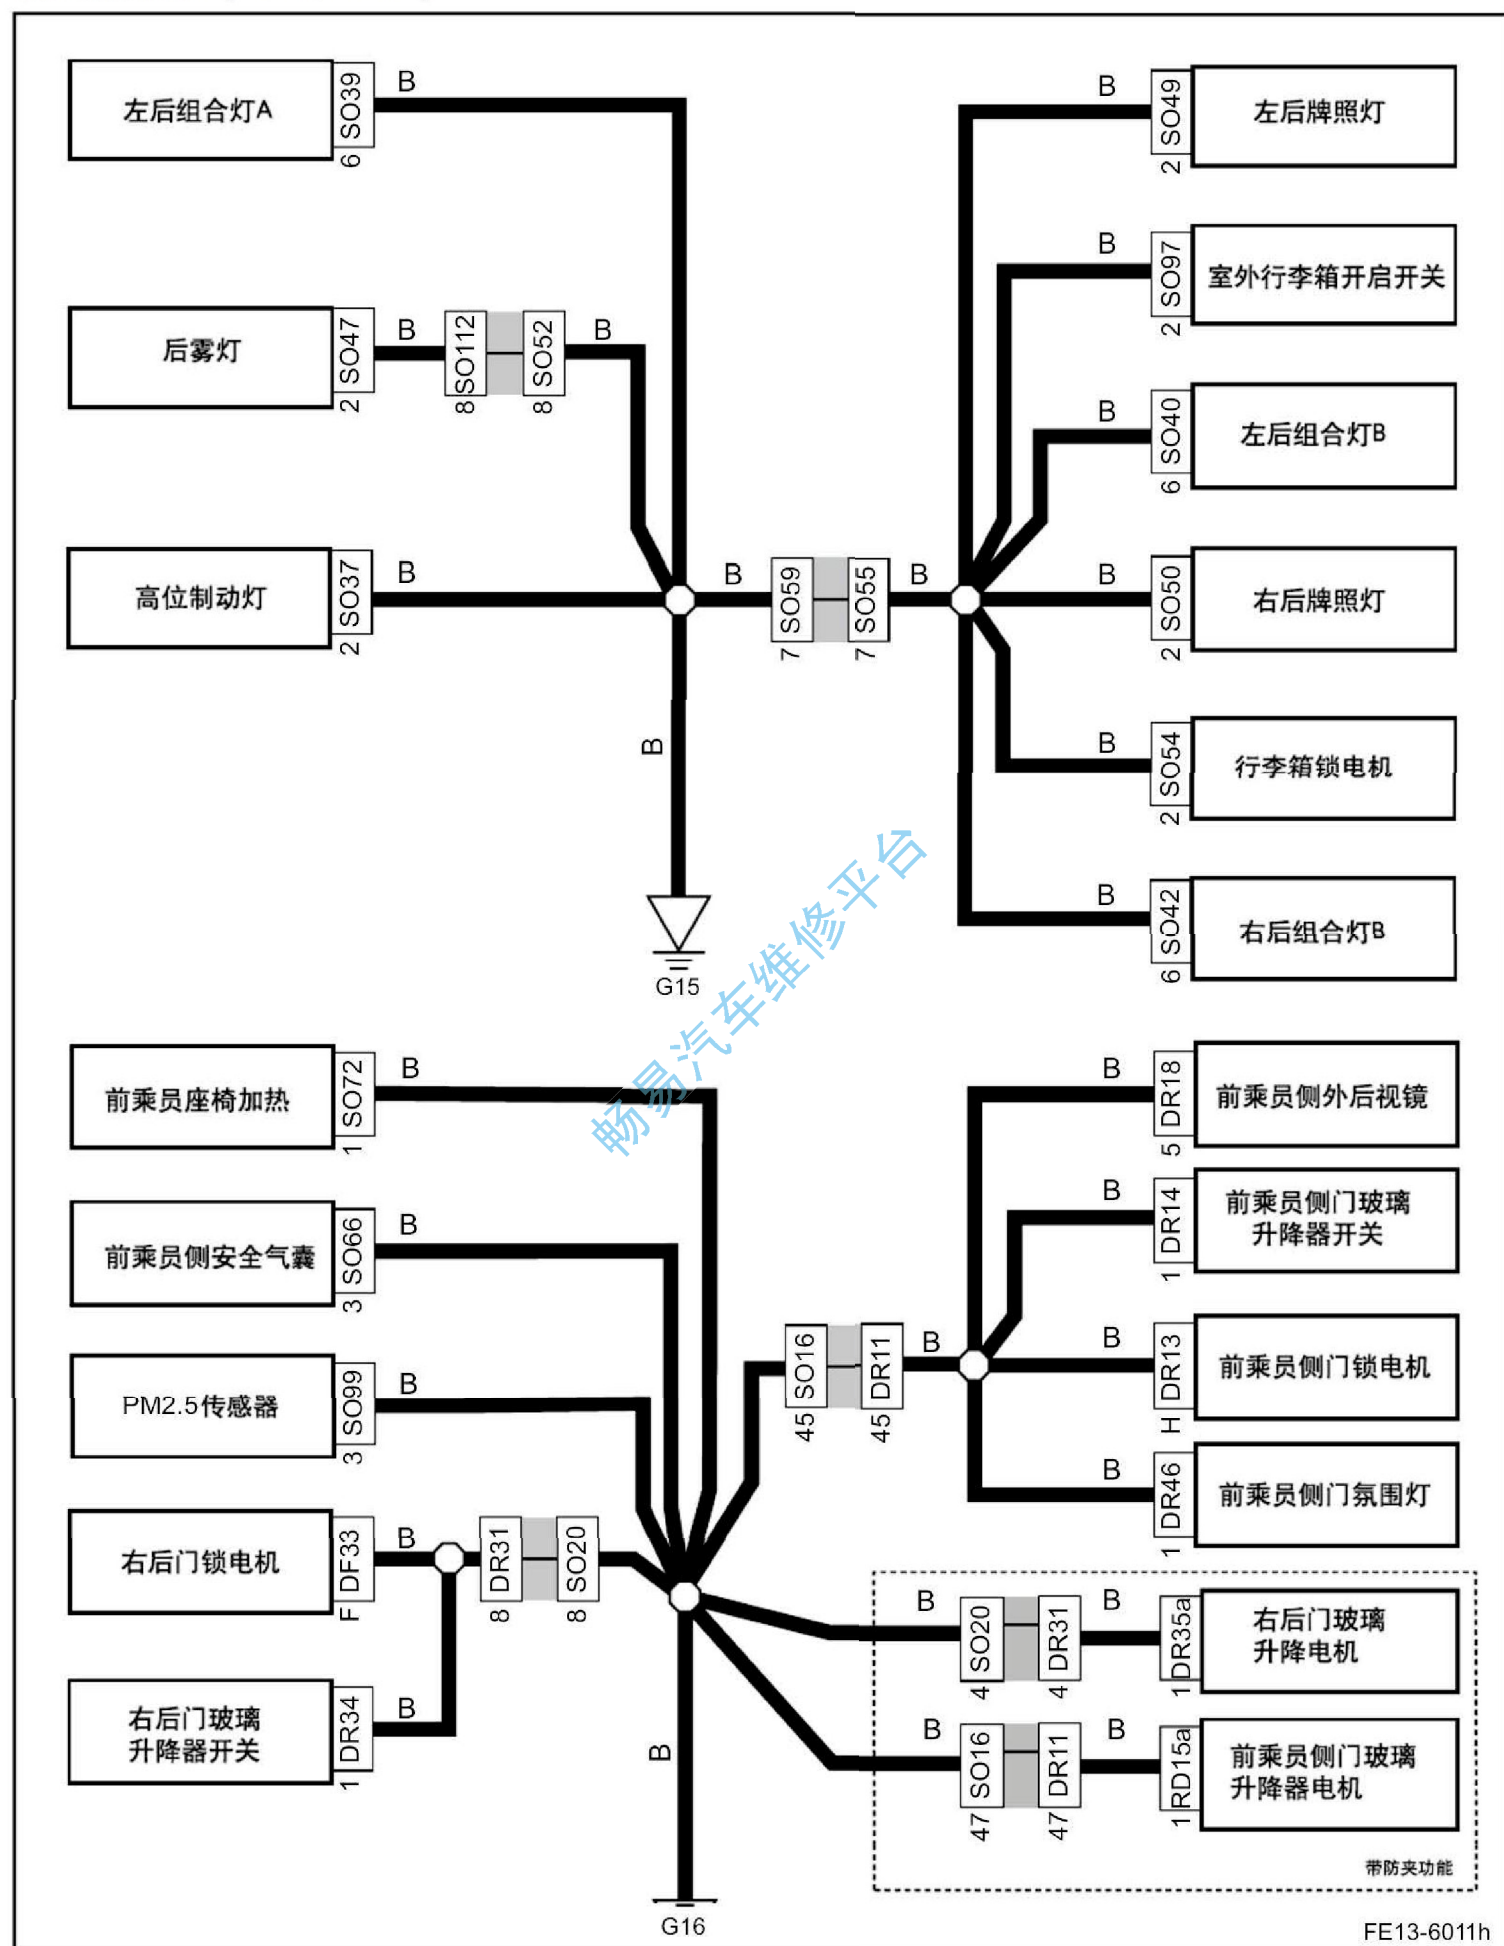

接地线路图6 (G18、G20、G21、G22、G23)

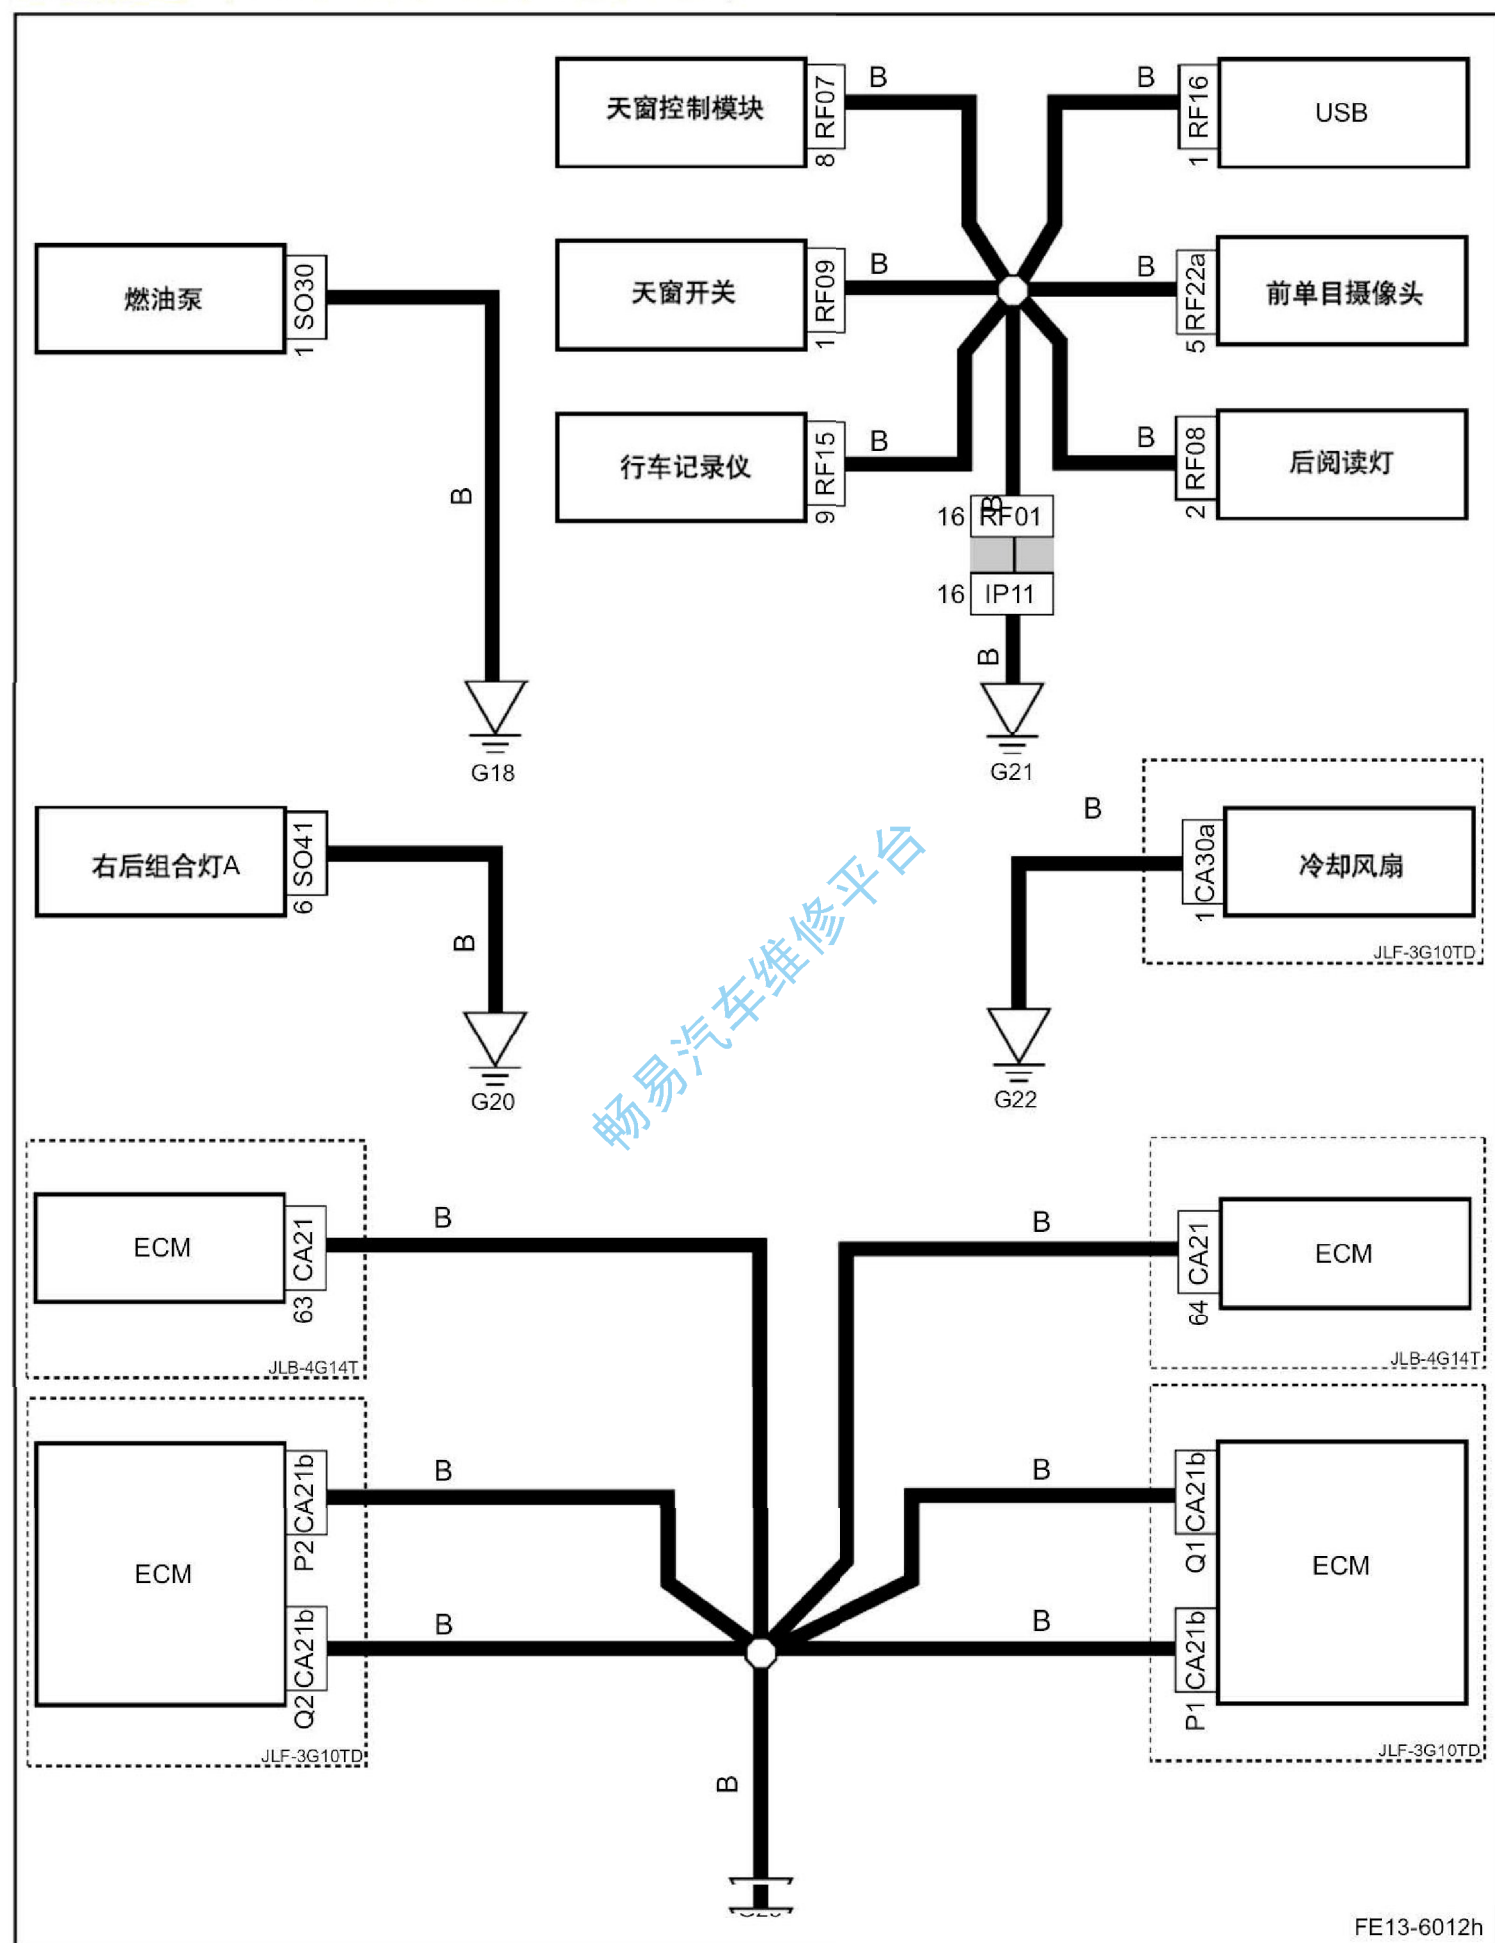


接地线路图7 (G25、G26、G28)

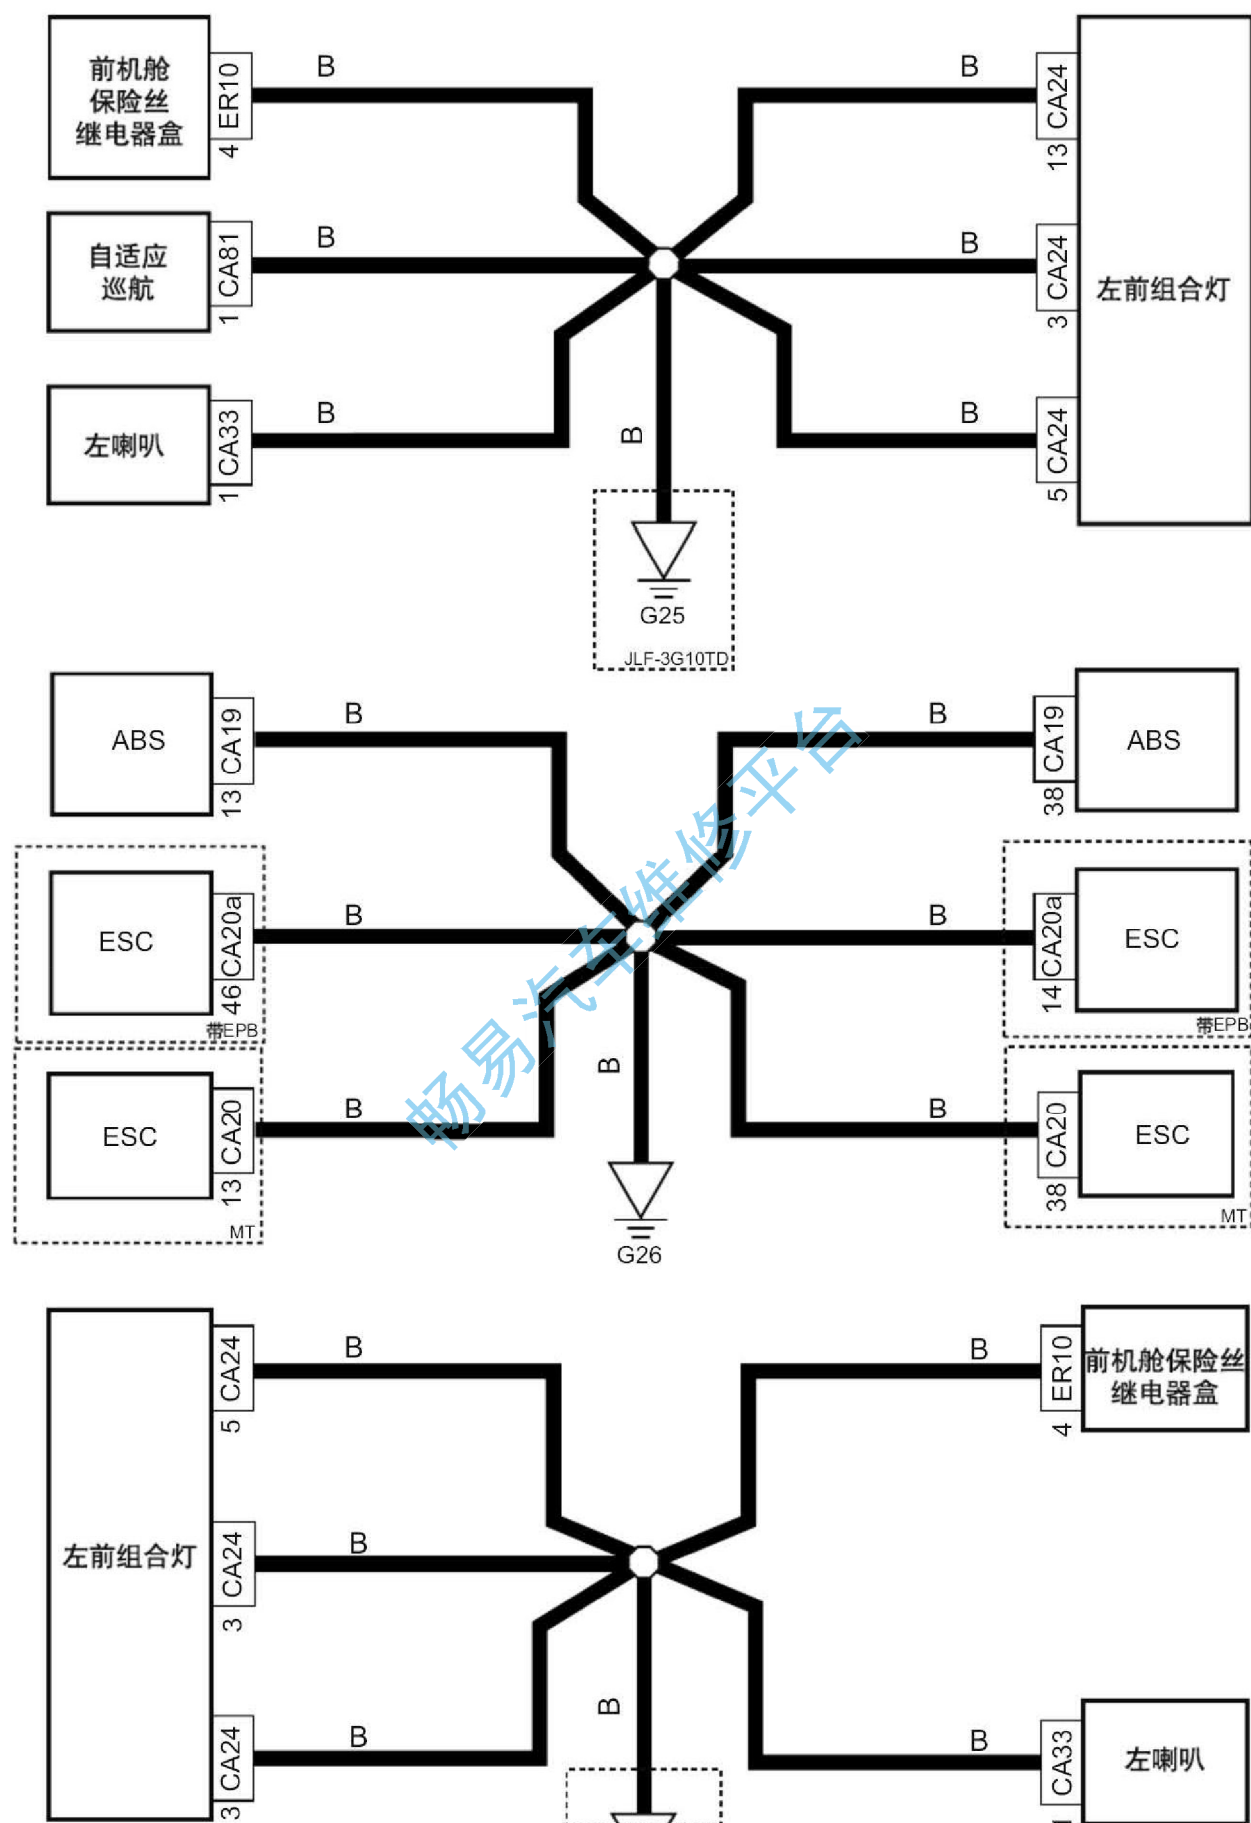


FE13-6013h

接地线路图8 (G29、G30、G32、G34、G35、G36)

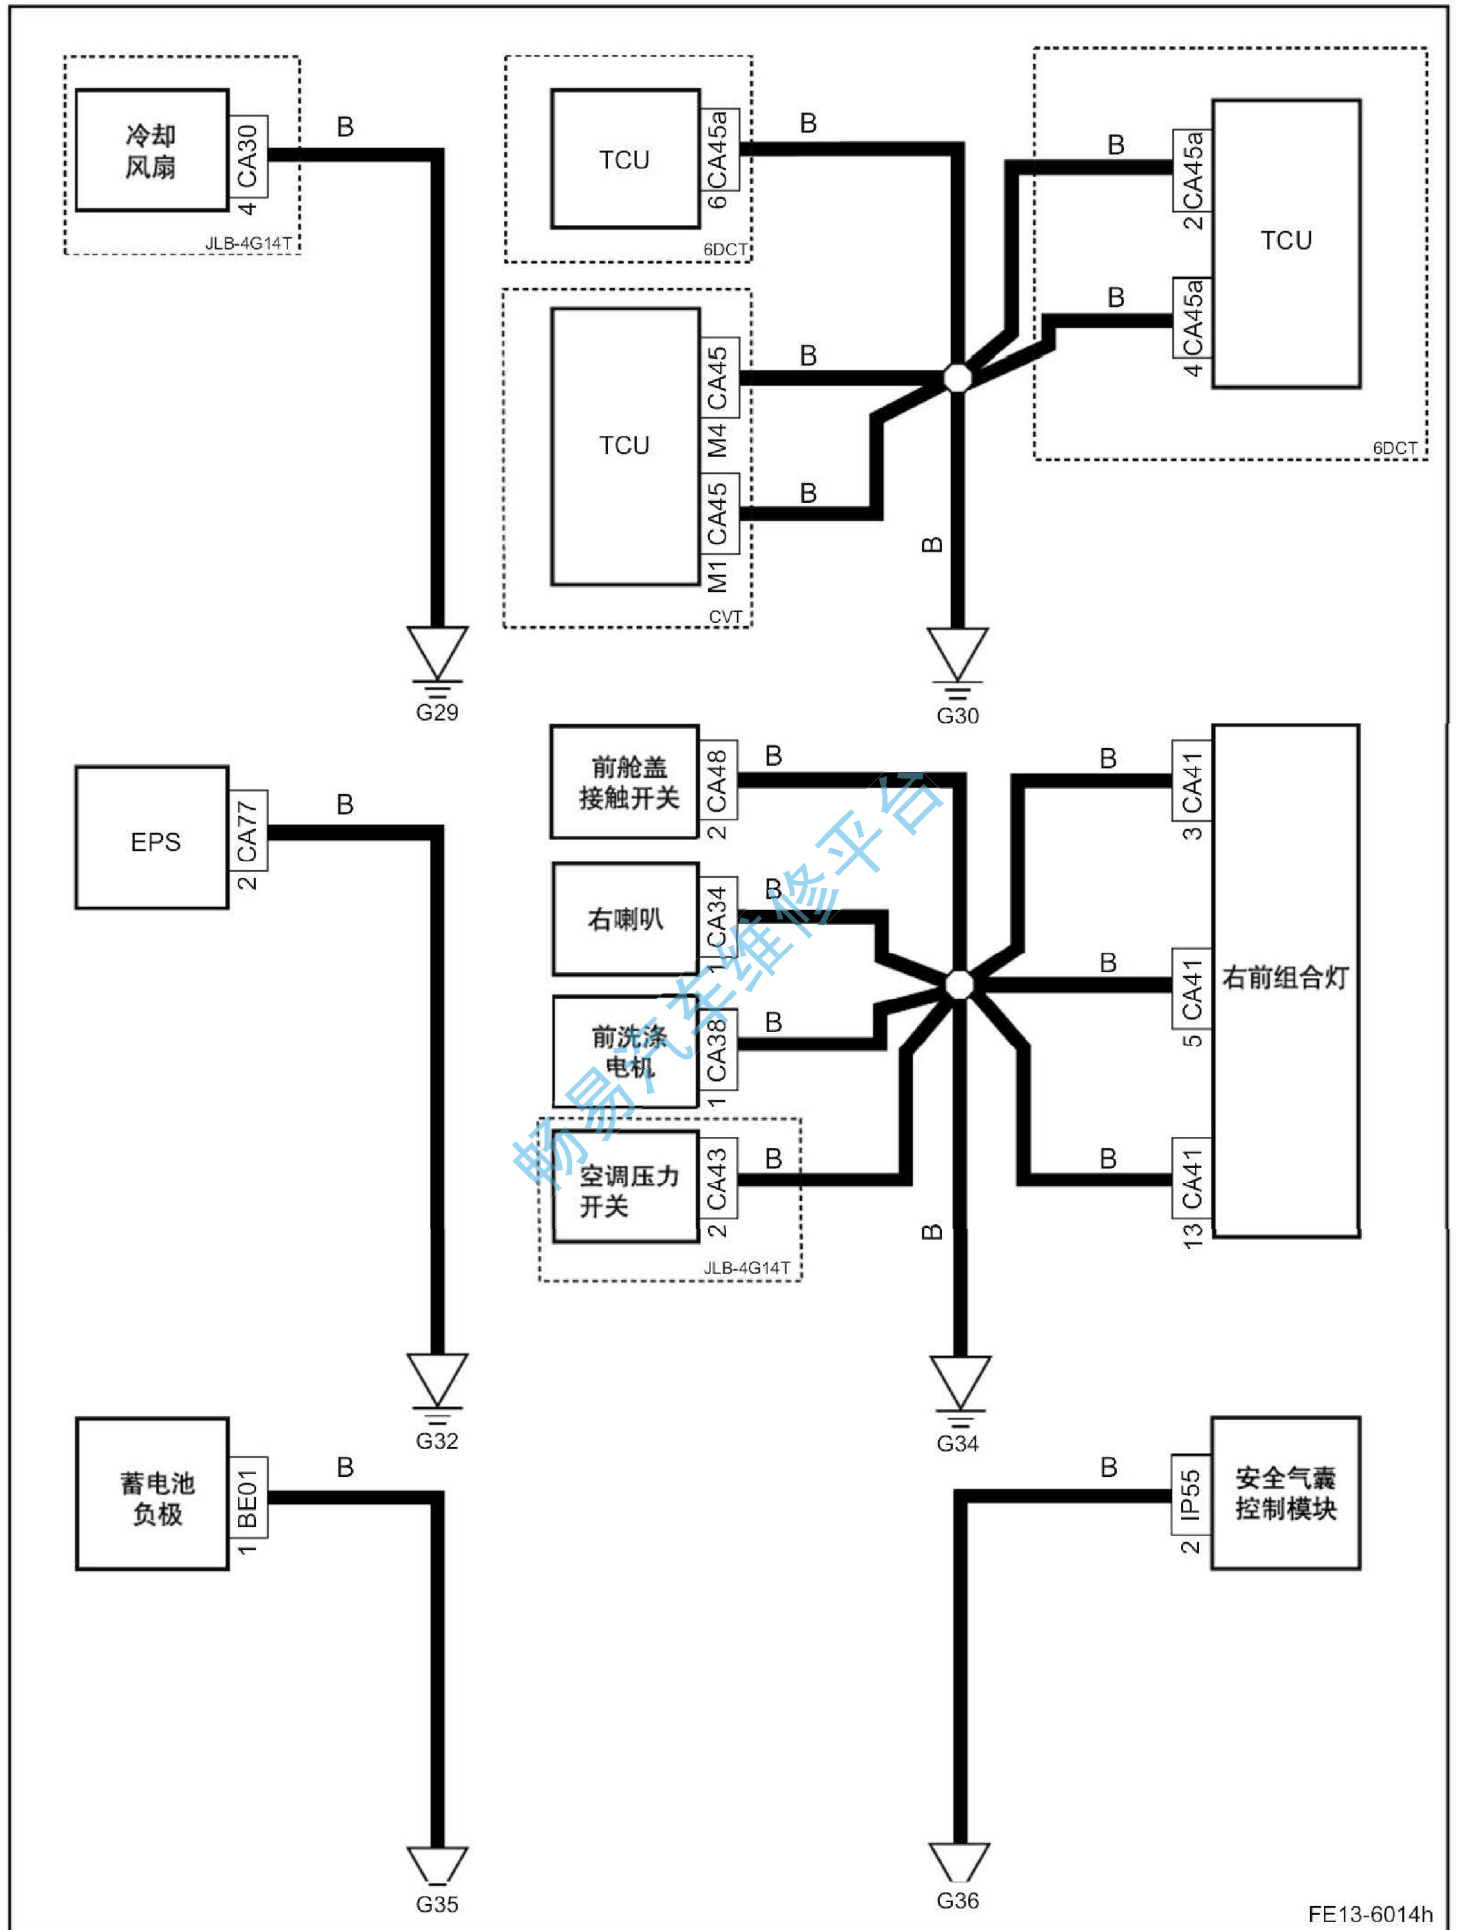

接地线路图9 (G37、G39)

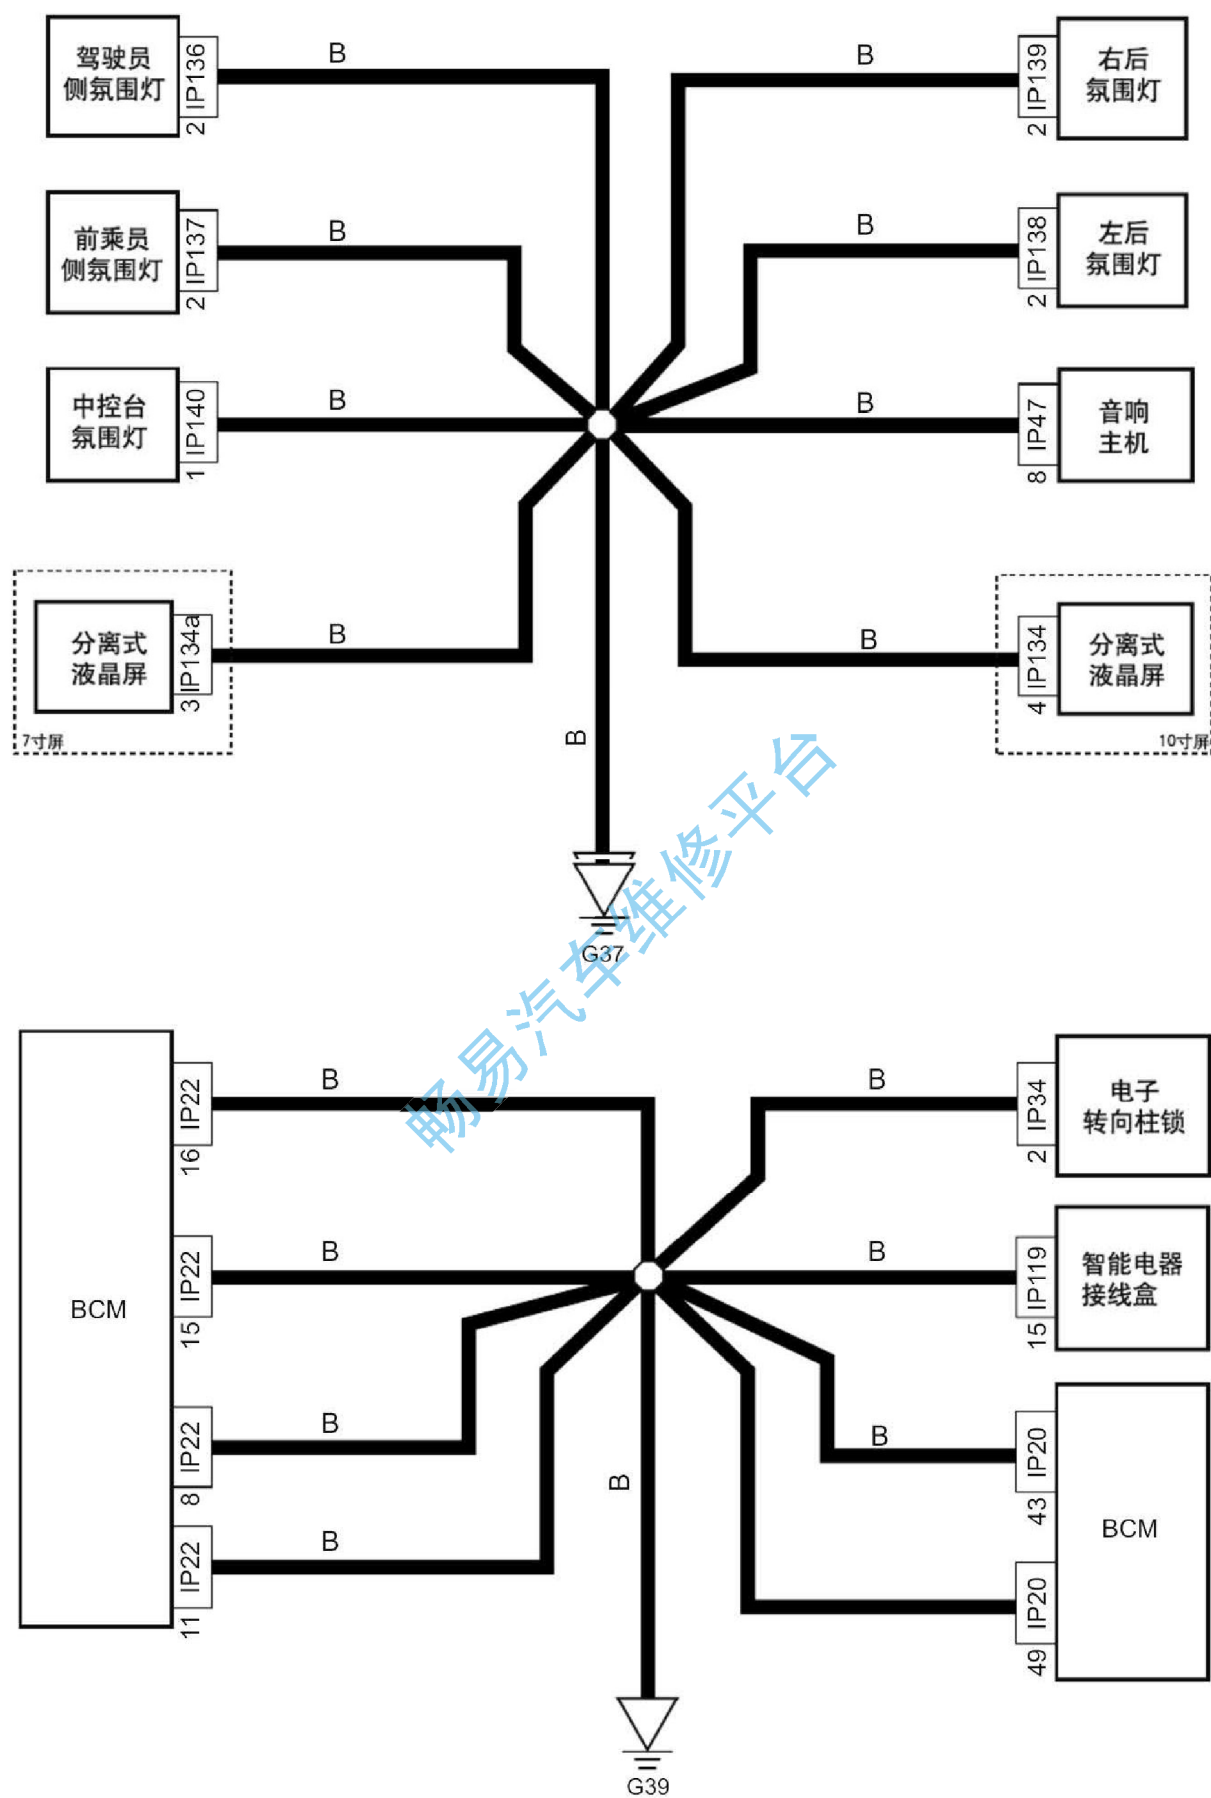

FE13-6015h