



8W-45 车身控制模块

内容	页码	内容	页码
环境温度传感器.....	8W-45-6	接线盒.....	8W-45-2,3,4,5,6,7,8
烟灰盒灯.....	8W-45-4	左礼貌灯.....	8W-45-5
自动前照灯(光强)传感器/VTSS发光二极管.....	8W-45-3,6	左举升门未关严开关.....	8W-45-7
自动区域控制模块.....	8W-45-4,9	左多功能开关.....	8W-45-3,4
车身控制模块.....	8W-45-2,3,4,5,6,7,8,9	左后门电动锁电机/未关严开关.....	8W-45-6
货舱灯.....	8W-45-5	左遥控收音机开关.....	8W-45-8
时钟弹簧.....	8W-45-8	举升门可掀起后窗未关严开关.....	8W-45-7
冷却液液位传感器.....	8W-45-5	近光继电器.....	8W-45-3
数据连接插接器.....	8W-45-5	近光/日间行车灯继电器.....	8W-45-3
诊断接口.....	8W-45-5	手动温度控制.....	8W-45-4,9
驾驶员加热座椅开关.....	8W-45-4,9	顶置阅读灯/礼貌灯.....	8W-45-5
雾灯继电器.....	8W-45-3	驻车灯继电器.....	8W-45-3,4
前洗涤器泵.....	8W-45-7	乘客加热座椅开关.....	8W-45-4,9
前刮水器电机.....	8W-45-7	收音机.....	8W-45-4
保险丝6(JB).....	8W-45-4	后窗除雾器继电器.....	8W-45-8
保险丝7(JB).....	8W-45-2	后刮水器电机.....	8W-45-7
保险丝22(JB).....	8W-45-2	右礼貌灯.....	8W-45-5
保险丝25(JB).....	8W-45-8	右举升门未关严开关.....	8W-45-7
保险丝28(JB).....	8W-45-2	右多功能开关.....	8W-45-7
G108.....	8W-45-5	右后门电动锁电机/未关严开关.....	8W-45-6
G200.....	8W-45-2,5	右遥控收音机开关.....	8W-45-8
杂物箱灯.....	8W-45-5	座椅安全带开关.....	8W-45-6
远光继电器.....	8W-45-3	天窗延时继电器.....	8W-45-8
喇叭继电器.....	8W-45-6	变速器档位指示器照明.....	8W-45-4
点火开关.....	8W-45-5	洗涤器液位开关.....	8W-45-7
		刮水器开/关继电器.....	8W-45-7

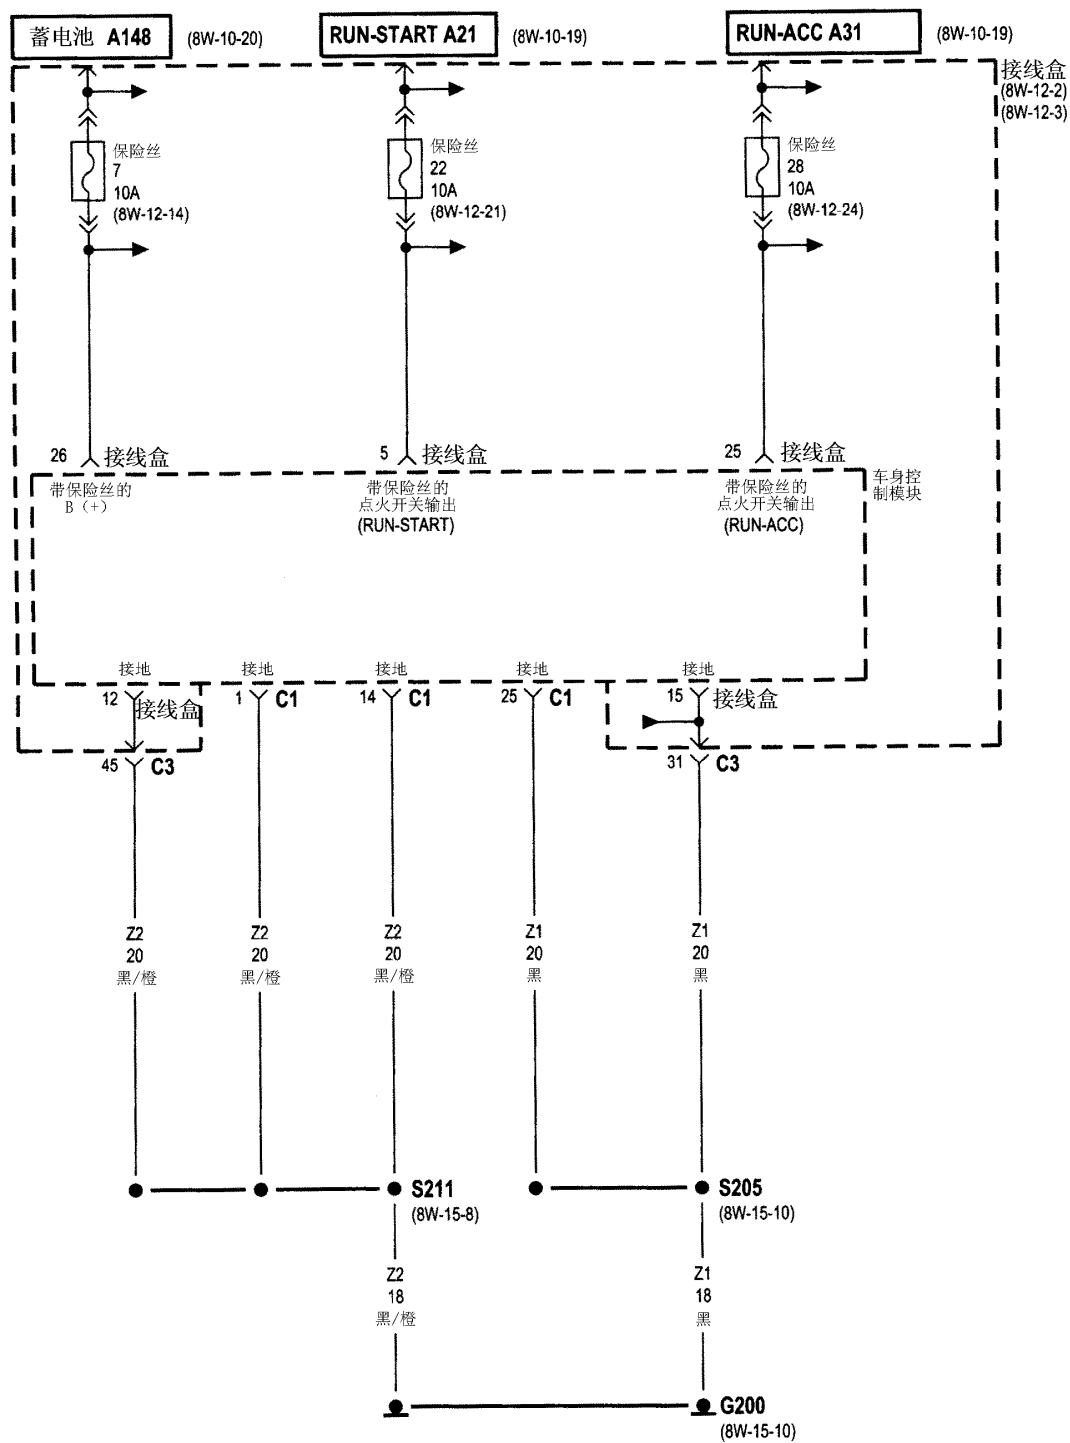


J018W-19

WJD04502

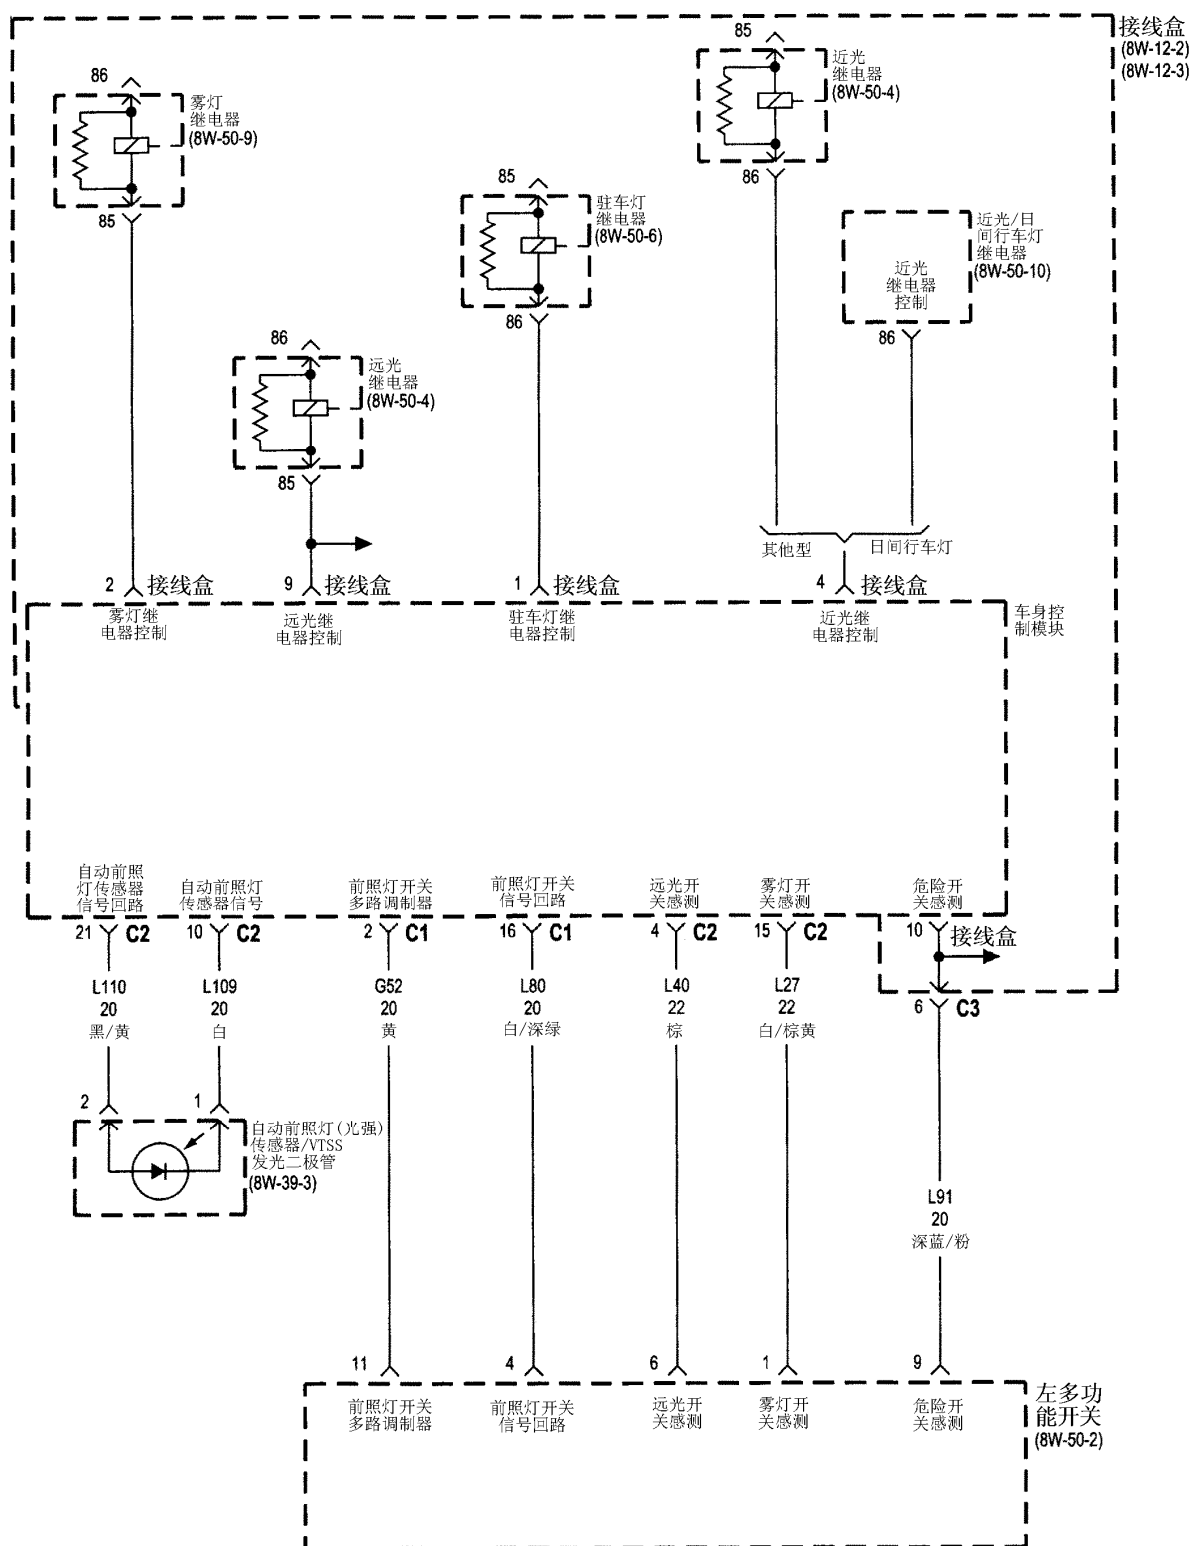


WJD04503

J018W-19

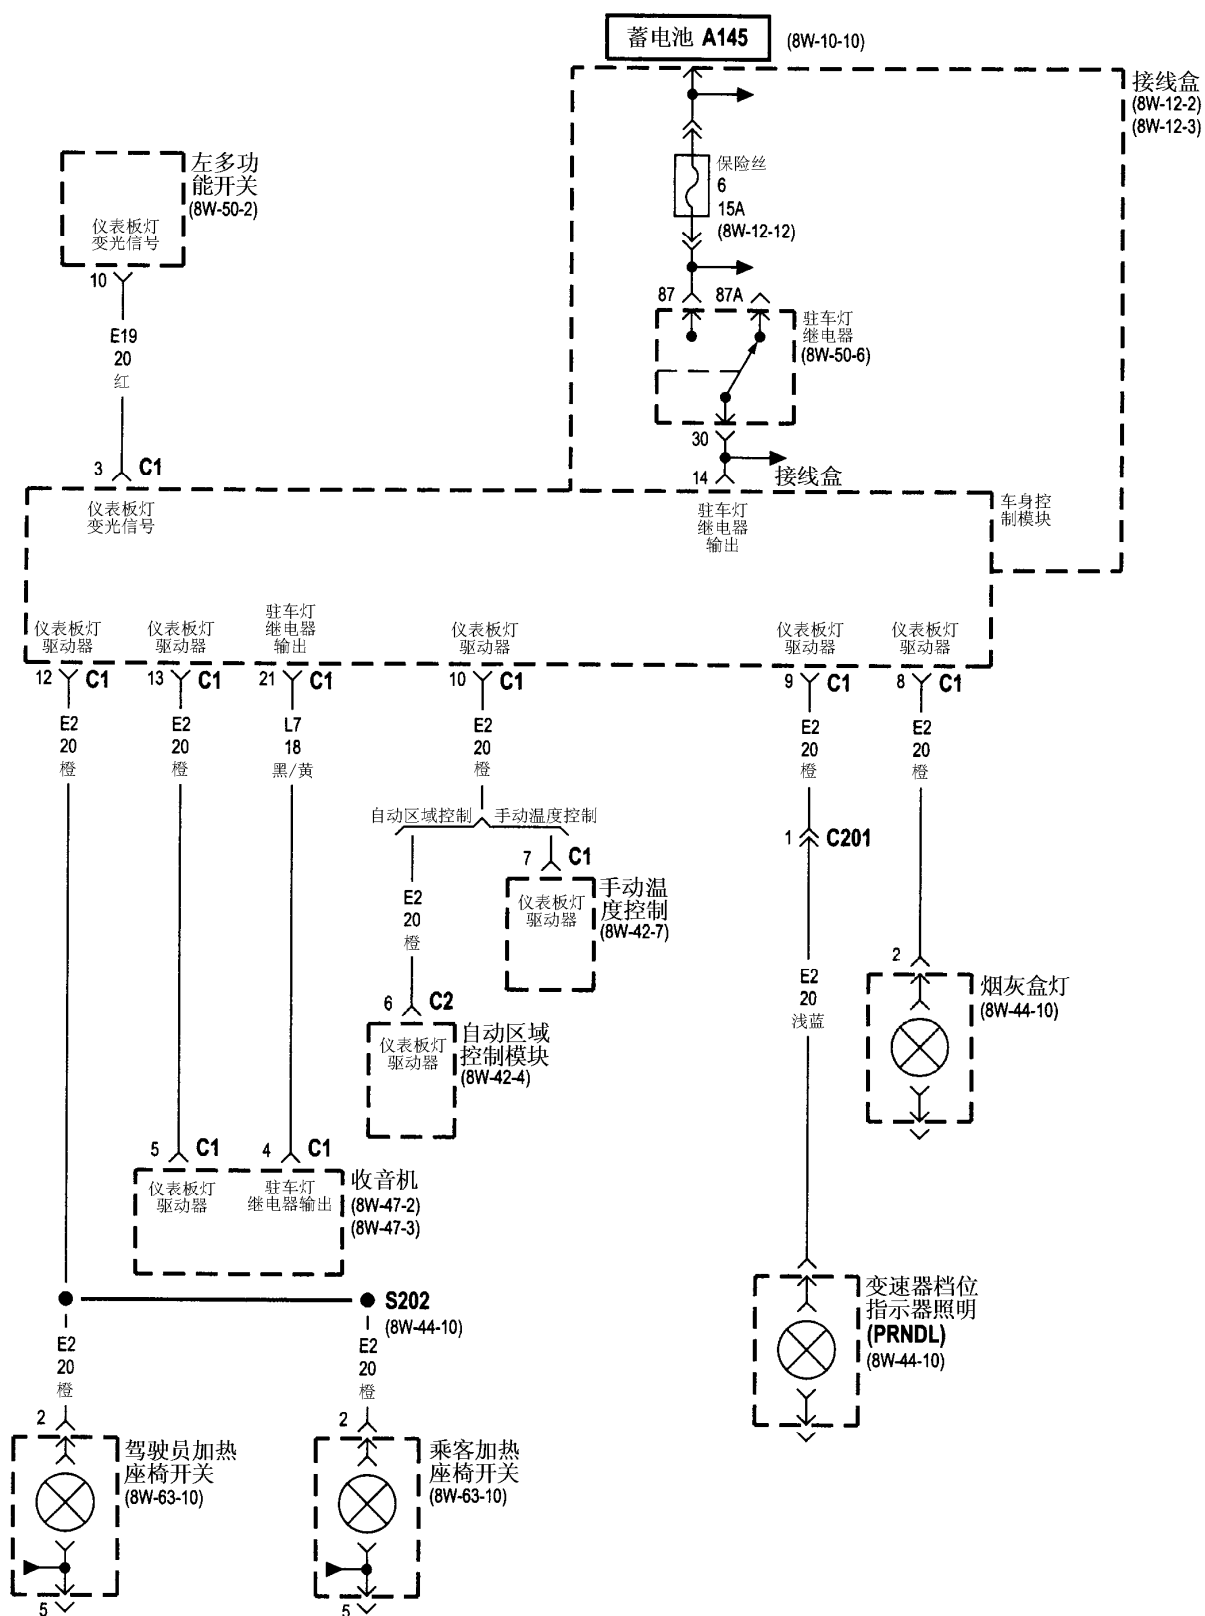


J018W-19

WJD04504

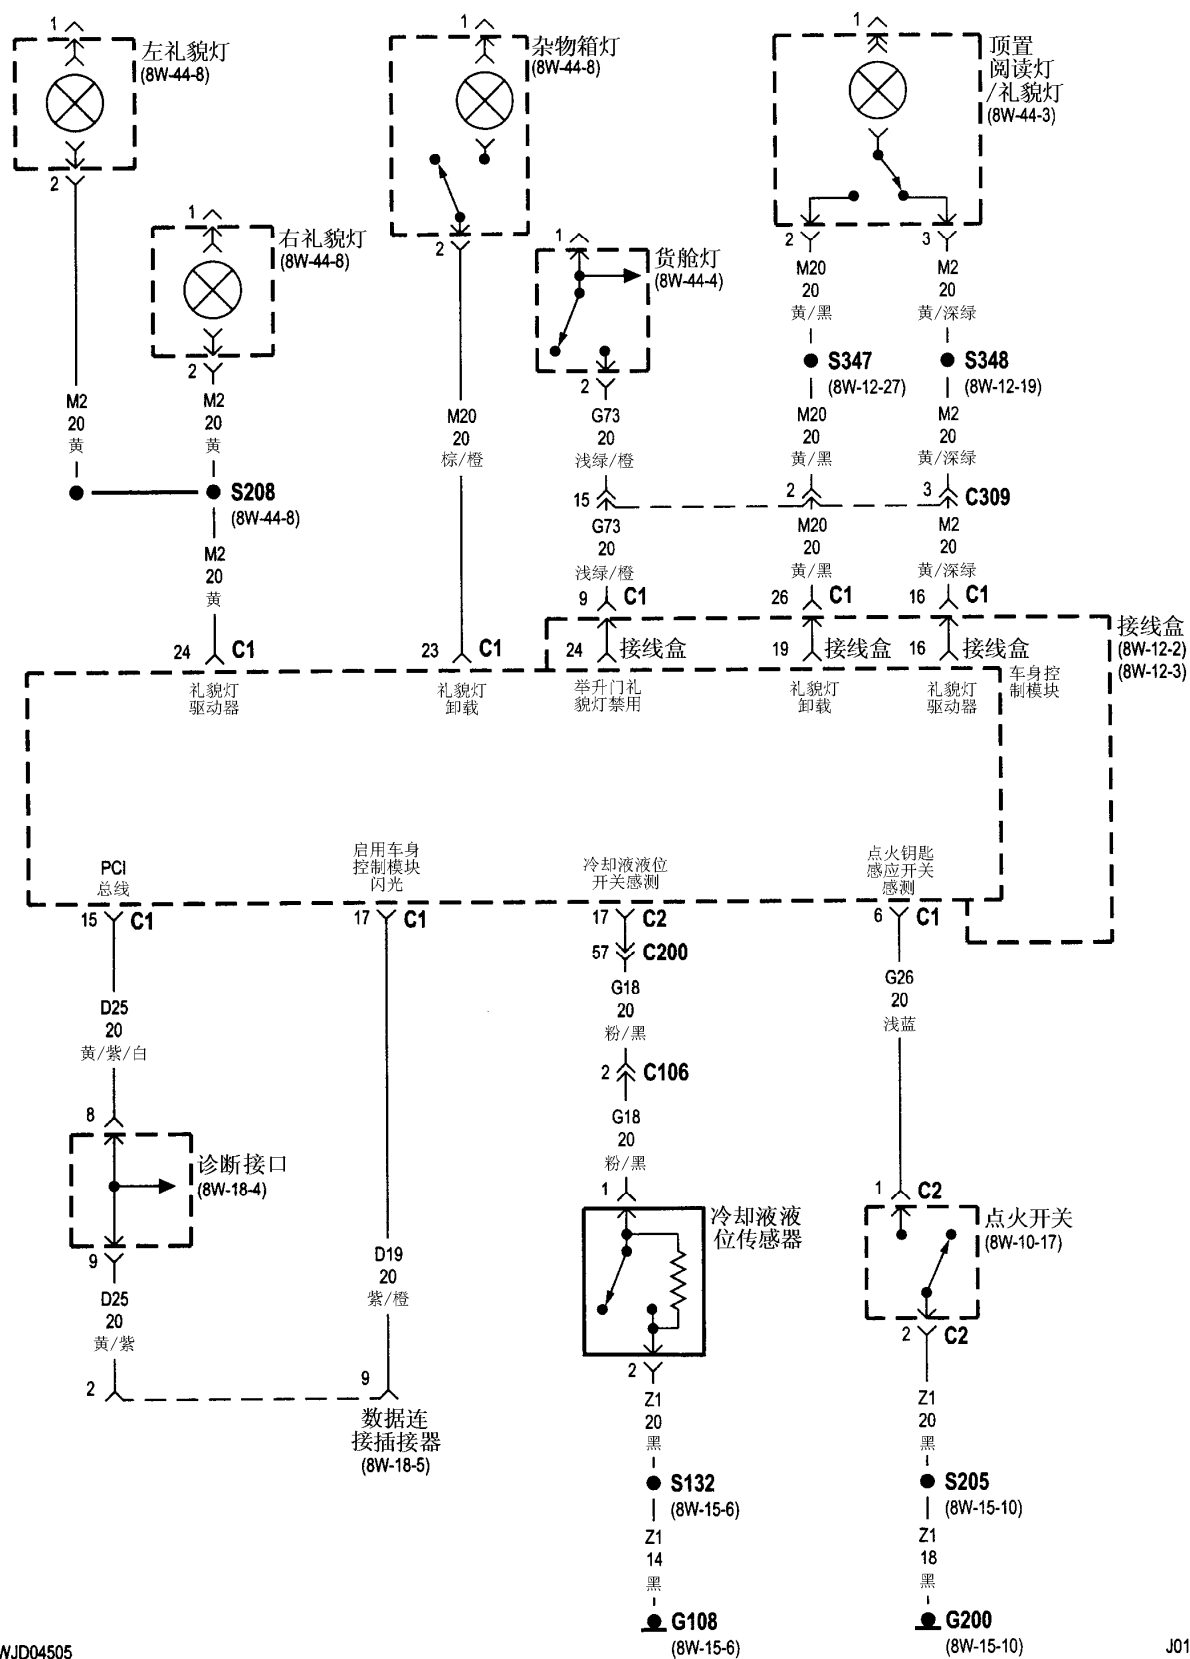


WJD04505

J018W-19

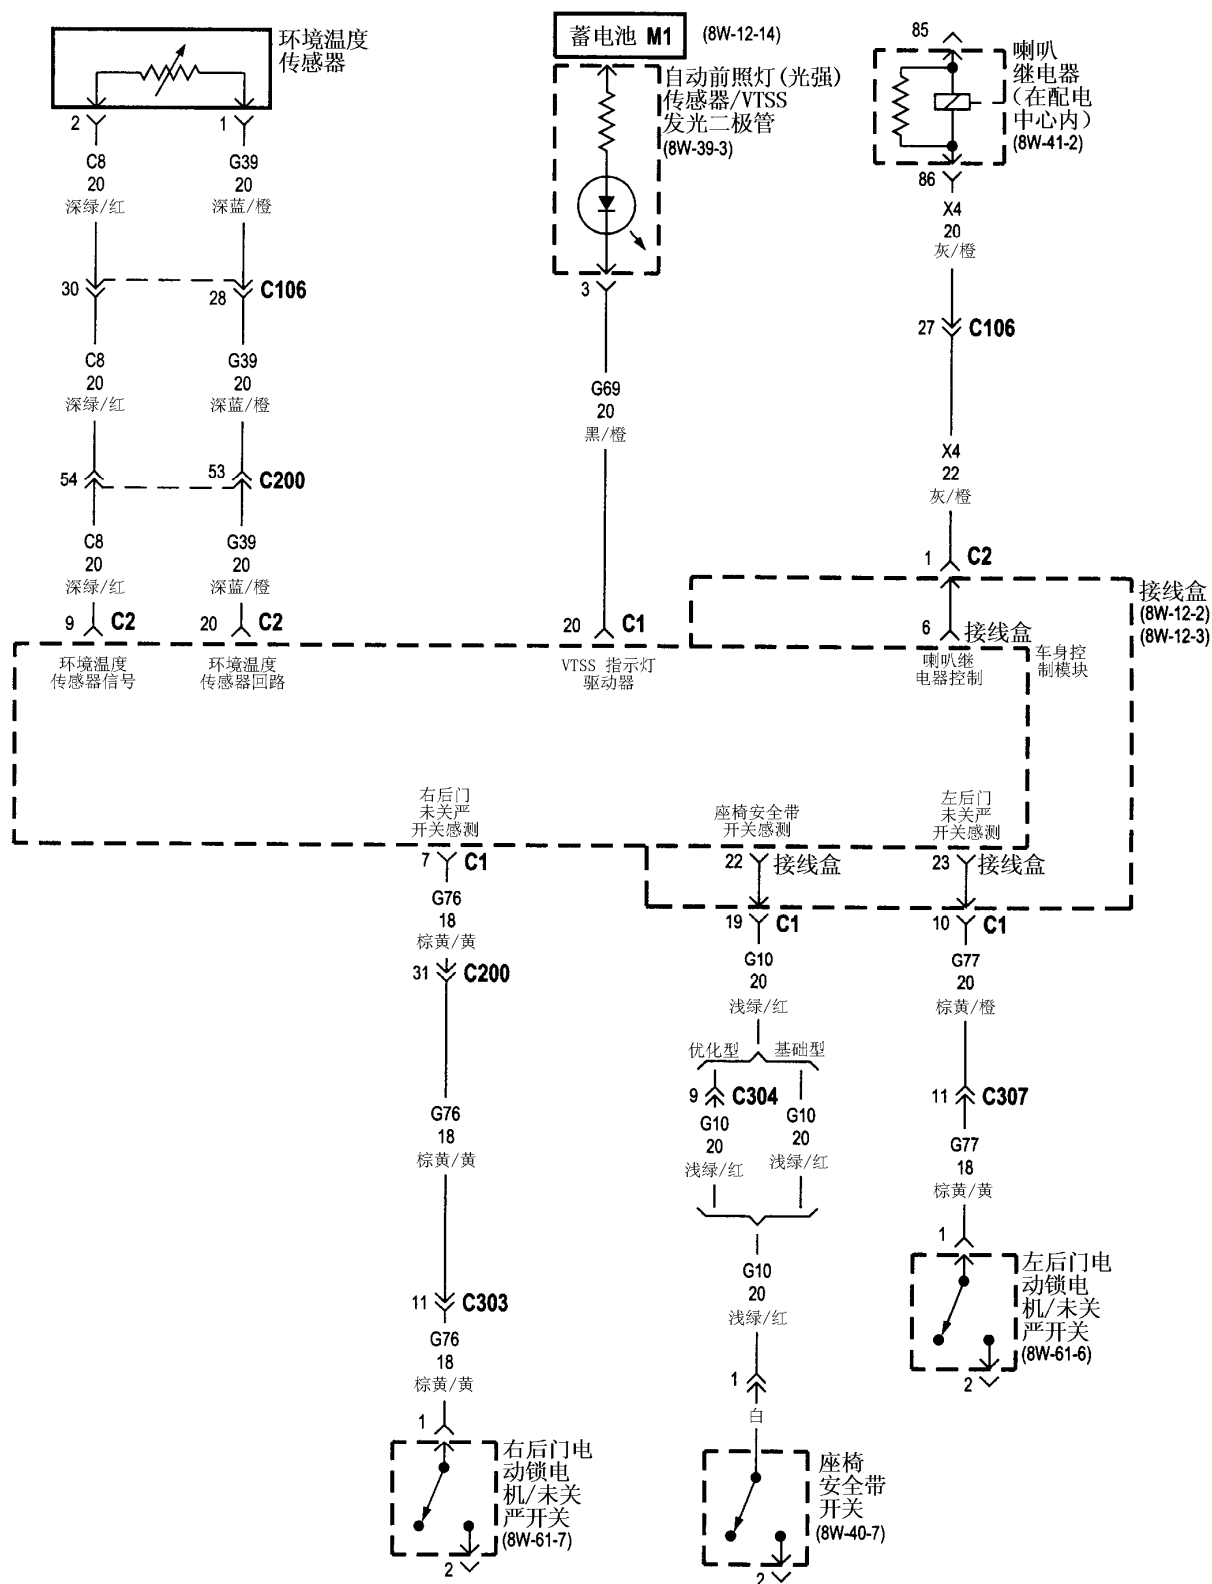


J018W-19


WJD04506

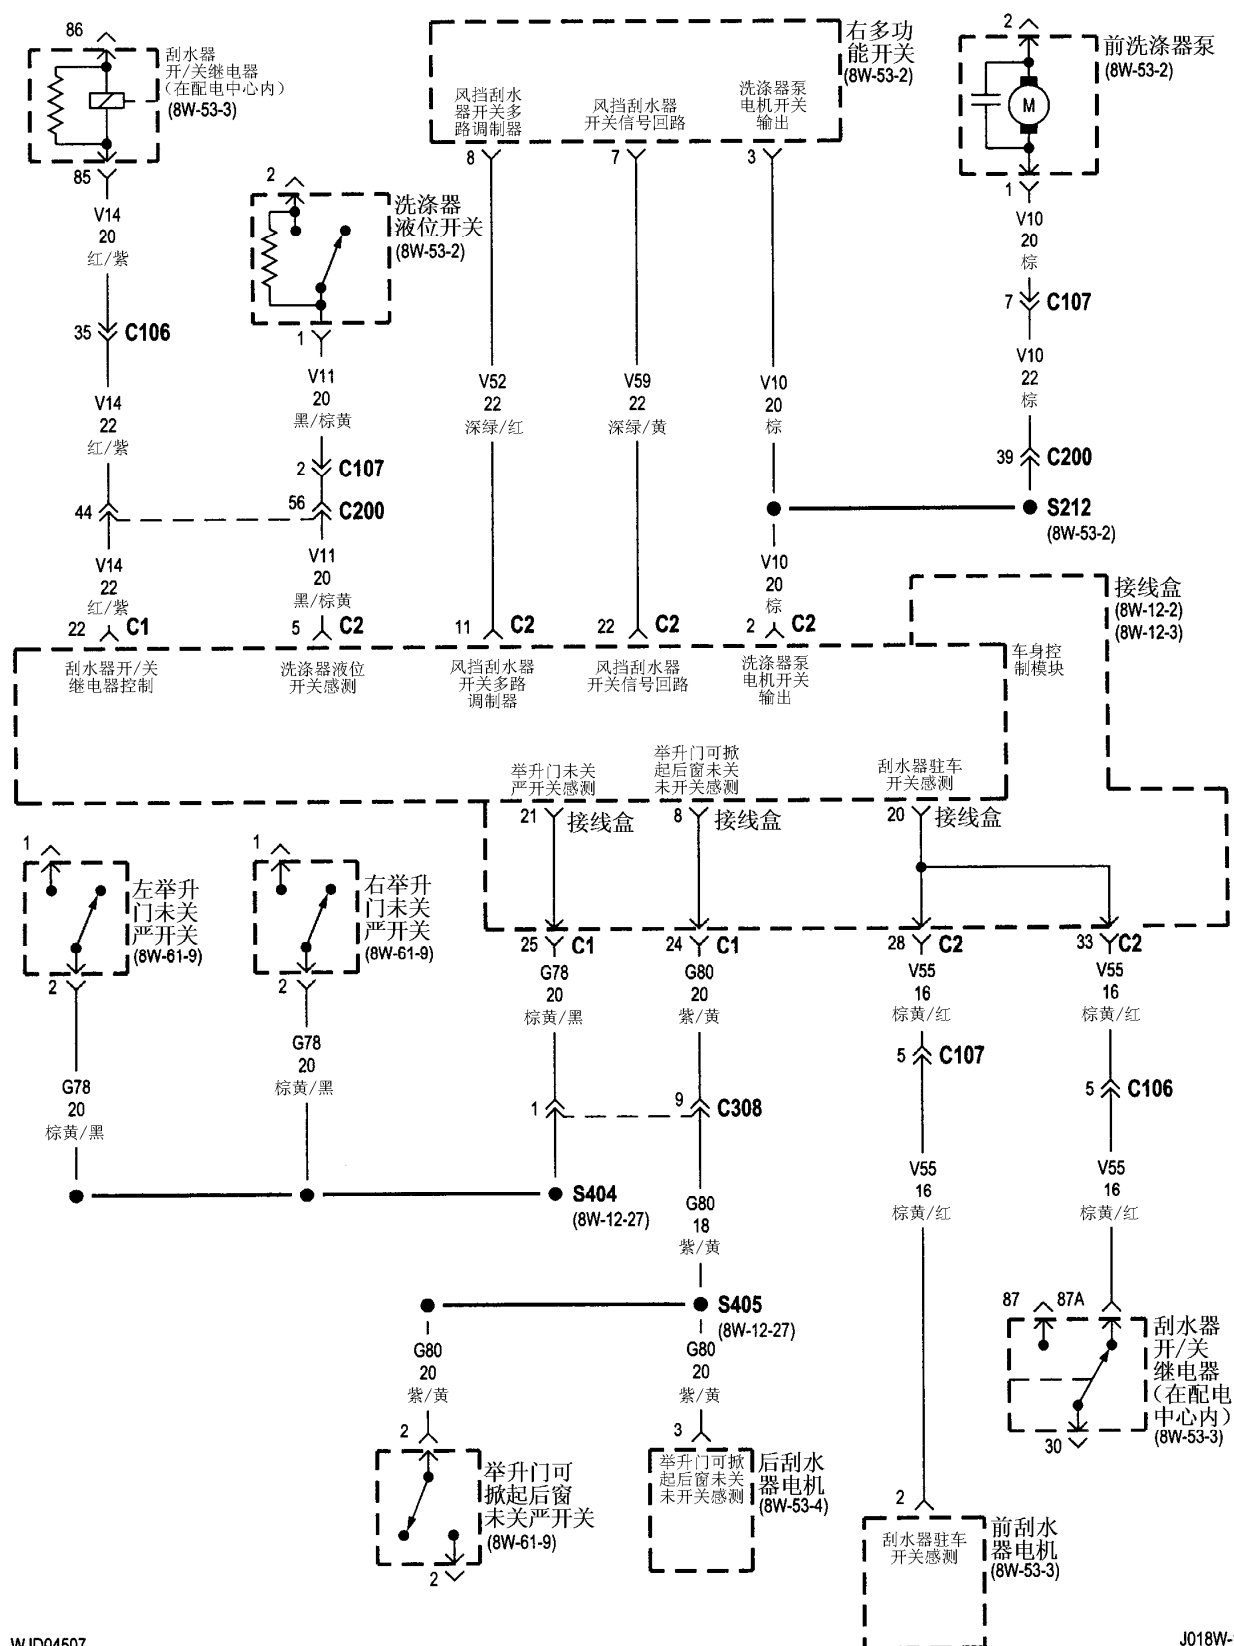

WJD04507

J018W-19

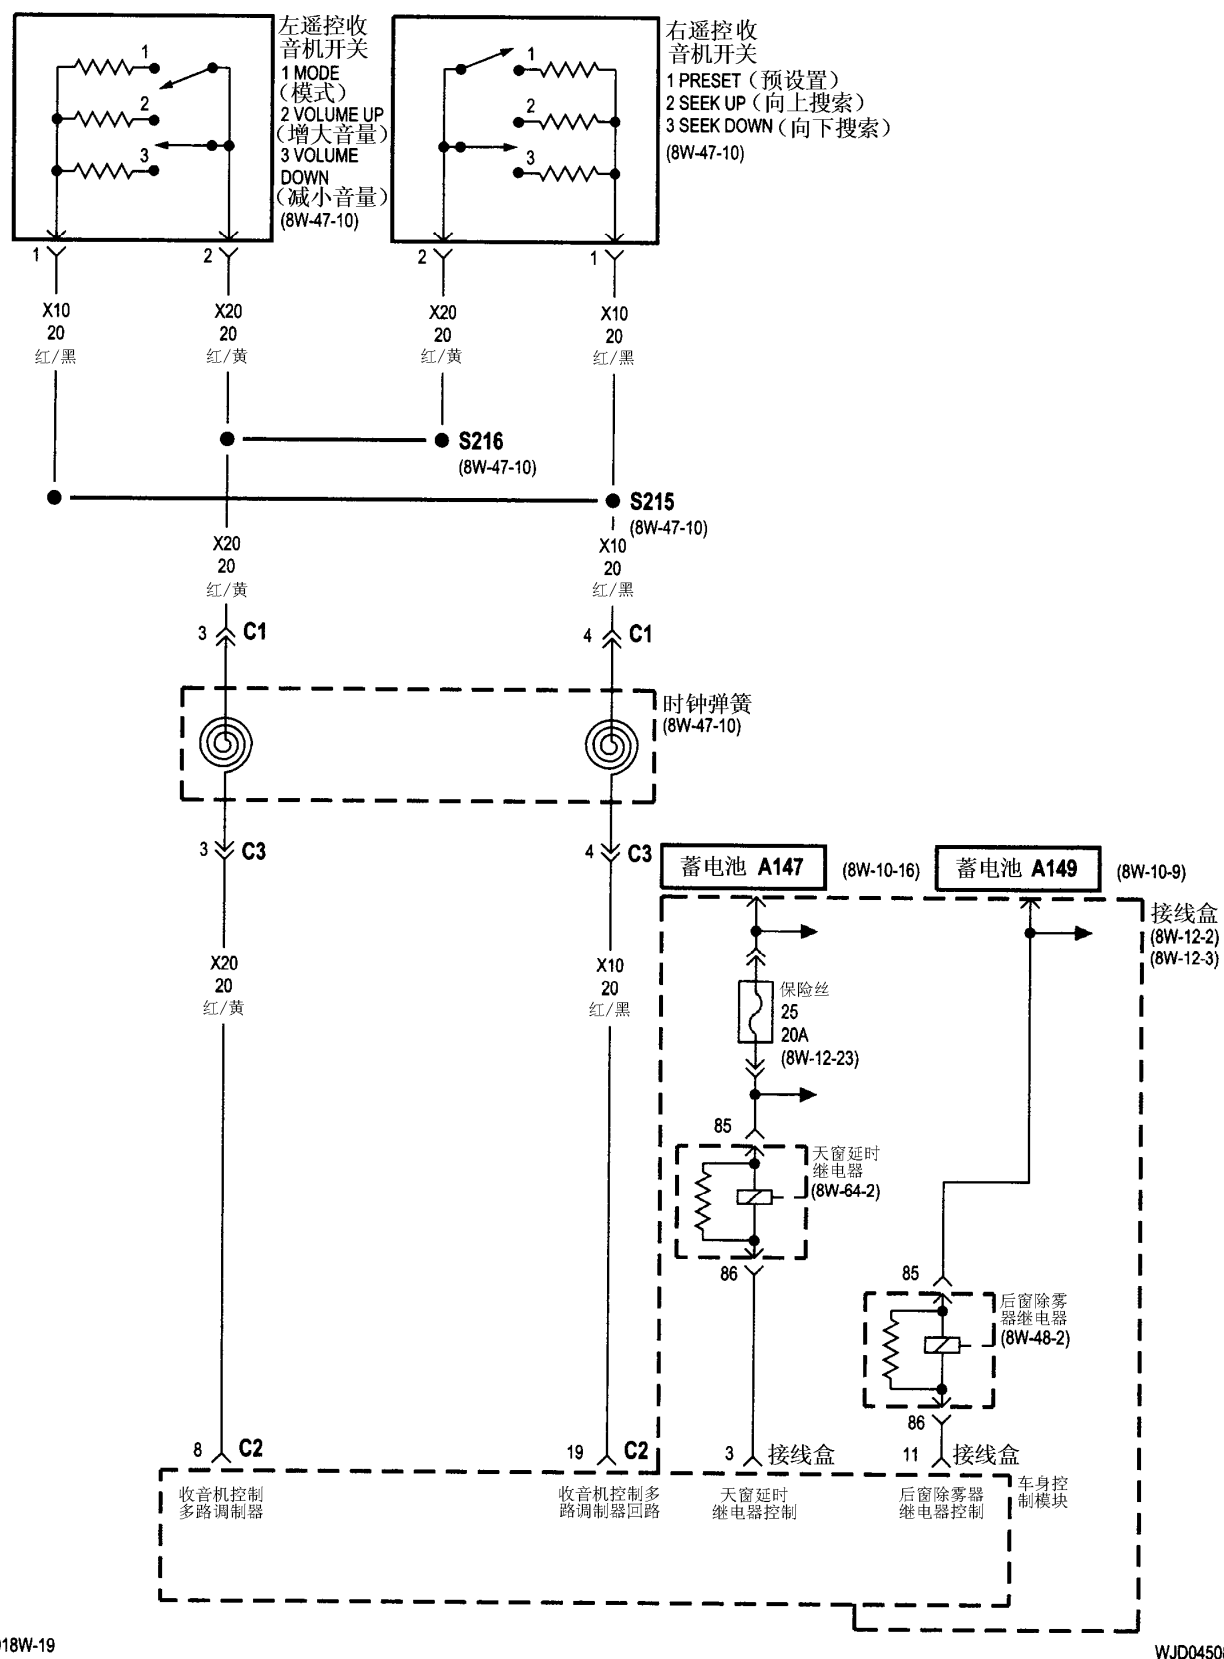

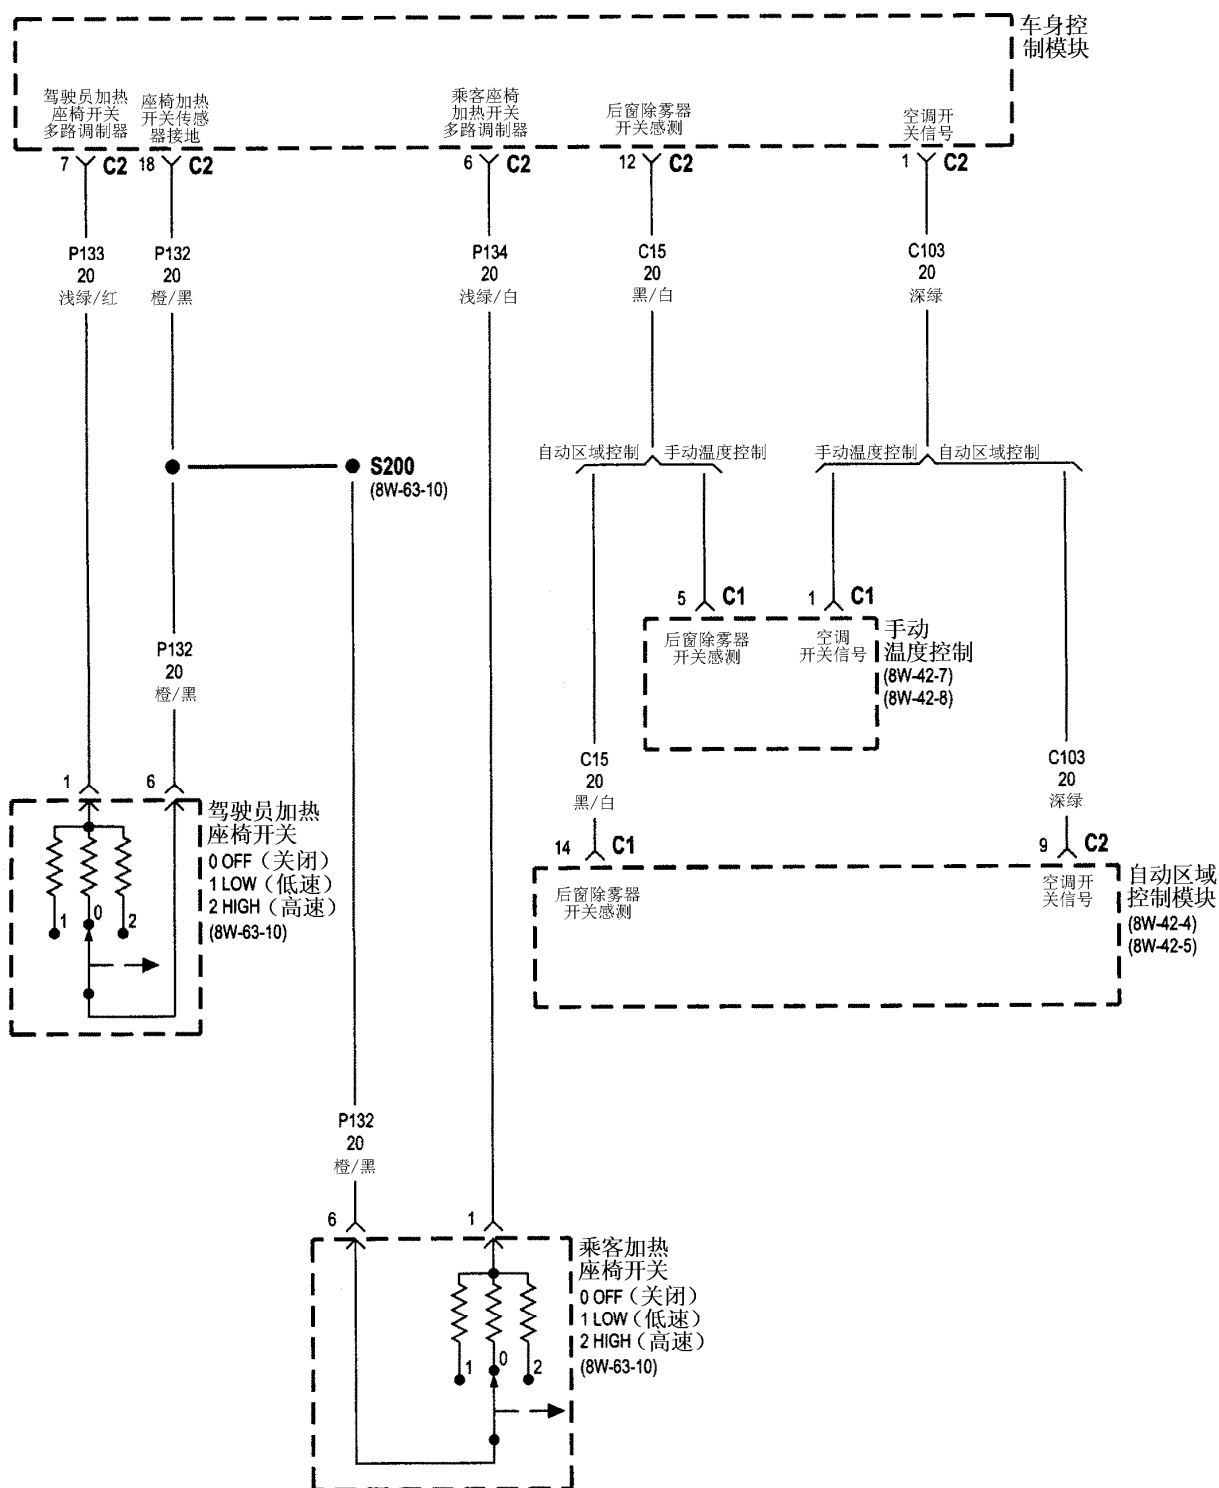

WJD04509

J018W-19