




8W-45 BODY CONTROL MODULE

Component	Page
Accessory Delay Relay	8W-45-9
Ambient Temperature Sensor	8W-45-7
Automatic Headlamp Light Sensor/VTSS Led	8W-45-3, 7
Automatic Zone Control Module	8W-45-4, 10
Body Control Module	8W-45-2, 3, 4, 5, 6, 7, 8, 9, 10
Cargo Lamp	8W-45-5, 6
Clockspring	8W-45-9
Coolant Level Sensor	8W-45-5, 6
Data Link Connector	8W-45-5, 6
Driver Heated Seat Switch	8W-45-4, 10
EVAP Temp Sensor	8W-45-7
Fog Lamp Relay	8W-45-3
Front Washer Pump	8W-45-8
Front Wiper Motor	8W-45-8
Fuse 6	8W-45-4
Fuse 7	8W-45-2
Fuse 22	8W-45-2
Fuse 25	8W-45-9
Fuse 27	8W-45-4
Fuse 28	8W-45-2
G108	8W-45-5, 6
G200	8W-45-2, 5, 6
Glove Box Lamp	8W-45-5, 6
High Beam Relay	8W-45-3
Hood Ajar Switch	8W-45-7
Horn Relay	8W-45-7
Ignition Switch	8W-45-5, 6


Component	Page
Junction Block	8W-45-2, 3, 4, 5, 6, 7, 8, 9
Left Courtesy Lamp	8W-45-5, 6
Left Liftgate Ajar Switch	8W-45-8
Left Multi-Function Switch	8W-45-3, 4
Left Rear Door Lock Motor/Ajar Switch . . .	8W-45-7
Left Remote Radio Switch	8W-45-9
Liftgate Flip-Up Ajar Switch	8W-45-8
Low Beam Relay	8W-45-3
Low Beam/Daytime Running Lamp Relay	8W-45-3
Manual Temperature Control	8W-45-4, 10
Overhead Map/Courtesy Lamp	8W-45-5, 6
Park Lamp Relay	8W-45-3, 4
Passenger Heated Seat Switch	8W-45-10
Passenger Heated Seat Switch	8W-45-4
Radio	8W-45-4
Rear Fog Lamp Relay	8W-45-4
Rear Window Defogger Relay	8W-45-9
Rear Wiper Motor	8W-45-8
Right Courtesy Lamp	8W-45-5, 6
Right Liftgate Ajar Switch	8W-45-8
Right Multi-Function Switch	8W-45-8
Right Rear Door Lock Motor/Ajar Switch . .	8W-45-7
Right Remote Radio Switch	8W-45-9
Shifter Assembly	8W-45-4
Washer Fluid Level Switch	8W-45-8
Wiper High/Low Relay	8W-45-2
Wiper On/Off Relay	8W-45-8

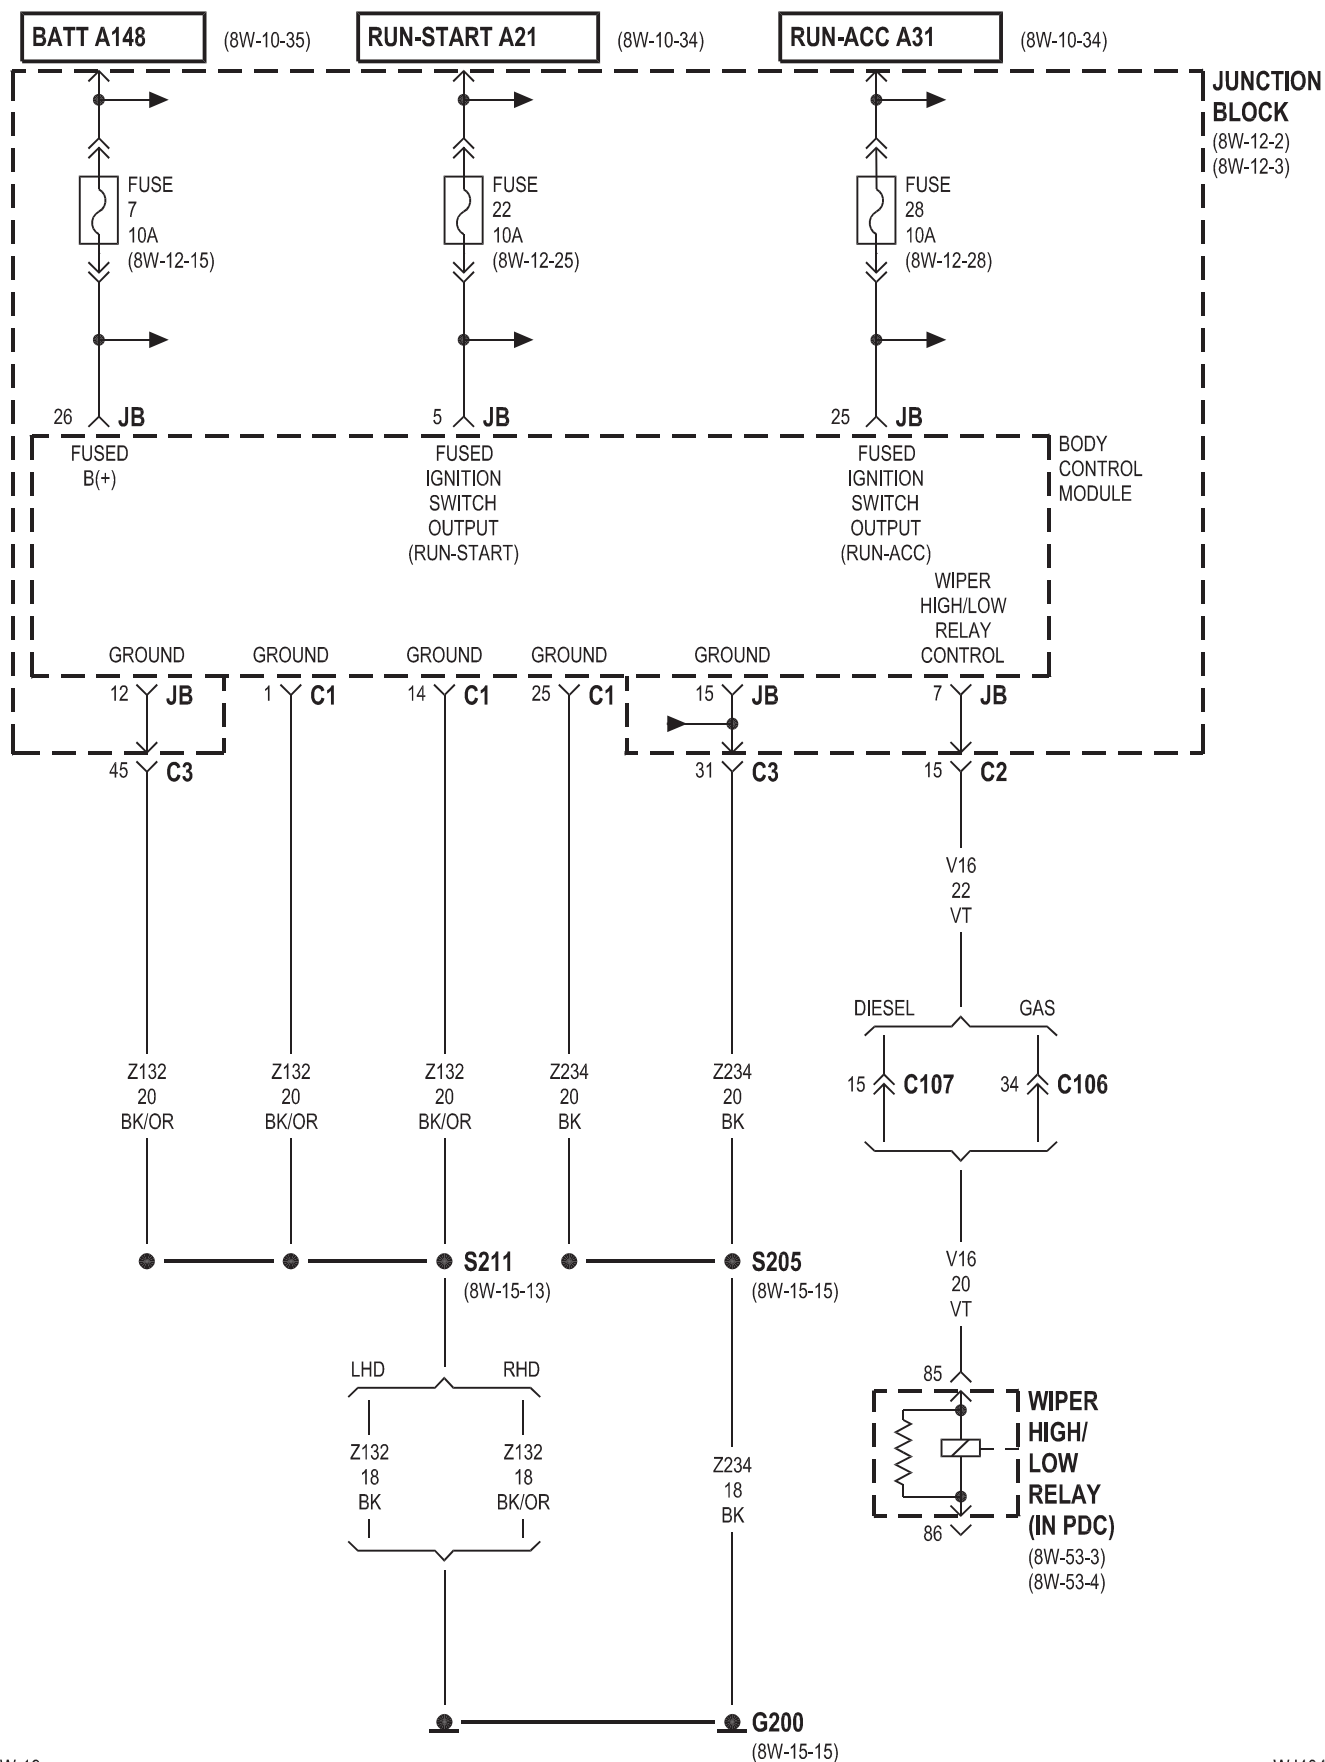

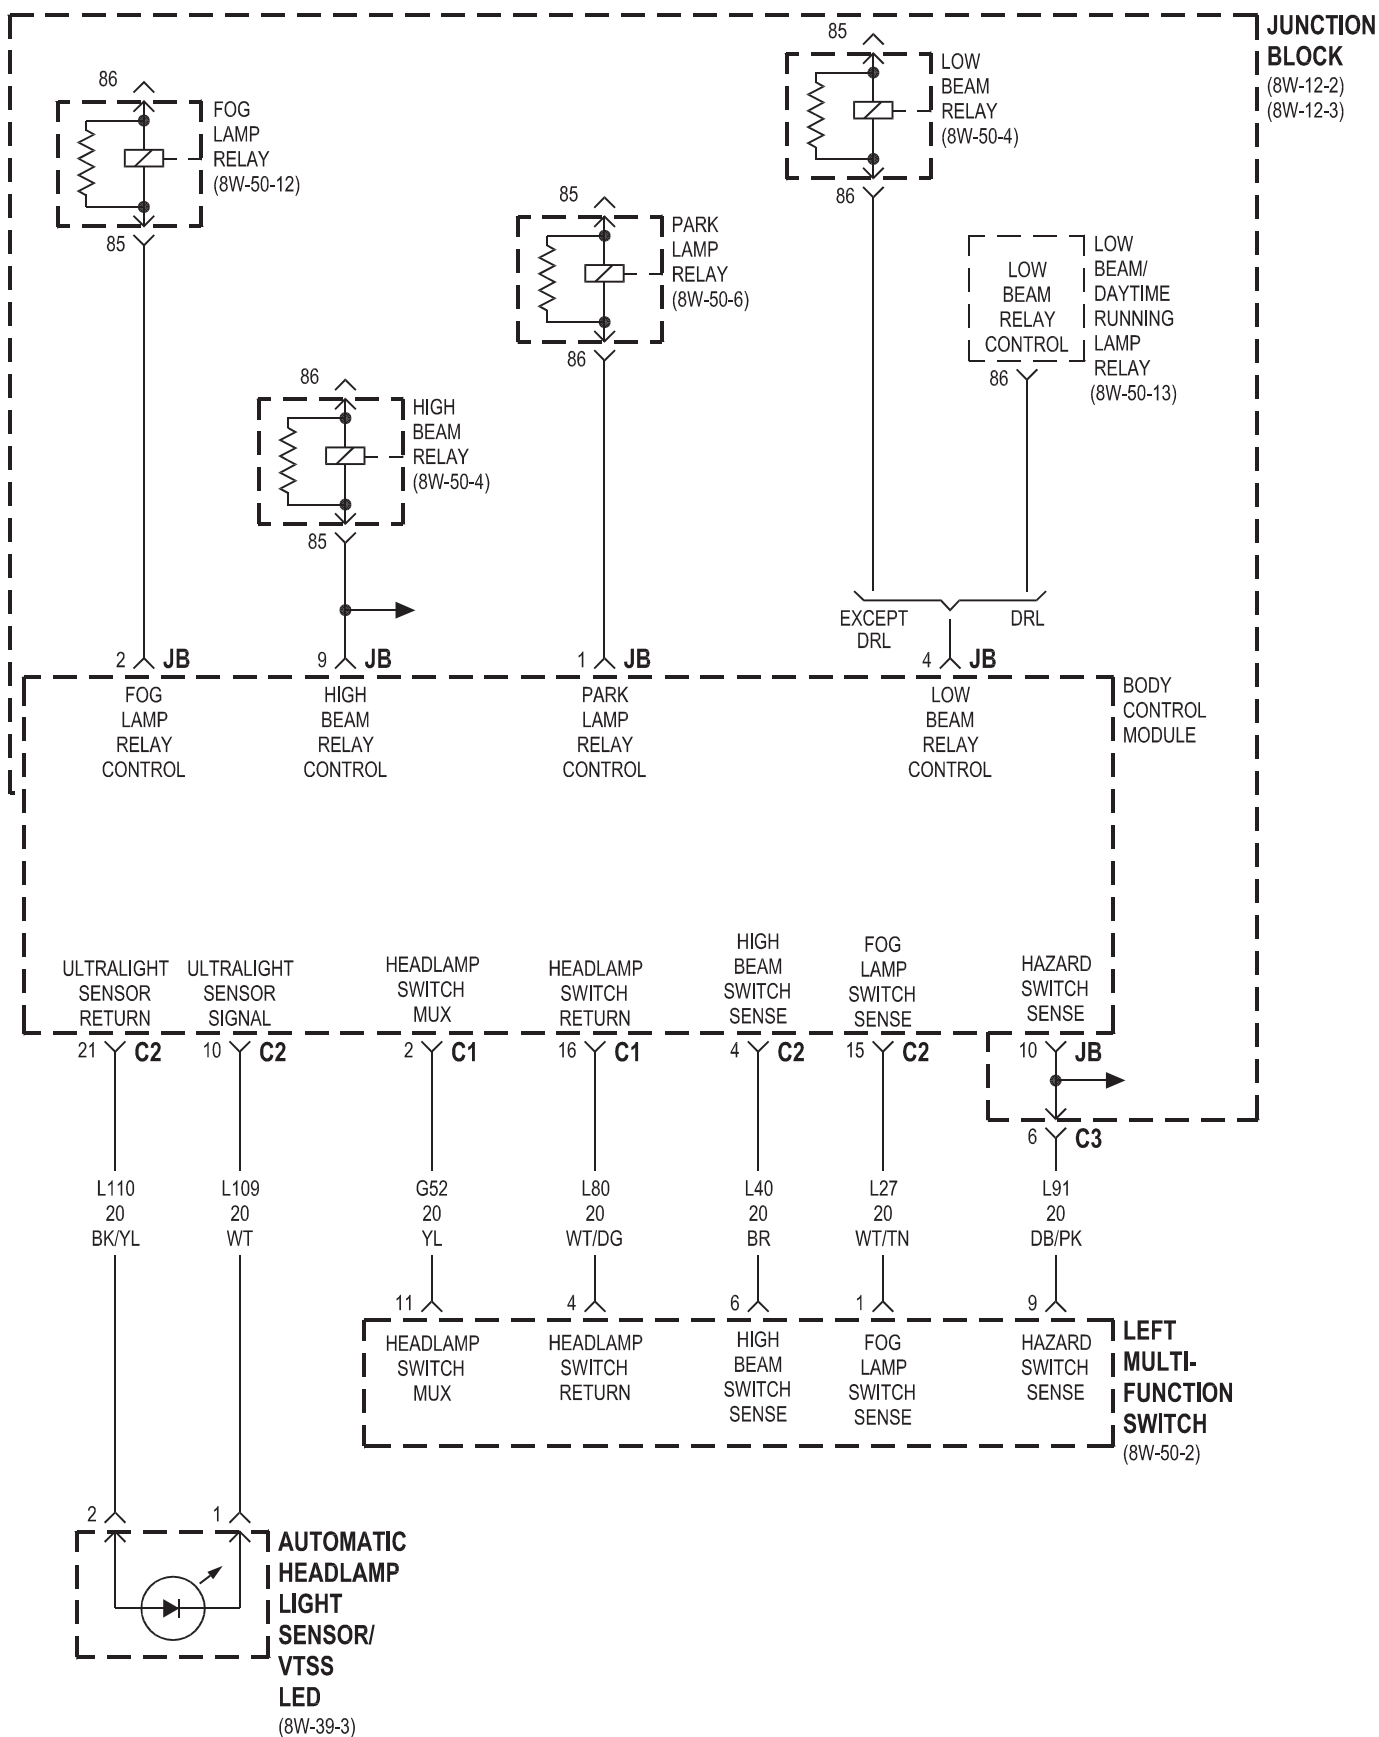

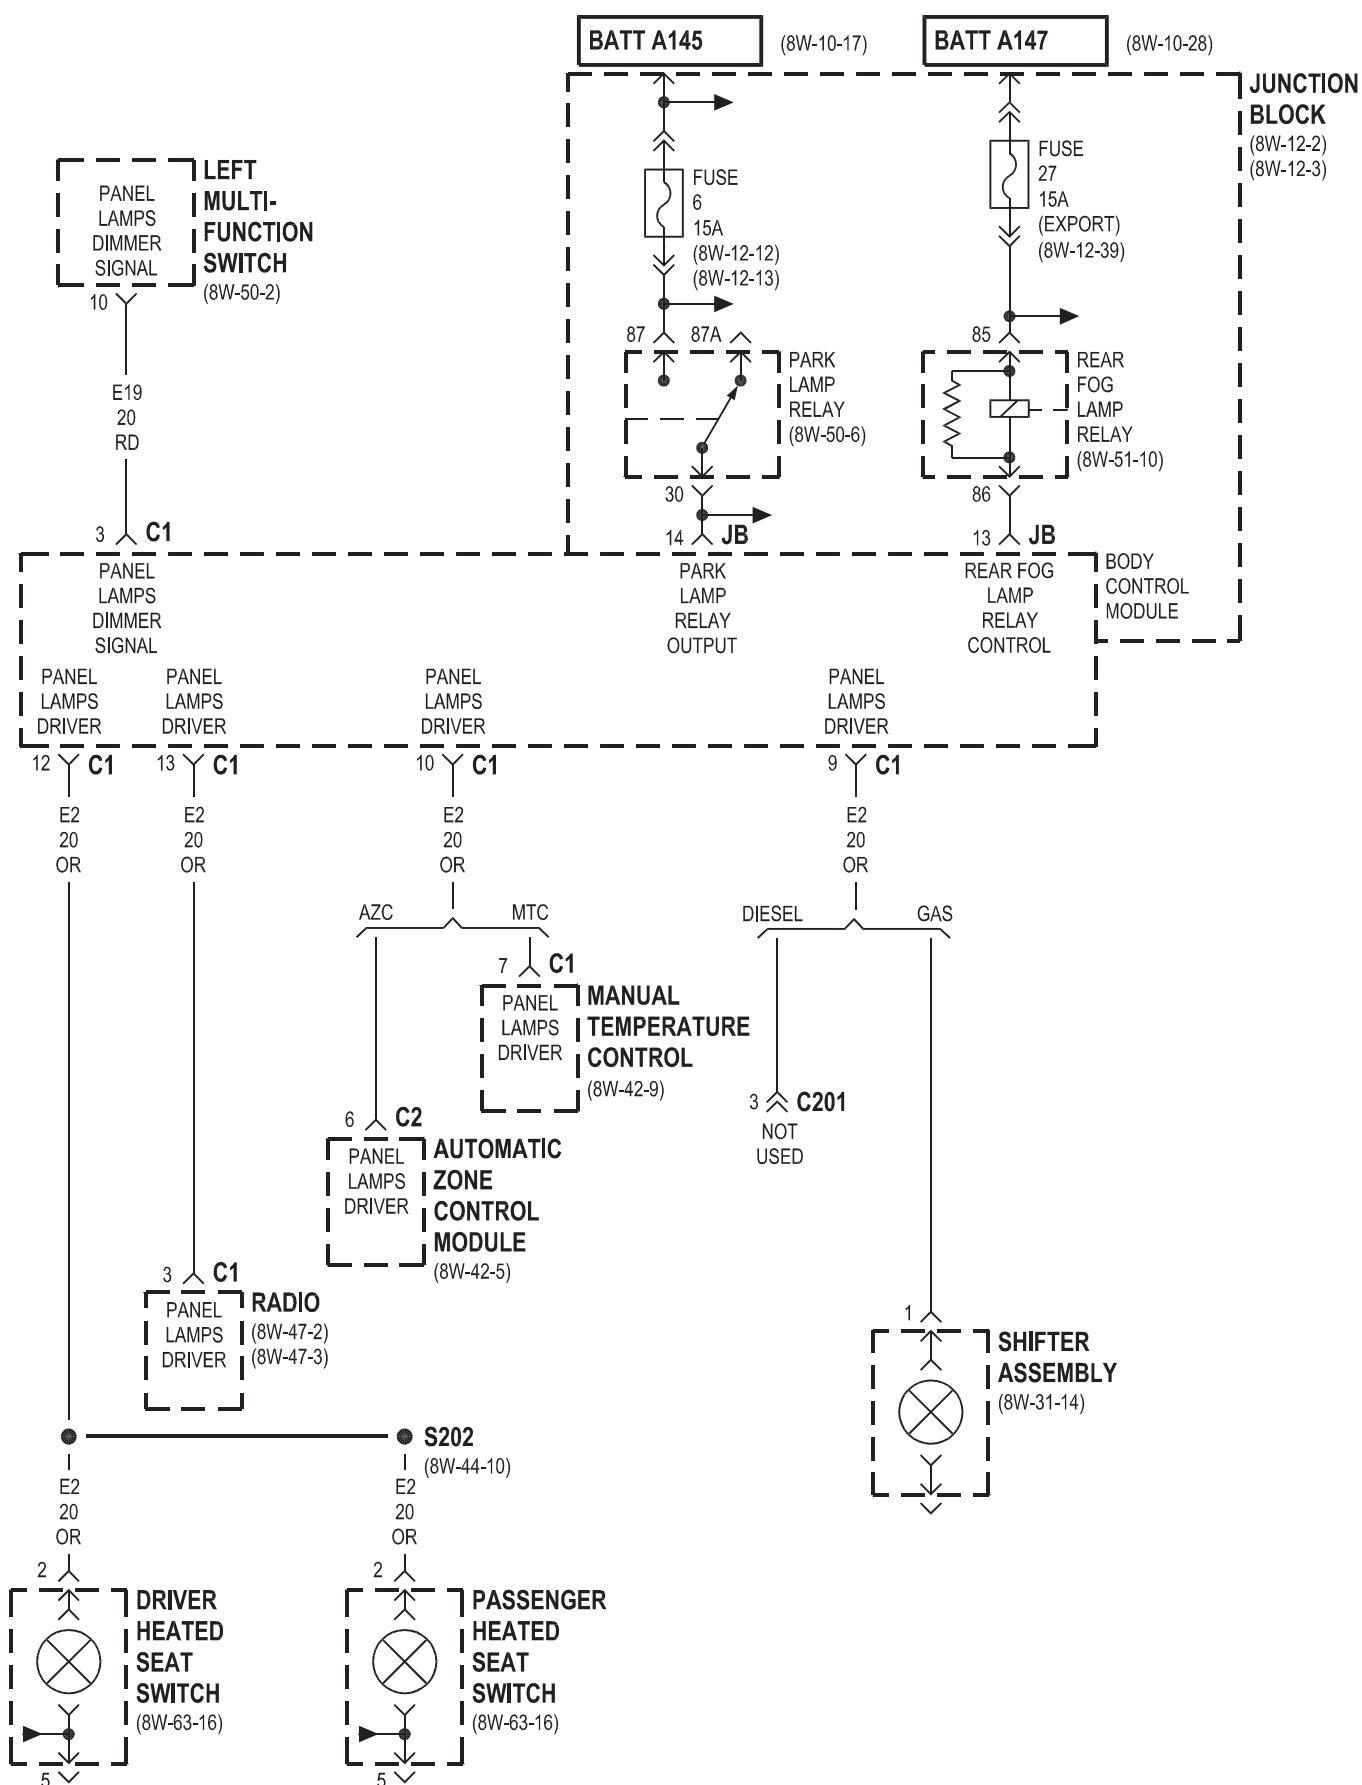

LHD

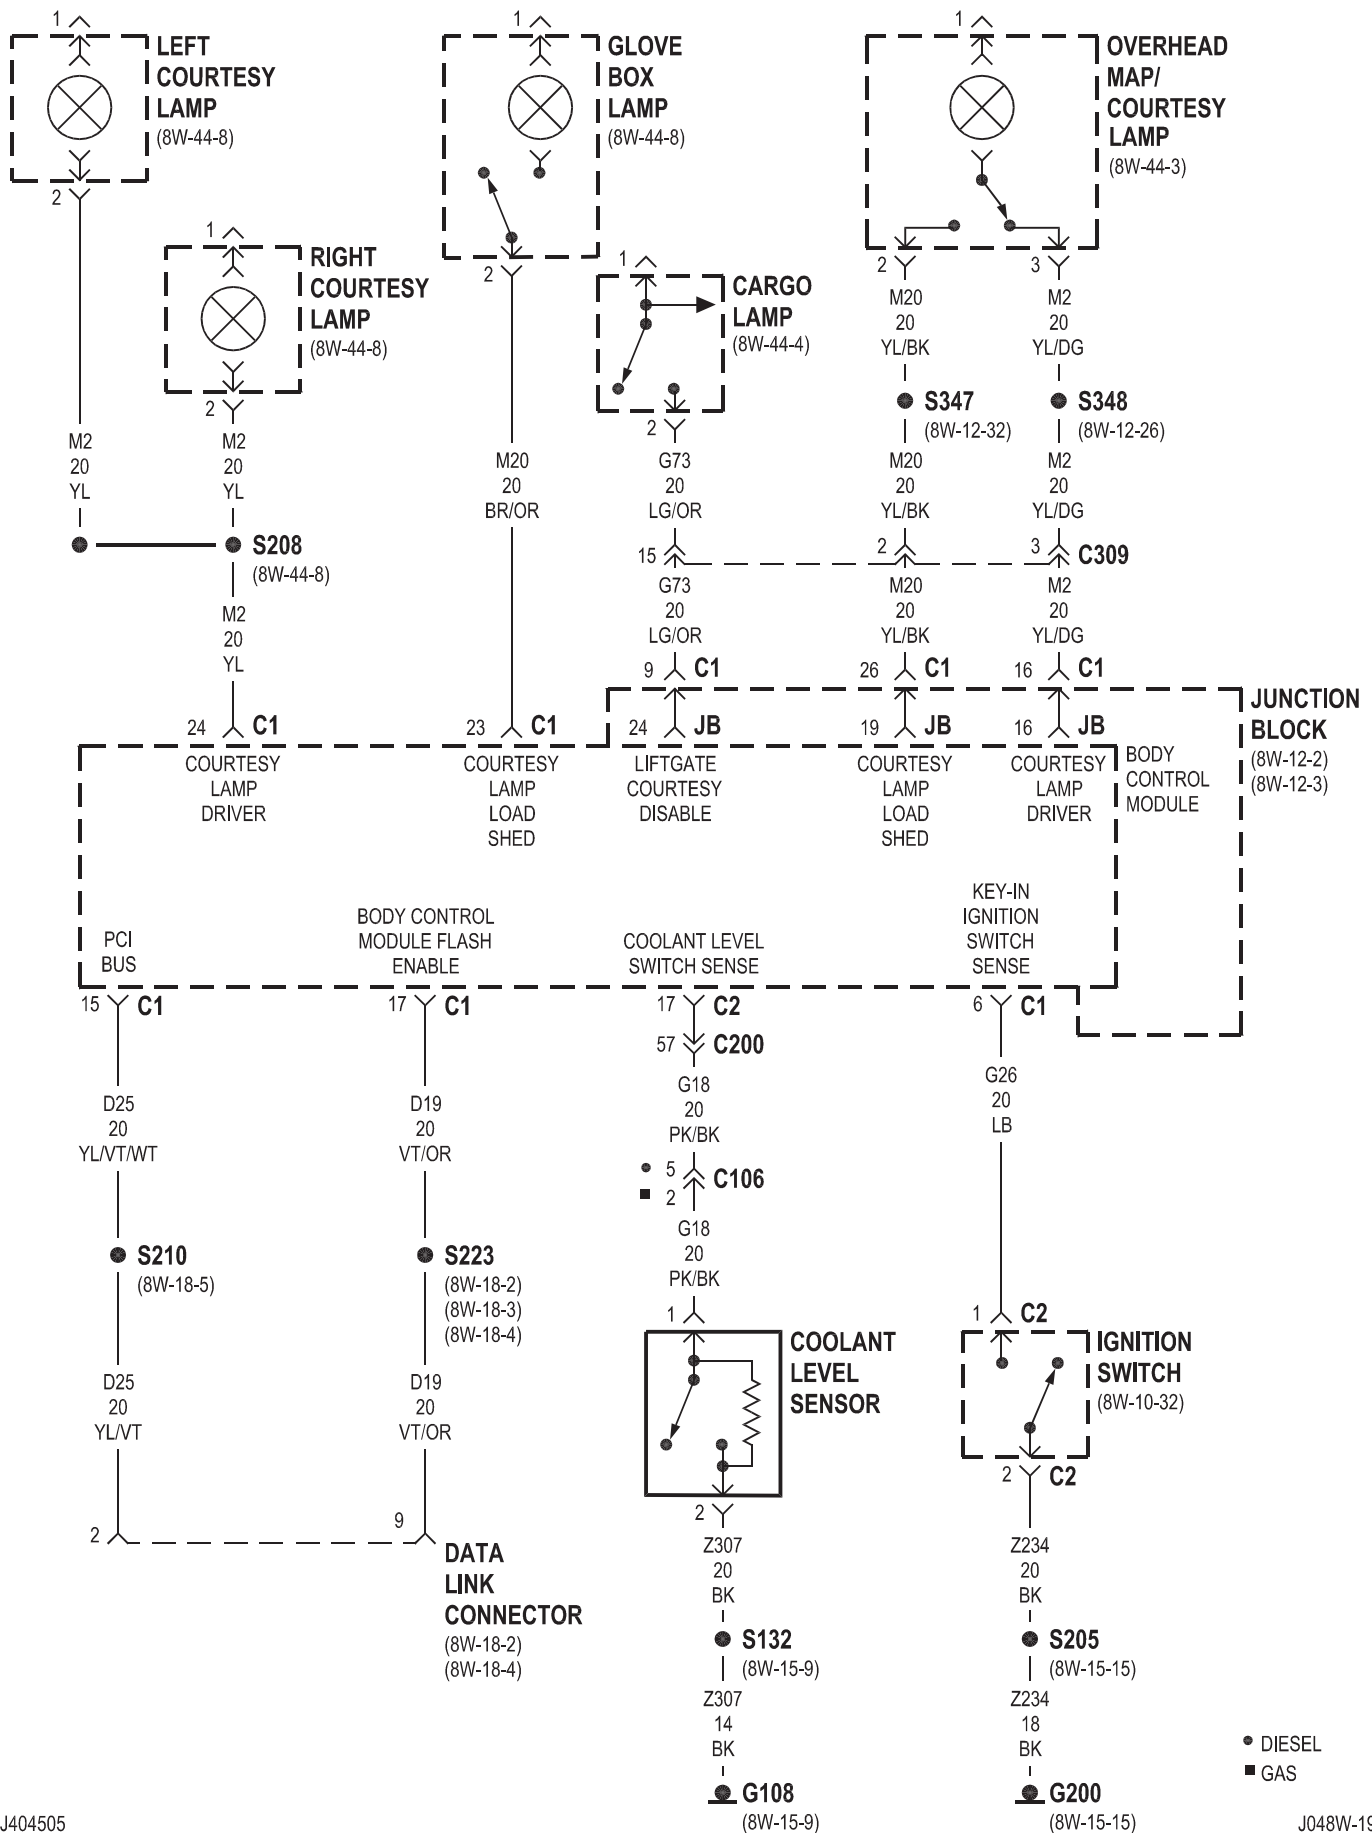

RHD

