
ABBREVIATIONS

.....	xi
-------	----

USING THIS PUBLICATION

Health and safety	xii
Using this publication	xii
Section numbering	xiii
Understanding the circuit diagrams	xiii

CONNECTOR INDEX

.....	follows USING THIS PUBLICATION
-------	--------------------------------

202-04 - TOWING AND RECOVERY ATTACHMENTS

.....	1
-------	---

204-04 - WHEELS AND TIRES

Tire pressure monitoring system	2
---------------------------------------	---

204-05 - VEHICLE DYNAMIC SUSPENSION

Continuously variable damping (CVD)	3
Air suspension - Sportbrake	4

205-02 - REAR DRIVE AXLE AND DIFFERENTIAL

.....	6
-------	---

206-05 - PARKING BRAKE AND ACTUATION

.....	7
-------	---

206-09 - ANTI-LOCK CONTROL

.....	8
-------	---

211-04 - STEERING COLUMN

Steering wheel	9
Steering Column Adjustment	10

303-03 - ENGINE COOLING

D4	11
DV6	12
PV8 and PV6	13
P4	14

303-06 - STARTING SYSTEM

D4 without Stop-Start	15
D4 with Stop-Start	16
DV6 without Stop-Start	17
DV6 with Stop-Start	18
PV8 and PV6 without Stop-Start	19
PV8 and PV6 with Stop-Start	20
P4 without Stop-Start	21
P4 with Stop-Start	22

303-14A - ELECTRONIC ENGINE CONTROLS - D4

Vehicle interface - Part 1	23
Vehicle interface - Part 2	24
Vehicle interface - Part 3	25
Vehicle interface - Part 4	26
Sensors - Part 1	27
Sensors - Part 2	28
Sensors - Part 3	29
Actuators - Part 1	30
Actuators - Part 2	31
Actuators - Part 3	32
Glow plugs	33
Emissions	34

303-14B - ELECTRONIC ENGINE CONTROLS - DV6 (3.0L)

Vehicle interface - Part 1	35
Vehicle interface - Part 2	36
Vehicle interface - Part 3	37
Vehicle interface - Part 4	38
Sensors - Part 1	39
Sensors - Part 2	40
Sensors - Part 3	41
Sensors - Part 4	42
Actuators - Part 1	43
Actuators - Part 2	44
Actuators - Part 3	45
Glow plugs	46
Emissions - Part 1	47
Emissions - Part 2	48

303-14D - ELECTRONIC ENGINE CONTROLS - PV8 and PV6

Vehicle interface - Part 1	49
Vehicle interface - Part 2	50
Vehicle interface - Part 3	51
Sensors - Part 1	52
Sensors - Part 2	53
Sensors - Part 3	54
Coolant Sensors - PV8	55
Coolant Sensors - PV6	56
MAF Sensors - PV8	57
MAF Sensors - PV6	58
Knock and Oil temperature sensors - PV8	59
Knock and Oil temperature sensors - PV6	60
Actuators - Part 1	61
Actuators - Part 2	62
Actuators - Part 3	63
Actuators - Part 4	64
Actuators - Part 5	65
Injectors - PV8	66
Injectors - PV6	67
Ignition coils - PV8	68
Ignition coils - PV6	69
Coolant pump - Supercharged	70
Emissions - Part 1	71
Emissions - Part 2	72

303-14E - ELECTRONIC ENGINE CONTROLS - P4

Vehicle interface	73
Sensors - Part 1	74
Sensors - Part 2	75
Sensors - Part 3	76
Sensors - Part 4	77
Sensors - Part 5	78
Sensors - Part 6	79
Ignition coils	80
Injectors	81
Actuators - Part 1	82
Actuators - Part 2	83
Actuators - Part 3	84
Emissions - Part 1	85
Emissions - Part 2	86

307-01 - AUTOMATIC TRANSMISSION

D4	87
DV6 (3.0L)	88
PV8 and PV6	89
AWD	90
P4	91

310-01 - FUEL TANK AND FUEL LINES

PV8 and PV6	92
P4	94
DV6	96
D4	97
Fuel pump link harness	98

310-03 - SPEED CONTROL

PV8 and PV6	99
P4	100
DV6 (3.0L)	101
D4	102
Adaptive	103

412-01 - CLIMATE CONTROL

Part 1	104
Part 2	105
PV8 and PV6	106
P4	107
DV6	108
D4	109

412-02 - AUXILIARY CLIMATE CONTROL

Heated windshield	110
Heated rear window	111
Heated rear window - Sportbrake	112

413-01 - INSTRUMENT CLUSTER

Part 1	113
Part 2	114
Part 3	115

413-13 - PARKING AID

Front	116
Rear	117
Rear view camera	118
Rear - Sportbrake	119
Rear view camera - Sportbrake	120

414-01 - BATTERY, MOUNTING AND CABLES

Rear junction box	121
Ground distribution	122
Ground distribution - Sportbrake	123
Battery cables - Petrol	124
Battery cables - DV6	125
Battery cables - D4	126
Engine junction box - Common 1	127
Engine junction box - Common 2	128
Engine junction box - PV8 and PV6 EMS	129
Engine junction box - P4 EMS	130
Engine junction box - DV6 EMS	131
Engine junction box - D4 EMS	132
Engine junction box - Visibility	133
Engine junction box - P4 Emissions	134
Engine junction box - PV8 and PV6 Emissions	135
Engine junction box - Stop-Start	136
Engine junction box - without Stop-Start	137
Central junction box	138
Rear junction box	148
Ground distribution	157
Ground distribution - Petrol EMS	159
Ground distribution - Diesel EMS	160
Ground distribution	161
Ground distribution - Sportbrake	170

414-02 - GENERATOR AND REGULATOR

Charging D4	173
Charging DV6	175
Charging PV8 and PV6	177
Charging P4	179

415-00 - INFORMATION AND ENTERTAINMENT SYSTEM

Part 1	181
Part 2	182
Part 3	183
10-Speaker system (LHD)	184
10-Speaker system (RHD)	185
12-Speaker system (LHD)	186
12-Speaker system (RHD)	187
15-Speaker system (LHD)	188
15-Speaker system (RHD)	189
15-Speaker system - Sportbrake (LHD)	190
15-Speaker system - Sportbrake (RHD)	191
SDARS or DAB	192
Television - Digital	193
Television - Analogue	194
Television - Sportbrake	195

417-01 - EXTERIOR LIGHTING

Headlamps - adaptive front lighting system	196
Headlamps - high intensity discharge	197
Side lamps	198
Side lamps - Sportbrake	199
Brake and reverse lamps	200
Brake and reverse lamps - Sportbrake	201
Turn signal indicators and hazard flashers	202
Turn signal repeaters	203
Fog lamps	204
Fog lamps - Sportbrake	205

417-02 - INTERIOR LIGHTING

Ambience lighting	206
Switch Illumination	207
Switch illumination - Dimmer controlled	208
Map and Courtesy	209
Doors and Luggage compartment	210
Luggage compartment - Sportbrake	211
Tread plate illumination	212

418-00 - MODULE COMMUNICATIONS NETWORK

CAN bus - High speed - Part 1	213
CAN bus - High speed - Part 2	214
CAN bus - High speed - Part 3	215
CAN bus - High speed - Part 4	216
CAN bus - High speed - Part 5	217
CAN bus - High speed - Part 6	218
CAN bus - Medium speed - Part 1 (Common)	219
CAN bus - Medium speed - Part 2 (LHD)	220
CAN bus - Medium speed - Part 3 (LHD)	221
CAN bus - Medium speed - Part 4 (LHD)	222
CAN bus - Medium speed - Part 5 (LHD)	223
CAN bus - Medium speed - Part 2 (RHD)	224
CAN bus - Medium speed - Part 3 (RHD)	225
CAN bus - Medium speed - Part 4 (RHD)	226
CAN bus - Medium speed - Part 5 (RHD)	227
MOST - Part 1	228
MOST - Part 2	229
MOST - Sportbrake	230

419-01 - ANTI-THEFT SYSTEM

Part 1	231
Part 2	232
Part 3	233
Passive	234

419-07 - NAVIGATION SYSTEM

Asia	235
Japan	236

419-15 - ELECTRONIC FEATURES MODULES

Glove compartment release	237
---------------------------------	-----

501-09 - REAR VIEW MIRRORS

Mirror Movement	238
Electrochromic	239
Blind spot monitoring (LHD)	240
Blind spot monitoring (RHD)	241

501-10 - SEATING

Driver - Non-memory (LHD)	242
Driver - Non-memory (RHD)	243
Driver - 2 way lumbar, without head restraint (LHD)	244
Driver - 2 way lumbar, without head restraint (RHD)	245
Driver - 4 way lumbar, without head restraint (LHD)	246
Driver - 4 way lumbar, without head restraint (RHD)	247
Driver - With head restraint (LHD)	248
Driver - With head restraint (RHD)	249
Driver - Bolsters (with head restraint)	250
Passenger - Non-memory (USA only)	251
Passenger - Lumbar and bolsters (USA only)	252
Passenger - Non-memory (LHD)	253
Passenger - Non-memory (RHD)	254
Passenger - With head restraint (LHD)	255
Passenger - With head restraint (RHD)	256
Passenger - Bolsters (with head restraint)	257
Front - Heated	258
Climate controlled - Front (LHD)	259
Climate controlled - Front (RHD)	260

501-11 - GLASS, FRAMES AND MECHANISMS

Window lift - Front	261
Window lift - Rear	262

501-12 - INSTRUMENT PANEL AND CONSOLE

.....	263
Accessory socket(s)	264

501-14 - HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS

Keyless entry - Front (LHD)	265
Keyless entry - Front (RHD)	266
Keyless entry - Rear	267
Front power locks	268
Front dead locks	269
Rear power locks	270
Rear dead locks	271
Tailgate - Powered	272
Tailgate - Manual	273
Luggage compartment and fuel flap	274

501-16 - WIPERS AND WASHERS

Front	275
Rear - Sportbrake	277

501-17 - ROOF OPENING PANEL

Roof opening panel and sun blind	278
--	-----

501-20A - SEAT BELT SYSTEM	
Retractors	279
Sensors	280
501-20B - SUPPLEMENTAL RESTRAINT SYSTEM	
LHD	281
RHD	282
Passenger air bag deactivation	283
501-20C - PEDESTRIAN PROTECTION SYSTEM	
.....	284