


部件位置

发动机舱线束.....	CL-2
主线束.....	CL-5
仪表线束.....	CL-9
左顶线束.....	CL-10
右顶线束.....	CL-11
左门线束.....	CL-12
右门线束.....	CL-13
尾门线束.....	CL-14

www.car60.com



发动机舱线束

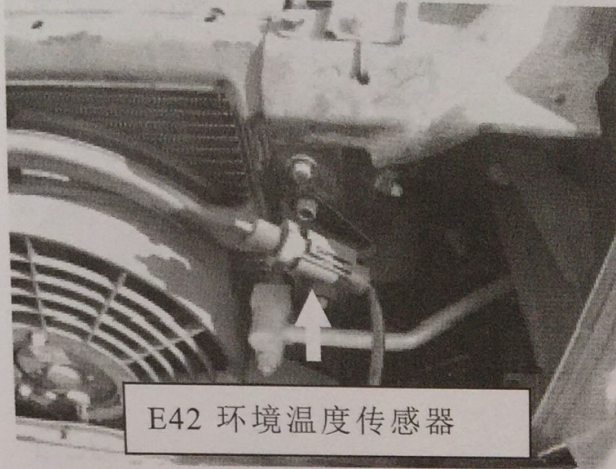

E42




E23

E24




E21

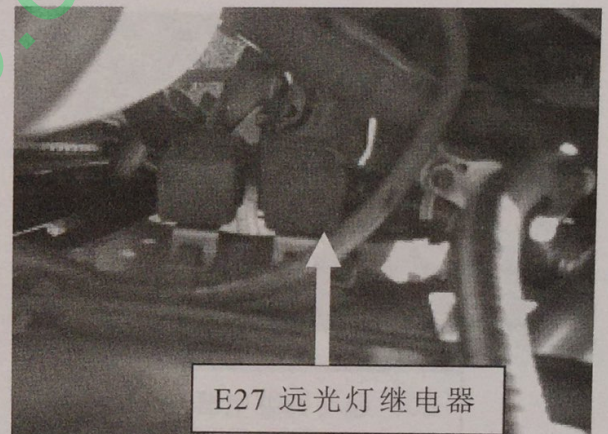

E27



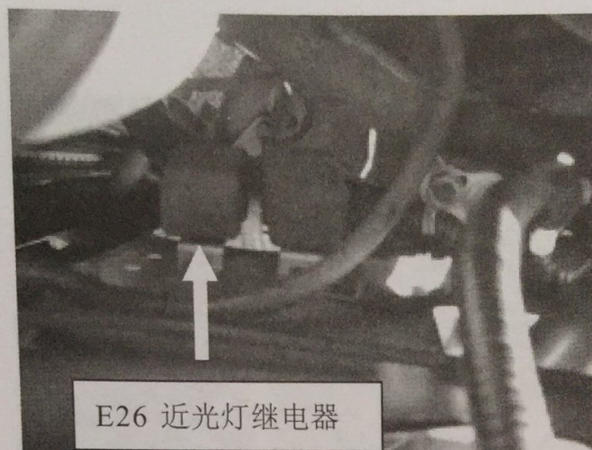

E26 近光灯继电器

E26



G05 左搭铁1

G05



E09 起动机继电器

E09



E03 制动液位传感器


E03



E02 机舱保险盒

E02



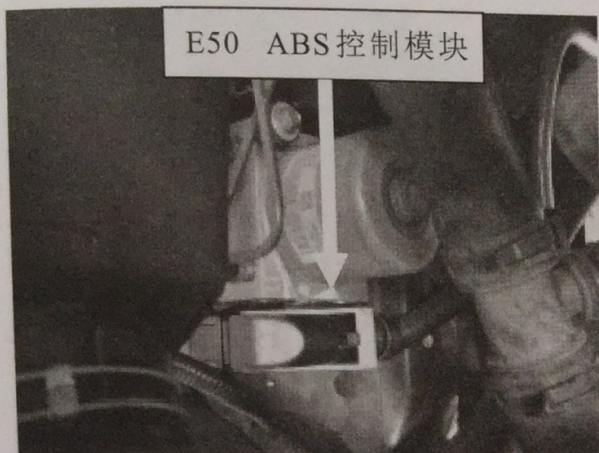

E50




B01

www.car60.com




主线束

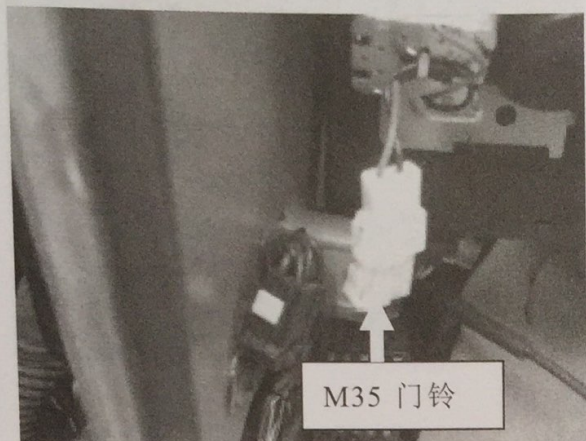

M35




M01

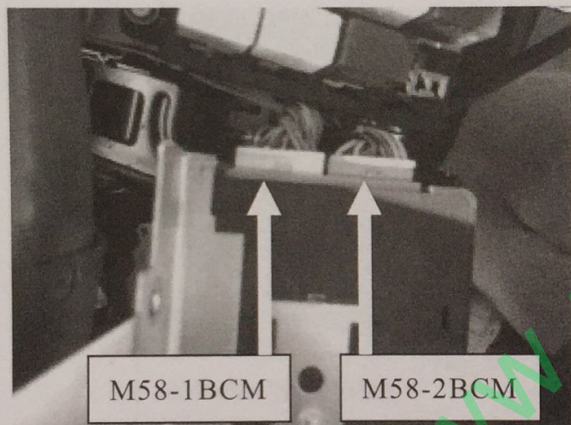


M58-1


M58-2

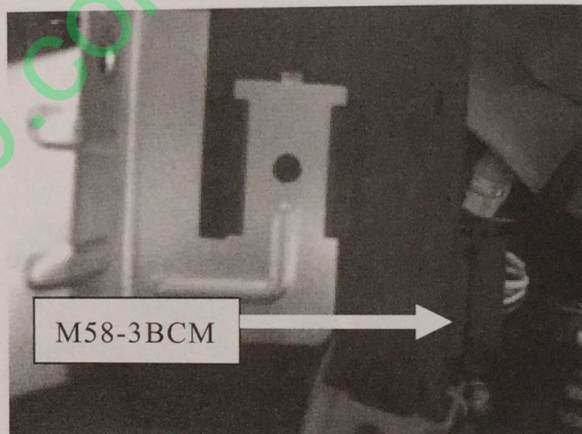

M58-3

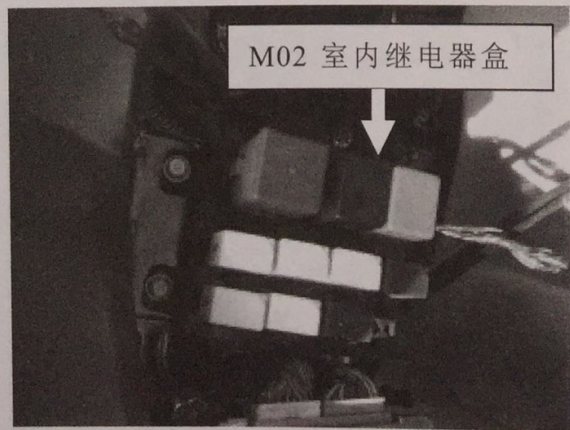


M02

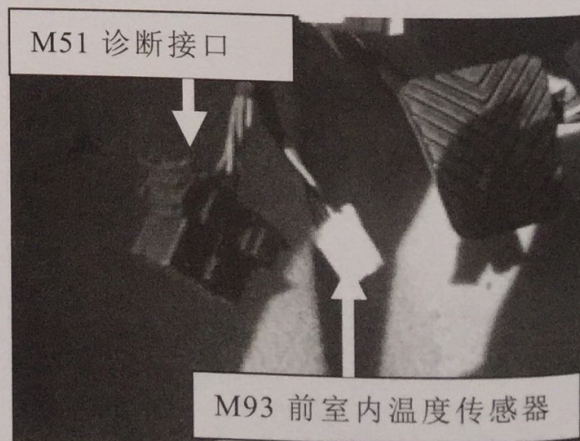


M51

M93




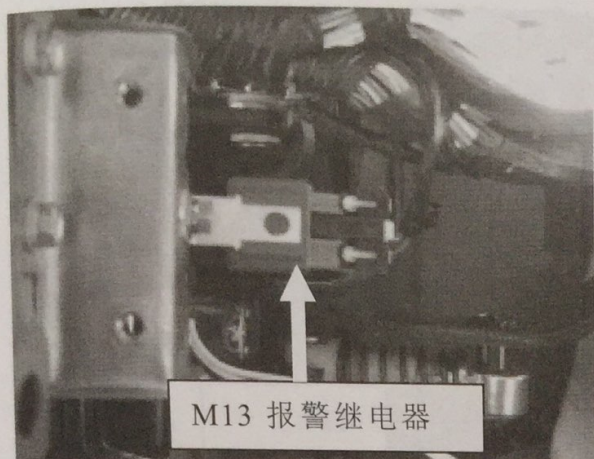


M13

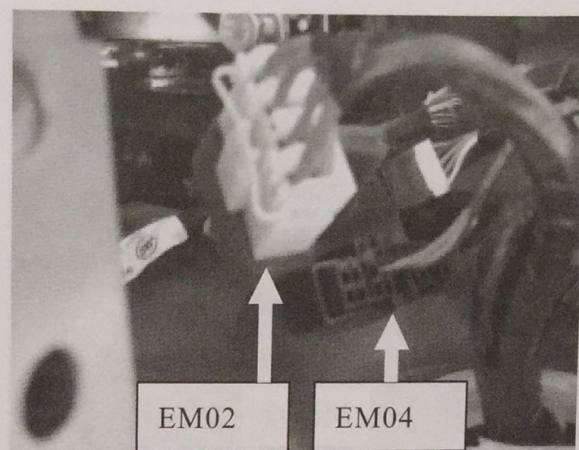


EM02 EM04

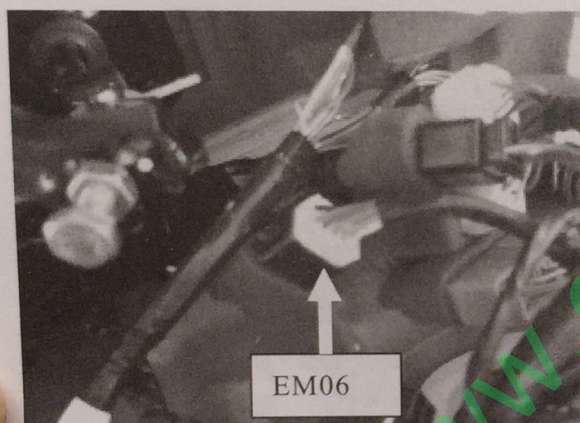


EM06

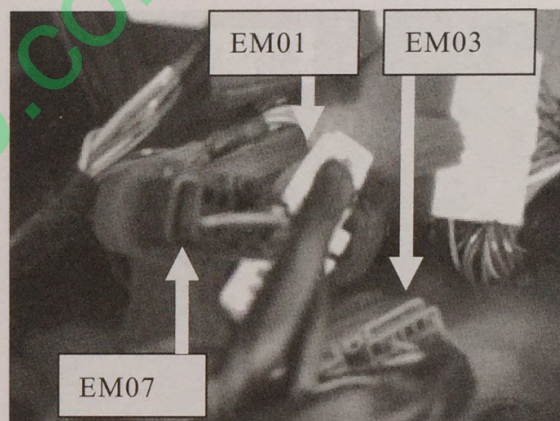

EM07 EM01 EM03

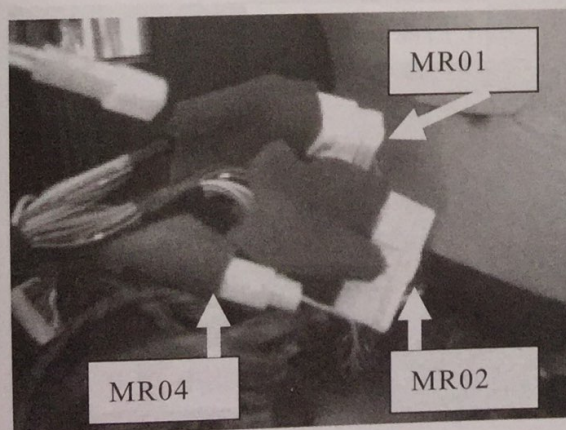

MR01 MR02 MR04

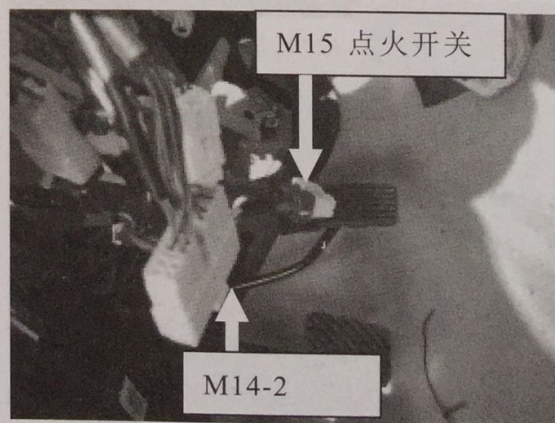

M15 M14-2






M17



M14-1 M14-3 M16

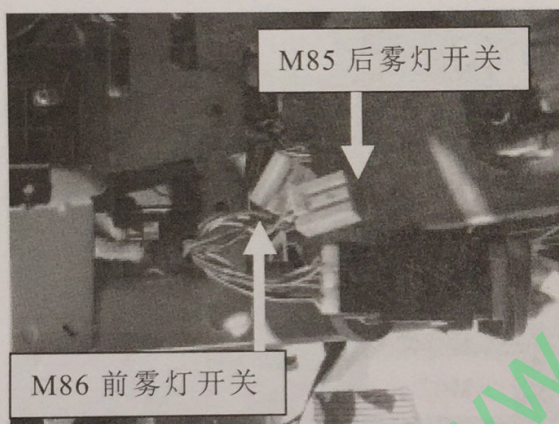

M85 M86



M87



M21



M83 M84







M90




M89-1 M89-2

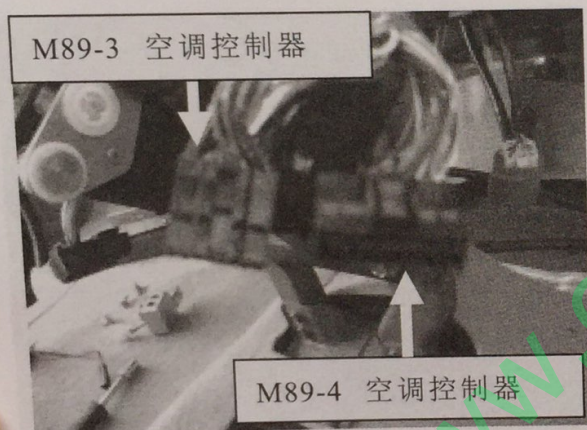

M89-3 M89-4

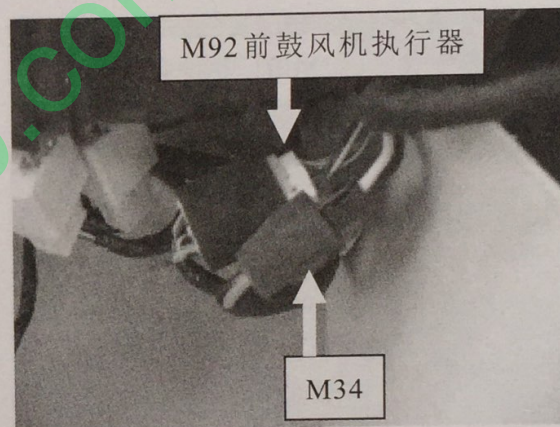

M92 M34

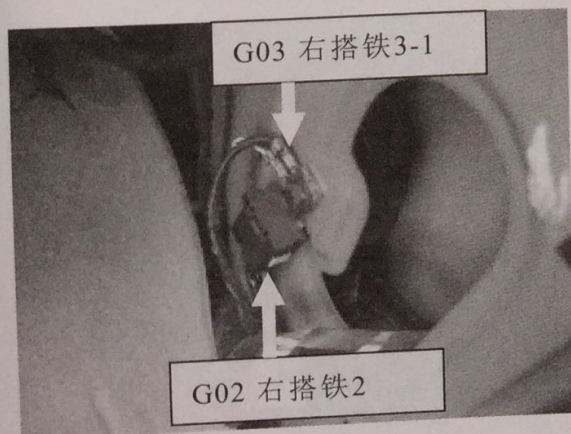


G02 G03



M22



仪表线束

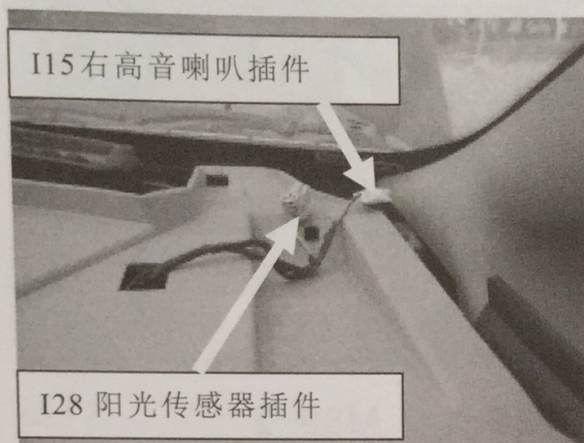

I15 I28




I11




MI01



MI02

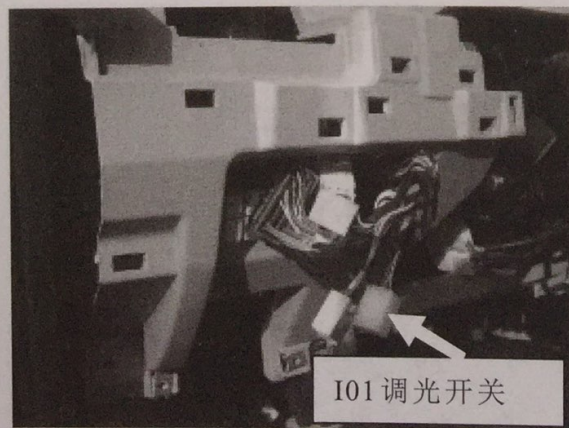

I01

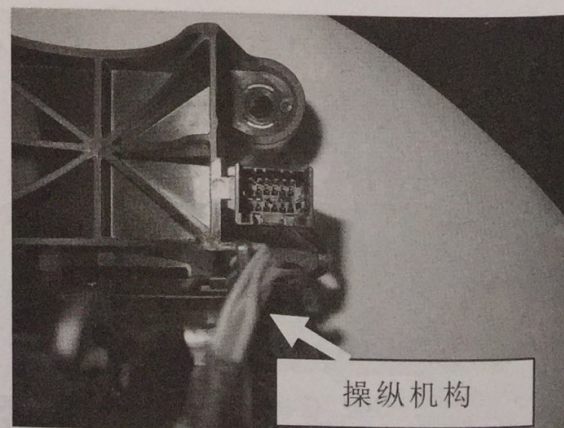


M97



左顶线束



R03

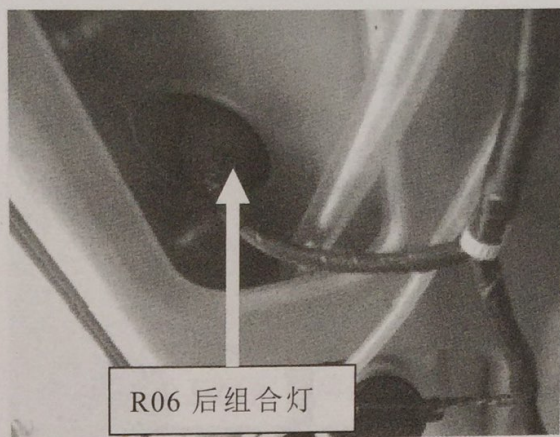

R06



G07




R09



R98




右顶线束

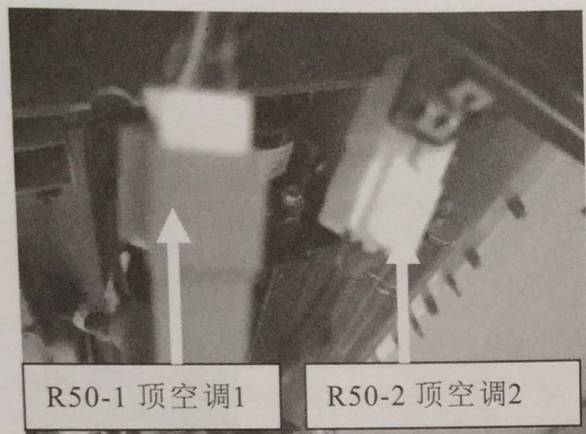

R50-1 R50-2




RR01 RR03

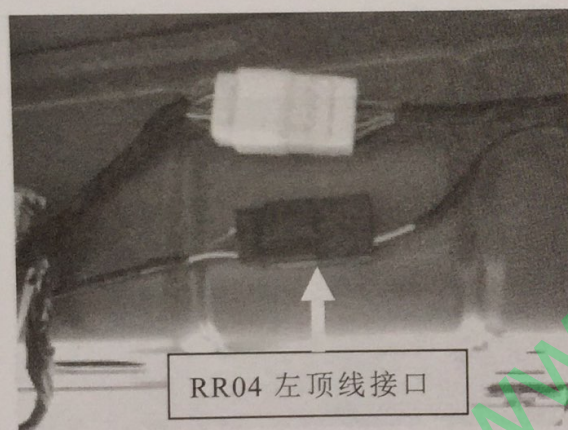

RR04



R51

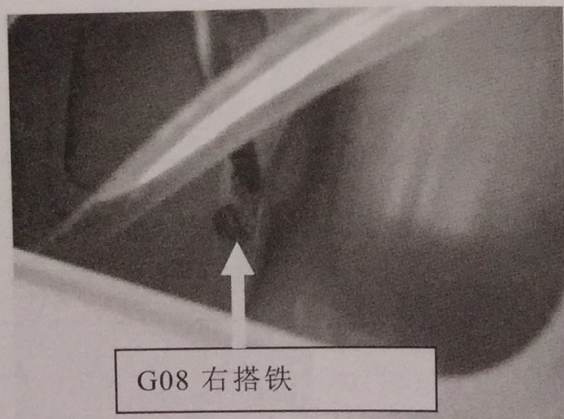


G08



R52




左门线束

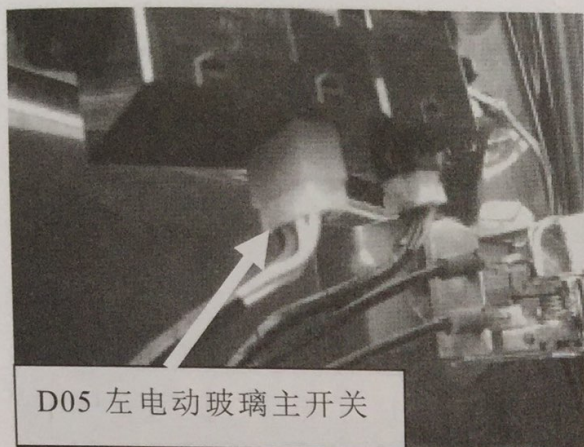

D05

D02

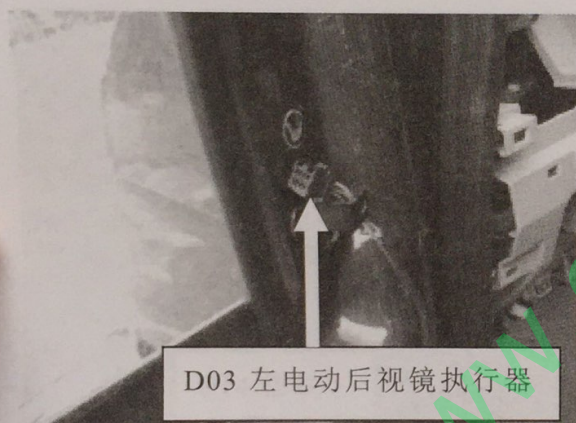

D03

D08

D10



D06

D01



右门线束



D18 D20



D15




D11 D16



尾门线束



R22-2 后雨刮电机

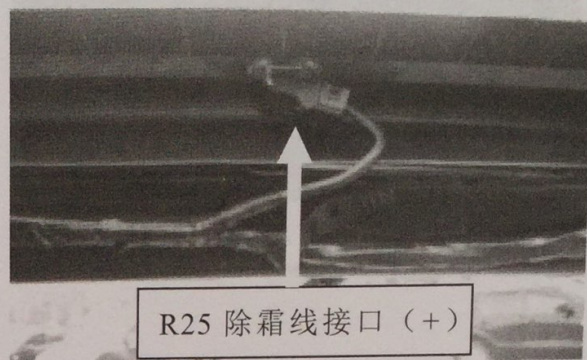

R25 除霜线接口 (+)


R22-2

R25



G14 搭铁

G14

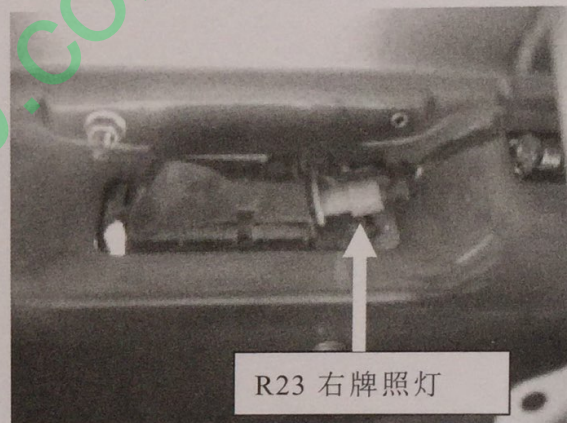

R23 右牌照灯

R23



R29 后门锁执行器

R29





R19 左牌照灯

R19



RR19 后窗除霜器 (-)

RR19

www.car60.com

