


BCM系统-中控锁(1)

H-1

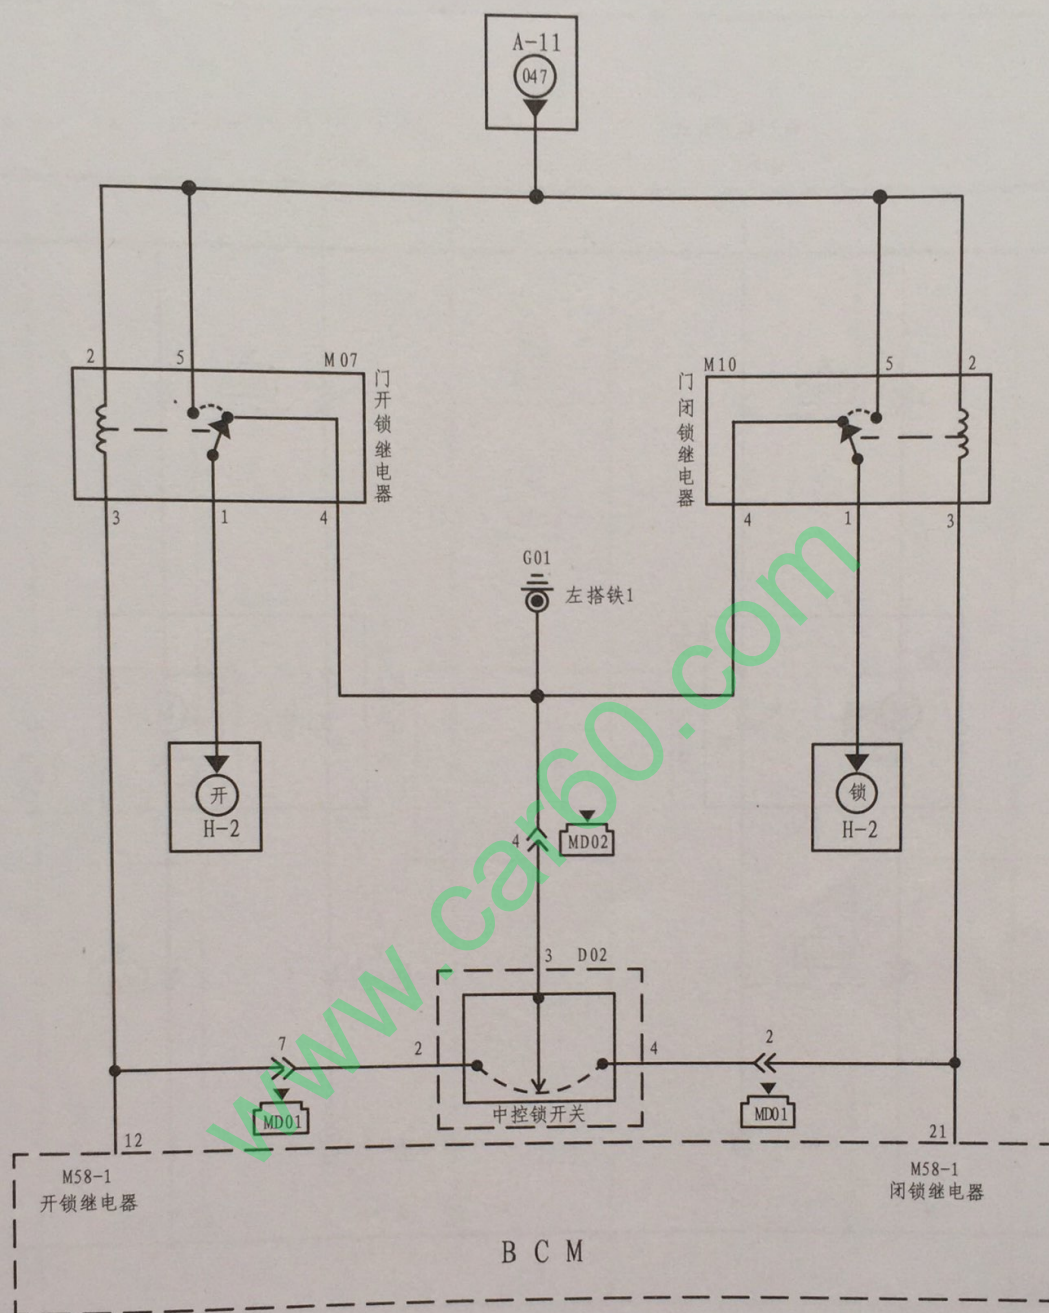

MD01

6	5	4		3	2	1
14	13	12	11	10	9	8

D 02

		4	3	2	1
12	11	10	9	8	7

MD02

4	3		2	1
10	9	8	7	6

M07		
1		
2		
5	4	3


M58-1

9	8	7	6	5	4	3	2	1
18	17		15	14	13	12	11	10
24	23	22					21	20

M10		
1		
2		
5	4	3



BCM系统-中控锁(2)

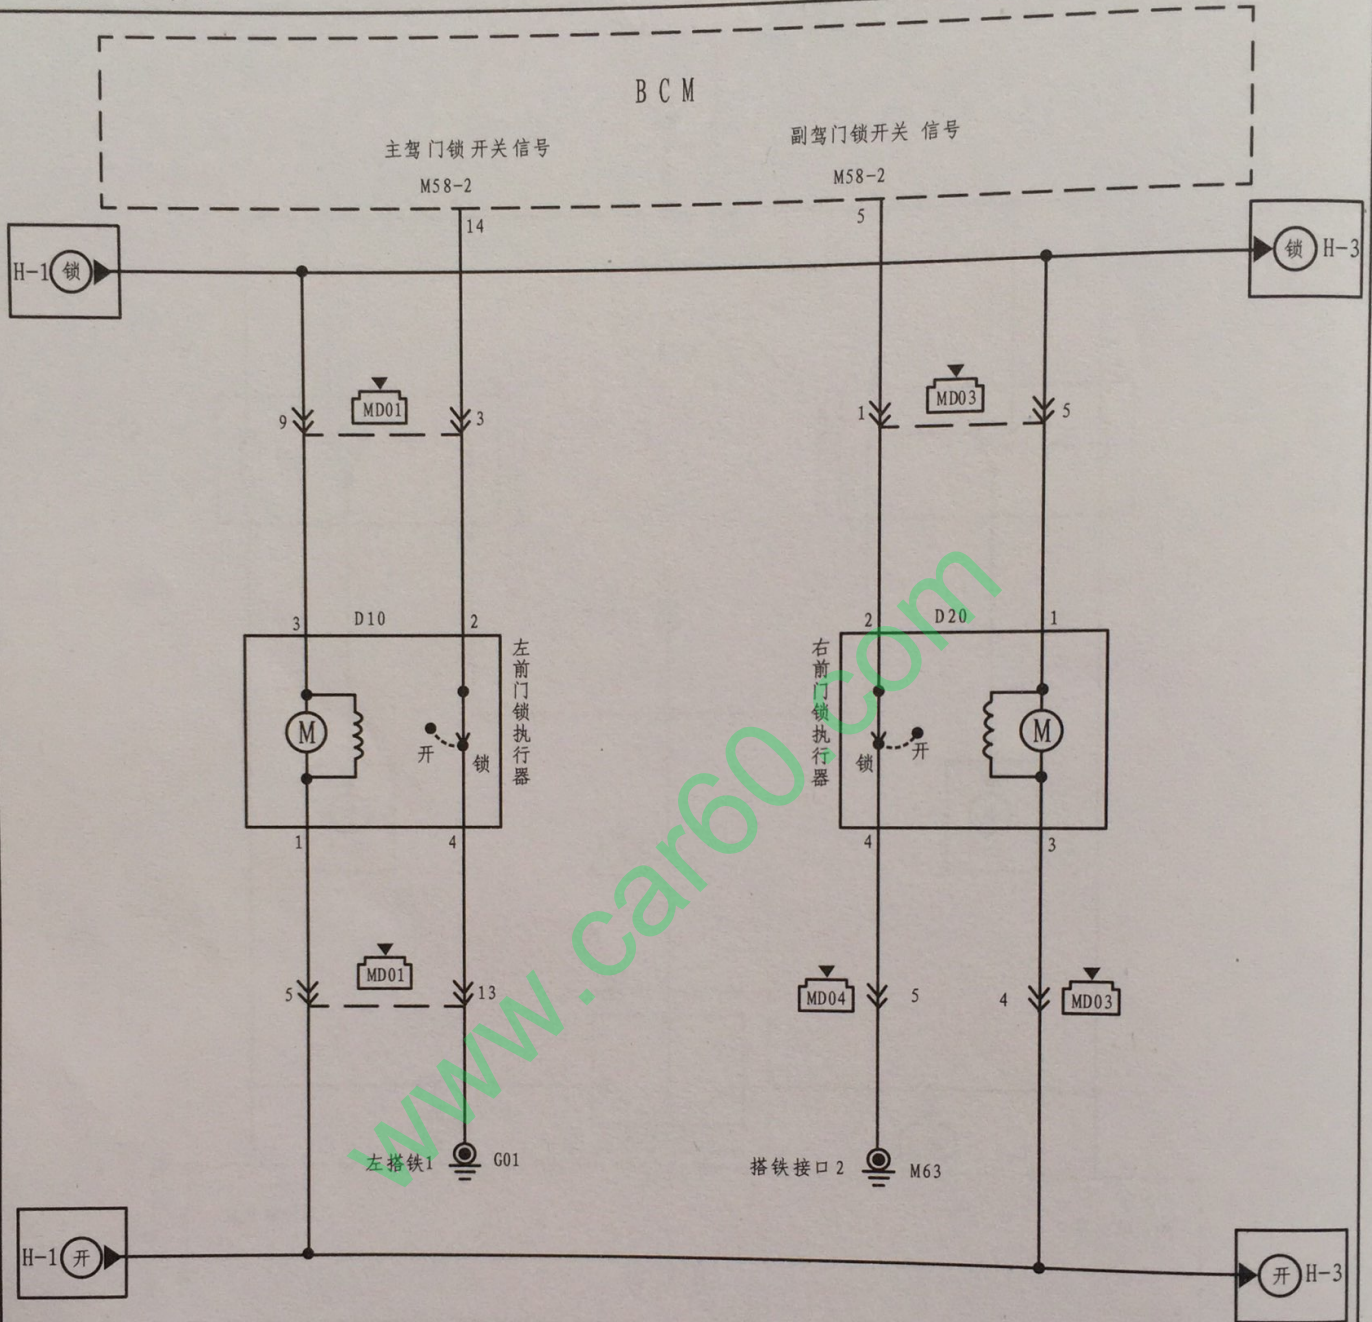

D10

2	1
4	3

MD04

4	3			2	
10		8	7	6	5

MD03

3	2			1
8	7	6	5	4

D20

2	1
4	3

MD01

6	5	4			3	2	1
14	13	12	11	10	9	8	7


M58-2

9	8	7	6	5	4	3	2	1
18	17	16	15	14		12	11	10
24	23	22				21	20	19



BCM系统-中控锁 (3)

H-3

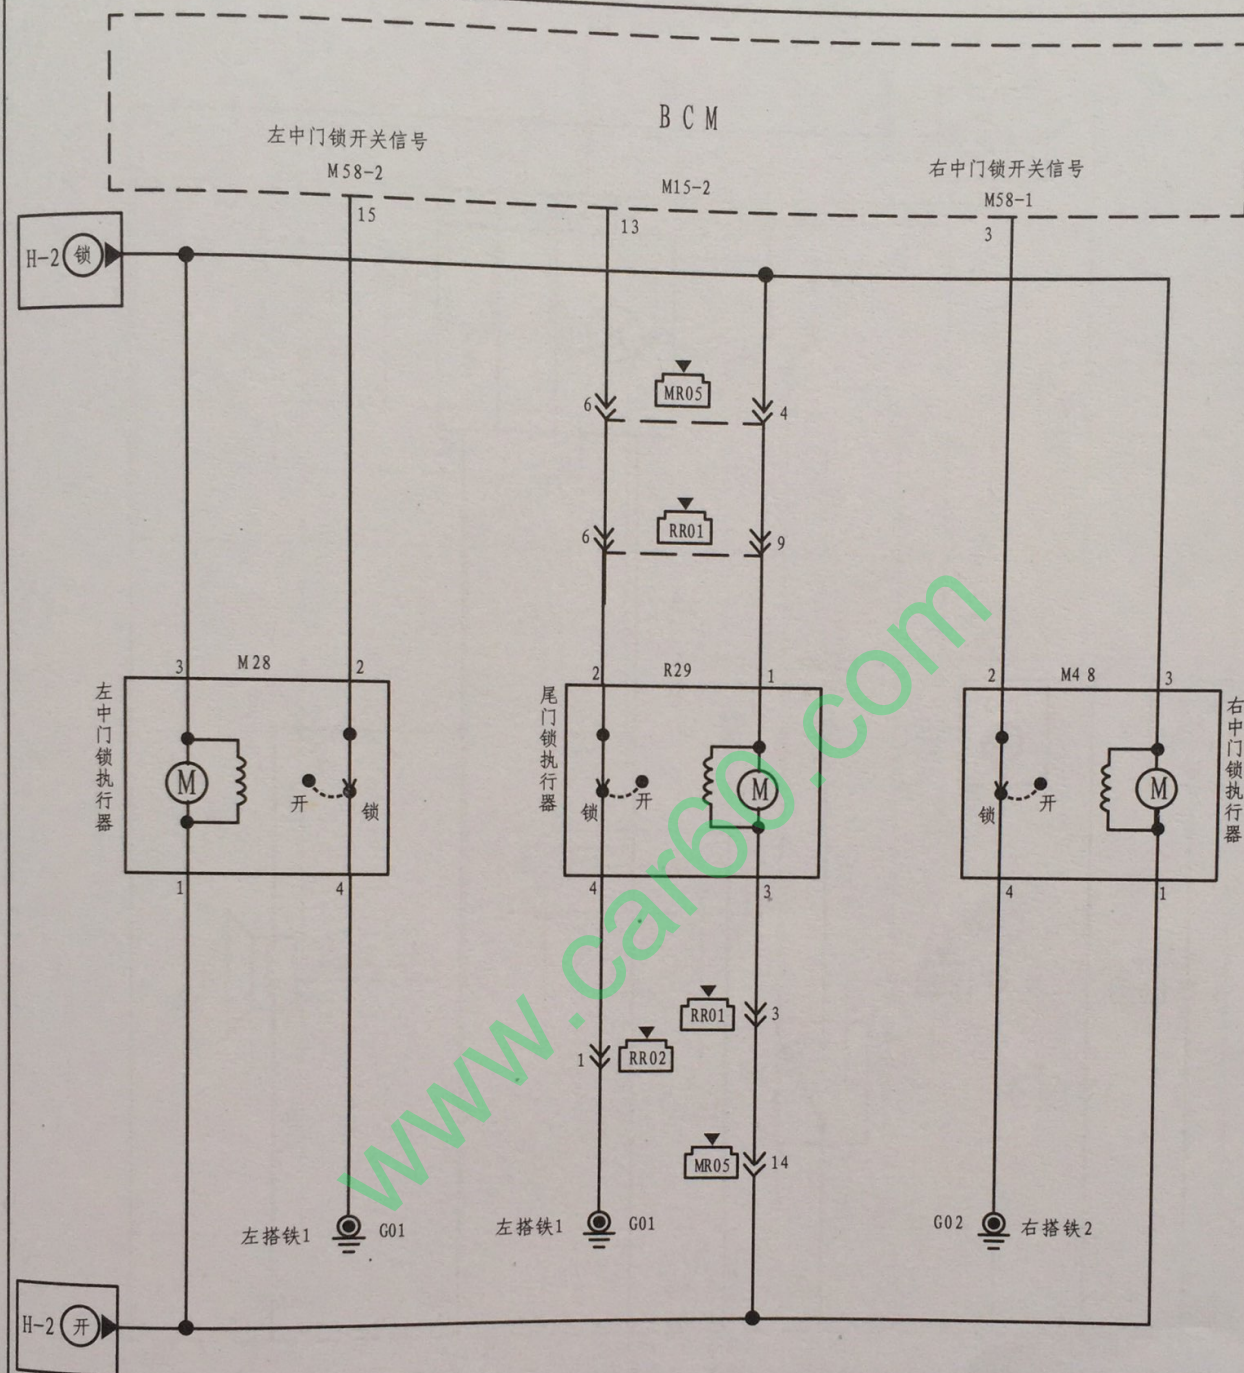

M28

2	1
4	3

R29

2	1
4	3

RR01

4	3			2	1
10	9	8	7	6	5

RR02

1			2	3
4	5	6	7	8

M48

2	1
4	3

MR05

8	7	6	5			4	3	2	1
18	17	16	15	14	13	12	11	10	9





M58-2

9	8	7	6	5	4	3	2	1
18	17	16	15	14		12	11	10
24	23	22	21	20	19			




BCM系统

 H-4

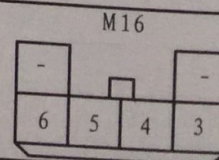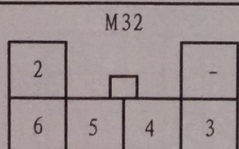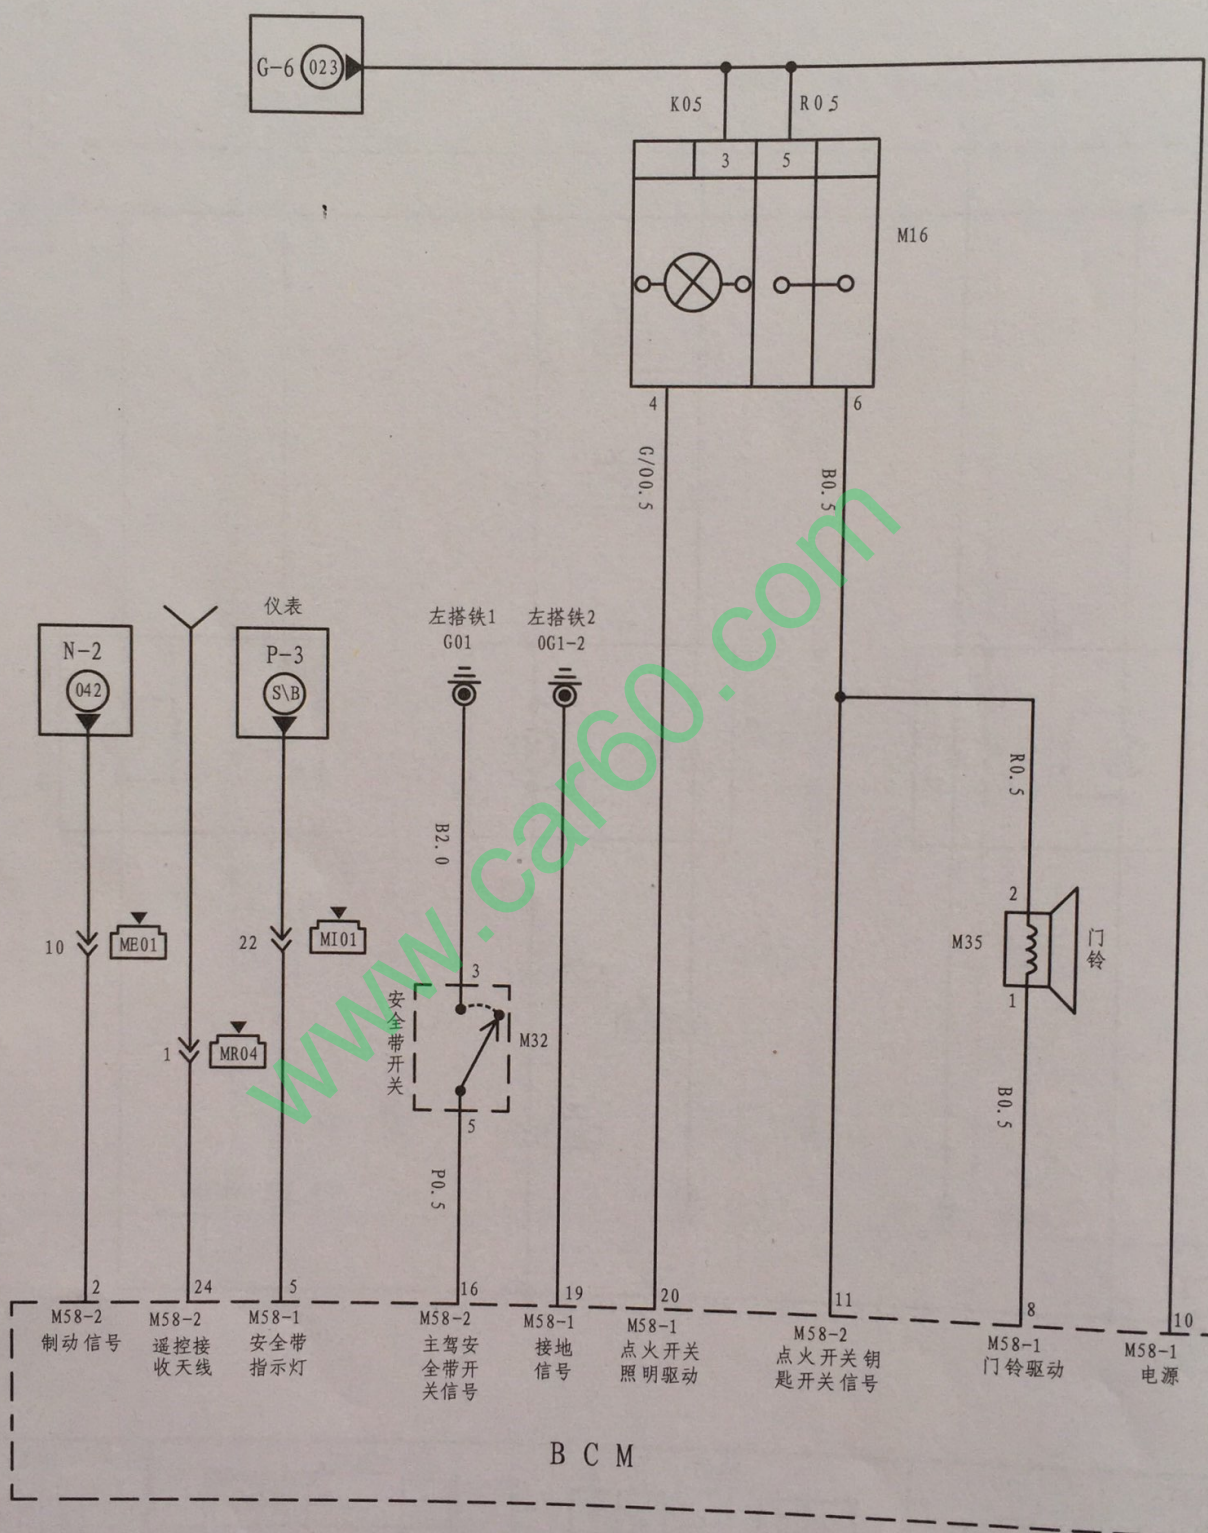

玻璃升降系统

H-5

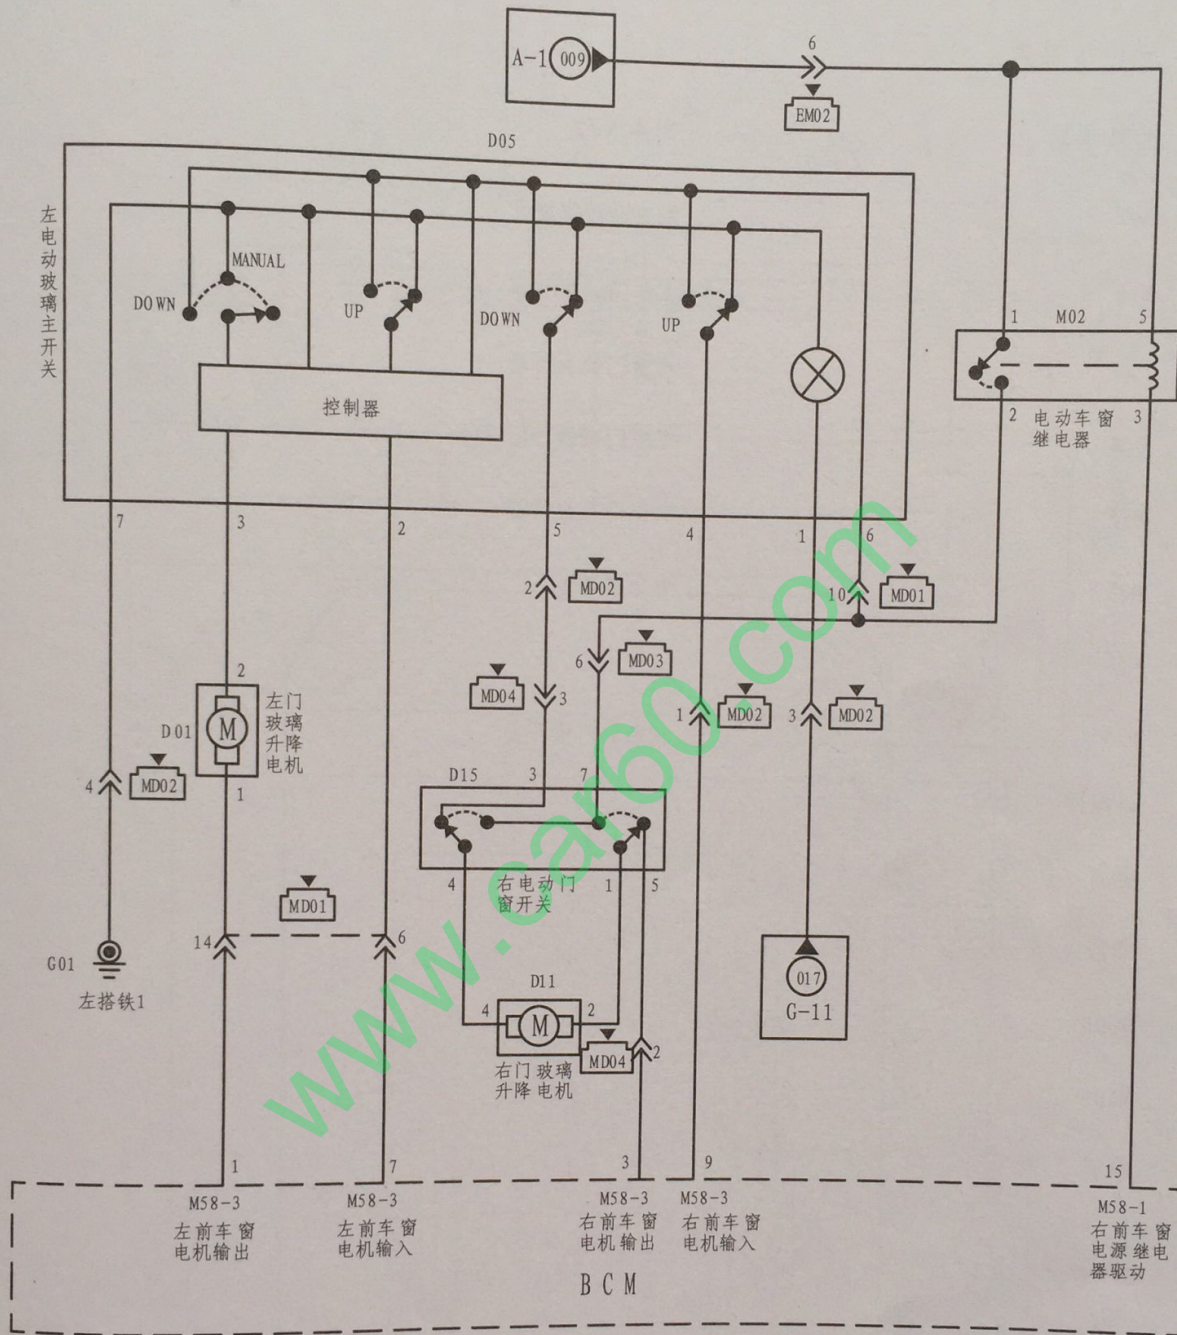

D15

3			1
7		5	4

MD03

3	2			1
8	7	6	5	4

MD02

4	3			2	1
10	9	8	7	6	5

MD04

4	3			2	
10		8	7	6	5

EM02

4	3	2	1
8	7	6	5

D05

3	2		1
7	6	5	4

M58-1

9	8	7	6	5	4	3	2	1
18	17		15	14	13	12	11	10
24	23	22				21	20	19

MD01

6	5	4			3	2	1
14	13	12	11	10	9	8	7

M02

1		
2		
5		3

M58-3

1	2	3	4	5	
7	8	9	10	11	



元件位置索引

元件编码

元件名称

D02

左电动后视镜开关

D10

左前门锁执行器

D20

右前门锁执行器

M28

左中门锁执行器

M48

右中门锁执行器

M32

安全带开关

M35

门铃

D15

右电动门窗开关

接插件

MD01

MD02

MD03

MI01

搭铁

G01

G02

