



线束连接-1

 
I1_EM 发动机线束接主线束1

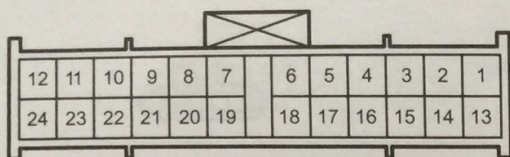


I1_ME 主线束接发动机线束1

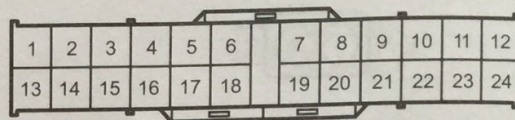


I2_EM 发动机线束接主线束2




I2_ME 主线束接发动机线束2

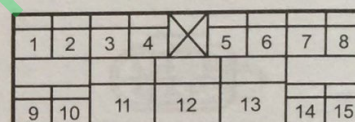


I3_EM 发动机线束接主线束3

 


MT01 主线束接变速器线束1

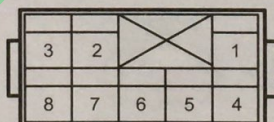


I3_ME 主线束接发动机线束3

 


I4_EM 发动机线束接主线束4

 

I_ERPA 发动机线接前雷达线束

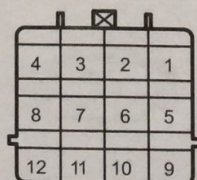

I4_ME 主线束接发动机线束4

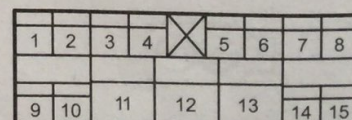

线束连接-2

I1_EB 发动机线束接车架线束1

1	2	3	4	5	X		6	7	8	9	10
11	12	13	14	15			16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32



I1_BE 车架线束接发动机线束1

10	9	8	7	6	X		5	4	3	2	1
22	21	20	19	18			17	16	15	14	13
24	23	22	21	20	19	18	17	16	15	14	13

I_EBT 发动机线束接电源线束1

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24

I_BTE 电源线束接发动机线束1

8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11
24	23	22	21	20	19	18	17

I1_MB 主线束接车架线束1

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

I1_BM 车架线束接主线束1

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

I2_MB 主线束接车架线束2

1	2	3	4	5	X		6	7	8	9	10	11
12	13	14	15	16			17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33	34	35

I2_BM 车架线束接主线束2

11	10	9	8	7	6	X		5	4	3	2	1
24	23	22	21	20	19			18	17	16	15	14
35	34	33	32	31	30	29	28	27	26	25	24	23



线束连接-3

I3_MB 主线束接车架线束3

1	2	3	4	5			6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22



I3_BM 车架线束接主线束3

10	9	8	7	6			5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12	11

I1_MR 主线束接顶棚线束1

1	2	3	4		5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20



I1_RM 主线束接顶棚线束1

9	8	7	6	5			4	3	2	1
20	19	18	17	16	15	14	13	12	11	10

I_BT 车架线束接尾门线束

1	2	3	4	5			6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22



I_TB 尾门线束接车架线束

											
10	9	8	7	6			5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12	11

I_BFRD 车架线束接右前门线束

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
45	44	43	42	41	40	39	38	37	36	35	34	33	32	31


I_DFRB 右前门线束接车架线束

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45




线束连接-4


I_BFLD 车架线束接左前门线束

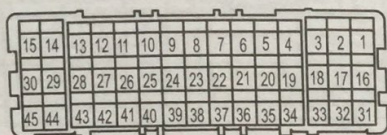


I_DFLB 左前门线束接车架线束

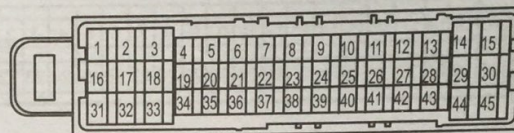


I_BRLD 车架线束接左后门线束

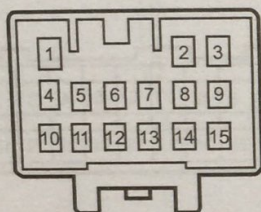


I_DRLB 左后门线束接车架线束

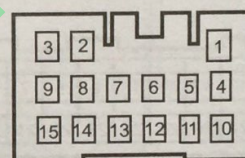


I_BRRD 车架线束接右后门线束

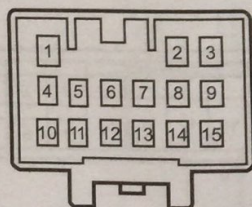


I_DRRB 右后门线束接车架线束

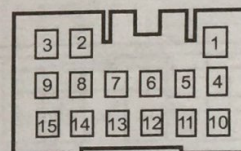

I/P-A 发动机线束接室内电器盒接口A

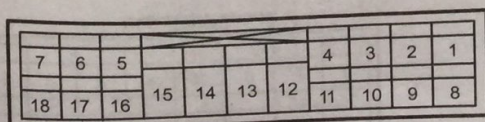

I/P-B 发动机线束接室内电器盒接口B

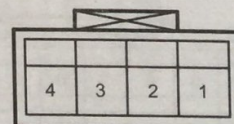

线束连接-5

I/P-D 车架线束接室内电器盒接口D

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

I/P-E 车架线束接室内电器盒接口E

8	7	6	5							4	3	2	1
20	19	18	17	16	15	14	13			12	11	10	9

I/P-F 主线束接室内电器盒接口F

14	13	12	11	10	9	8	7	6	5	4	3	2	1
28	27	26	25	24	23	22	21	20	19	18	17	16	15

I/P-G 主线束接室内电器盒接口G

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

I/P-H 主线束接室内电器盒接口H

7	6	5						4	3	2	1
18	17	16	15	14	13	12		11	10	9	8

I/P-J 主线束接室内电器盒接口J

6	5	4						3	2	1
16	15	14	13	12	11	10		9	8	7

室内副电器盒接口A

10	9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12	11

室内副电器盒接口B


8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9




线束连接-6

I/P-C 发动机线束接室内电器盒接口C


14	13	12	11	10	9	8	7	6	5	4	3	2	1
28	27	26	25	24	23	22	21	20	19	18	17	16	15

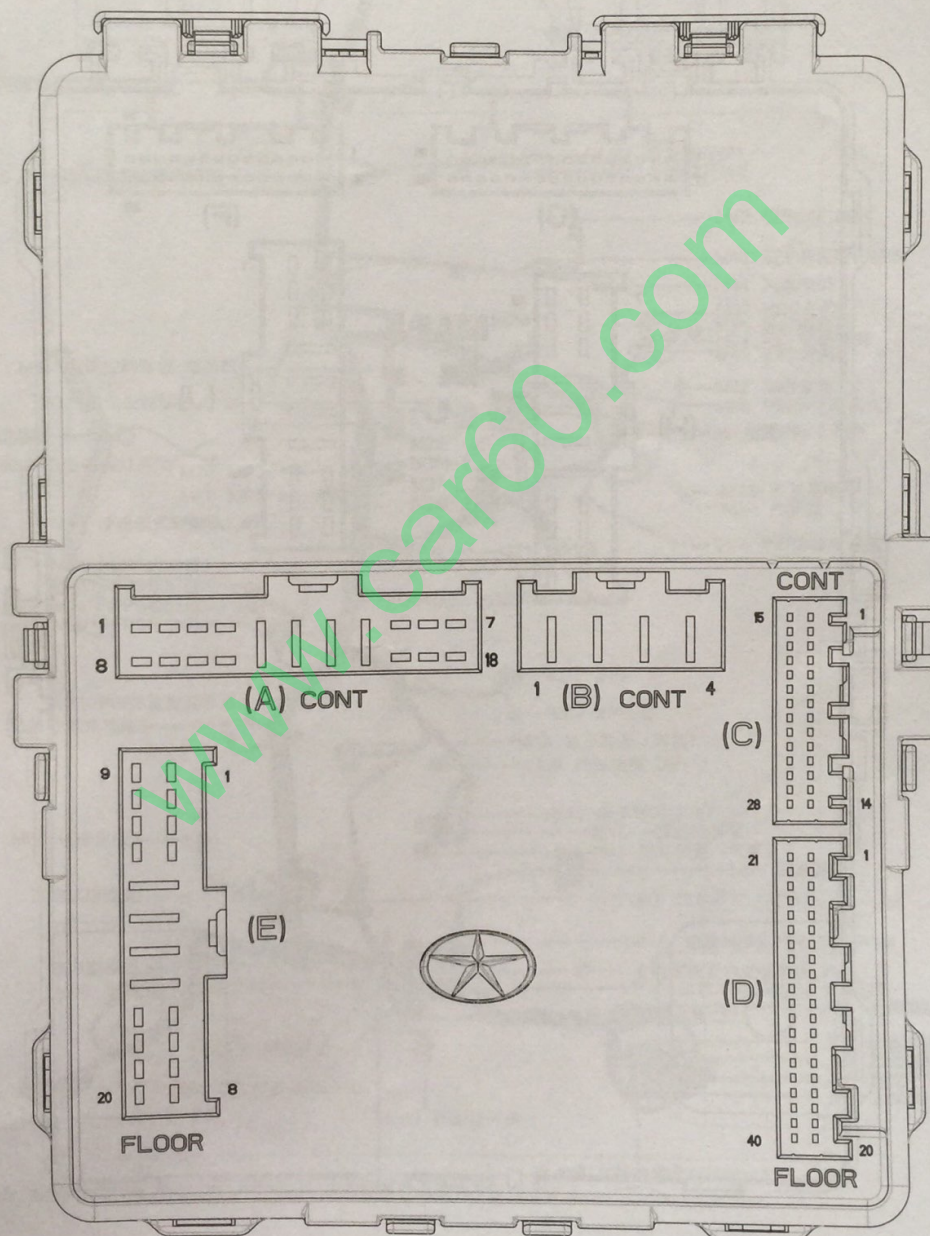


线束连接-7

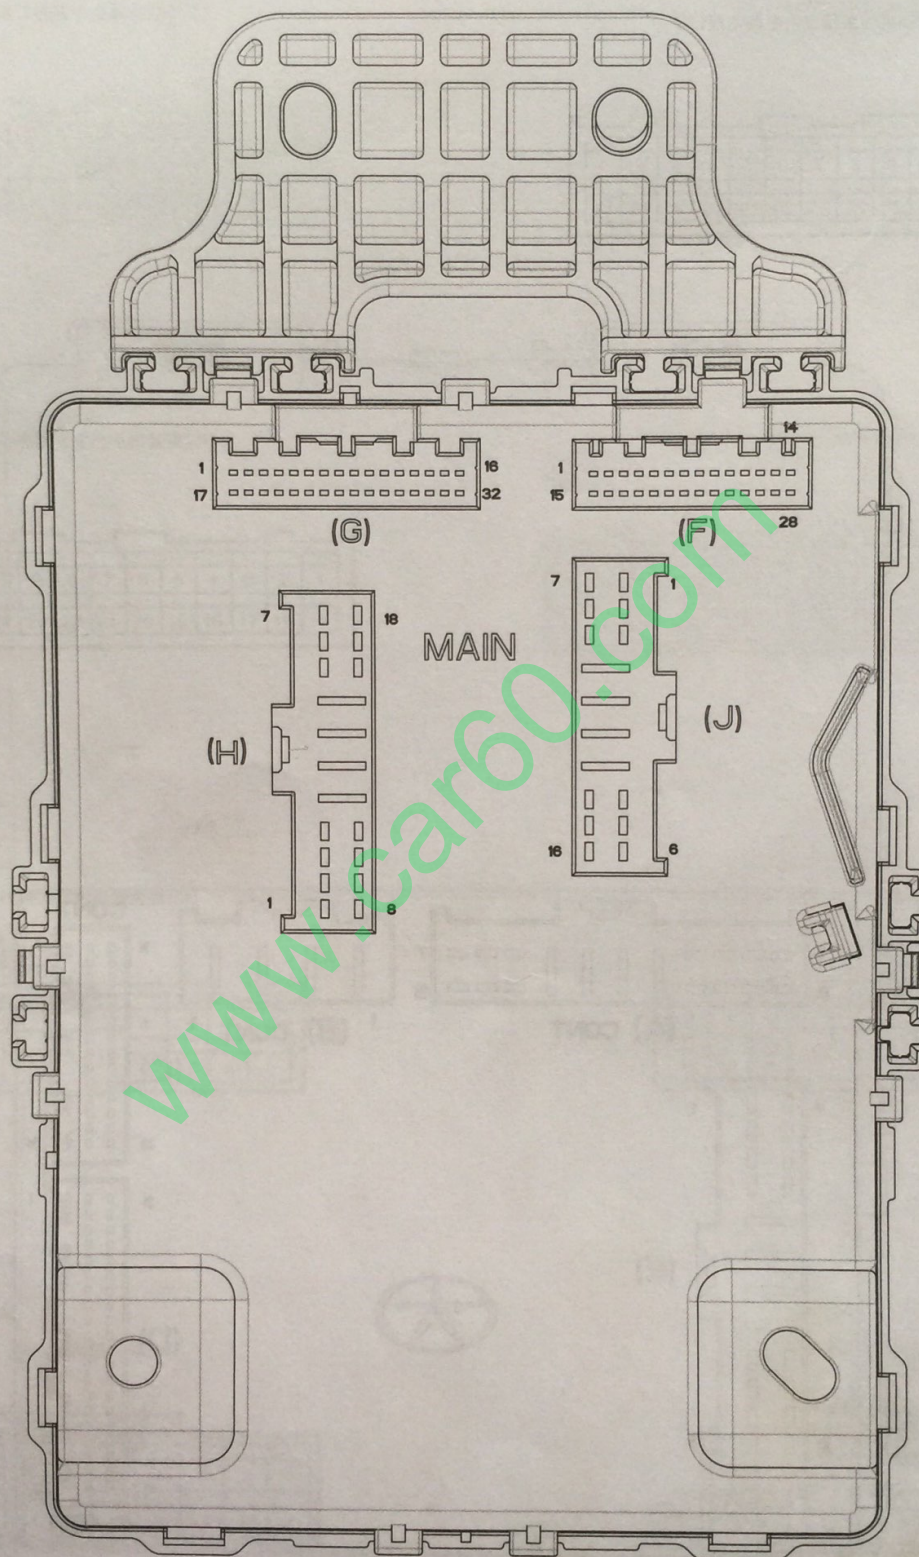


主线束布置图

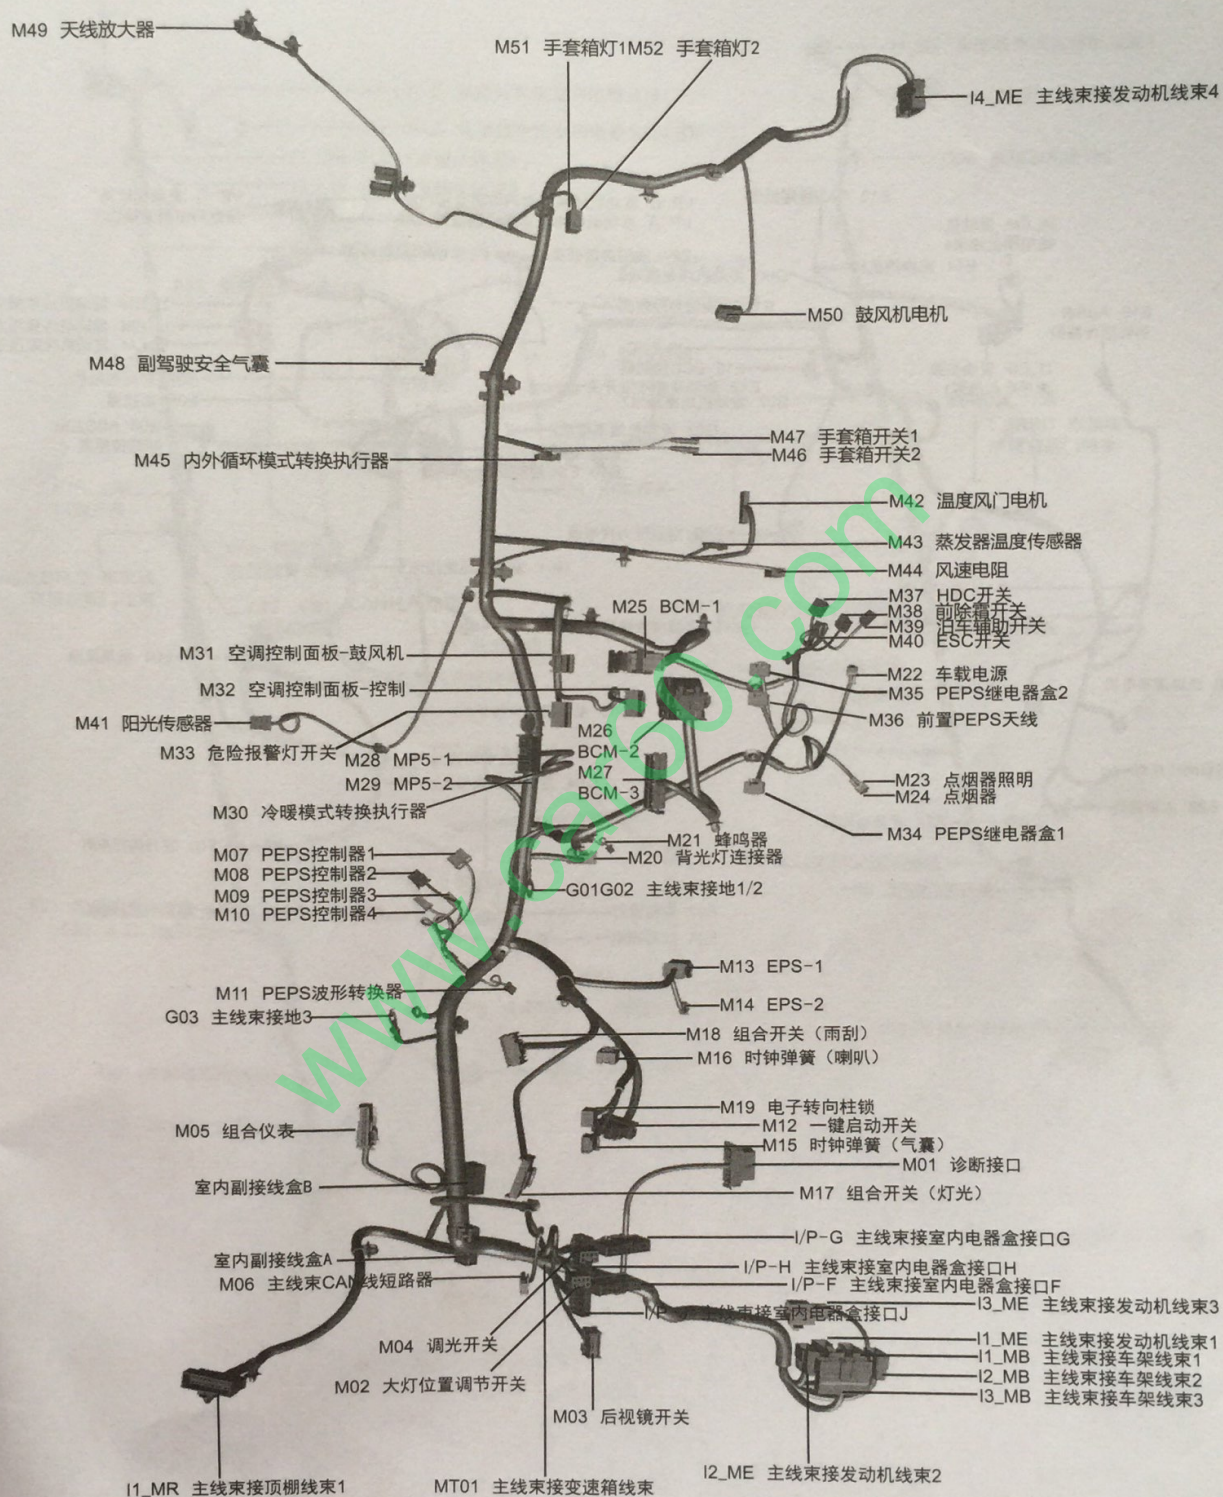


发动机线束布置图

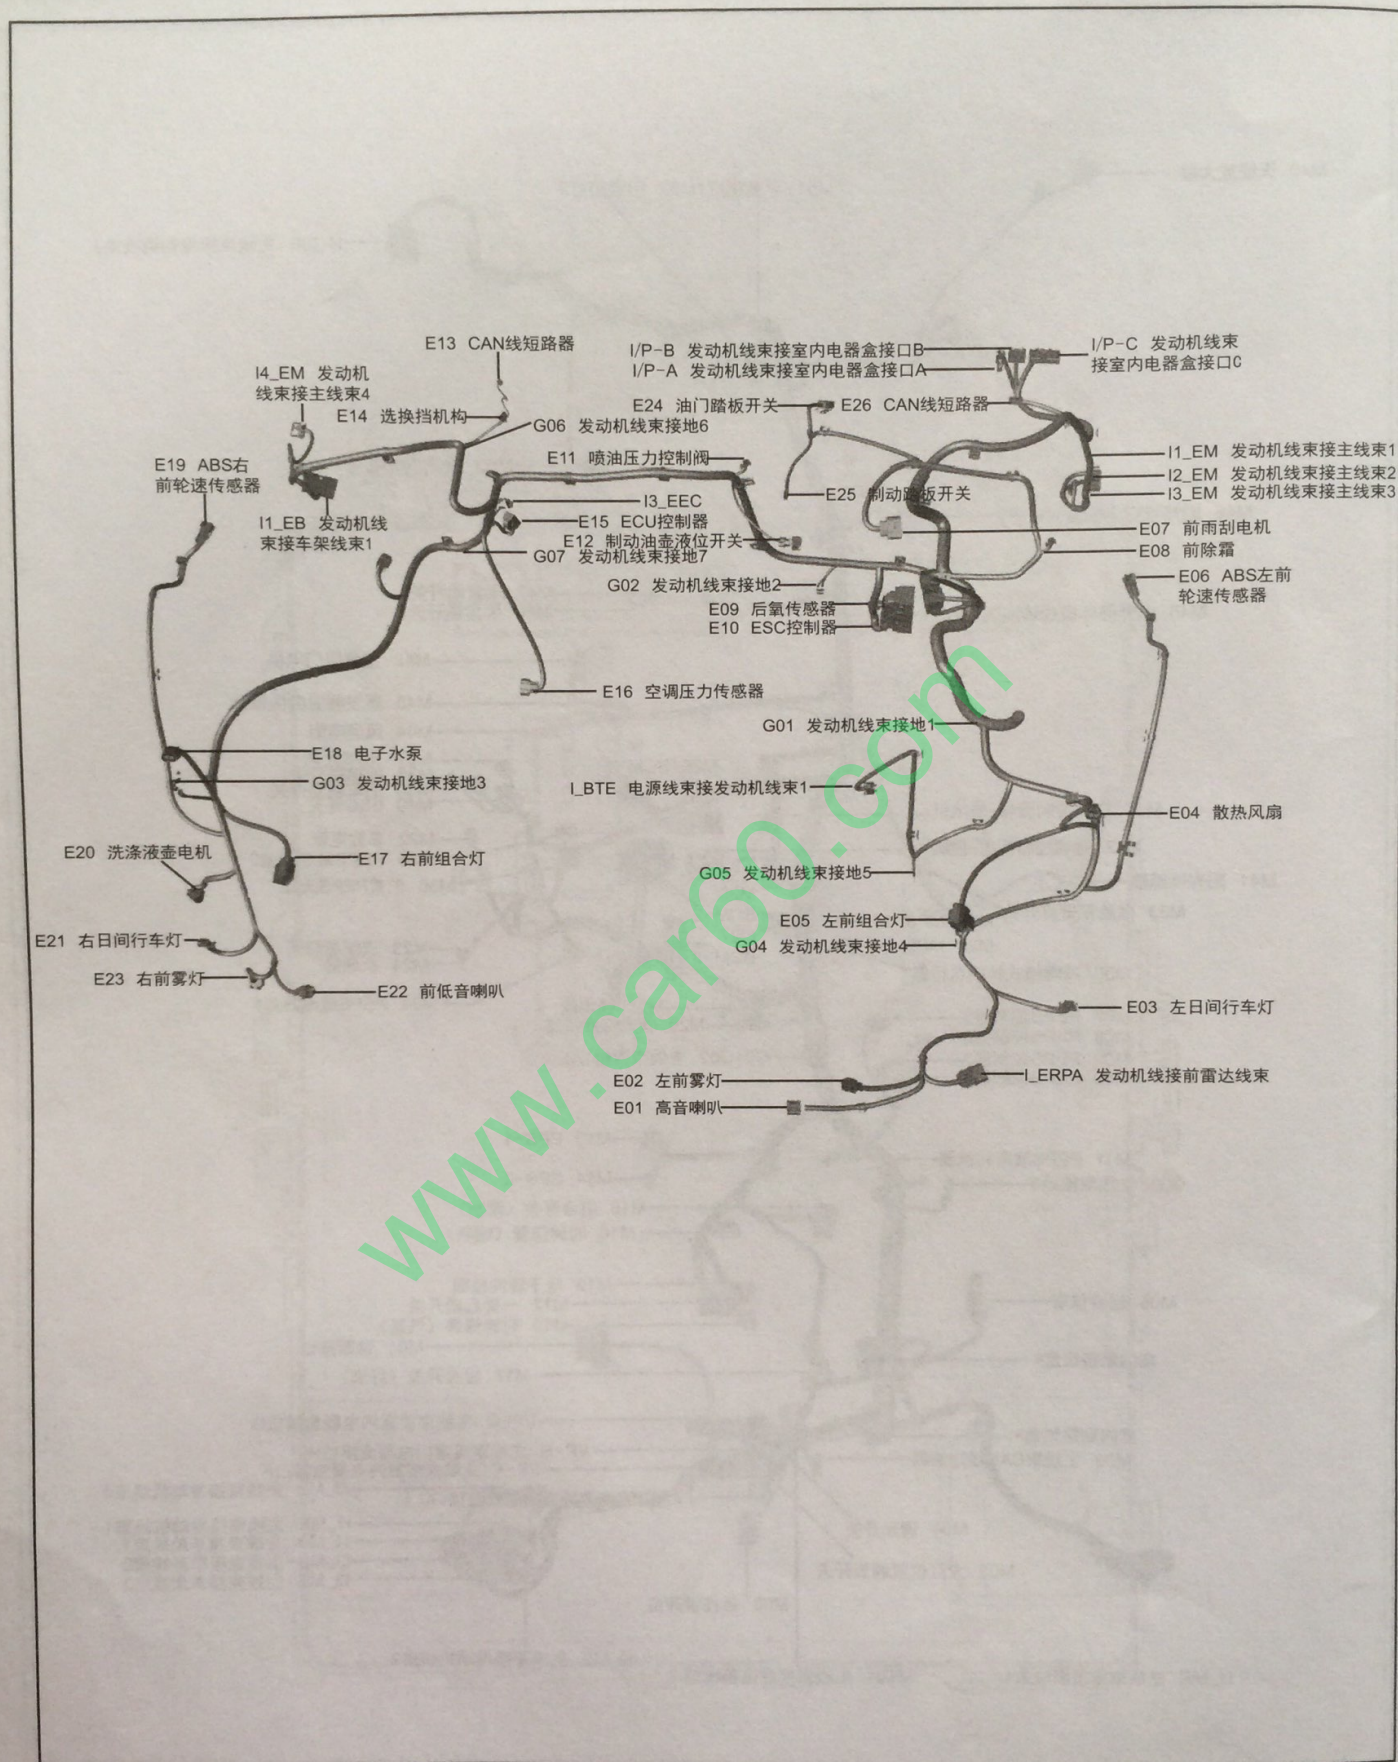

车架线束布置图

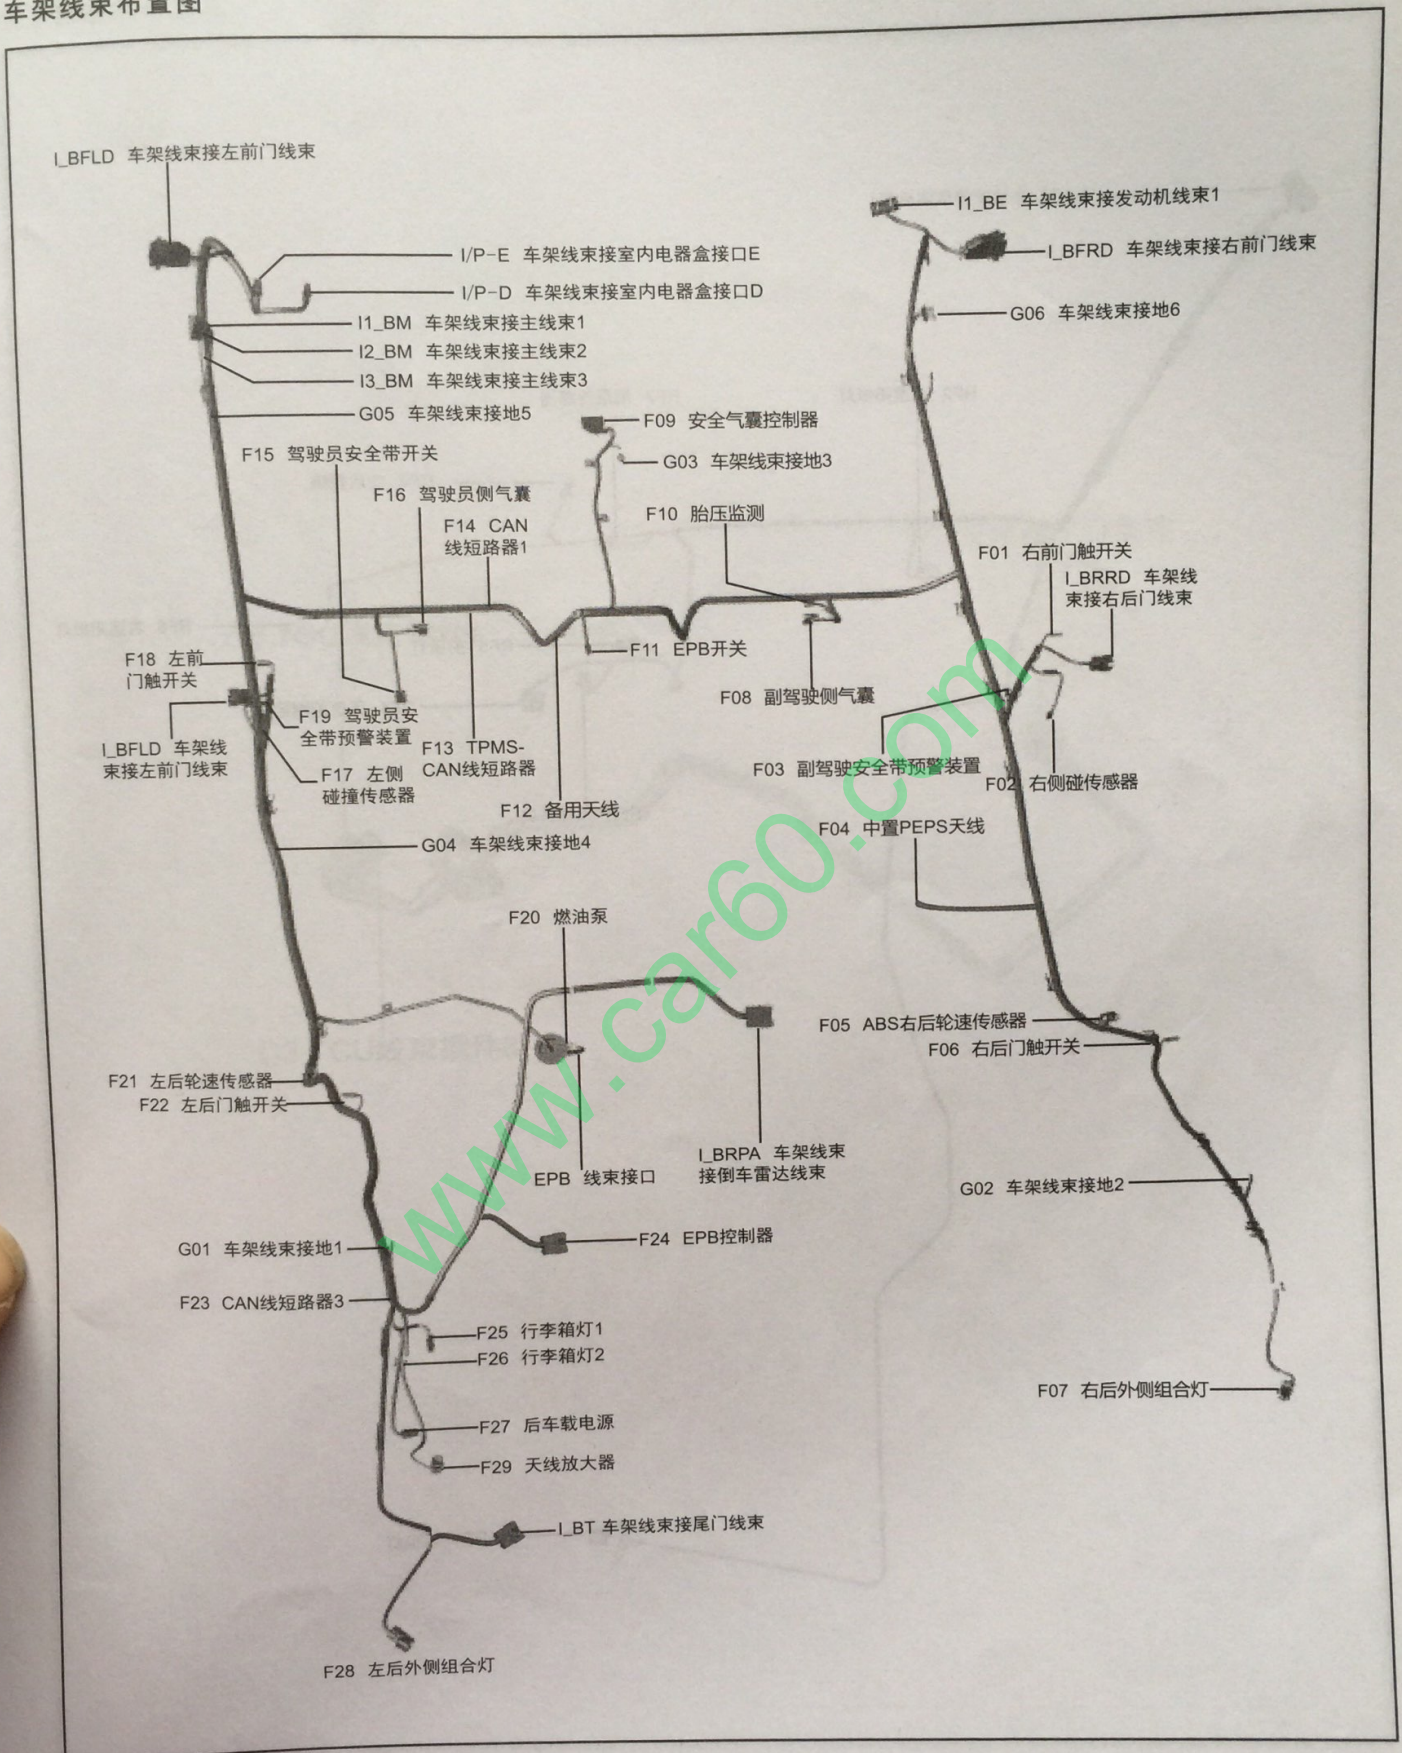


顶棚线束布置图

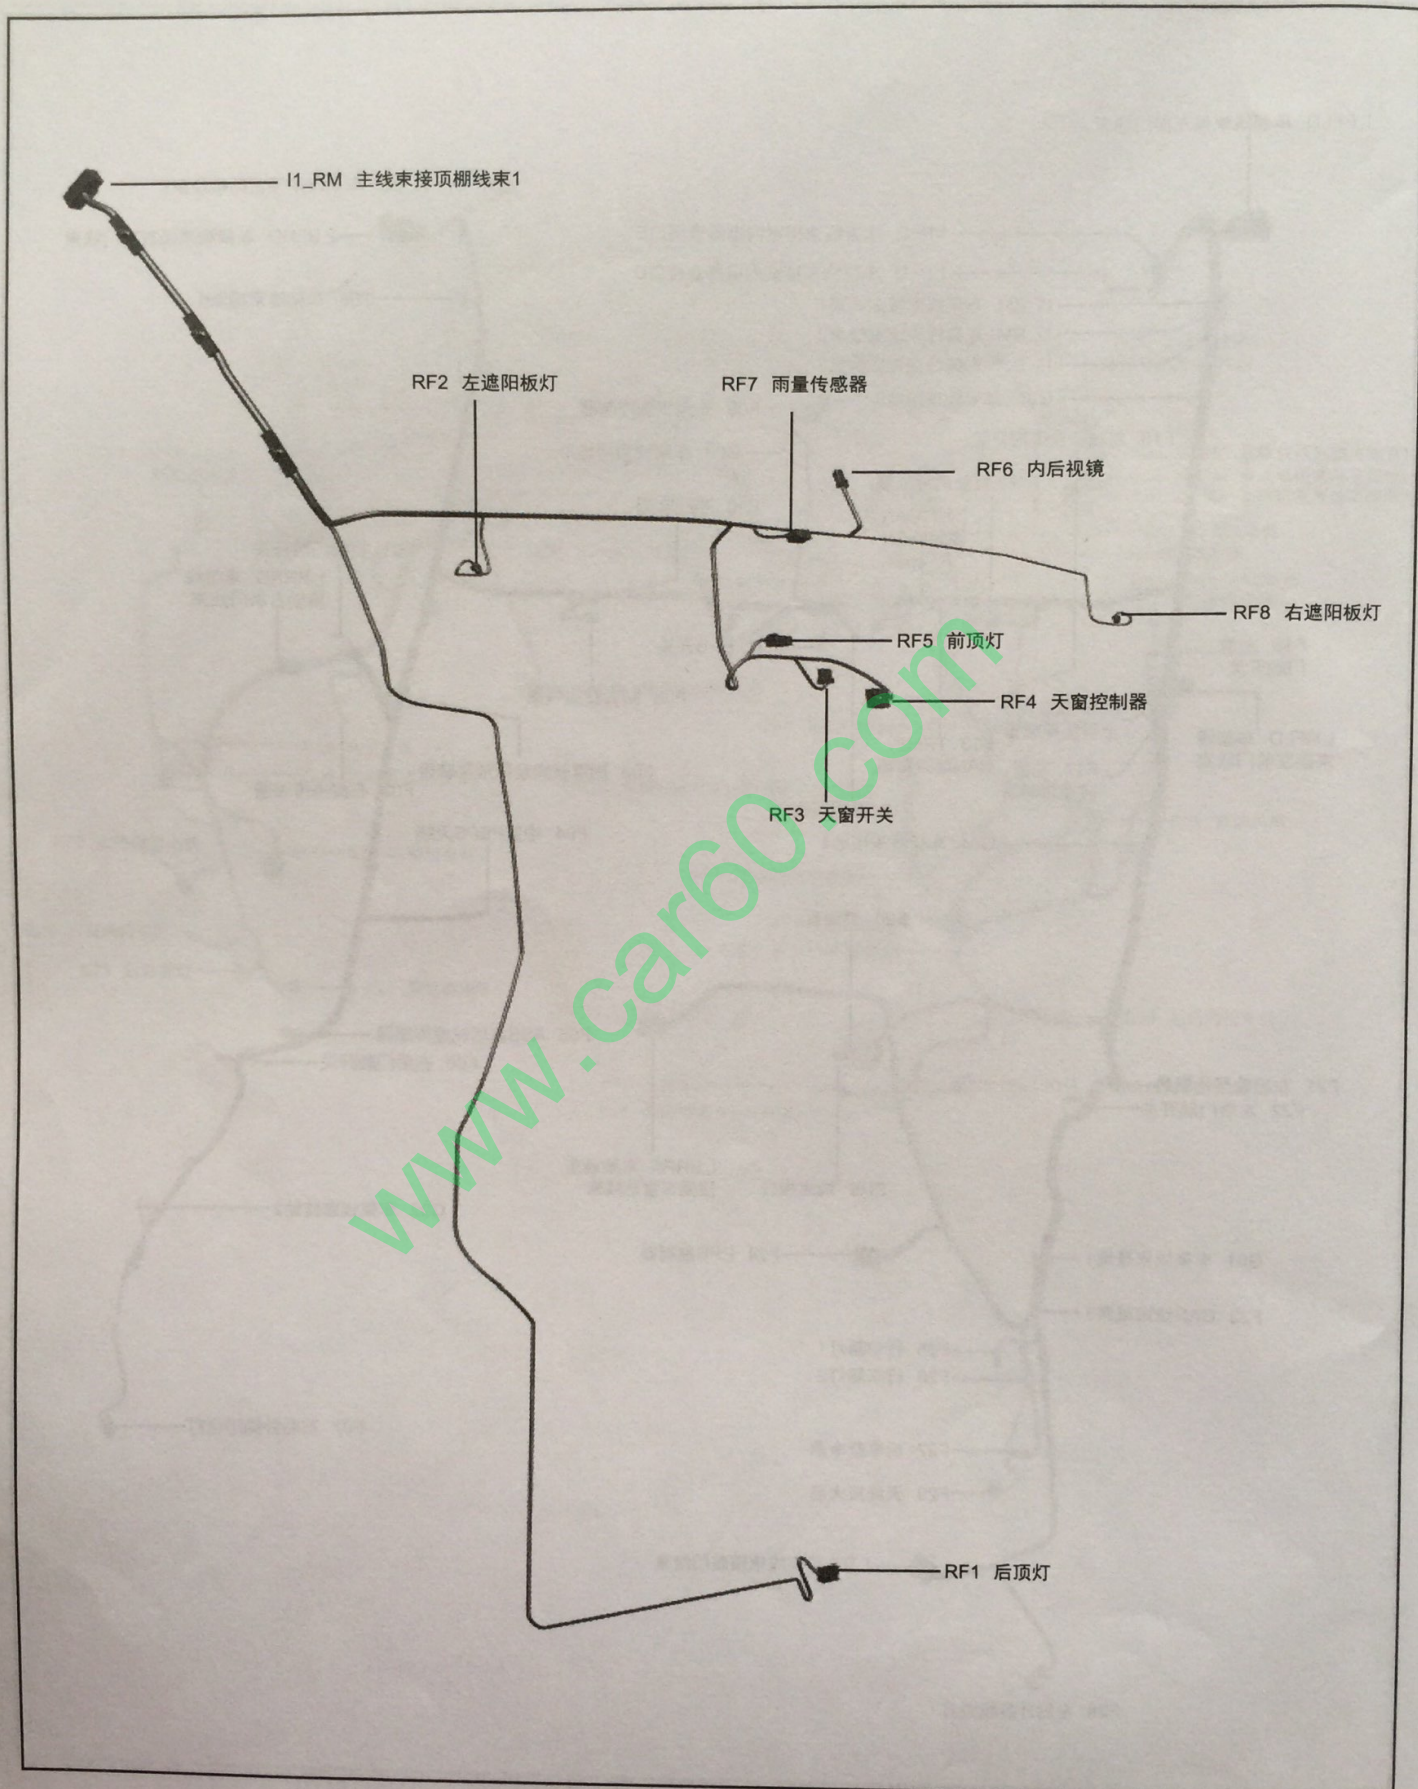


变速器线束布置图



左前门线束布置图

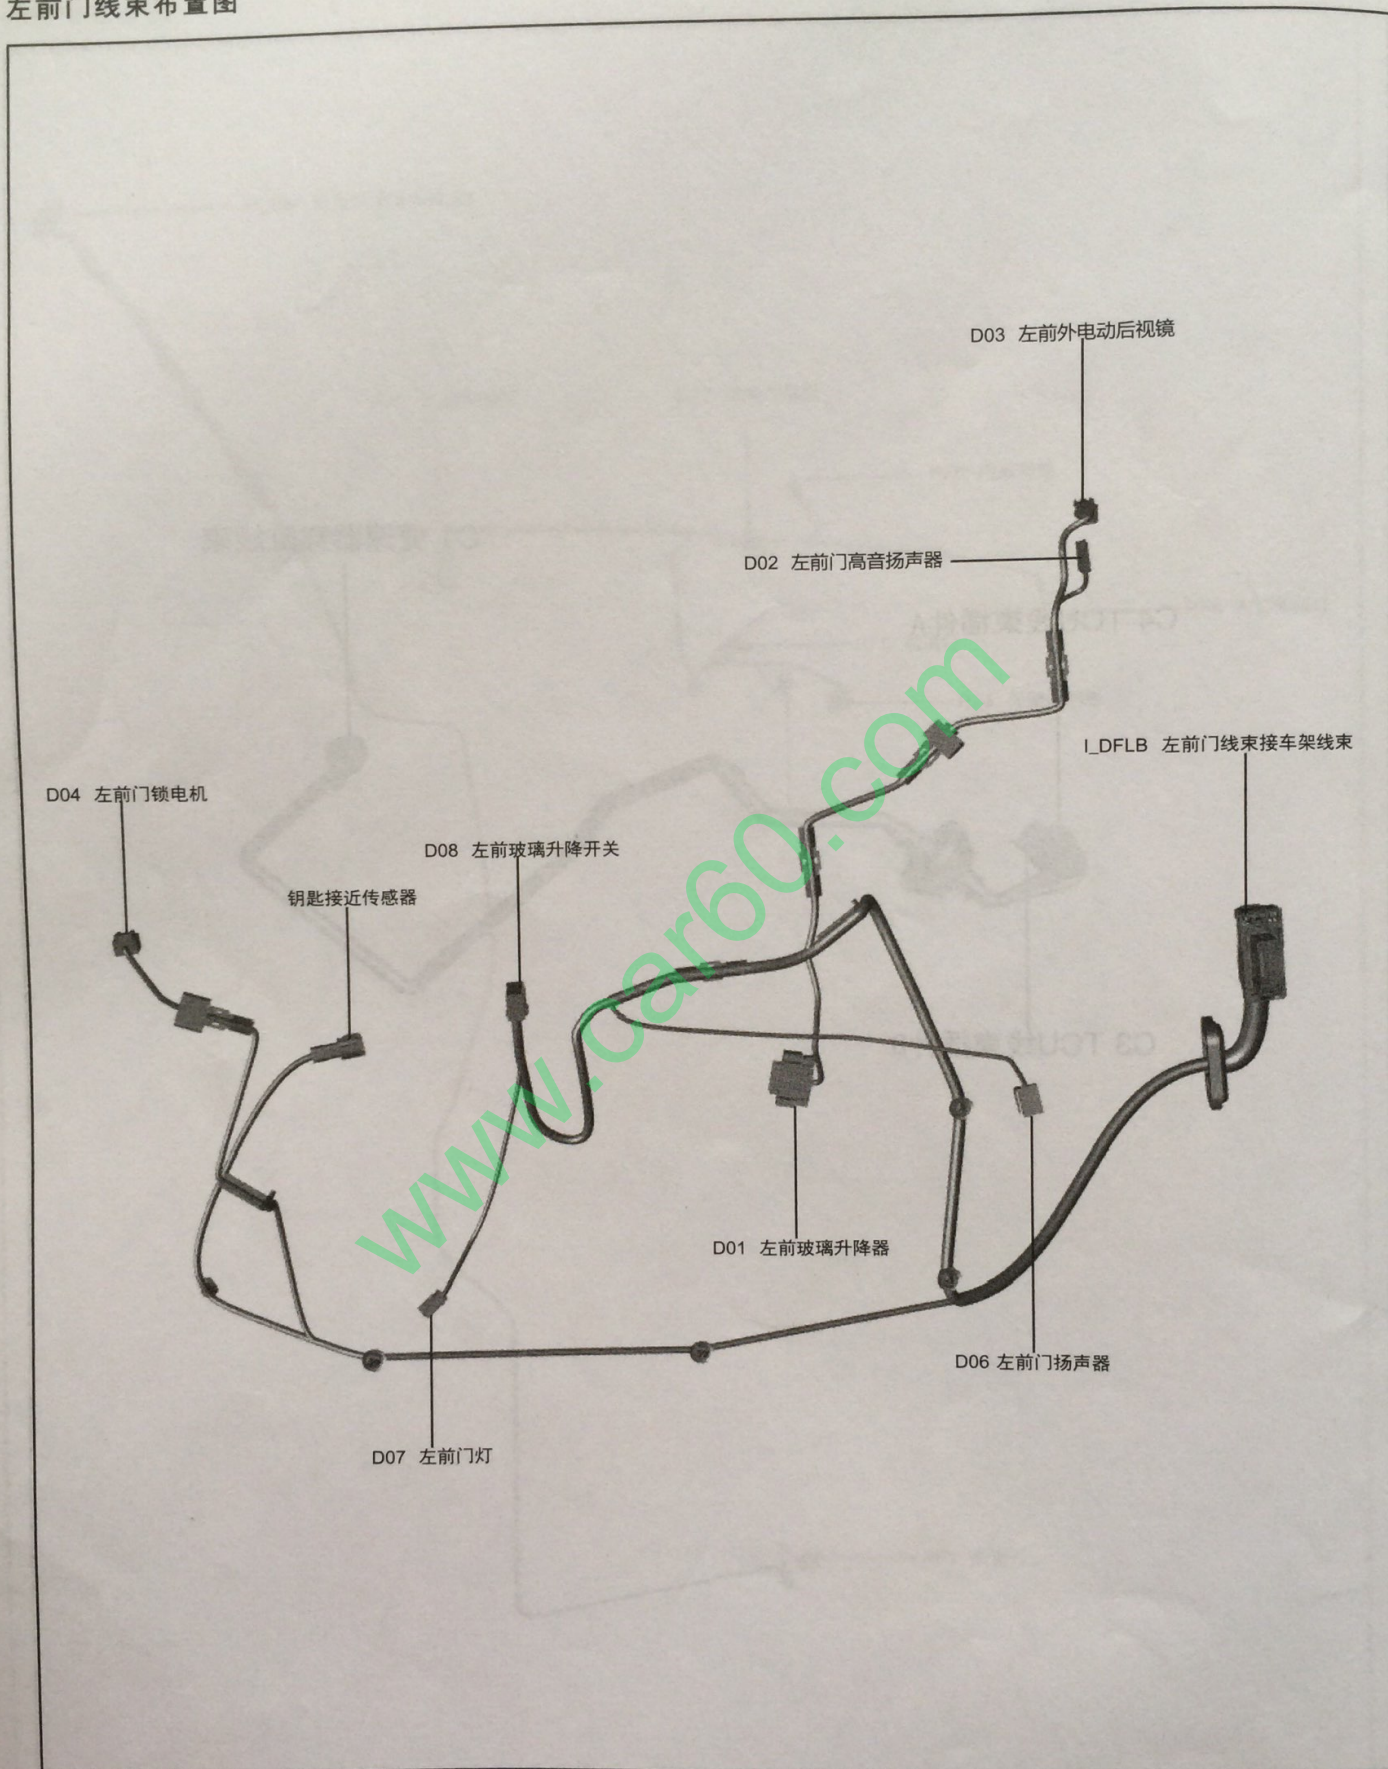

右前门线束布置图

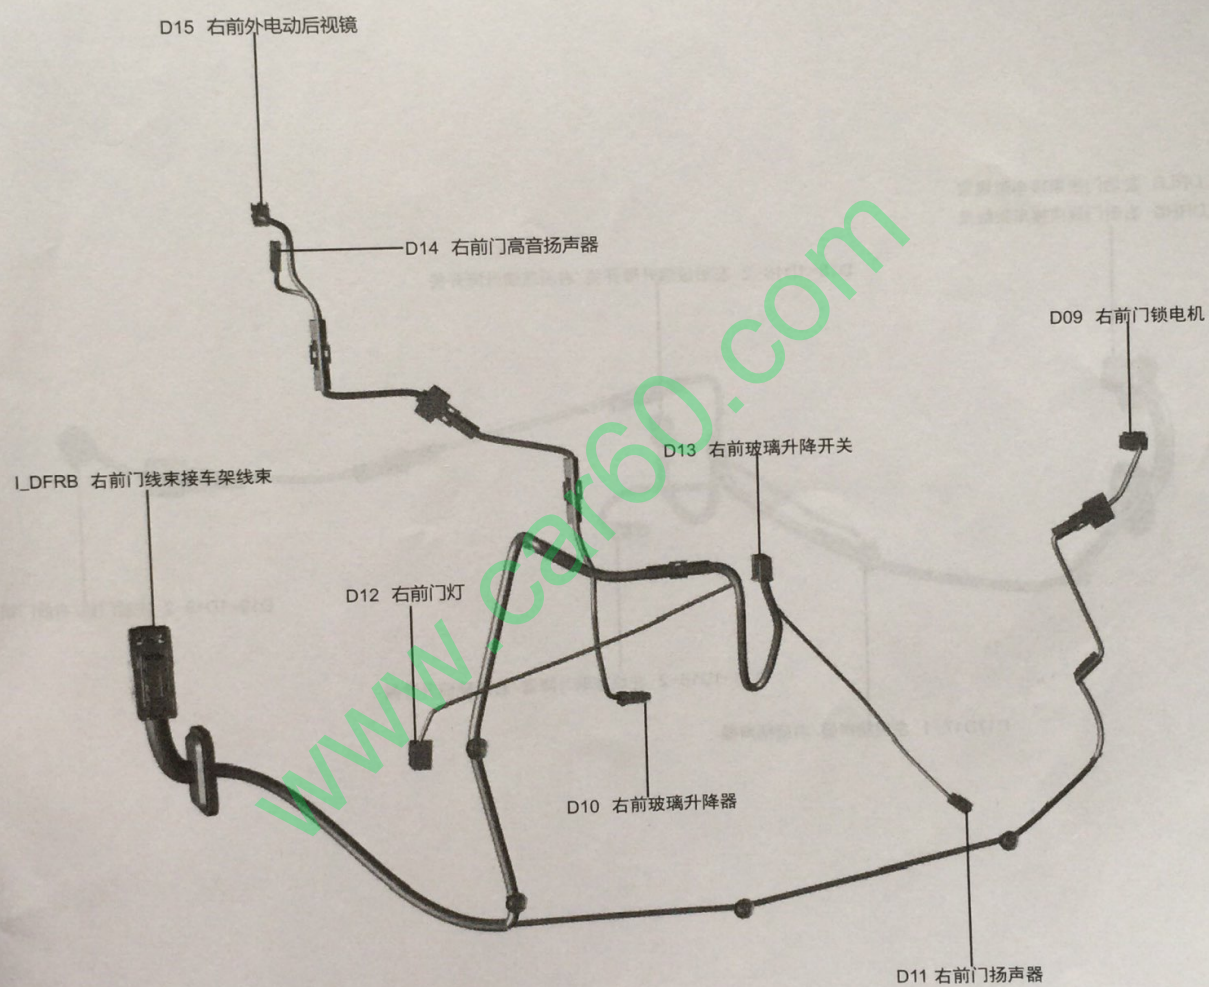

后门线束布置图

I_DRLB 左后门线束接车架线束
I_DRRB 右后门线束接车架线束

D18-1D18-2 左后玻璃升降开关/右后玻璃升降开关

D19-1D19-2 左后门锁/右后门锁

D16-1D16-2 左后玻璃升降器/右后玻璃升降器

D17D17-1 左后扬声器/右后扬声器

