




驾驶室线束（14033）安装图

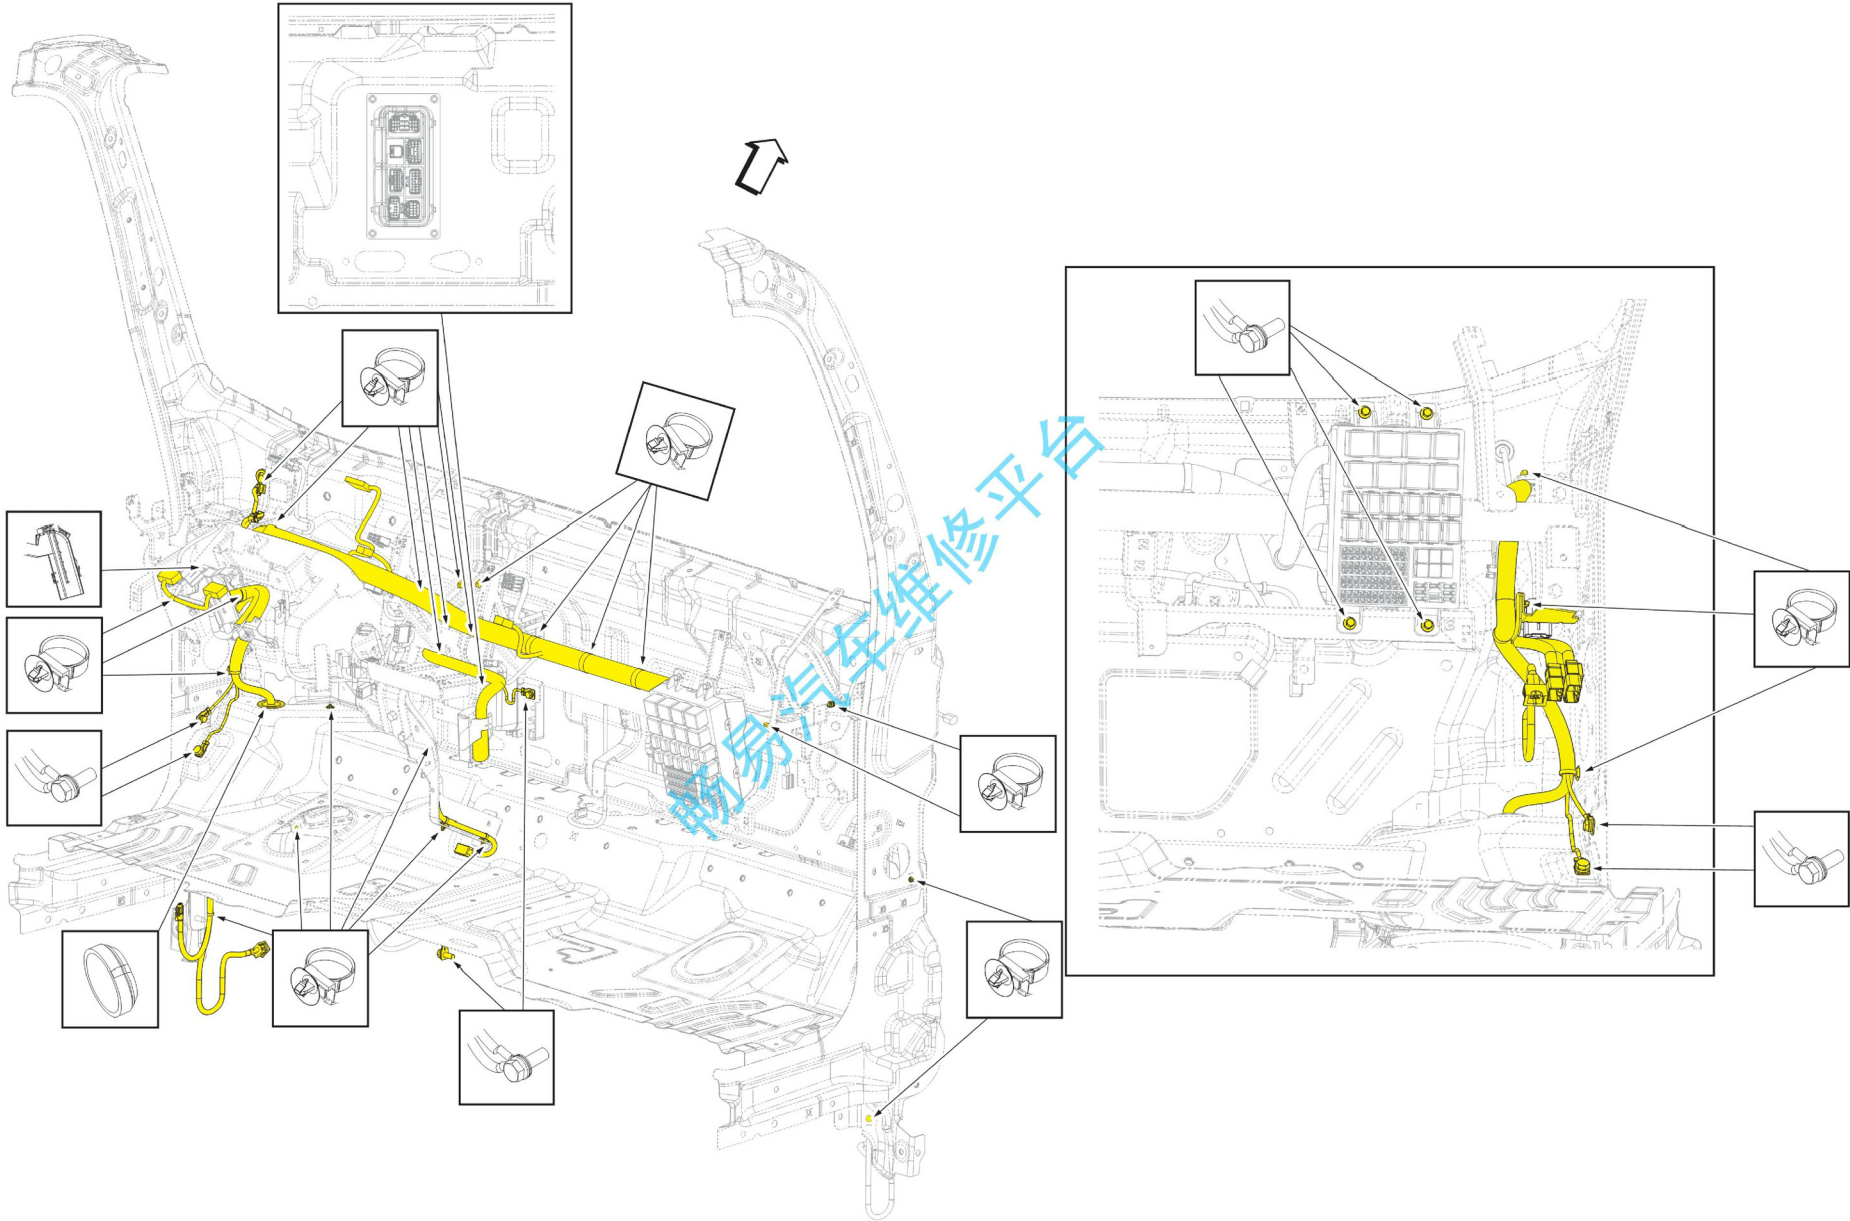


驾驶室线束（14033）安装图

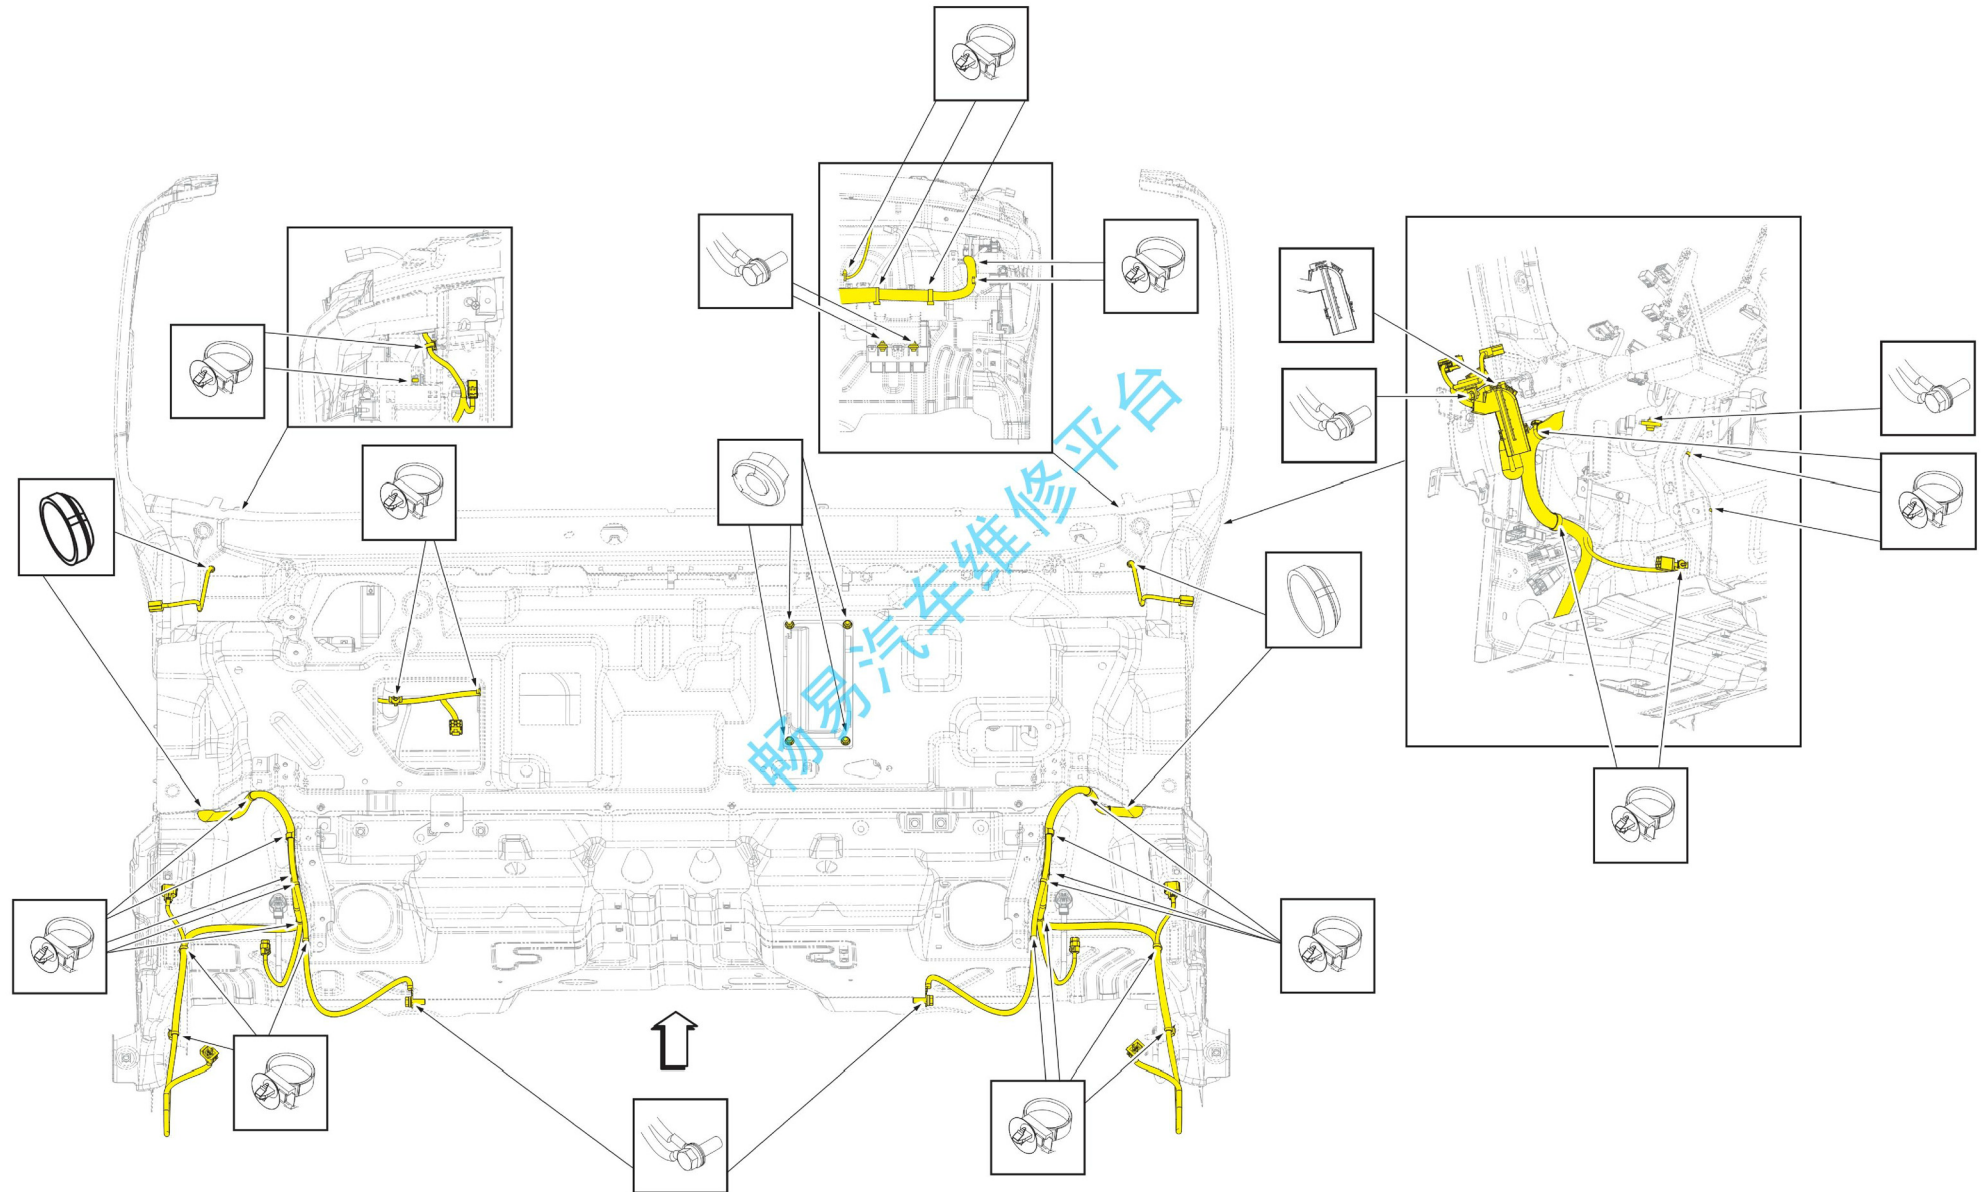


车架前线束（14035）安装图

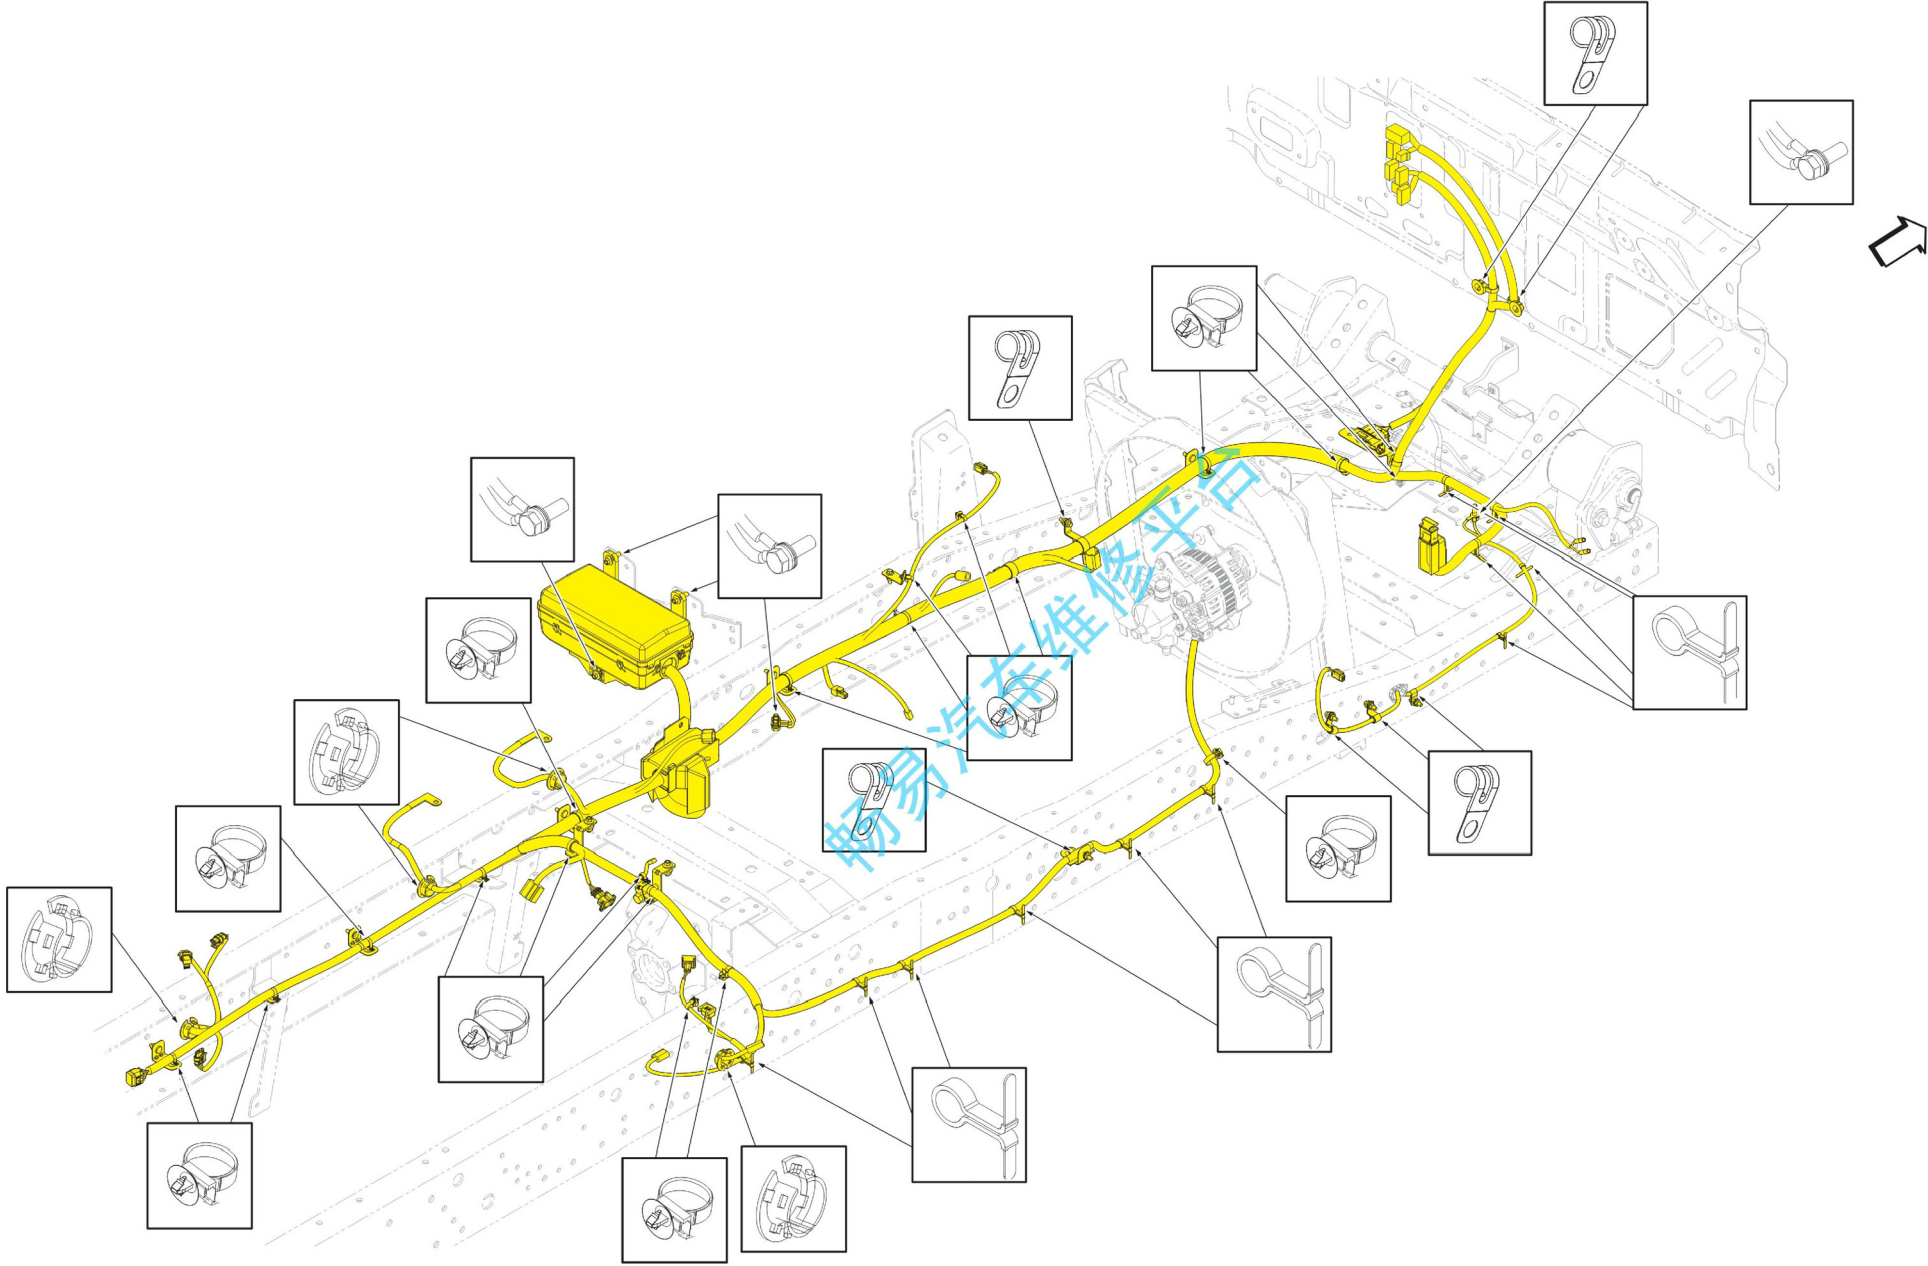


车架后线束 (14034) 安装图

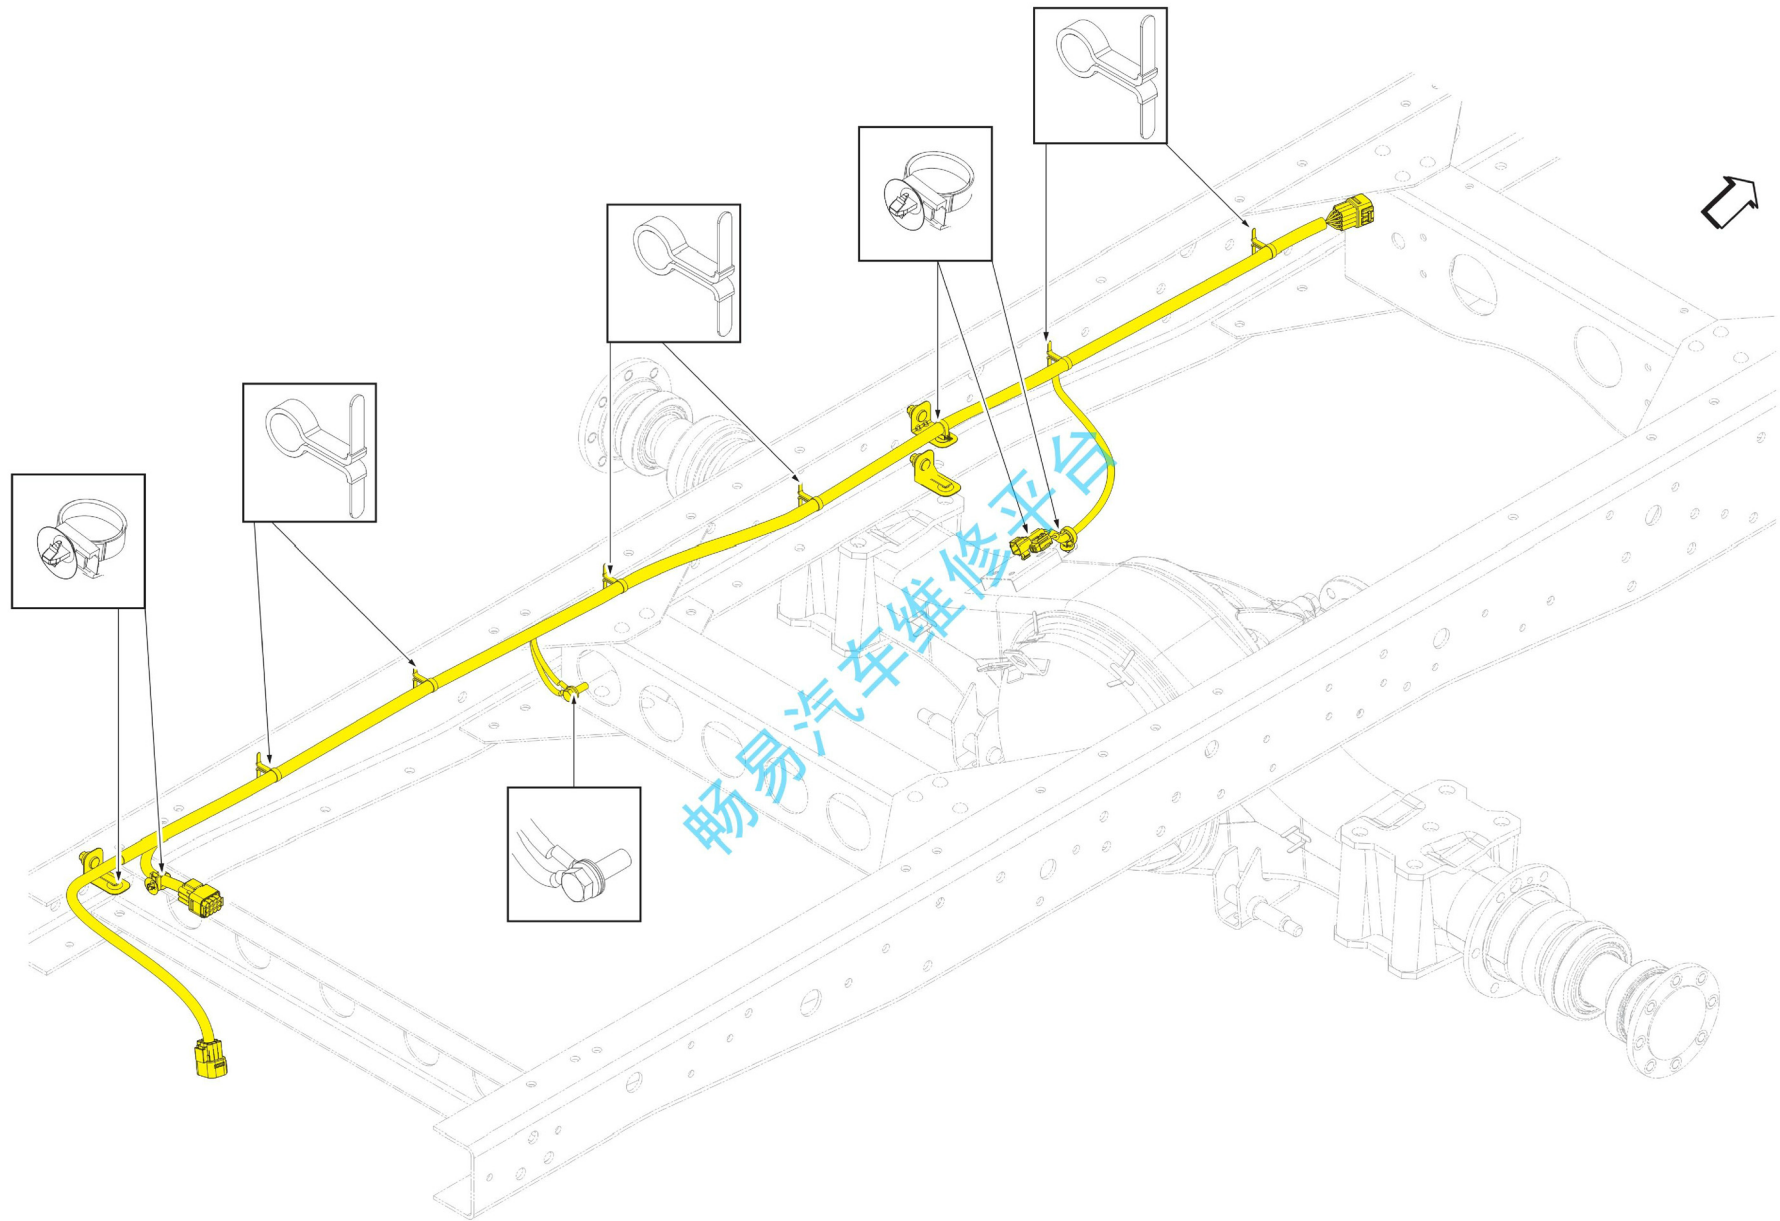


尾灯线束 (13A412) 安装图

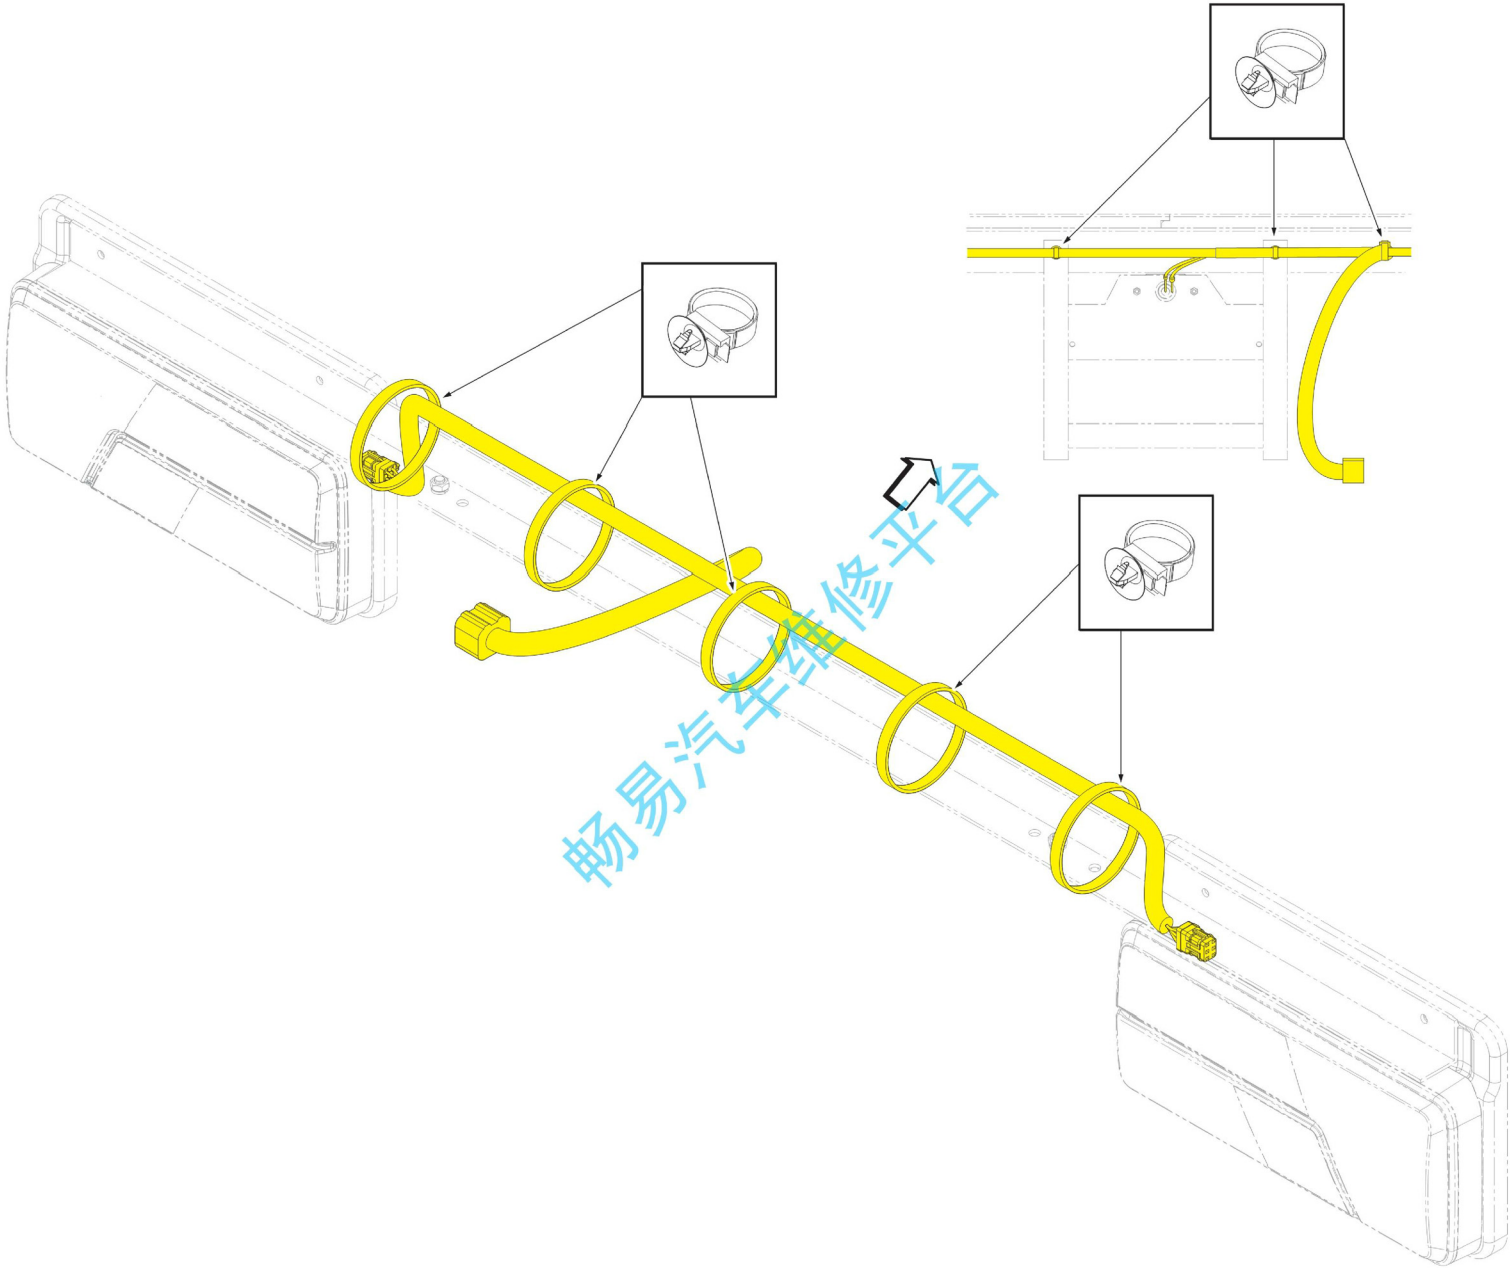

发动机控制线束 (12B637) 安装图

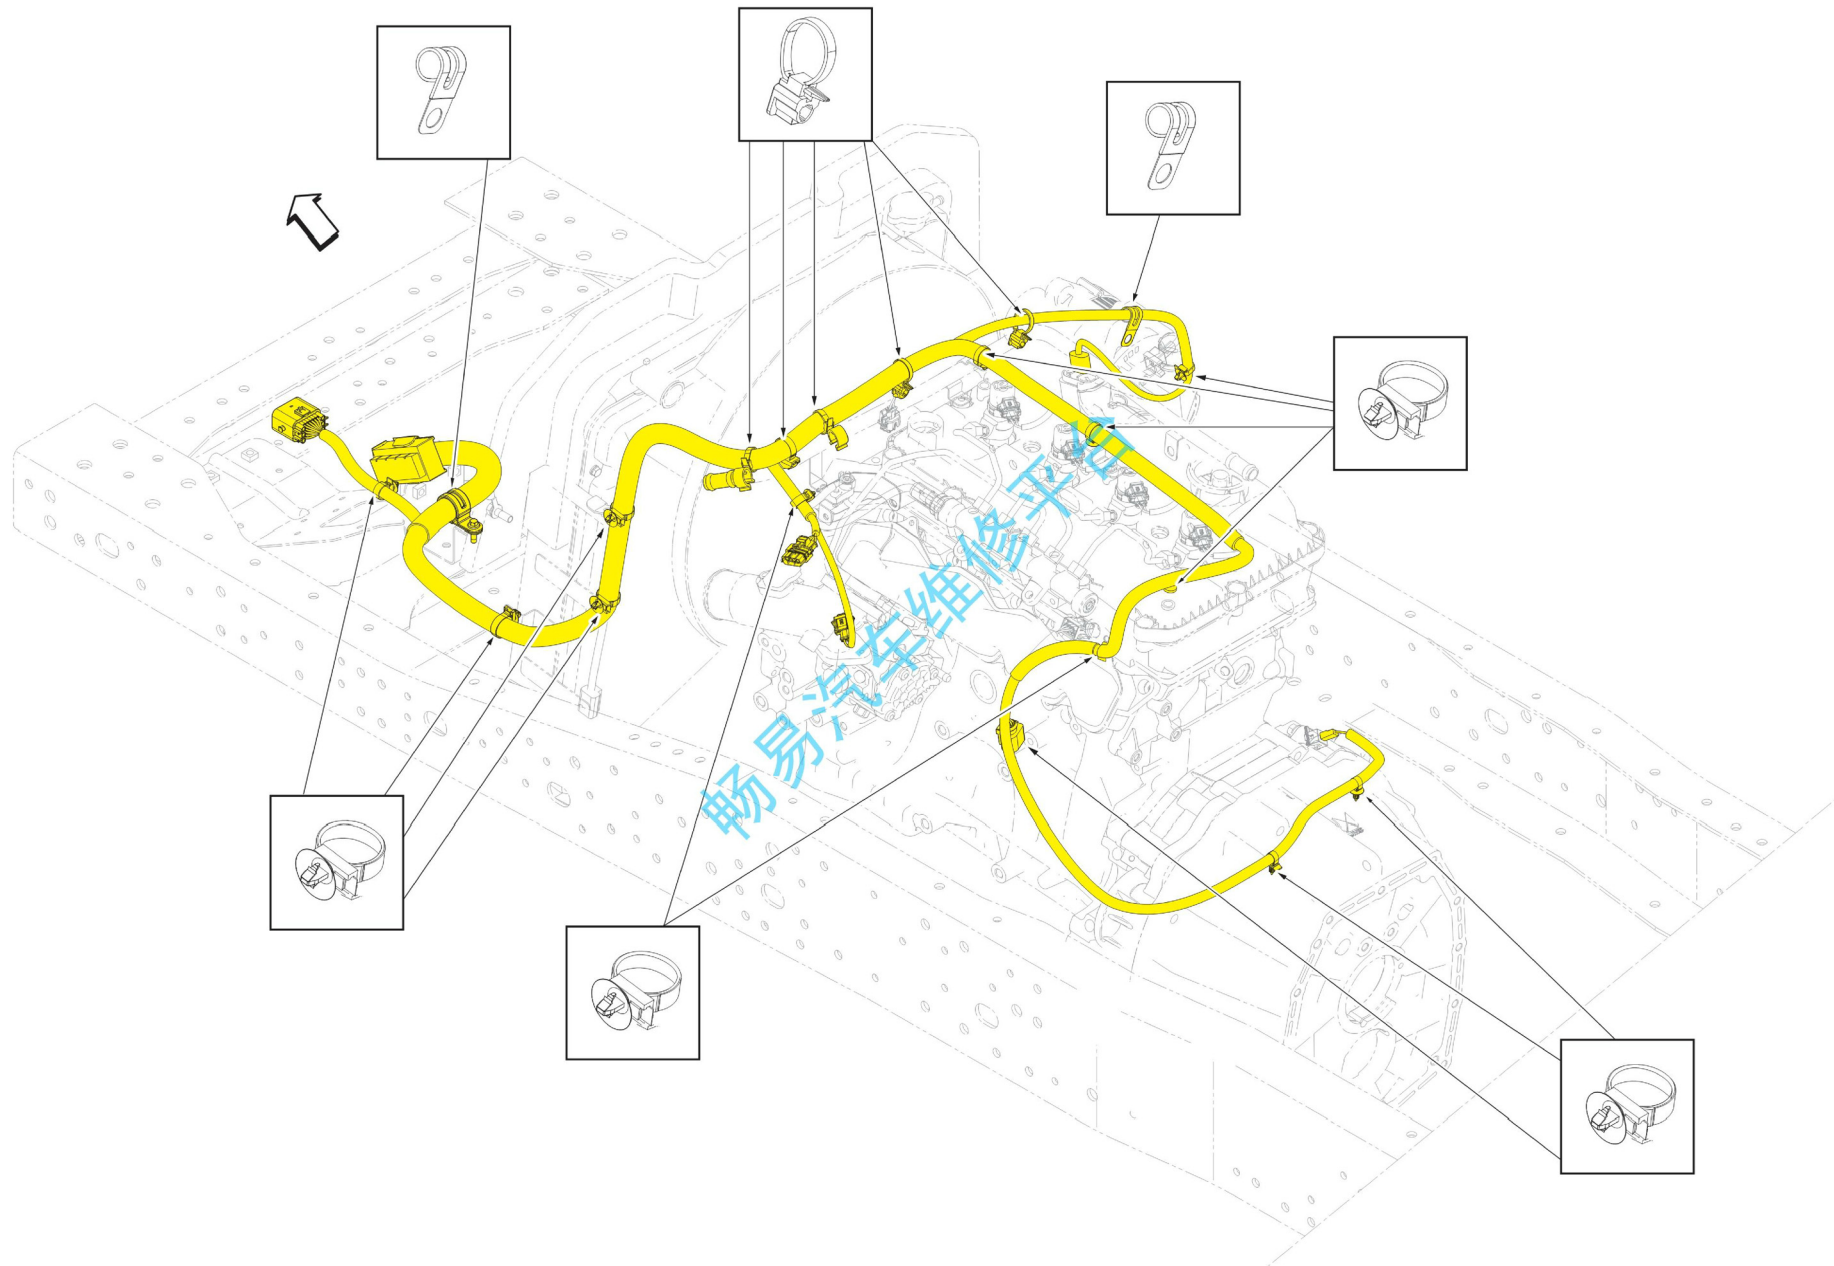




起动机过渡线束(10B814) 安装图

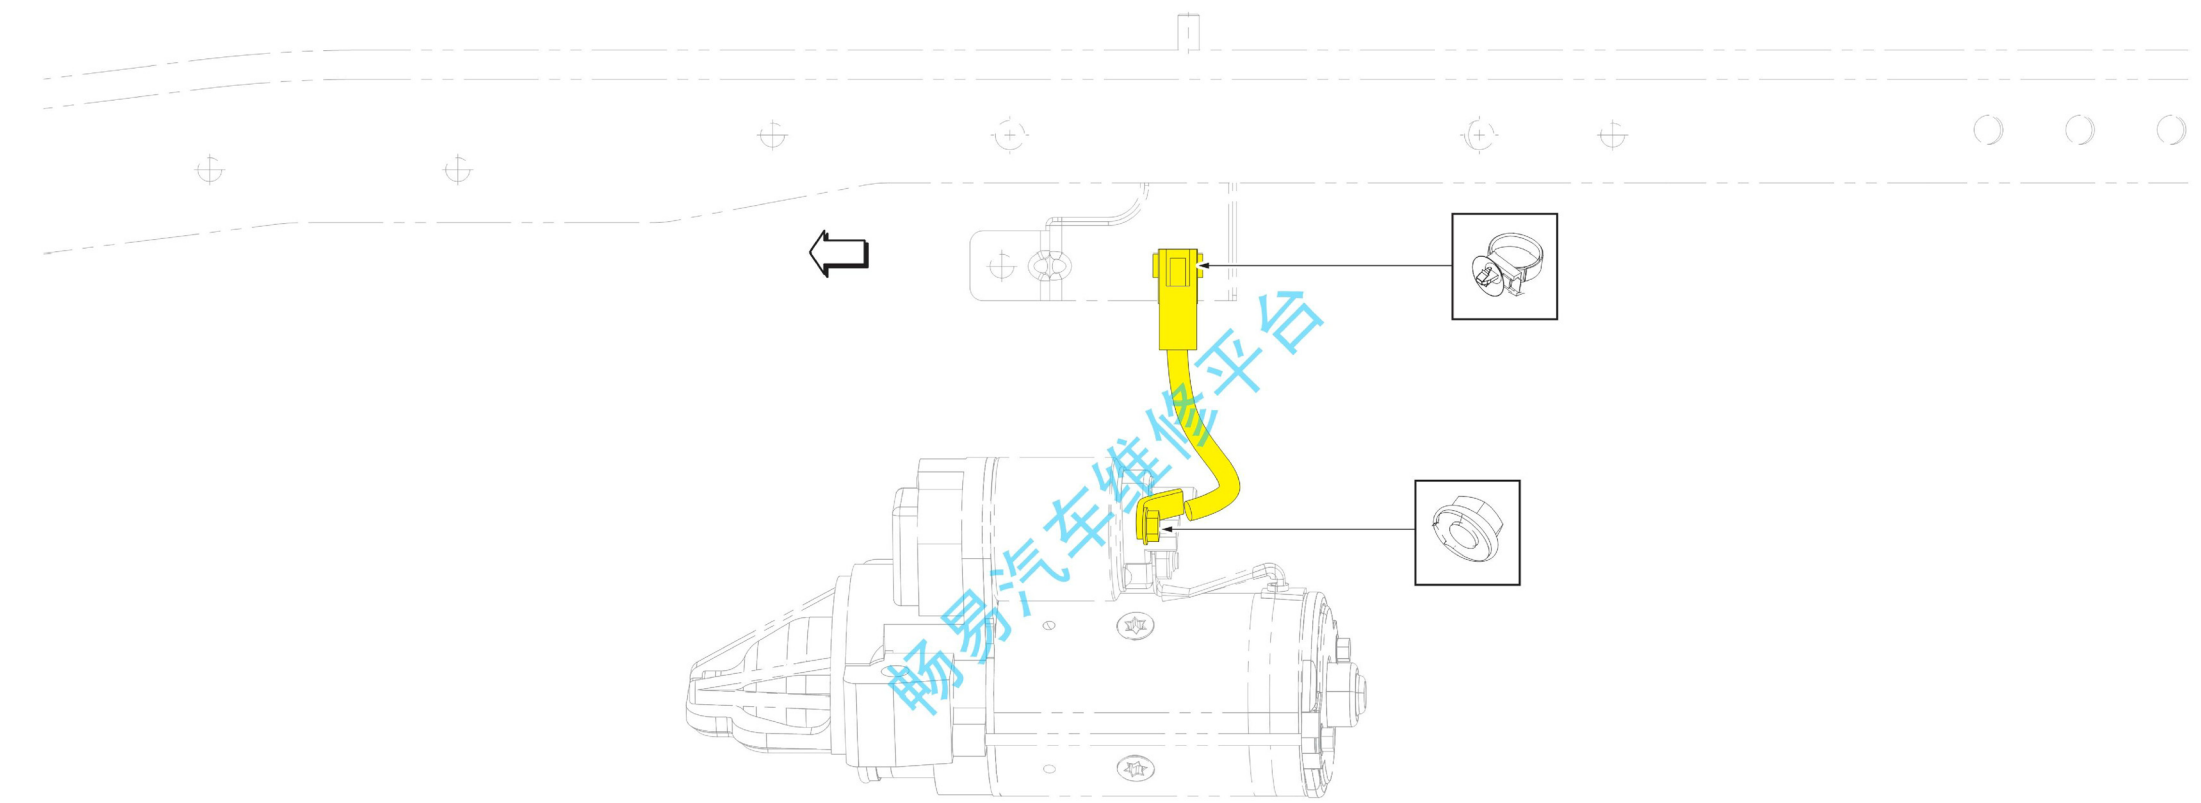


发动机搭铁线束 (14032) 安装图




蓄电池正极线束（14450）安装图

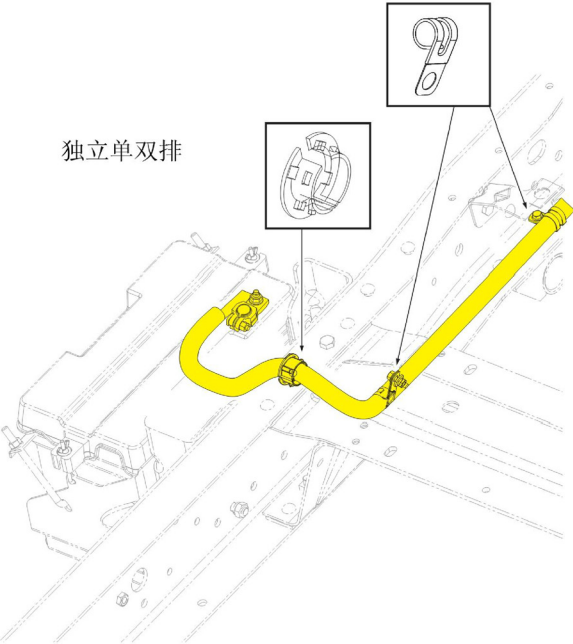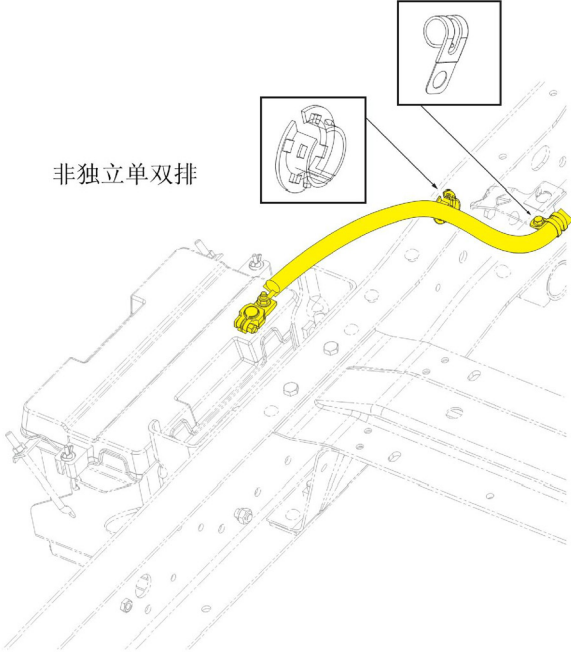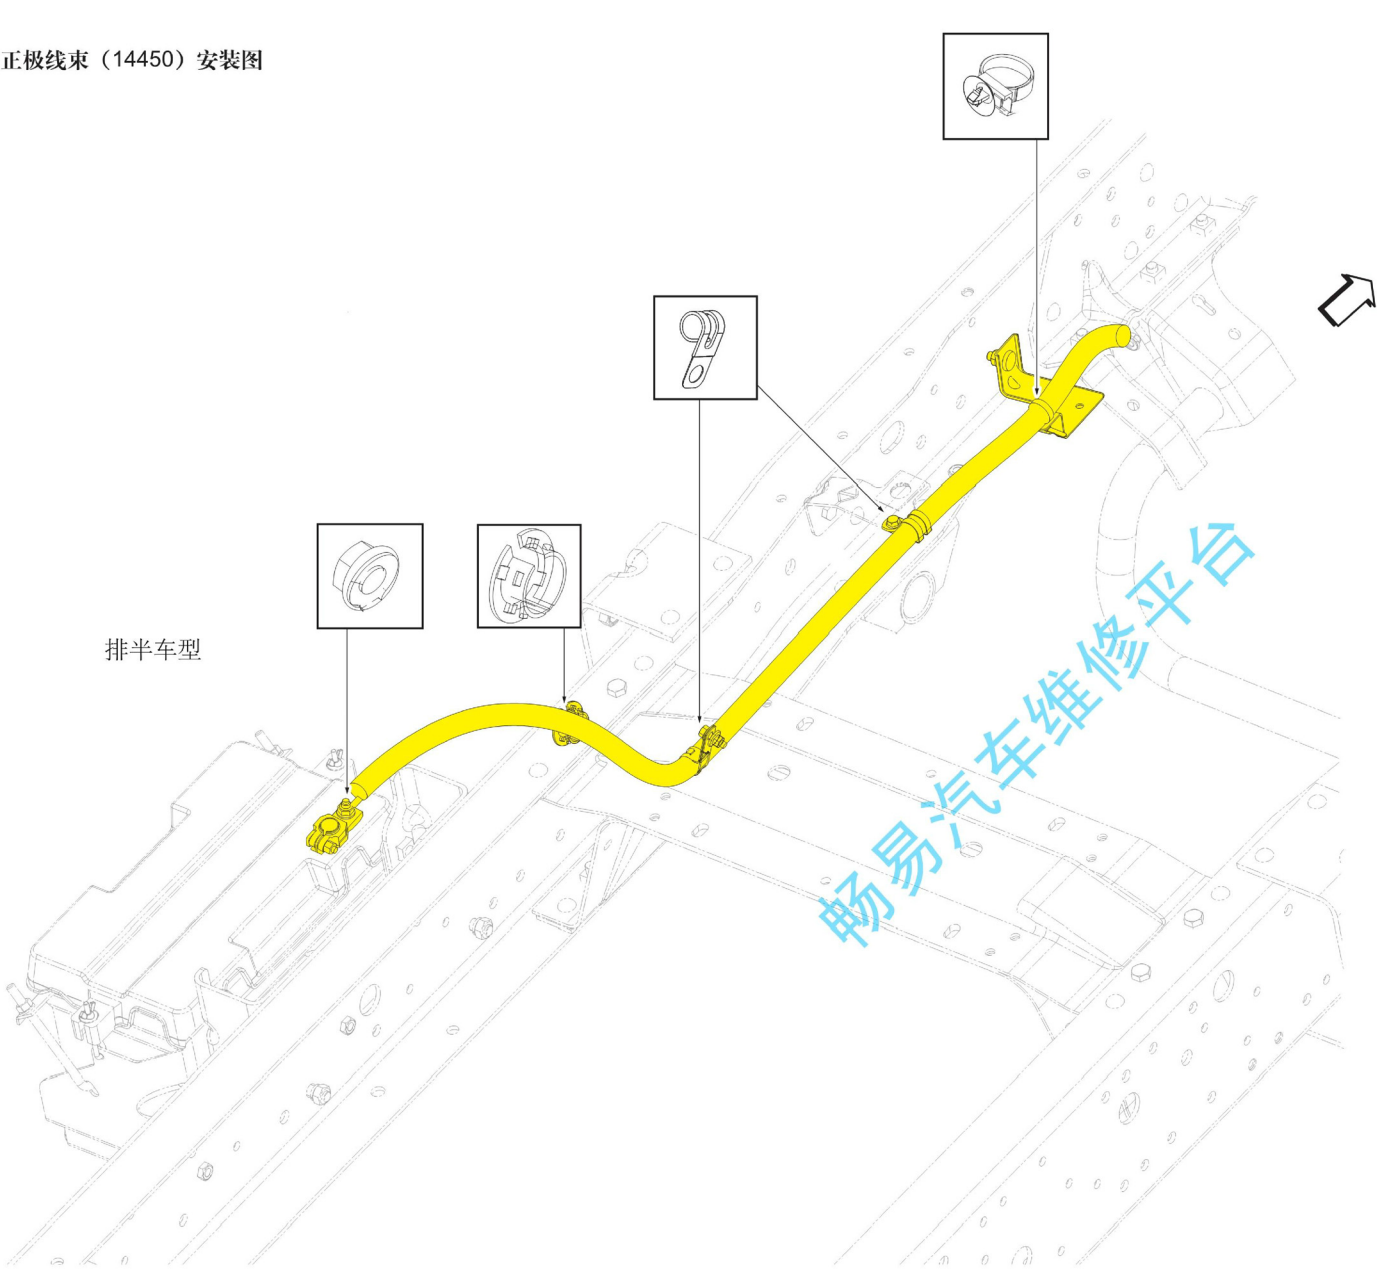


蓄电池负极线束 (14451) 安装图

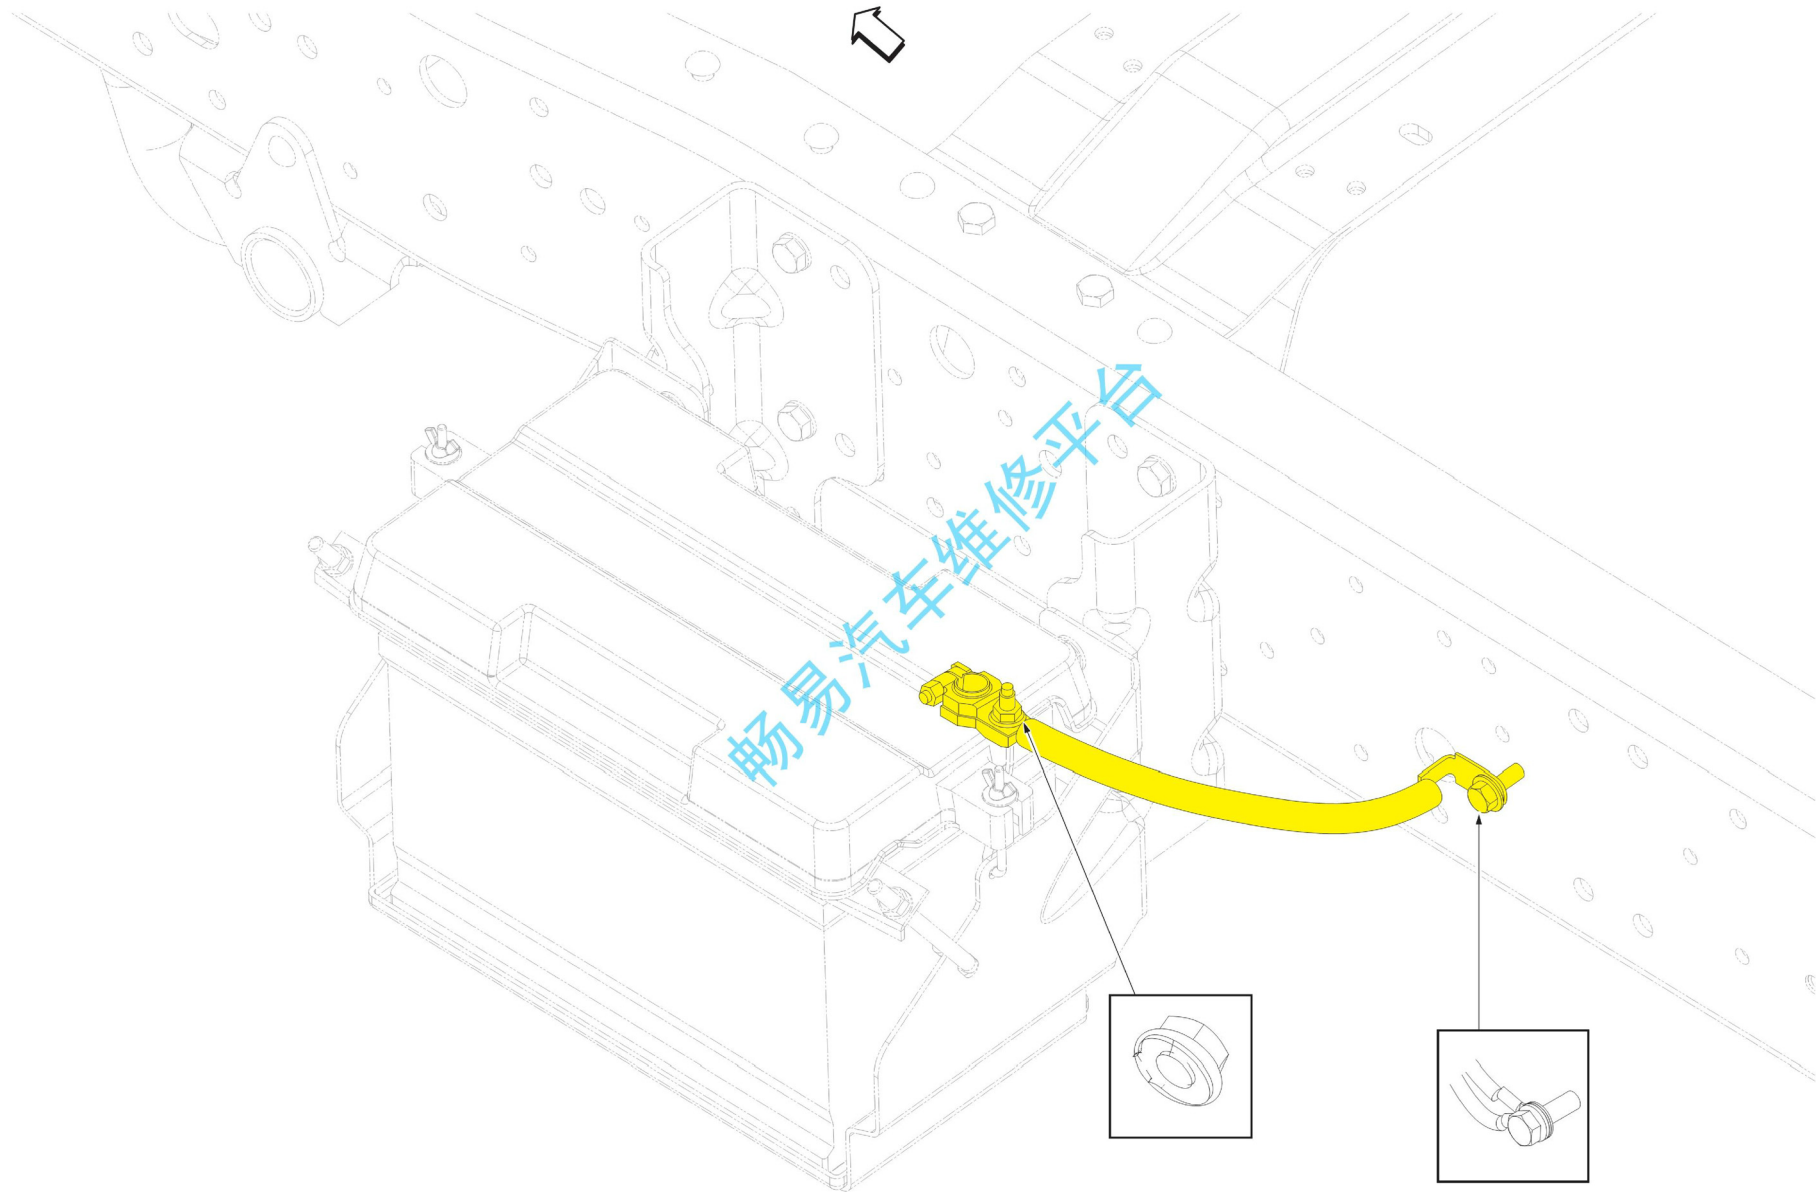


室内灯线束（14334）（单排）安装图

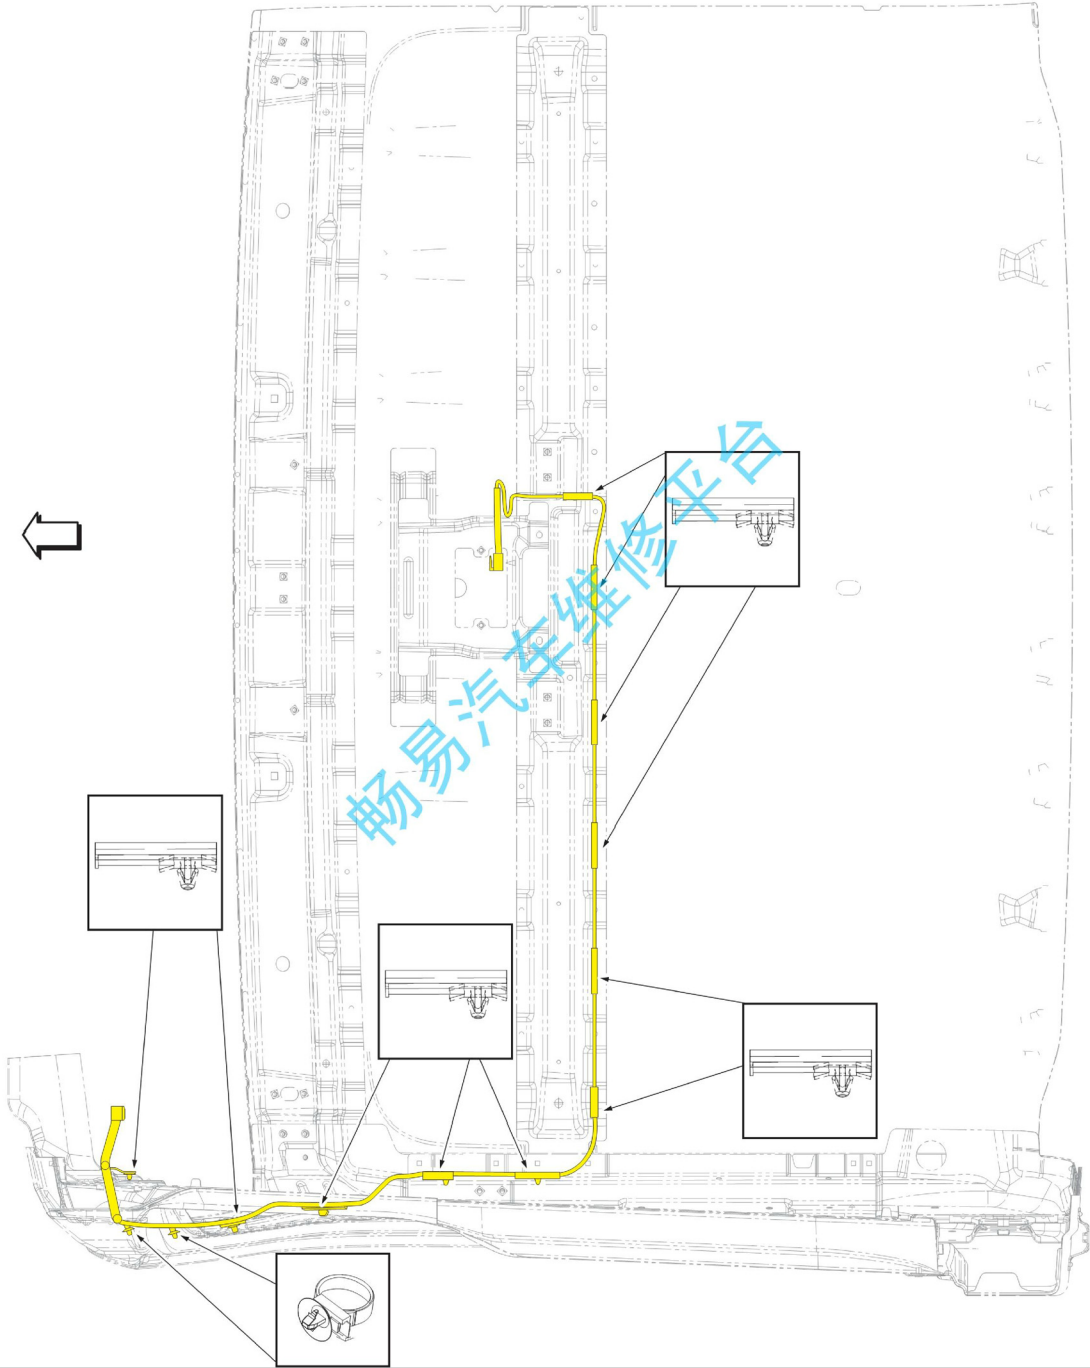

室内灯线束（14334）（双排）安装图

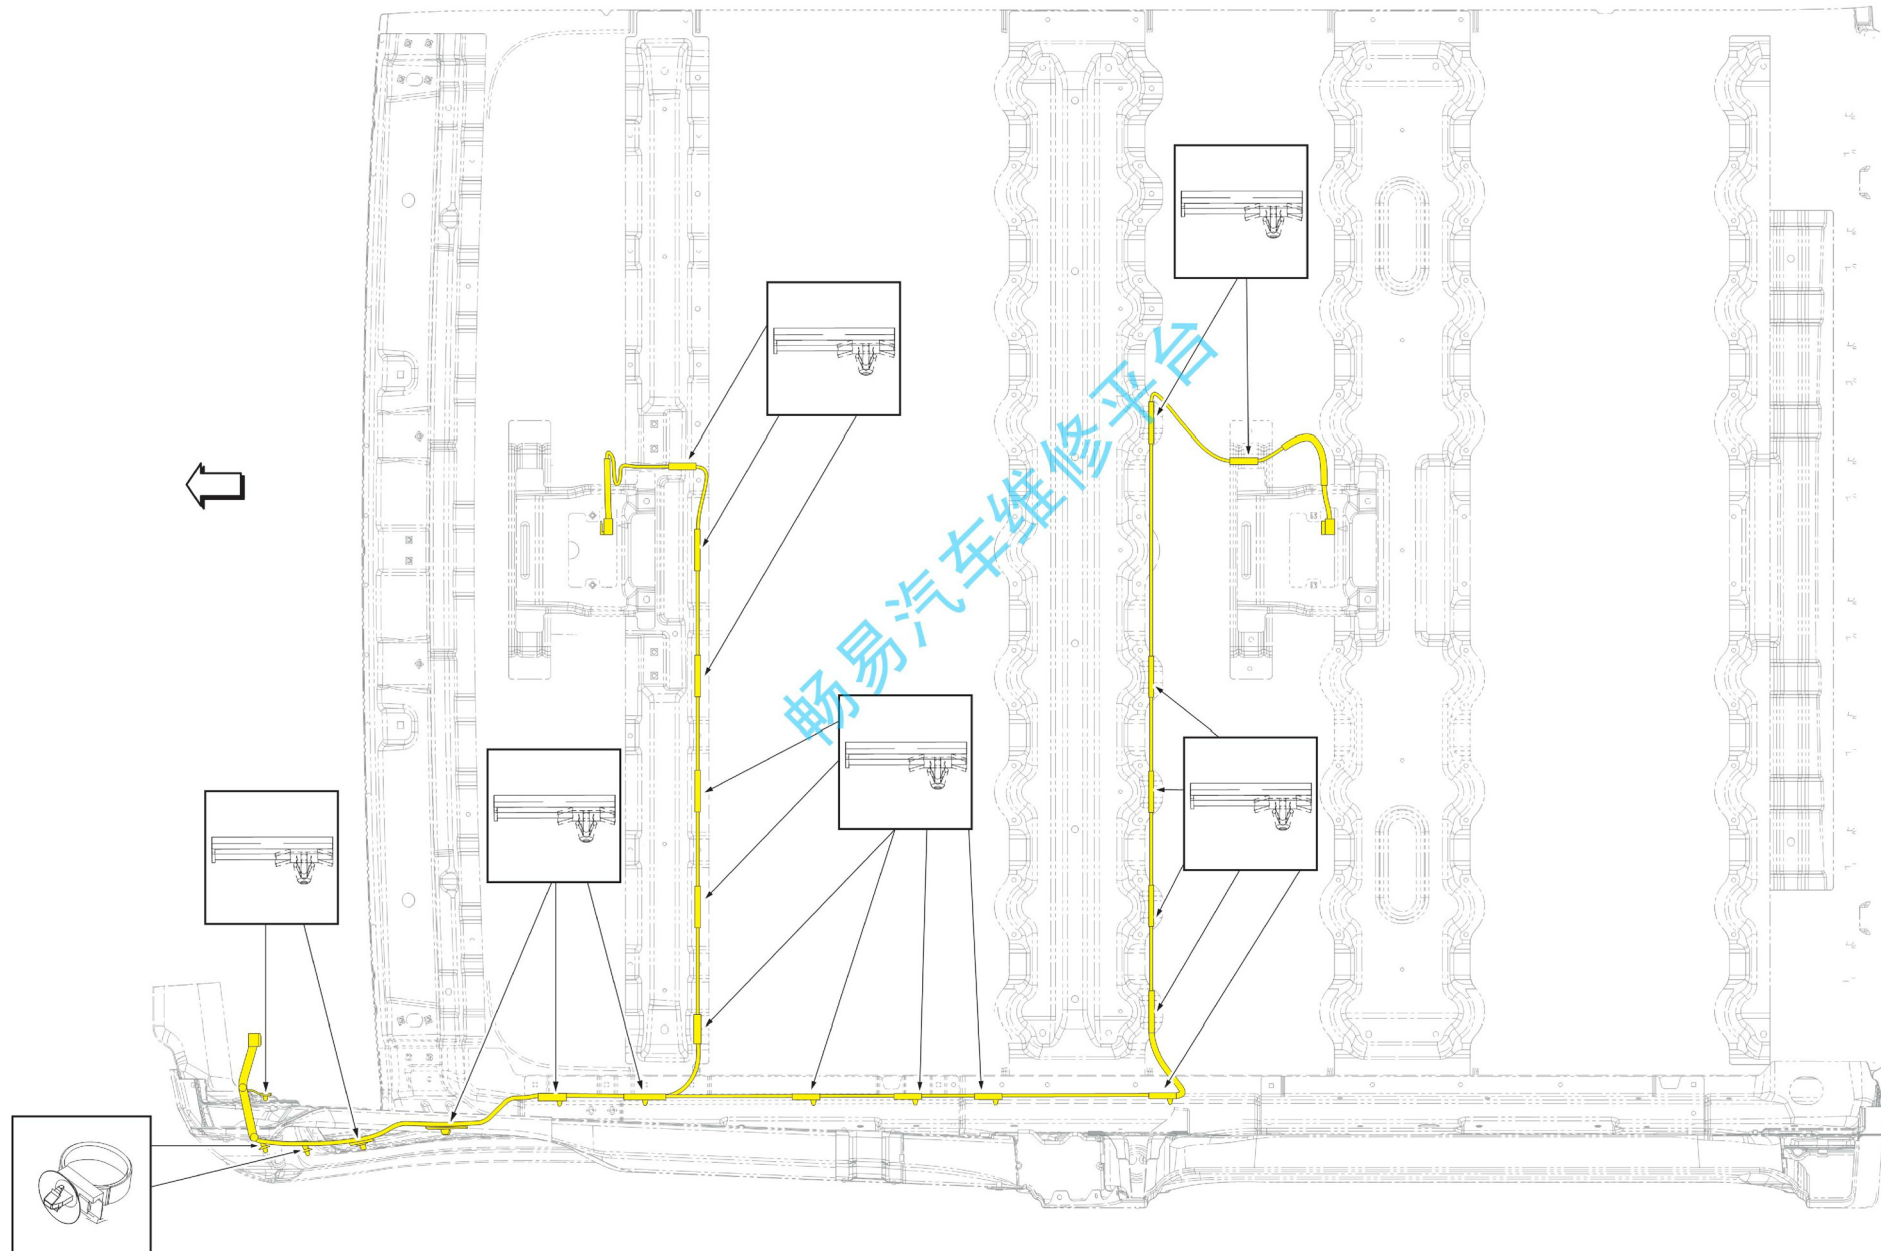

左前门线束（14A585）（双排）安装图

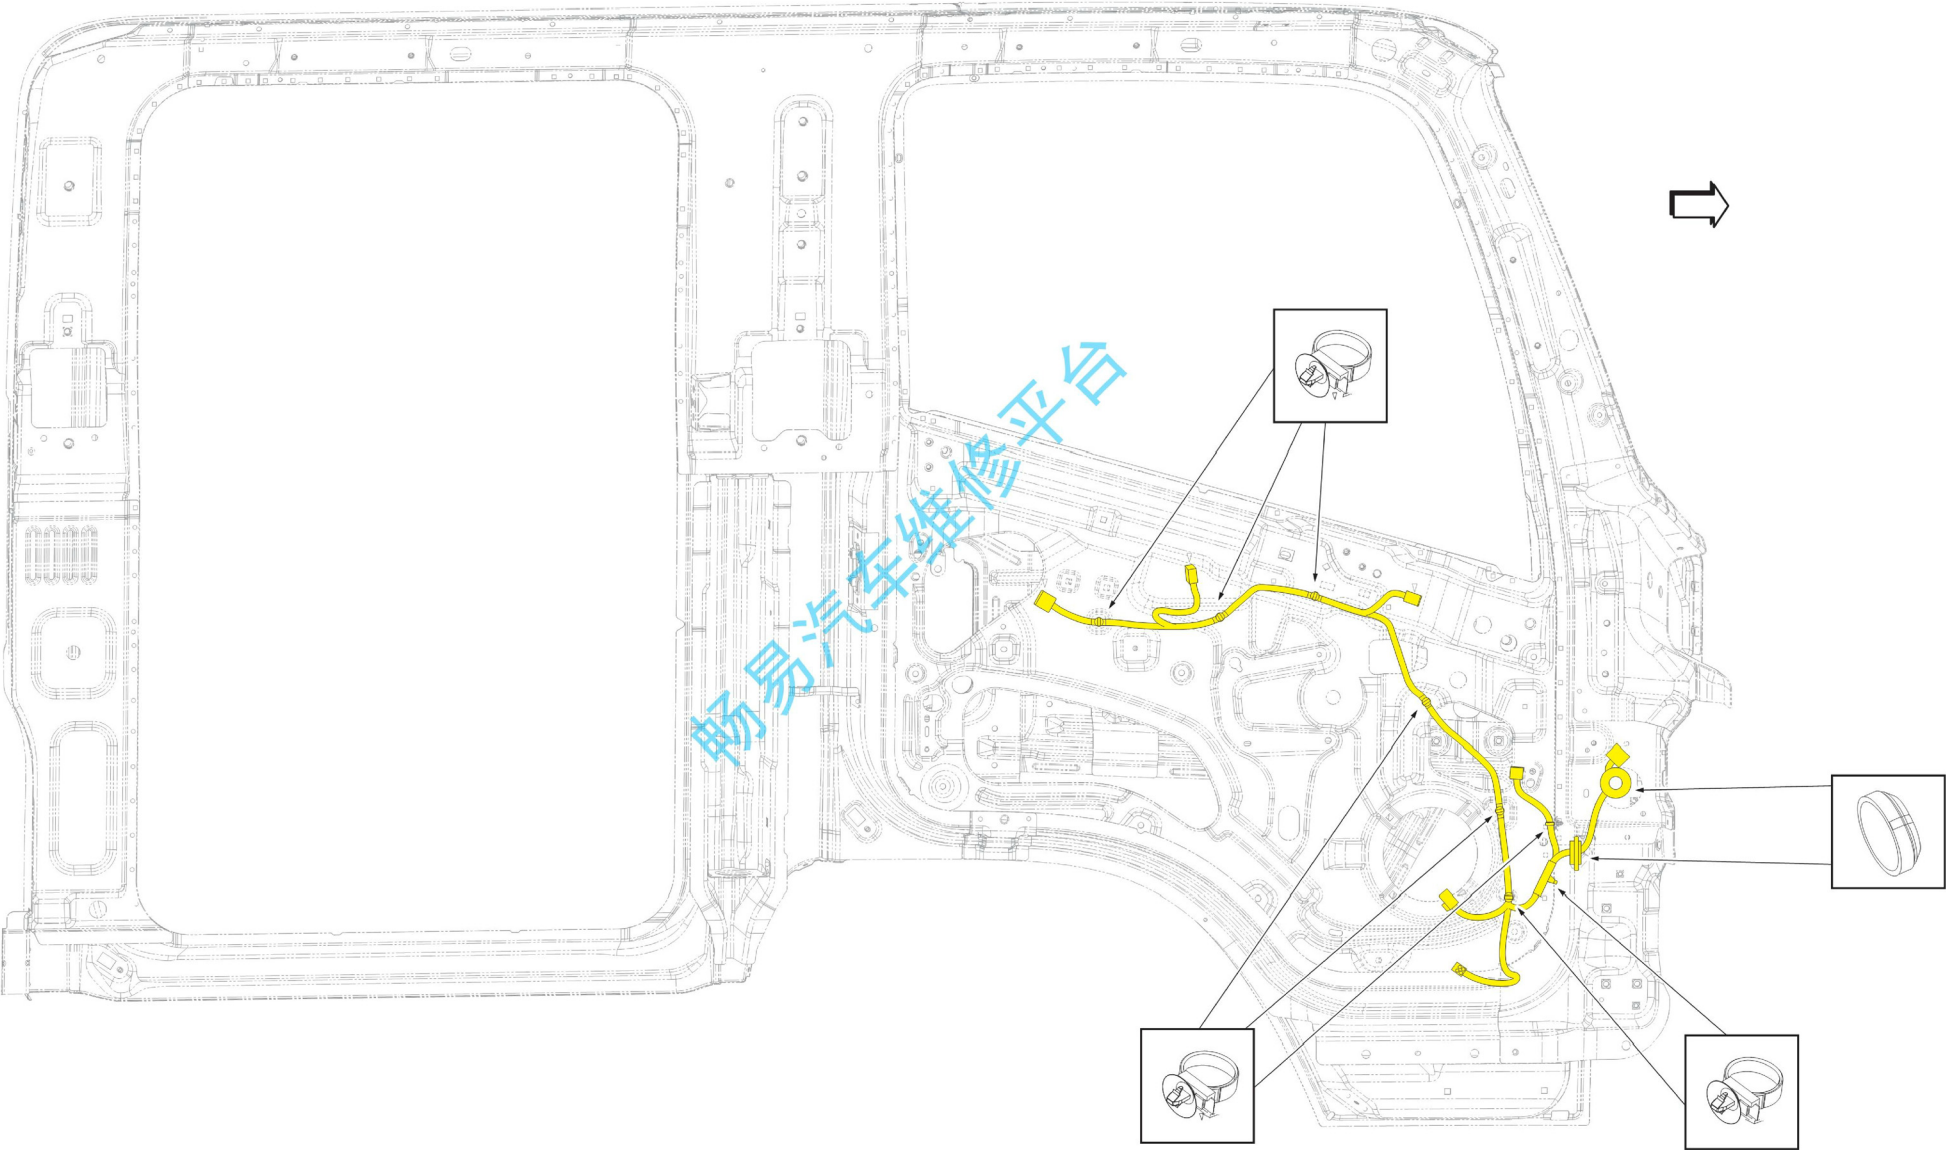

右前门线束 (14A584) (双排)

