

第八篇—系统电路图

ABS系统	800-00-01-1
仪表	800-00-03-1
BCM1	800-00-04-1
BCM2	800-00-04-2
电源分布1	800-00-05-1
电源分布2	800-00-05-2

精通汽修在线平台




800-00-01-1

制动系统

800-00-01-1

ABS系统

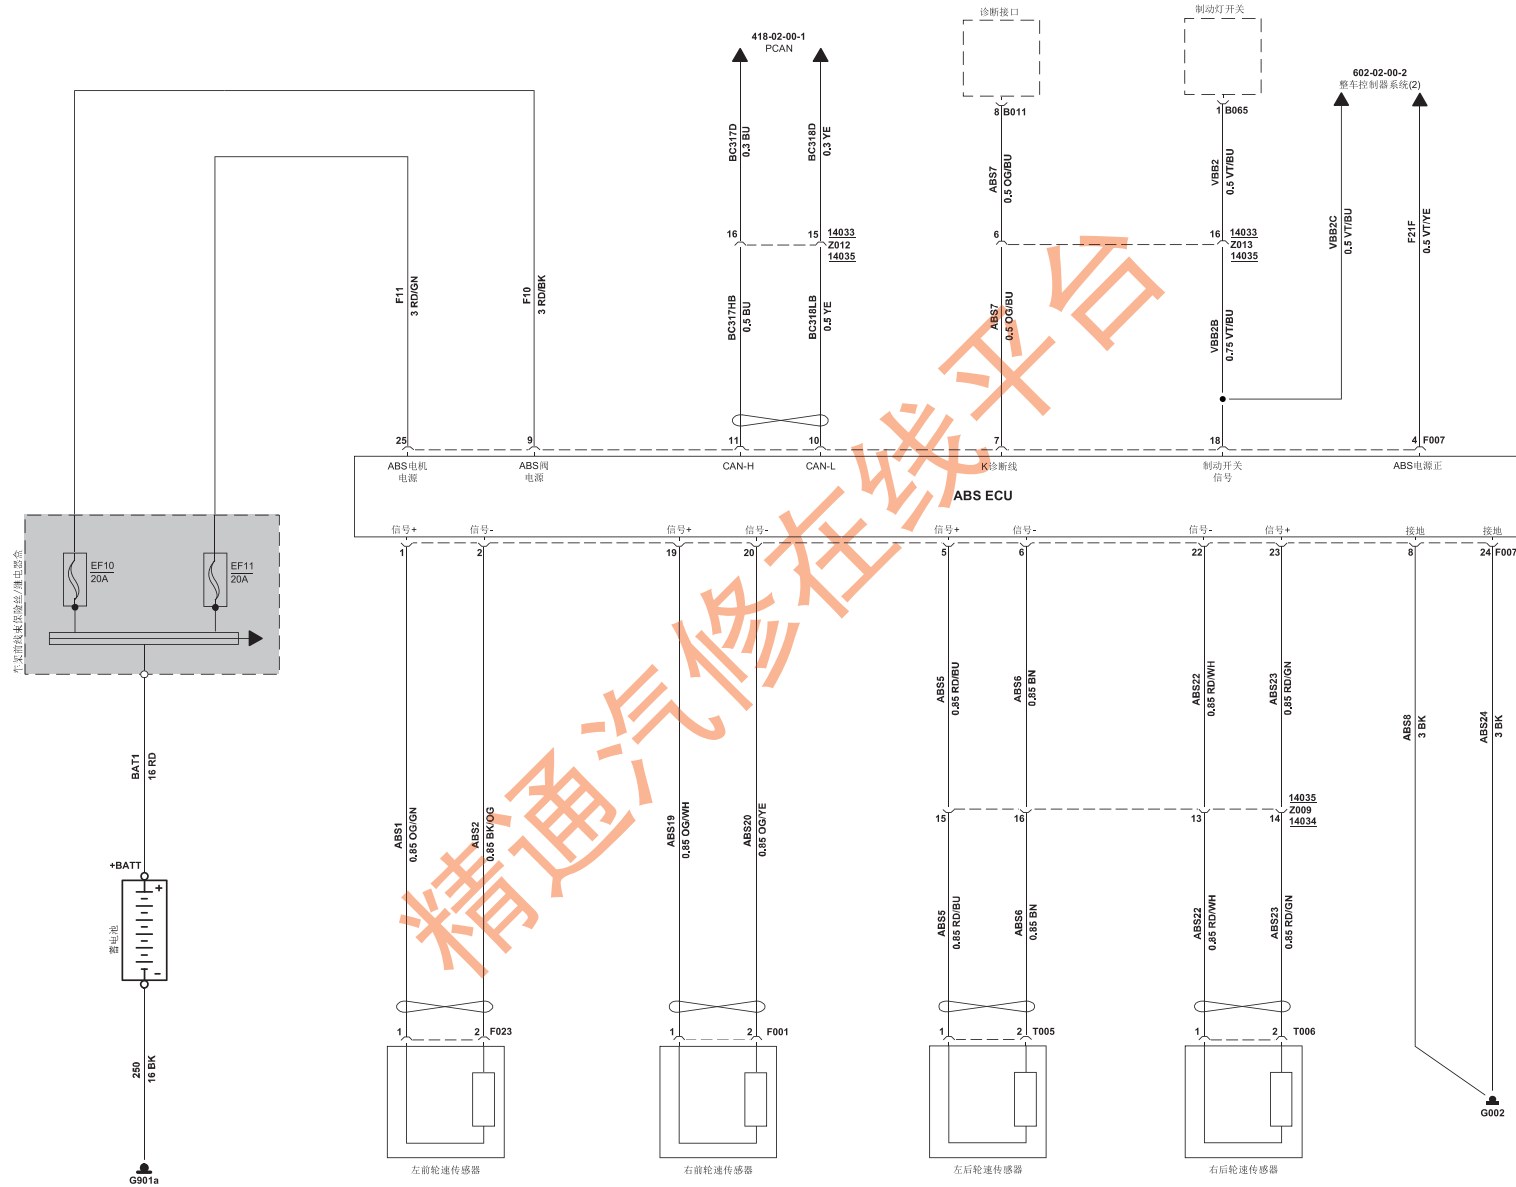

N800 BEV




精通汽修在线平台
99元VIP包年体验

800-00-03-1

仪表和警告系统


800-00-03-1

仪表

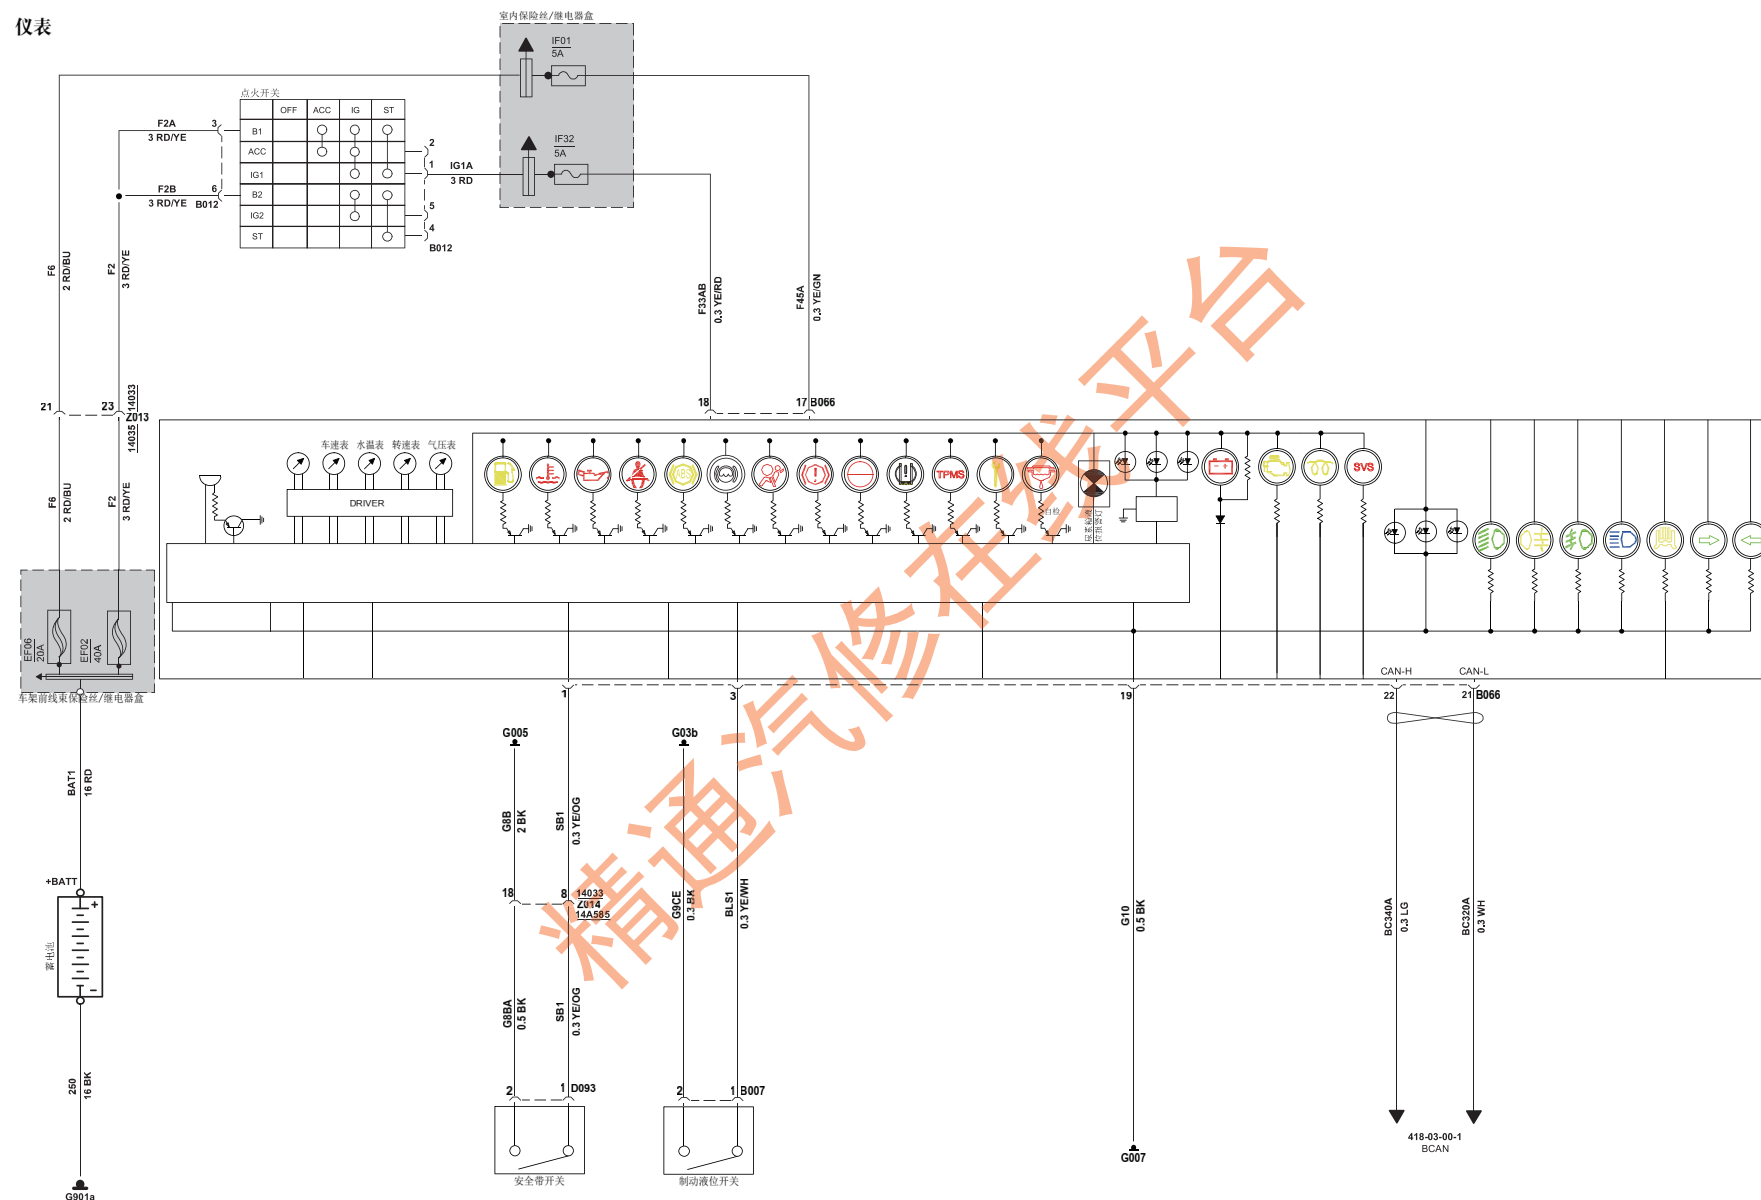

800-00-04-1

N800 BEV

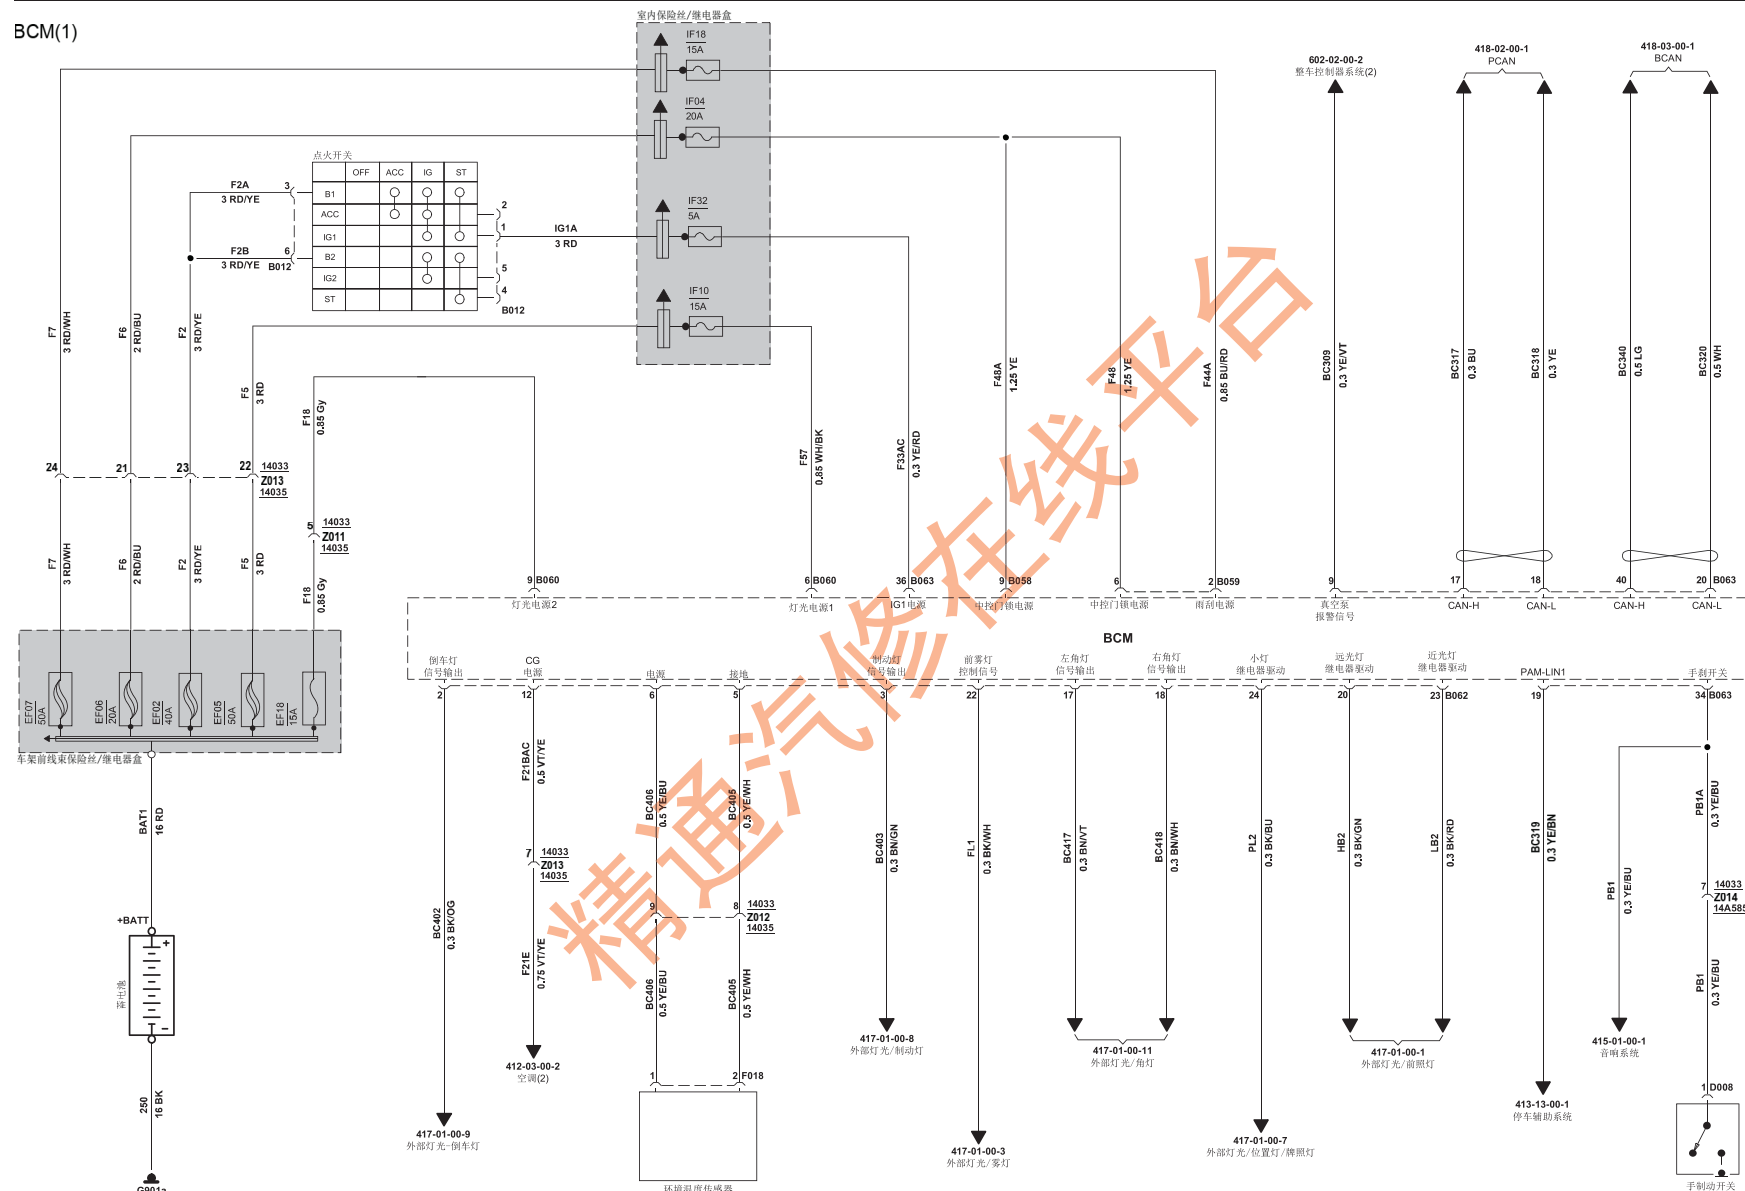


800-00-04-2

BCM

800-00-04-2

BCM(2)

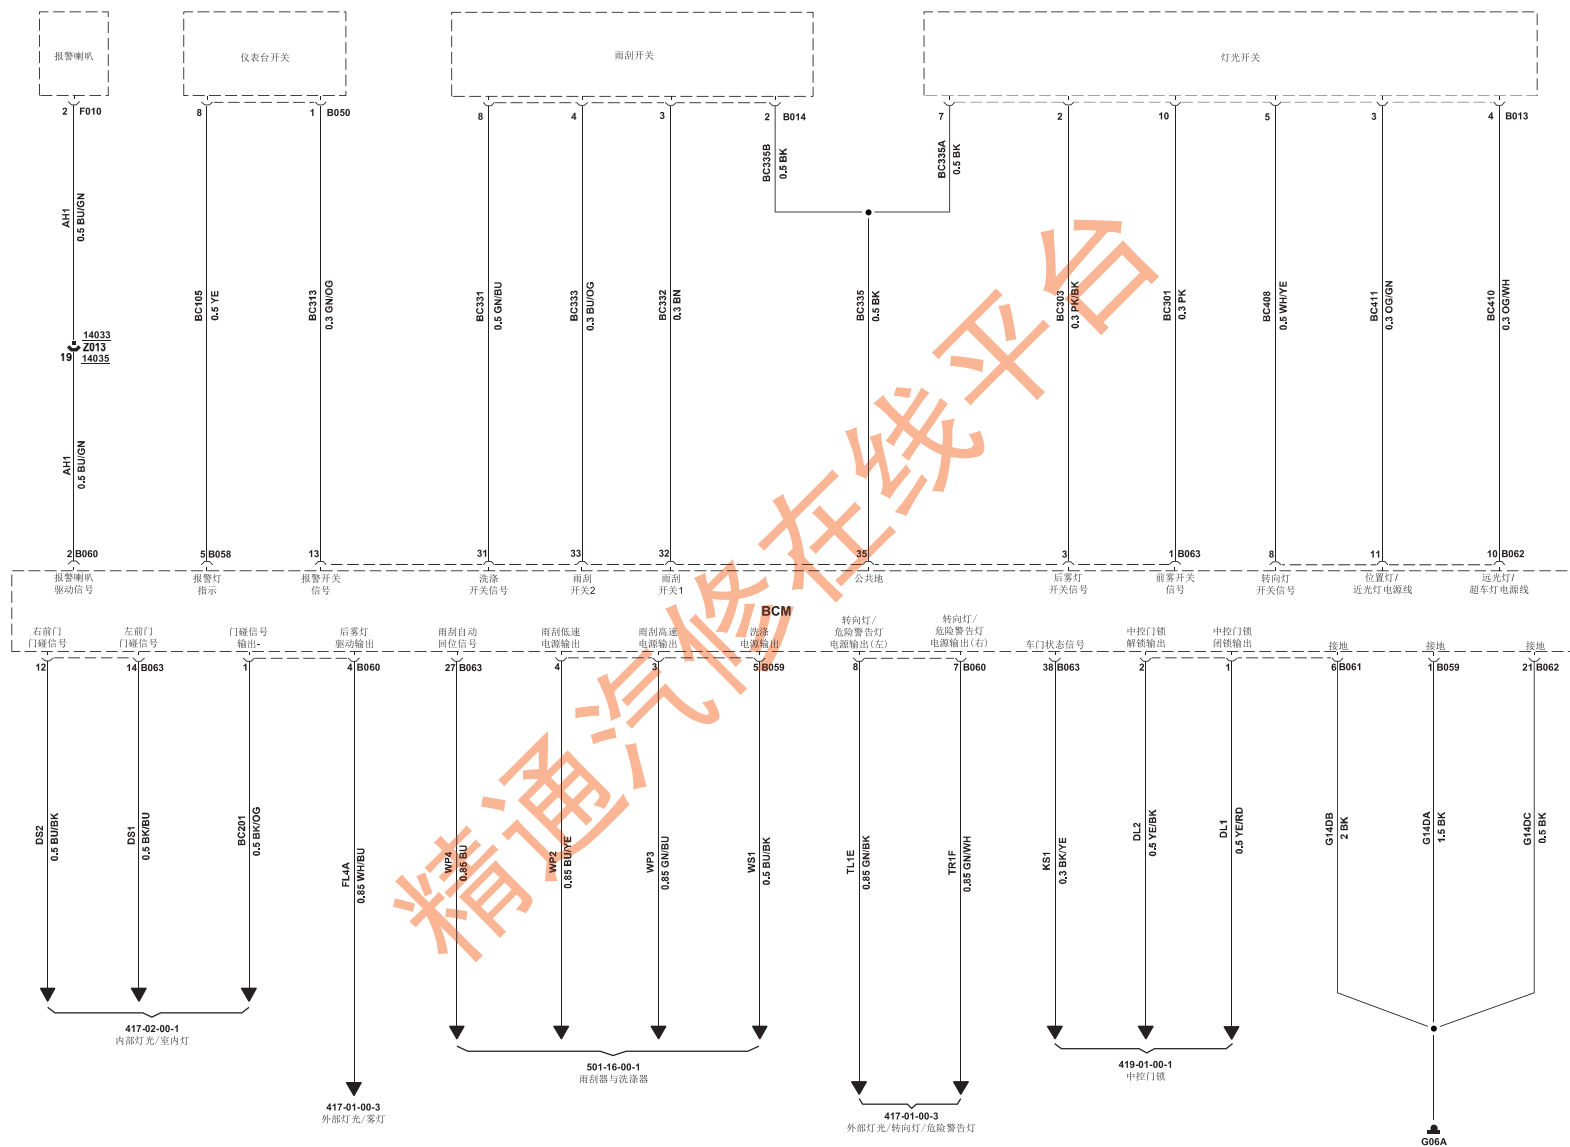

N800 BEV


精通汽修在线平台
99元VIP包年体验

800-00-05-1

电源分布

800-00-05-1

电源分布(1)

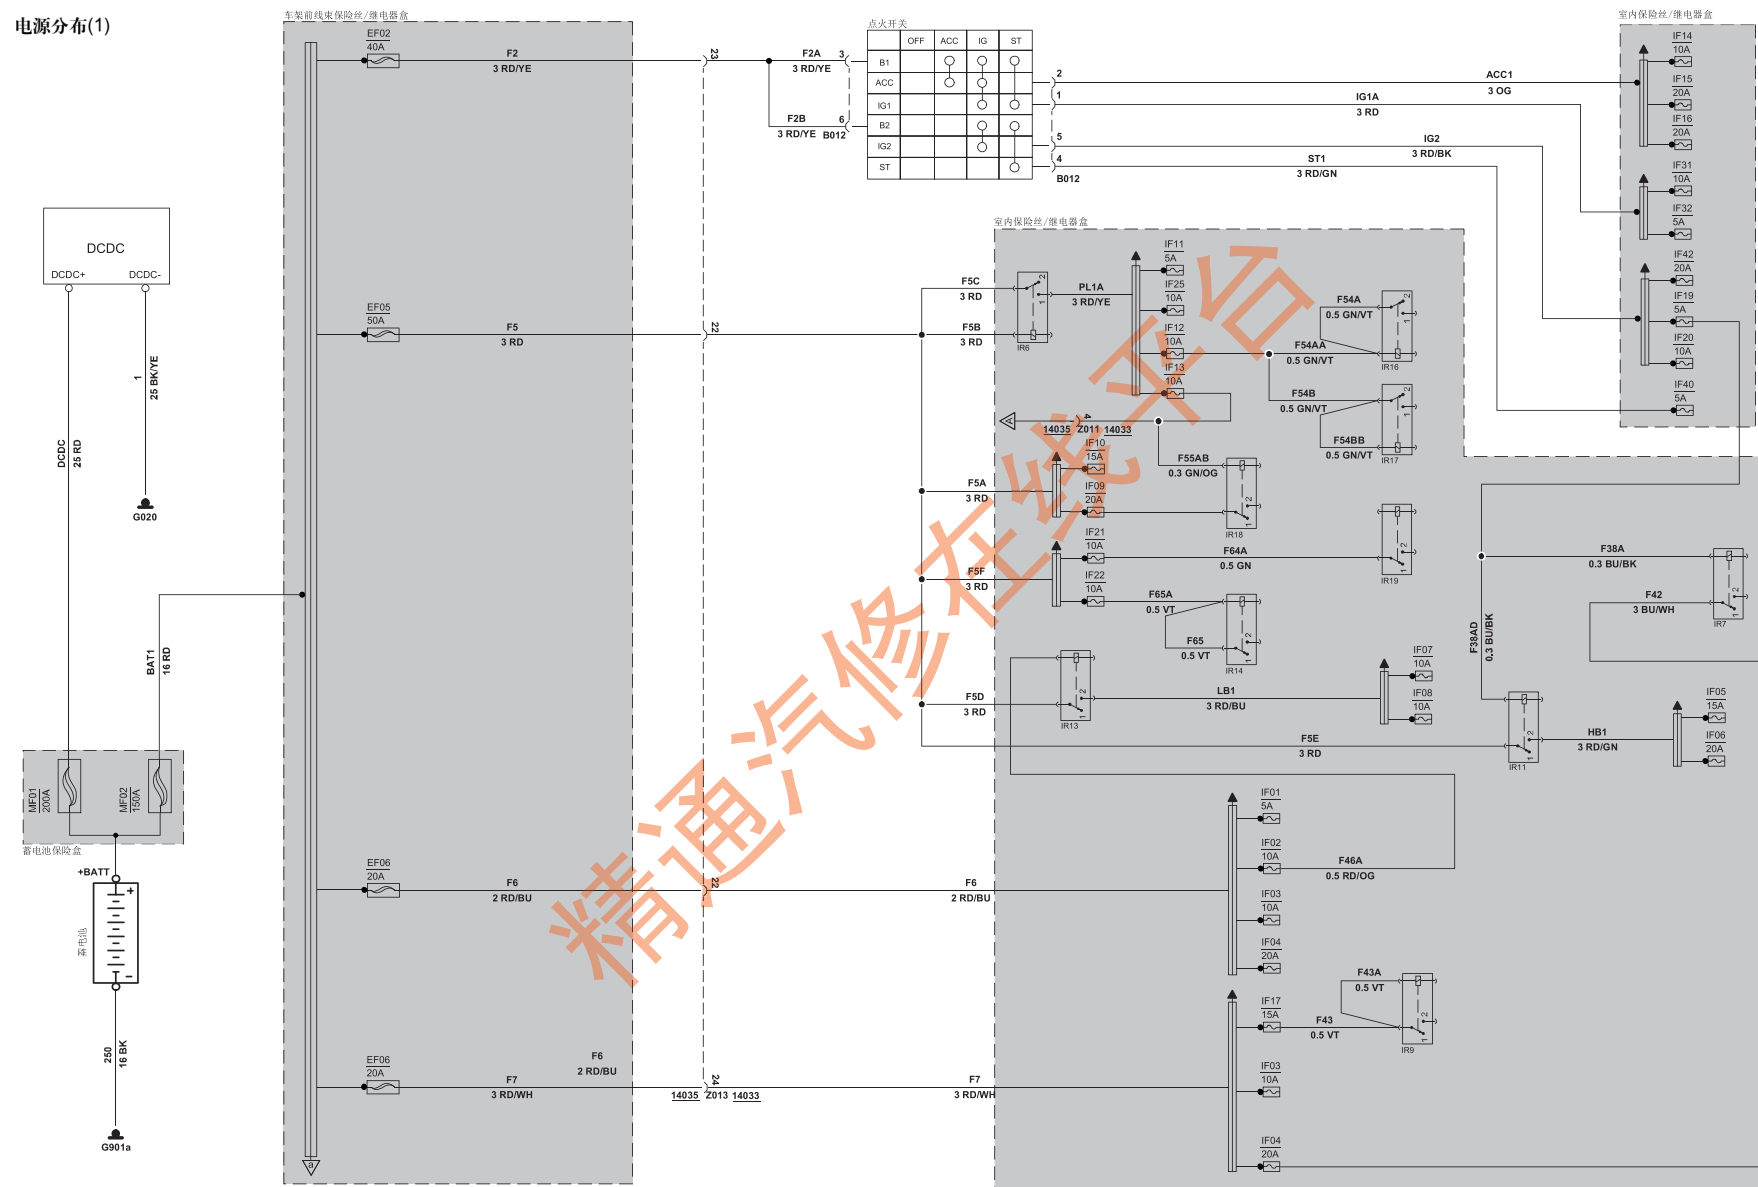


N800 BEV

800-00-05-2

电源分布

800-00-05-2

电源分布(2)

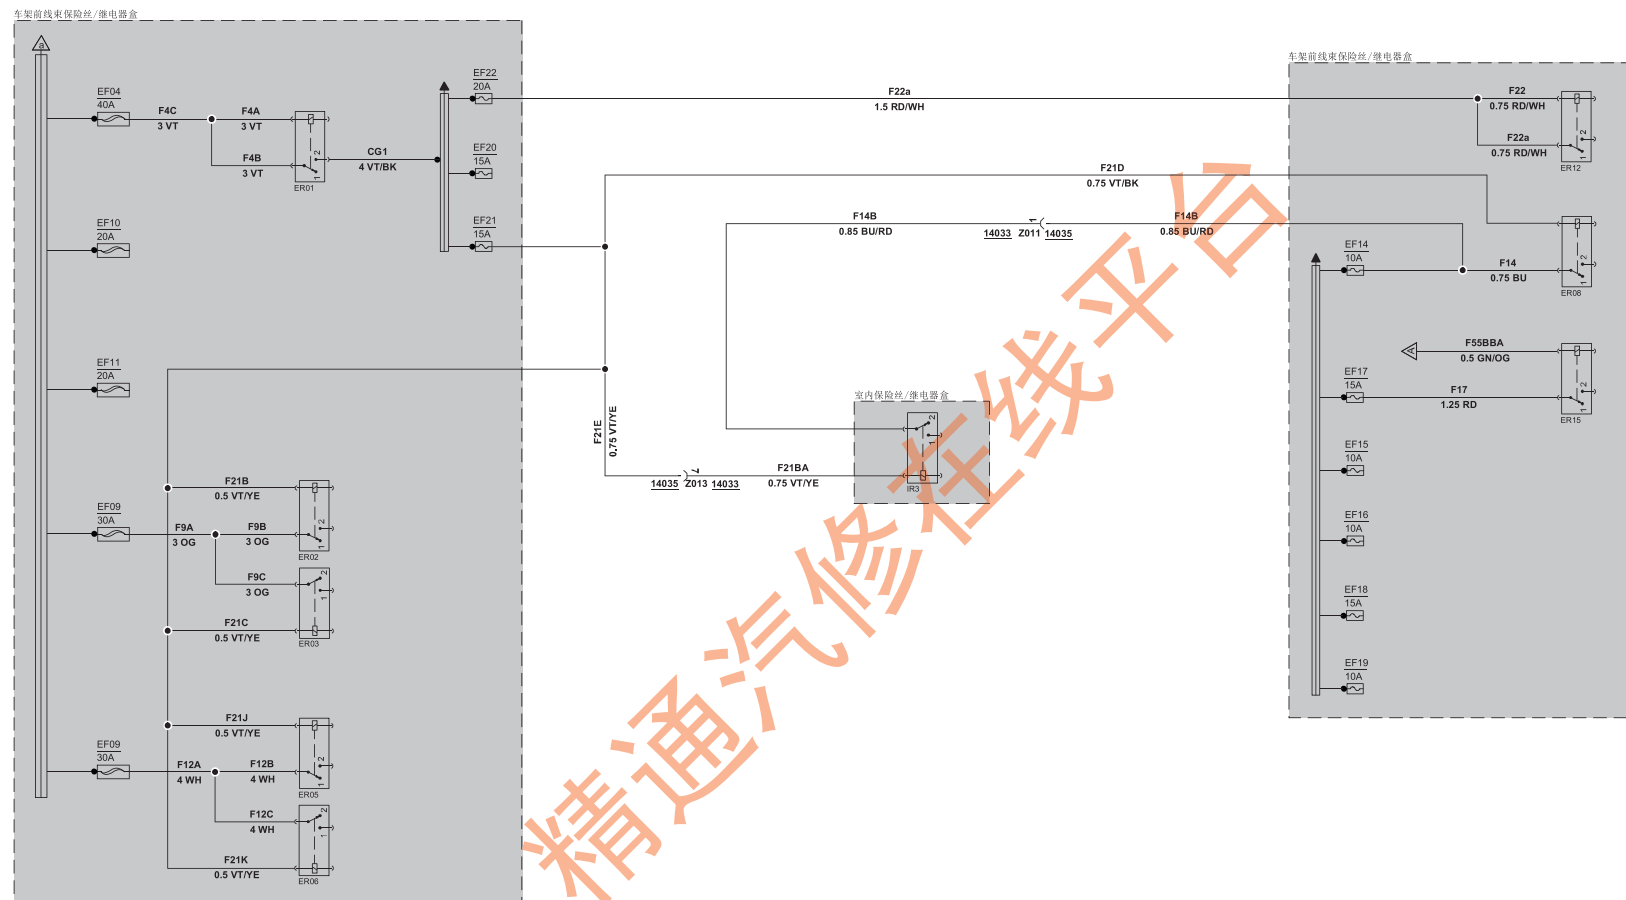

N800 BEV

