


前舱线束

接地点分布_G01&G02&G12&G13

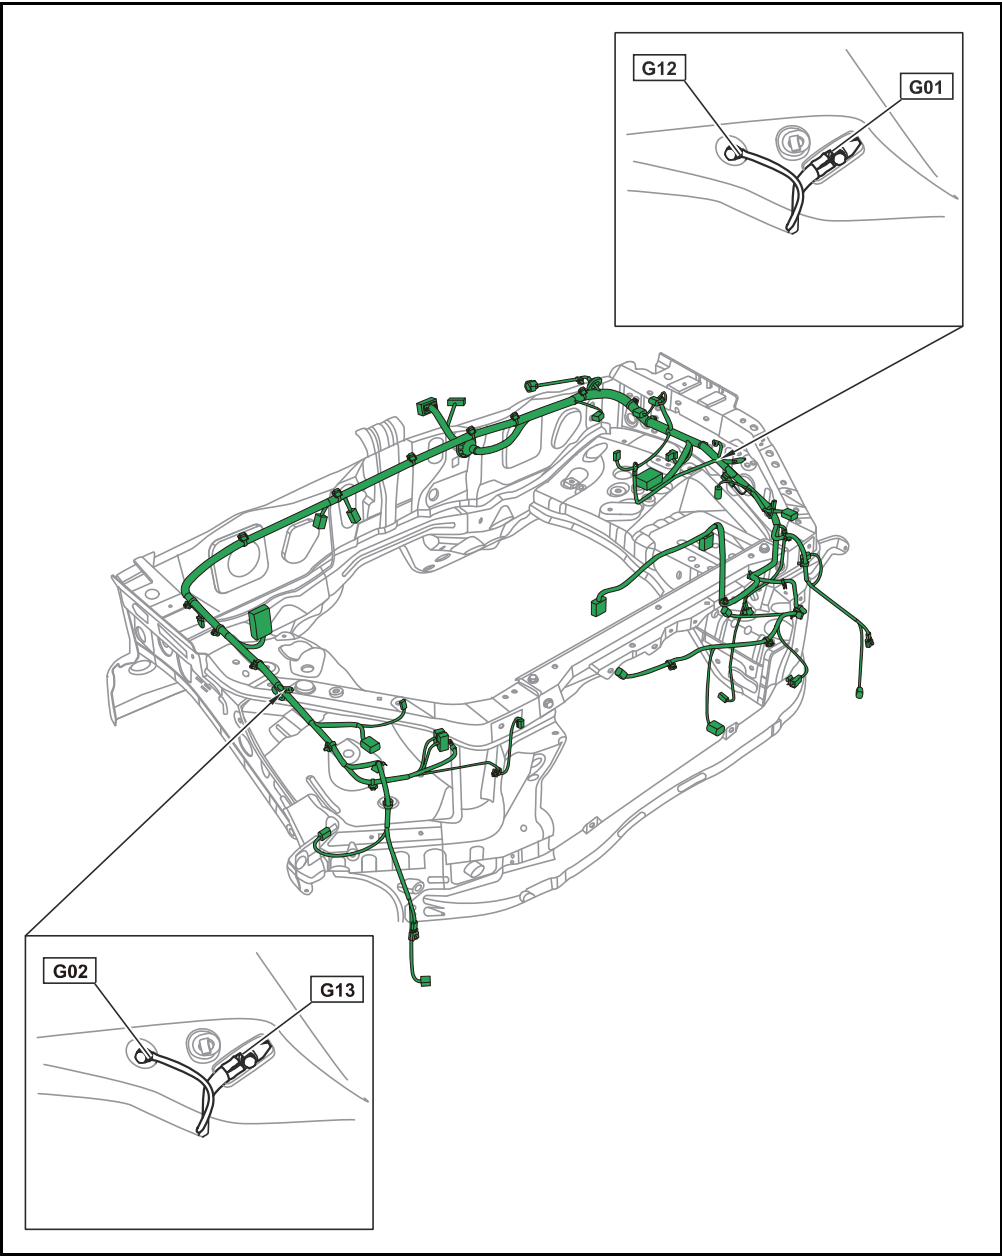

接地点功能_G01&G02&G12&G13

