

8W-63 POWER SEAT

Component	Page	Component	Page
Driver Heated Seat Back	8W-63-5	Heated Seat Module	8W-63-5, 6
Driver Heated Seat Cushion	8W-63-5	Heated Seat Relay	8W-63-2
Driver Heated Seat Switch	8W-63-5	Passenger Heated Seat Back	8W-63-6
Fuse 4	8W-63-2	Passenger Heated Seat Cushion	8W-63-5, 6
Fuse 6	8W-63-2	Passenger Heated Seat Switch	8W-63-5, 6
Fuse 17	8W-63-2	Power Distribution Center	8W-63-2
Fuse Block	8W-63-2	Power Seat Motor	8W-63-3, 4
G201	8W-63-2	Power Seat Switch	8W-63-3, 4
G300	8W-63-3, 4, 5, 6		









