

8W-91 CONNECTOR/GROUND/SPLICE LOCATION

TABLE OF CONTENTS

page

CONNECTOR/GROUND/SPLICE LOCATION	
DESCRIPTION	1

CONNECTOR/GROUND/SPLICE LOCATION

DESCRIPTION

This section provides illustrations identifying connector, ground and splice locations in the vehicle. Connector, ground and splice indexes are provided.

CONNECTORS

CONNECTOR NAME/NUMBER	COLOR	LOCATION	FIG.
A/C Compressor Clutch	BK	Lower Right Side of Engine Compartment On Engine	20, 21, 23,26
A/C - Heater Control Switch	GY	Center of Instrument Panel	30
A/C High Pressure Switch	LT GY	Lower Right Side Engine Compartment	21, 23
A/C Low Pressure Switch (LHD)	BK	Right Rear of Engine Compartment	1, 10, 11, 17
A/C Low Pressure Switch (RHD)	BK	Left Rear of Engine Compartment	10, 11, 15
A/C Pressure Transducer	GY	Lower Right Side of Engine Compartment on Engine	26
Accelerator Pedal Position Sensor	BK	Right Side Engine Compartment	9, 11, 17
Airbag Control Module (ORC) (Base)	YL	Under Center Console	36
Airbag Control Module (ORC) C1 (Premium)	YL	Under Center Console	36
Airbag Control Module (ORC) C2 (Premium)	YL	Under Center Console	36
Ambient Temperature Sensor	BK	Lower Left Front Fascia	1, 19
Ambient Temperature Sensor (Gas)	BK	Left Front Engine Compartment	1
Ambient Temperature Sensor - NGC	BK	Left Front Engine Compartment	1
Autostick Switch	WT	Center Console	36
Back-Up Lamp Switch	GY	Left Side of Engine Compartment on Manual Transmission	20, 21, 23,25, 26

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Barometric Read Solenoid (2.4L Turbo)	BK	Right Rear Engine Compartment	10
Battery Jump Post		Left Rear Engine Compartment	18
Battery Temperature Sensor (Diesel)	BK	Lower Passenger B-Pillar	48
Battery Temperature Sensor (Gas)	BK	Left Front Engine Compartment	13
Battery (+) (Diesel)		Under Left of Rear Seat	48
Battery (-) (Diesel)		Under Left of Rear Seat	48
Blower Motor	BK	Right Rear of Instrument Panel	N/S
Blower Motor Resistor Block	BK	Right Side of Cowl Panel	4, 13, 14, 16
Boost Pressure Sensor	BK	Lower Rear of Engine Compartment on Engine	20
Brake Lamp Switch	GY	Left Side of Brake Pedal	13, 14, 16
Brake Transmission Shift Interlock Solenoid	WT	Below Steering Column	27
Brake Warning Indicator Switch (LHD)	BK	Left Rear of Engine Compartment	1, 2, 4, 9, 12
Brake Warning Indicator Switch (RHD)	BK	Right Rear of Engine Compartment	N/S
C101	BK	Left Front Engine Compartment	1
C102	LT GY	Front Left Side of Engine Compartment	1, 21, 23
C103	DK GY	Front Side of Engine Compartment on Engine	21, 23
C105	WT	Left Side of Instrument Panel	13, 14, 16, 28, 33
C106	GY	Left Side of Instrument Panel	13, 14, 16, 28, 33
C107 (Export)	BK	Left Front of Vehicle	3, 4, 12, 15
C108 (Export)	BK	Right Front of Vehicle	8, 19
C109	BK	Lower Right Side of Engine Compartment	9, 10, 11, 17
C110	BK	Lower Right Side of Engine Compartment	9, 10, 11, 17
C111	LT GY	Left Front of Engine Compartment	4, 26
C112	BK	Left Front of Engine Compartment	4, 26
C114	DK GY	Left Front of Engine Compartment	4, 26
C121	BK	Front of Engine Compartment	19, 20
C122	LT GY	Front of Engine Compartment	19, 20
C124	DK GY	Front of Engine Compartment	19, 20
C125	BK	Front of Engine Compartment	12, 15, 20
C126	DK GY	Left Side of Engine Compartment	12, 15
C127	BK	Left Rear of Engine Compartment	12, 15, 18
C128	BK	Left Rear of Engine Compartment	12, 15, 18
C200	BK	Left Side of Instrument Panel	28, 32

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
C201	BK	Right Side of Instrument Panel	29, 33
C202	WT	Left Kick Panel	28, 32, 44
C203	GN	Lower Right Kick Panel	29, 33, 41
C204	WT	Left Side of Instrument Panel	28, 32, 38, 39, 44
C205	WT	Upper Right Kick Panel	29, 33, 38, 39, 41
C206 (LHD)	BK	Below Driver's Seat	36
C207	RD	Right Side of Instrument Panel	N/S
C208	RD	Left Side of Instrument Panel	35
C209 (LHD)	BK	Right Rear of Instrument Panel	29
C209 (RHD)	BK	Left Rear of Instrument Panel	32
C210 (RHD)	BK	Below Driver Seat	36
C211	WT	Below Driver Seat	N/S
C300	BK	Left B-Pillar	40, 45
C301	BK	Right B-Pillar	40, 42
C302	WT	Top Left of Liftgate	47, 51, 52
C303	DK GY	Left Rear Quarter	46, 53
C304	BK	Side of Fuel Tank	49
C305	YL	Left Rear of Front Console	44
C306	YL	Left Side of Front Console	41
C307	BK	Under Passenger Seat	N/S
C308	BK	Under Driver Seat	N/S
Camshaft Position Sensor	BK	On Engine Left Side of Engine Compartment	20, 22, 2325
Cargo Lamp	BK	Cargo Area	43
Center High Mounted Stop Lamp	BK	Top of Liftgate	51, 52
Center Stack Lamp	BK	Bottom Center of Instrument Panel	30
Cigar Lighter	BK	Bottom Center of Instrument Panel	36
Clockspring	GN	Bottom of Steering Wheel	27
Clutch Pedal Position Switch (Up)	BK	Left Side of Steering Column	11, 13, 14, 16
Controller Antilock Brake	BK	Left Side of Engine Compartment	2, 4, 12, 15
Crankshaft Position Sensor (2.0L/2.4L)	BK	Lower Rear of Engine Compartment On Engine	22, 23
Crankshaft Position Sensor (1.6L Gas/ 2.2L Diesel)	BK	Lower Front of Engine Compartment on Engine	20, 26
Data Link Connector	BK	Left Side of Instrument Panel	13, 14, 16
Dome Lamp	BK	Center of Headliner	N/S
Dome Lamp/Intrusion Sensor	WT	Center of Headliner	N/S
Driver Airbag	YL	Front of Steering Wheel	N/S
Driver Door Ajar Switch	BK	Left B-Pillar	N/S
Driver Door Power Lock Motor/Ajar Switch	BK	Driver Door	38, 39

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Driver Heated Seat Cushion	BK	Driver Seat	N/S
Driver Heated Seat Switch	BK	Driver Seat	N/S
Driver Seat Airbag	YL	Driver Seat	N/S
Driver Seat Belt Switch (LHD)	BK	Lower Left B-Pillar	45
Driver Seat Belt Switch (RHD)	BK	Lower Right B-Pillar	42
Driver Seat Belt Tensioner (LHD)	YL	Left B-Pillar	45
Driver Seat Belt Tensioner (RHD)	YL	Right B-Pillar	42
Driver Side Impact Sensor 1	GY	Lower Left B-Pillar	45
EGR Solenoid	GY	Rear of Engine Compartment on Engine	12, 15, 22
Electronic Throttle Control Module (1.6L)	BK	Center of Engine Compartment on Top of Engine	25, 26
Engine Control Module - C1	BK	Left Side Engine Compartment	20
Engine Control Module - C2	BK	Left Side of Engine Compartment	20
Engine Coolant Temperature Sensor	BK	Left Side of Engine Compartment on Engine	21, 26
Engine Oil Pressure Switch	LT GN	Right Rear of Engine Compartment	20, 22, 24, 25
Engine Starter Motor (1.6L)		Lower Rear of Engine Compartment on Engine	5, 25
Engine Starter Motor (2.0L/2.4L Except Turbo, 2.2L Diesel)		Lower Front of Engine Compartment on Engine	6, 18, 20, 21
Engine Starter Motor (2.4L Turbo)		Rear Engine Compartment on Engine	7, 23
EVAP/Purge Solenoid	BK	Lower Right Rear of Engine Compartment	1, 4, 10
Front Power Window Switch	NAT	Top Center of Instrument Panel	30
Front Washer Pump Motor	BK	Attached to Washer Reservoir	4, 13, 14, 16
Front Wiper Motor	BK	Center of Cowl Panel	4, 13, 14, 16
Front Wiper/Washer Switch	GY	Part of Multi-Function Switch	27
Fuel Heater Module (Diesel)	WT	Rear of Engine Compartment	12, 15
Fuel Injector No.1	BK	Center of Engine Compartment At Injector	20
Fuel Injector No.2	BK	Center of Engine Compartment At Injector	20
Fuel Injector No.3	BK	Center of Engine Compartment At Injector	20
Fuel Injector No.4	BK	Center of Engine Compartment At Injector	20, 26
Fuel Pressure Sensor	BK	Front of Engine Compartment on Engine	N/S
Fuel Pressure Solenoid	BK	Front of Engine Compartment Top of Engine	N/S
Fuel Pump Module	LT GY	On Fuel Tank	49

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Fuse Block	BK	Left Bottom of Instrument Panel	27, 28, 33
Fusible Link (2.0L/2.4L)		Front of Engine Compartment on Engine	21
Generator	BK	Right Front of Engine Compartment on Engine	18, 20, 22, 26
Glow Plug No. 1		Center of Engine Compartment Top of Engine	N/S
Glow Plug No. 2		Center of Engine Compartment Top of Engine	N/S
Glow Plug No. 3		Center of Engine Compartment Top of Engine	N/S
Glow Plug No. 4		Center of Engine Compartment Top of Engine	N/S
Headlamp Leveling Switch	BK	Center of Instrument Panel	30
Heated Seat Module	GR	Driver Seat	N/S
High Note Horn	BK	Left Inner Fender	1, 8, 19
Hood Ajar Switch	BK	Left Rear Engine Compartment	1, 4, 12, 15
Hood Lamp Switch		Left Rear Engine Compartment	1
Idle Air Control Motor	BK	Center of Engine Compartment Top of Engine	22
Ignition Coil	BK	Left Rear of Engine Compartment on Engine	22, 26
Ignition Switch C1	BK	Right Side of Steering Column	27
Ignition Switch C2	WT	Right Side of Steering Column	27
Inlet Air Temperature Sensor	BK	Left Side Engine Compartment on Engine	20, 22, 2325, 26
Input Speed Sensor	GY	Front of Engine Compartment on Transmission	21, 23
Instrument Cluster C1	BK	Driver's Side of Instrument Panel	27
Instrument Cluster C2	BK	Driver's Side of Instrument Panel	27
Instrument Panel Jumper		Left Side Instrument Panel Near C208	35
Intake Air Temperature Sensor (Diesel)	BK	Left Top of Engine	20
Knock Sensor	BK	Front of Engine Compartment on Engine	21, 23
Leak Detection Pump (Except NGC)	BK	Near Fuel Tank Module	N/S
Left Back-Up Lamp	GY	Left Side of Rear Fascia	53
Left City Lamp	GY	Left Front of Vehicle Near C107	N/S
Left Cylinder Lock Switch	BK	Driver Door	38, 39
Left Door Lock Switch	BK	Driver Door	38, 39
Left Fog Lamp	GY	Lower Left Front Fascia	1, 3, 19
Left Front Door Speaker	BK	Left Door	38, 39
Left Front Park/Turn Signal Lamp	NAT	Left Front of Vehicle	3, 12, 15

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Left Front Power Window Motor	BK	Left Front Door	38, 39
Left Front Side Marker Lamp (Export)	BK	Left Front Wheel Opening	3, 15
Left Front Turn Signal Lamp	NAT	Left Front of Vehicle	N/S
Left Front Wheel Speed Sensor	GY	Left Front Wheel Opening	1, 4, 12, 15
Left Headlamp Leveling Module	BK	Left Front of Vehicle Near C107	N/S
Left High Beam Headlamp	BK	At Headlamp Assembly	2, 3, 14, 16
Left Instrument Panel Speaker	BK	Left Upper Instrument Panel	N/S
Left License Lamp (Built-Up- Export)	NAT	Left Side of Rear Fascia	53
Left Low Beam Headlamp	GY	At Headlamp Assembly	3, 4, 12, 15
Left Power Mirror	WT	Left Front Door	38, 39
Left Rear Door Ajar Switch		Above Left Rear Wheel Well	46
Left Rear Door Power Lock Motor	BK	Rear of Left Rear Door	40
Left Rear Fog Lamp (LHD)	GY	Left Side of Rear Fascia	N/S
Left Rear Power Window Motor	BK	Left Rear Door	40
Left Rear Power Window Switch	LT GY	Rear of Front Center Console	36
Left Rear Speaker	BK	Left C-Pillar	47
Left Rear Turn Signal Lamp	GY	In Rear Lamp Assembly	46, 53
Left Rear Wheel Speed Sensor	GY	Left Rear Wheel Opening	N/S
Left Tail/Stop Lamp	BK	In Rear Lamp Assembly	46, 53
Left Turn Signal Indicator	BK	Left Top Side of Instrument Panel	31
Left Visor/Vanity Lamp	BK	Left Front Side of Headliner	N/S
License Lamp (Except Export)	NAT	Center of Rear Fascia	53
Liftgate Ajar Switch	BK	Bottom of Liftgate	50
Liftgate Cylinder Lock Switch	LT GY	Inside Liftgate	50
Liftgate Power Lock Motor	BK	Inside Liftgate	50
Low Note Horn	BK	Left Inner Fender	1, 8, 19
Manifold Absolute Pressure Sensor	BK	Rear of Engine Compartment Top of Engine	22, 24, 25
Map/Reading Lamps	BK	Front Headliner	N/S
Mass Air Flow Sensor	BK	Left Side of Engine Compartment on Engine	20
Mega Fuse		Below Passenger Seat	48
Multi-Function Switch	GY	Steering Column	27
Natural Vacuum Leak Detection Assembly (NGC)	BK	Right Front Fuel Tank	49
Noise Suppressor (1.6L)		Rear of Engine	25
Noise Suppressor (2.0L/2.4L)		Left Side Engine Compartment on Engine	22, 24

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Output Speed Sensor	GY	Front of Engine Compartment on Transmission	21, 23
Overhead Console Module	BK	Front Center of Headliner	N/S
Oxygen Sensor 1/1 Upstream	GY	Left Side Engine Compartment	22, 2425
Oxygen Sensor 1/2 Downstream	BK	Left Side Engine Compartment	22, 24, 25, 26
Parking Brake Switch		Rear of Front Center Console	36
Passenger Airbag	YL	Passenger Side of Instrument Panel	29, 32, 34
Passenger Door Power Lock Motor/Ajar Switch	BK	Passenger Door	38, 39
Passenger Heated Seat Cushion		Passenger Seat	N/S
Passenger Heated Seat Switch		Passenger Seat	N/S
Passenger Seat Airbag	YL	Passenger Seat	N/S
Passenger Seat Belt Switch (LHD)	BK	Lower Right B-Pillar	42
Passenger Seat Belt Switch (RHD)	BK	Lower Left B-Pillar	45
Passenger Seat Belt Tensioner (LHD)	YL	Right B-Pillar	42
Passenger Seat Belt Tensioner (RHD)	YL	Left B-Pillar	45
Passenger Side Impact Sensor 1	GY	Lower Right B-Pillar	42
PCV Heater		Rear Center of Engine Compartment	12, 15
Power Distribution Center	BK	Left Side of Engine Compartment	4, 5, 6, 12, 15
Power Mirror Switch (LHD)	BK	Left Side of Instrument Panel	28
Power Mirror Switch (RHD)	GY	Right Side of Instrument Panel	33
Power Outlet	BK	Top of Front Console	30
Power Seat Motor	GY	Inside Driver Seat	N/S
Power Seat Switch	WT	Below Driver Seat	N/S
Power Steering Pressure Switch	GY	Left Rear Engine Compartment	1, 4
Power Sunroof Module C1	NAT	Right Side of Sunroof	37
Power Sunroof Module C2	BK	Sunroof	N/S
Powertrain Control Module (1.6L)	BK	Left Rear of Engine	25, 26
Powertrain Control Module C1 (2.0L/2.4L)	BK	Left Side Engine Compartment	22
Powertrain Control Module C2 (2.0L/2.4L)	GY	Left Side Engine Compartment	1, 23
Powertrain Control Module C3 (2.0L/2.4L)	WT	Left Side Engine Compartment	22
Powertrain Control Module C4 (2.0L/2.4L)	GN	Left Side Engine Compartment	22, 23

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Radiator Fan Motor	BK	Front Center Engine Compartment	1, 2, 19
Radio	WT	Center of Instrument Panel	30
Radio Antenna (LHD)		Right Rear Instrument Panel	29
Radio Antenna (RHD)		Left Rear Instrument Panel	32
Radio Antenna Cable		Center Instrument Panel	30
Radio Ground		Center Instrument Panel	N/S
Rear Power Outlet	RD	Right Rear Cargo Area	43
Rear Window Defogger		Left Rear Liftgate	51
Rear Window Defogger Ground		Right Rear Liftgate	51
Rear Window Defogger Switch	BK	Lower Center Instrument Panel	30
Rear Wiper Motor	LT GY	Center of Liftgate	50
Rear Wiper Switch	GY	Lower Center Instrument Panel	30
Remote Keyless Entry Antenna (Japan)	BK	Center of Instrument Panel	N/S
Remote Keyless Entry Module	BK	Upper Center Instrument Panel	31
Right Back-Up Lamp	GY	Right Side of Rear Fascia	53
Right City Lamp	GY	Right Front of Vehicle Near C108	N/S
Right Cylinder Lock Switch	BK	Passenger Door	38, 39
Right Door Lock Switch	BK	Passenger Door	38, 39
Right Fog Lamp	GY	Lower Right Front Fascia	1, 8, 11, 19
Right Front Door Speaker	BK	Right Door	38, 39
Right Front Park/Turn Signal Lamp	NAT	Right Front of Vehicle	1, 8, 19
Right Front Power Window Motor	BK	Right Front Door	38, 39
Right Front Side Marker (Export)	BK	Right Front Wheel Opening	1, 8, 19
Right Front Turn Signal Lamp	NAT	Right Front of Vehicle	N/S
Right Front Wheel Speed Sensor	GY	Right Front Wheel Opening	9, 10, 11, 17
Right Headlamp Leveling Module	BK	Right Front of Vehicle Near C108	N/S
Right High Beam Headlamp	BK	Right Front Headlamp Assembly	1, 8, 11, 19
Right Instrument Panel Speaker	BK	Right Upper Instrument Panel	N/S
Right License Lamp	NAT	Right Side of Rear Fascia	53
Right Low Beam Headlamp	GY	Right Front Headlamp Assembly	1, 8, 19
Right Power Mirror	WT	Right Front Door	38, 39
Right Rear Door Ajar Switch		Right C-Pillar	43
Right Rear Door Power Lock Motor	BK	Right Rear Door	40
Right Rear Fog Lamp (RHD)	GY	Right Side of Rear Fascia	N/S
Right Rear Power Window Motor	BK	Right Rear Door	40

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

CONNECTOR NAME/ NUMBER	COLOR	LOCATION	FIG.
Right Rear Power Window Switch	BK	Rear of Front Center Console	36
Right Rear Speaker	BK	Right Side Shelf Panel	43
Right Rear Turn Signal Lamp	GY	In Rear Lamp Assembly	43
Right Rear Wheel Speed Sensor	BK	Right Rear Wheel Opening	N/S
Right Tail/Stop Lamp	BK	In Rear Lamp Assembly	43
Right Turn Signal Indicator	BK	Right Side of Instrument Panel	31
Right Visor/Vanity Lamp	BK	Right Front Headliner	N/S
Sentry Key Immobilizer Module	BK	Right of Steering Column	27
Siren	BK	Left Front Wheel Opening	1, 3, 12, 15
Speed Control Servo	BK	Right Rear Corner of Engine Compartment	1, 10
Speed Control Switch	YL	At Steering Wheel	N/S
Sunroof Motor	NAT	Right Side of Sunroof Assembly	N/S
Sunroof Switch	BK	Part of Overhead Console	N/S
Surge Solenoid	BK	Right Rear Engine Compartment	10
Swirl Solenoid	BK	Rear Side of Engine Compartment	9, 17
Throttle Inlet Pressure Sensor	NAT	Right Rear Engine Compartment	10
Throttle Position Sensor	NAT	On Throttle Body	22, 23
Traction Control Switch	WT	Lower Center of Instrument Panel	30
Transmission Range Indicator Illumination (PRNDL)	BK	Left Side of Transmission Selection Lever	36
Transmission Range Sensor (2.0L/2.4L)	DK GY	Front of Engine Compartment on Transmission	21, 23
Transmission Solenoid/Pressure Switch Assembly (2.0L/2.4L)	BK	Front of Engine Compartment on Transmission	21, 23
Vehicle Speed Sensor (Gas)	BK	Front of Engine Compartment on Transmission	23, 25, 26
Vehicle Speed Sensor (Diesel)	BK	Left Side of Engine Compartment on Engine	20
Wastegate Solenoid	BK	Rear Side of Engine Compartment	9, 10, 17

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

GROUNDS

GROUND	LOCATION	FIG.
G100 (Gas)	Left Front Engine Compartment	2, 5, 6
G100 (Diesel)	Below Passenger Seat	7, 48
G101	At Battery Tray	5, 6, 7, 18
G102	Left Fender Area	1, 14, 16
G103	Left Fender Area	1, 14, 16
G104	Right Fender Area	9, 10, 11, 17
G105	Left Front Inner Fender	13, 14, 16
G106	In T/O for Powertrain Control Module	25, 26
G200	Center Rear of Instrument Panel	31
G201	Center Rear of Instrument Panel	28, 33
G202	Left Kick Panel Near T/O for Airbag Control Module	36
G203	Center Rear of Instrument Panel	31
G204	Left Kick Panel	31
G300	Left Rear Quarter	46, 47
G301	Right Rear Quarter	43
G302	Upper Left Rear Cargo Area	N/S

SPLICES

SPLICE	LOCATION	FIG.
S100	Near T/O for Fuel Injectors	N/S
S101	Near Engine Starter Eyelet	23
S102	Near T/O for Inline C103	21
S103	Near T/O for Powertrain Control Module - C1	22
S104	In T/O for PCM C4	21
S106	Near T/O for Oxygen Sensor 1/1 Upstream	22
S107	Near T/O for C103, Left Side of Engine	21
S109	Near T/O for Engine Oil Pressure Switch	22
S111 (MTX)	Near T/O for Back-up Lamp Switch	21
S111 (ATX)	Near T/O for Input Speed Sensor	N/S
S113 (LHD)	Near T/O for Brake Warning Indicator Switch	1, 12
S114	In T/O for Oxygen Sensor 1/1 Upstream	22
S115 (1.6L)	Near T/O for Brake Warning Indicator Switch	2
S115 (2.0L/2.4L Except Turbo)	Near T/O for Grounds G102/G103	1
S116 (1.6L)	In T/O for Left Low Beam Headlamp	3
S116 (2.0L export)	Near T/O for Grounds G102/G103	1, 12
S117	Near T/O for Radiator Fan Motor	13, 15, 19
S118	Left Front Engine Compartment	1, 13, 19
S119	Near T/O for Controller Antilock Brake	2, 6, 15, 16
S120	Near T/O for Right Headlamp Assembly	1, 17, 19

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

SPLICE	LOCATION	FIG.
S121	Right Side Engine Compartment	9, 10, 17
S122	In T/O for Data Link Connector	13
S123 (IN PDC)	Inside of Power Distribution Center (PDC)	5, 6, 7, 12, 15
S124 (IN PDC)	Inside of Power Distribution Center (PDC)	5, 6, 12, 15
S125 (IN PDC)	Inside of Power Distribution Center (PDC)	5, 6, 7, 12, 15
S126	Near Data Link Connector	13, 14, 16
S128 (LHD Diesel)	Near T/O for PCV Heater	N/S
S128 (Gas, RHD Diesel)	Near T/O for Powertrain Control Module - C2	1, 15
S129 (1.6L)	Near T/O for Power Steering Pressure Switch	2
S129 (LHD 2.0L/2.4L)	Near T/O for Powertrain Control Module - C2	1
S129 (IN PDC) (RHD, LHD Diesel)	Inside of Power Distribution Center (PDC)	5, 12, 15
S131	Near T/O for Powertrain Control Module - C2	1, 12, 15
S132	Right Front Engine Compartment	1, 19
S134 (LHD)	Near T/O for Left Front Fog Lamp	12, 13, 15
S134 (RHD)	Right Front Engine Compartment	19
S136	In T/O for Powertrain Control Module C2 and C4	22
S138	In T/O for Siren	1, 12, 15
S140	In T/O for PCM C2 and C4	22
S141	Near T/O for EVAP Purge Solenoid	1, 2, 12, 19
S142	Near T/O for Radiator Fan Motor	13, 19
S143	Near T/O for Powertrain Control Module - C2	1
S144	Near T/O for Left Low Beam Headlamp	13, 15
S146	Near T/O for Left Headlamp Assembly	1, 15
S147 (1.6L)	Near T/O for Ignition Coil	25
S148	Near T/O for Manifold Absolute Pressure Sensor	25
S149	Near T/O for Engine Control Module C1	20
S150	Near Power Distribution Center	12, 15
S151	Near T/O for Fuel Pressure Solenoid	20
S152	Near T/O for Fuel Pressure Solenoid	20
S153	Near T/O for C126	12, 15
S154 (LHD)	Near T/O for PCV Heater	12
S154 (RHD)	Near T/O for PCV Heater	19
S155	Near T/O for C122	20
S156	Near T/O for Engine Control Module C1	20
S157	Near T/O for Fuel Pressure Solenoid	20
S158	Near T/O for Mass Air Flow Sensor	20
S159	Near T/O for Starter Motor	20
S160	Near T/O for C124	20
S161	Near T/O for C121	20
S162	Near Engine Control Module - C2	20
S163	Near Engine Control Module - C3	20

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

SPLICE	LOCATION	FIG.
S164 (Diesel)	Near T/O for C128	18
S165 (Diesel)	Near Fusible Link	N/S
S166 (Diesel)	Near Fusible Link	N/S
S167 (Diesel)	Near T/O for C128	18
S168 (Diesel)	Near T/O for C128	18
S169 (Diesel)	Near T/O for C128	18
S170 (1.6L)	Near Fusible Link	N/S
S171 (1.6L)	Near Fusible Link	N/S
S172	Right Front Engine Compartment	1
S173	Left Rear Engine Compartment	1
S174 (Gas)	Left Front Fender	3
S174 (Diesel)	Right Front Fender	19
S175 (Gas)	Right Engine Compartment	1
S175 (Diesel)	Right Front Fender	19
S176 (LHD Diesel)	Left Rear Engine Compartment	12
S176 (RHD Diesel)	Near T/O for Ambient Temperature Sensor	19
S177	Top of Engine	24
S178	Left Engine	20
S179 (Export)	Near Right City Lamp	N/S
S180 (Export)	Near Left City Lamp	N/S
S191	Near T/O for EGR Solenoid	12, 15
S192	Near T/O for C125	12, 15
S195	Near Battery	7
S196	Near Battery	7
S201	Near T/O for Brake Transmission Shift Interlock Solenoid	27, 31
S203	Near Right Turn Signal Indicator	31
S204	Near T/O for A/C-Heater Control Module	30
S205	Near T/O for Rear Window Defogger Switch	30
S209	Near T/O for Rear Window Defogger and Rear Wiper Switches	30
S211	Near T/O for Front Wiper/Washer Switch and Multi-Function Switch	27
S212	Near T/O for Instrument Cluster - C1	27
S213	Near T/O for Rear Window Defogger and Rear Wiper Switches	30
S215 (LHD Autostick)	Near T/O for G201	27
S216	In T/O for Radio	30
S220	Near T/O for Brake Shift Interlock Solenoid	31
S224	Between S201 and S247	31
S225	Between T/O for Brake Shift Interlock Solenoid and Ignition Switch	27
S226	Between T/O for Brake Shift Interlock Solenoid and Ignition Switch	27

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

SPLICE	LOCATION	FIG.
S228	Near T/O for Power Mirror Switch	33
S229	Near T/O for Grounds G200 and G203	31
S232 (LHD)	In T/O for C203	29
S233	Near T/O for Turn Signal Indicators	29, 31, 32
S235 (RHD)	In T/O for Inline C202	32
S237 (LHD)	Near T/O for Instrument Cluster - C1	27
S239	Near T/O for Ground G200/G203	31
S240	Near T/O for Ground G201	28, 33
S241	Near T/O for Ground G200/G203	31
S242 (RHD)	In T/O for Power Mirror Switch	33
S244	Near T/O for Visor/Vanity Lamp	N/S
S246	Between Splices S248 and S244	N/S
S247	Near T/O for Brake Transmission Shift Interlock Solenoid	31
S248	Near T/O for Overhead Console	N/S
S249	In T/O for Overhead Console	N/S
S250	In T/O for Power Mirror Switch	28
S254 (RHD)	Near T/O for Instrument Cluster - C1	27
S256 (RHD)	In T/O for Instrument Cluster C1	33
S260	In T/O for Radio	30
S301	Front of Left Rear Wheel Housing	45
S302	In Trough Near Left Rear Door	45
S304	Top of Left Rear Wheel Housing	46
S305	Near T/O for Left Rear Door Ajar Switch	46
S306	Near T/O for License Lamp	N/S
S307	Near T/O for Left Rear Door Ajar Switch	46
S308	Near T/O for License Lamp	N/S
S309 (Left Door)	Near T/O for Left/Right Front Door Lock Switch	38
S310	Near T/O for Rear Window Defogger (Ground)	N/S
S311 (Right Door)	Near T/O for Left/Right Front Door Lock Switch	38
S312	Near T/O for Licence Lamp	N/S
S313	Near T/O for Passenger Heated Seat Module	N/S
S314	Near T/O for Passenger Heated Seat Module	N/S
S315	Near T/O for Passenger Heated Seat Module	N/S
S316	Near T/O for Passenger Heated Seat Module	N/S
S317	Below Driver Seat	N/S
S318 (Export)	Near T/O for C108	N/S
S319	Near T/O for C107	N/S
S320	On Fuel Tank in T/O for Natural Vacuum Leak Detection Pump	49
S321	Near Left Rear Power Window Switch	N/S

CONNECTOR/GROUND/SPLICE LOCATION (Continued)


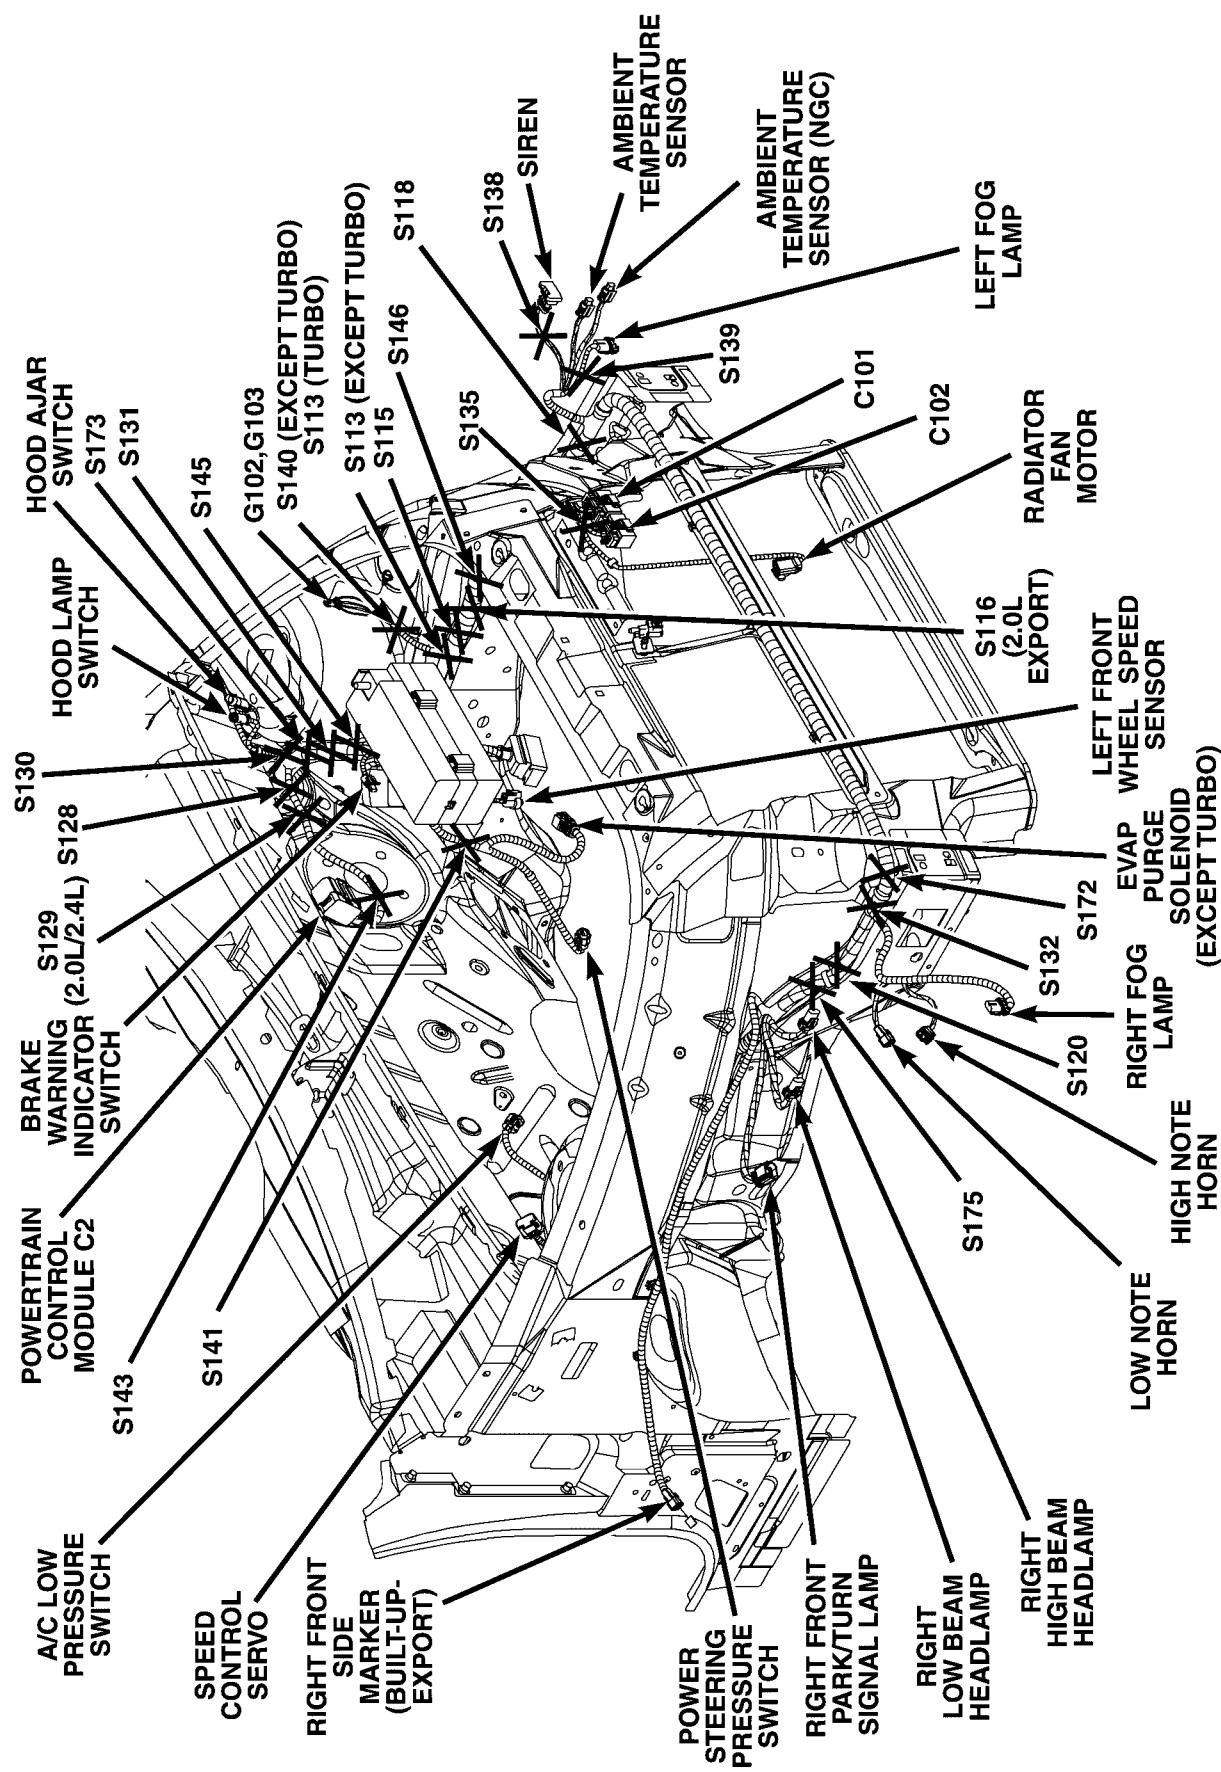



Fig. 1 ENGINE COMPARTMENT (GAS)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

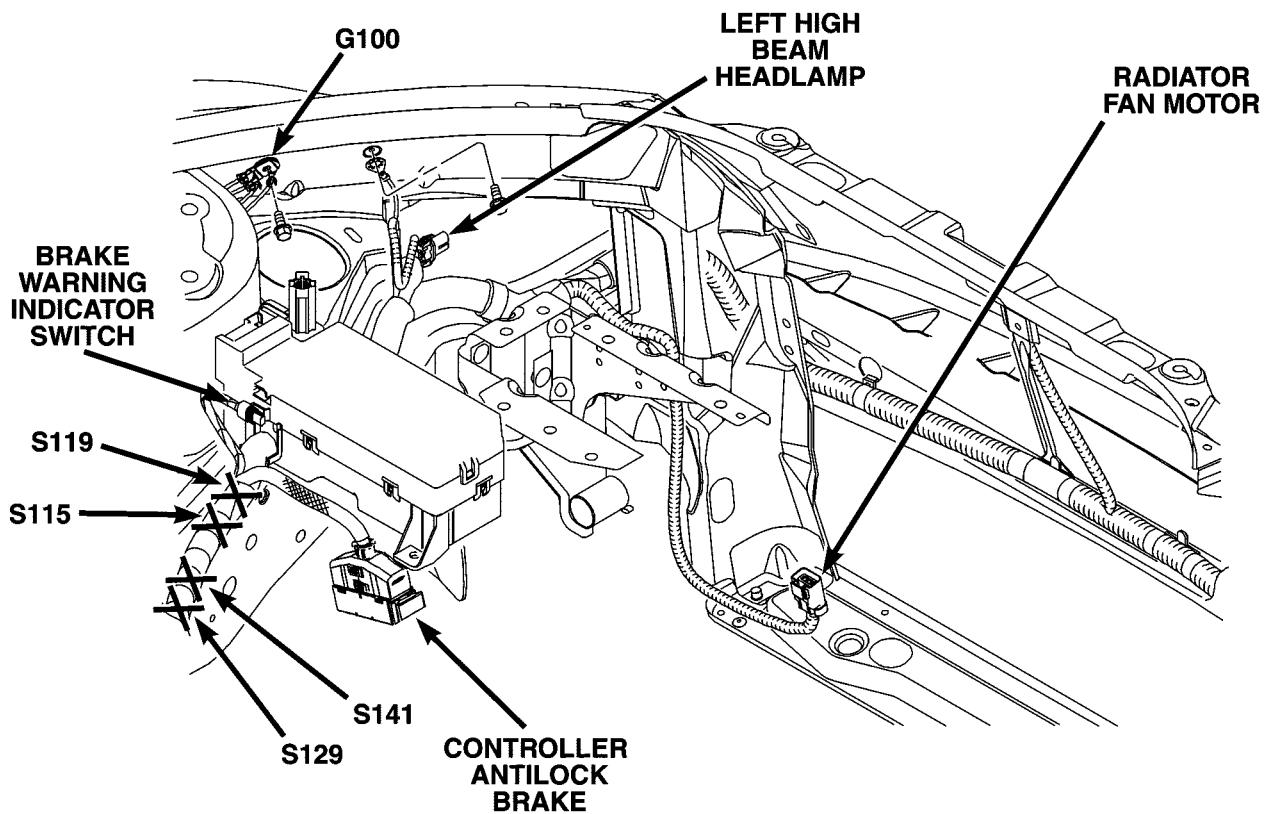

80e6ddc3

Fig. 2 LEFT FRONT ENGINE COMPARTMENT (1.6L)

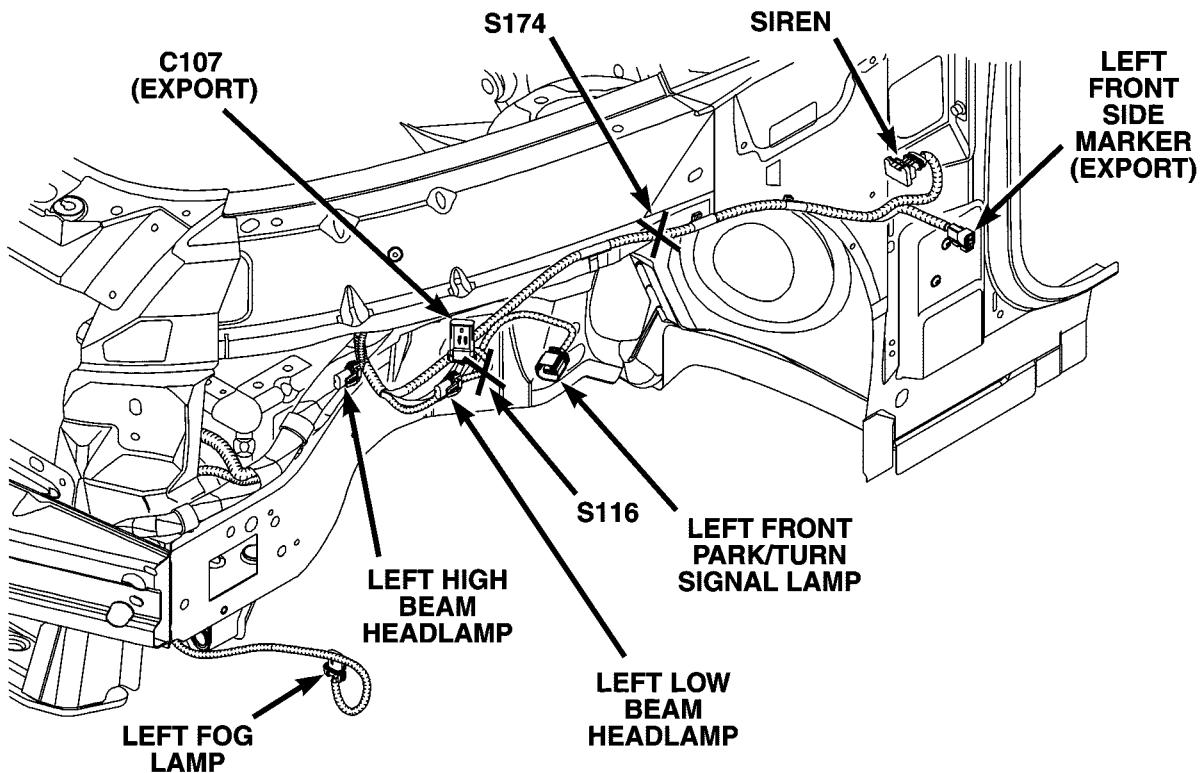

80e6ddc8

Fig. 3 LEFT SIDE OF ENGINE COMPARTMENT (1.6L)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80666dd5


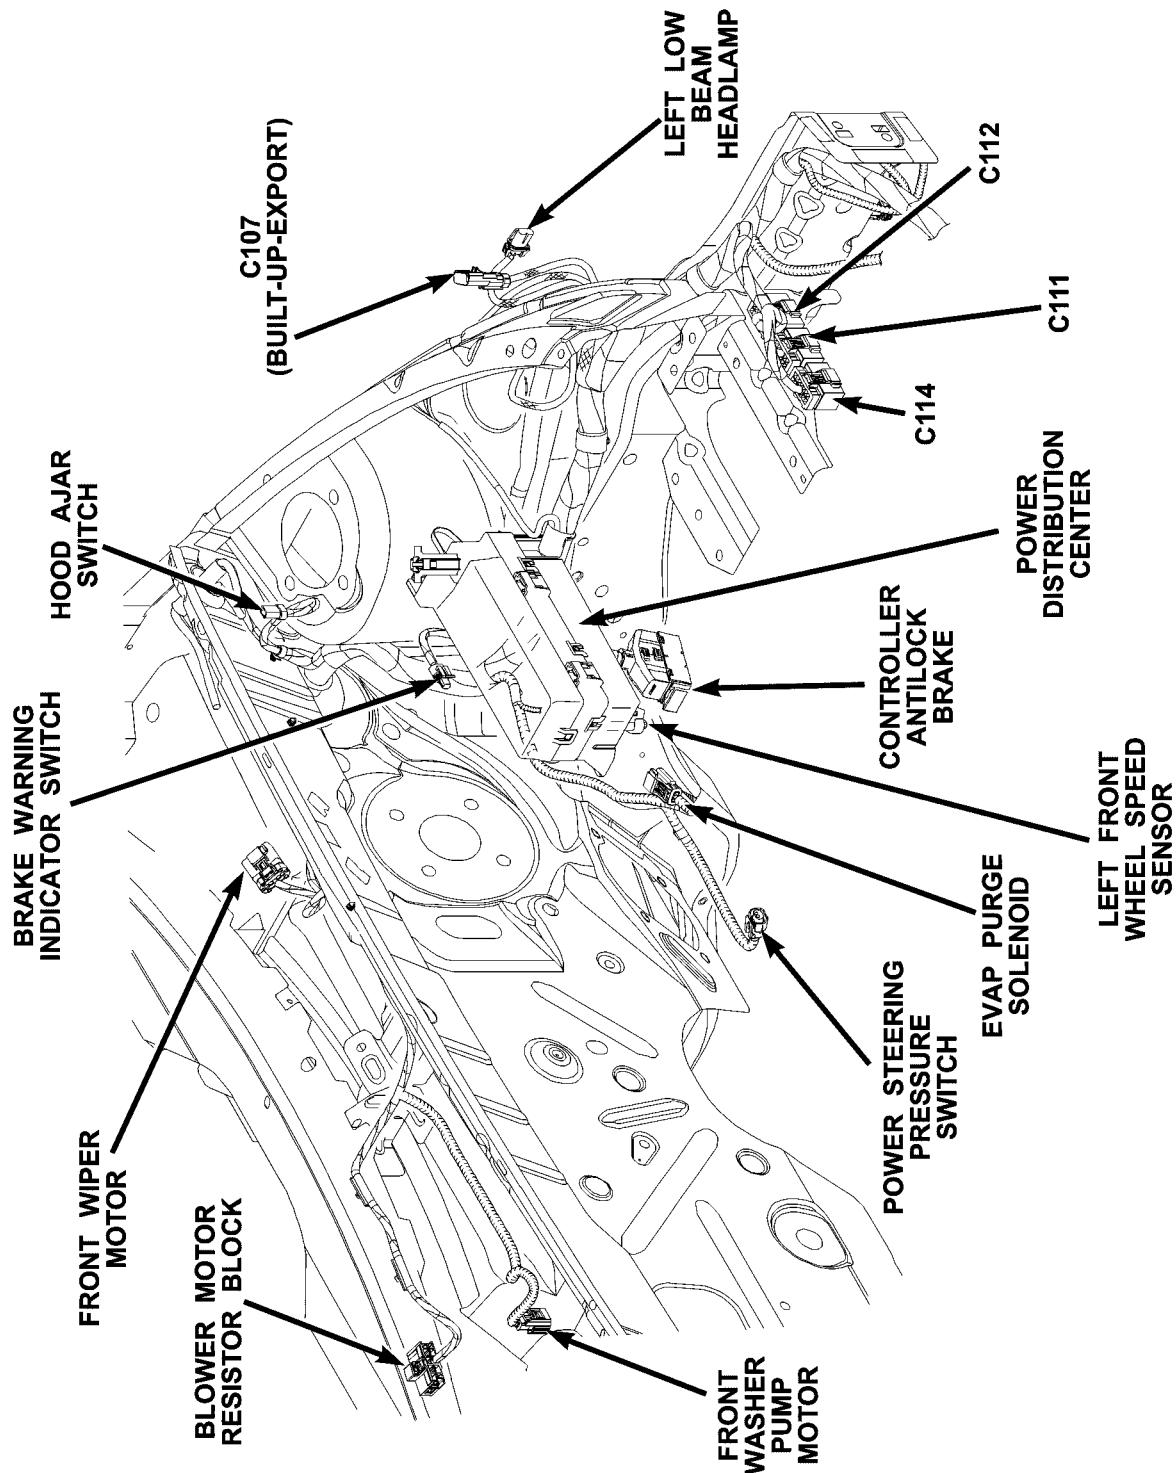



Fig. 4 LEFT SIDE ENGINE COMPARTMENT (1.6L)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

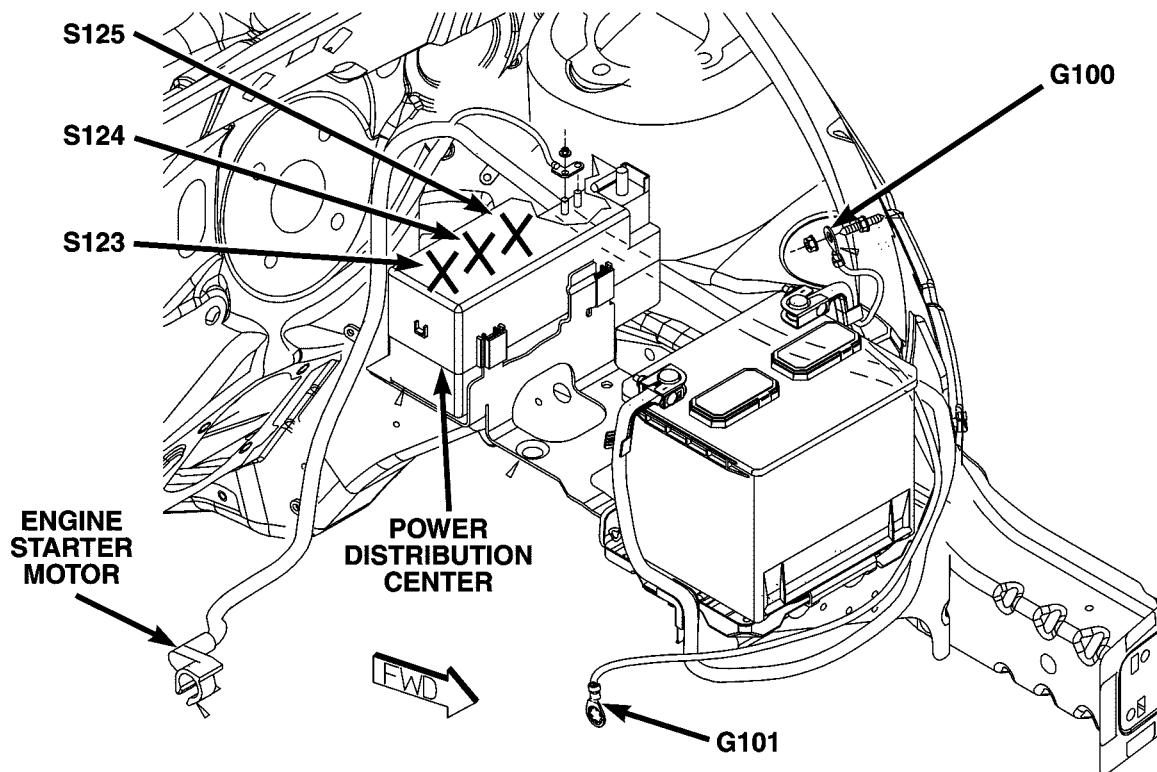

80f598b7

Fig. 5 LEFT FRONT ENGINE COMPARTMENT (1.6L)

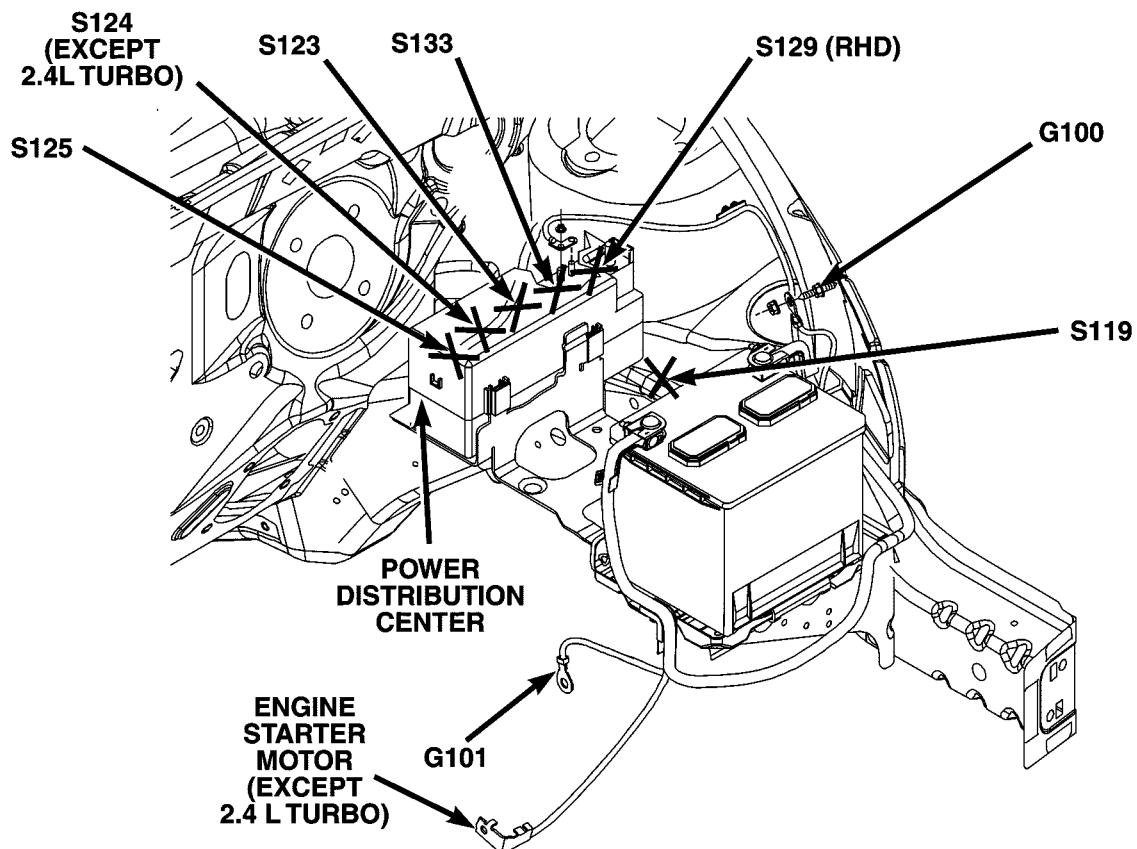

80f59a67

Fig. 6 LEFT FRONT ENGINE COMPARTMENT (2.0L/2.4L)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

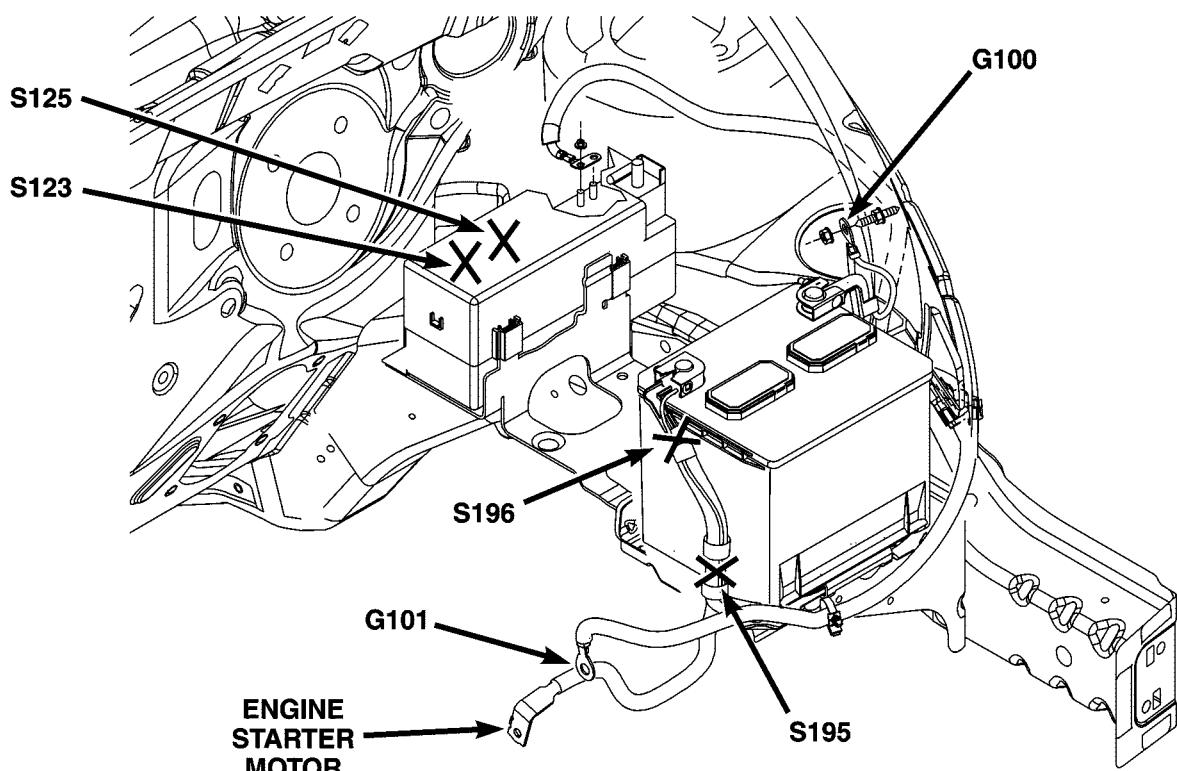


Fig. 7 LEFT FRONT ENGINE COMPARTMENT (2.4L TURBO)

80f74ee8


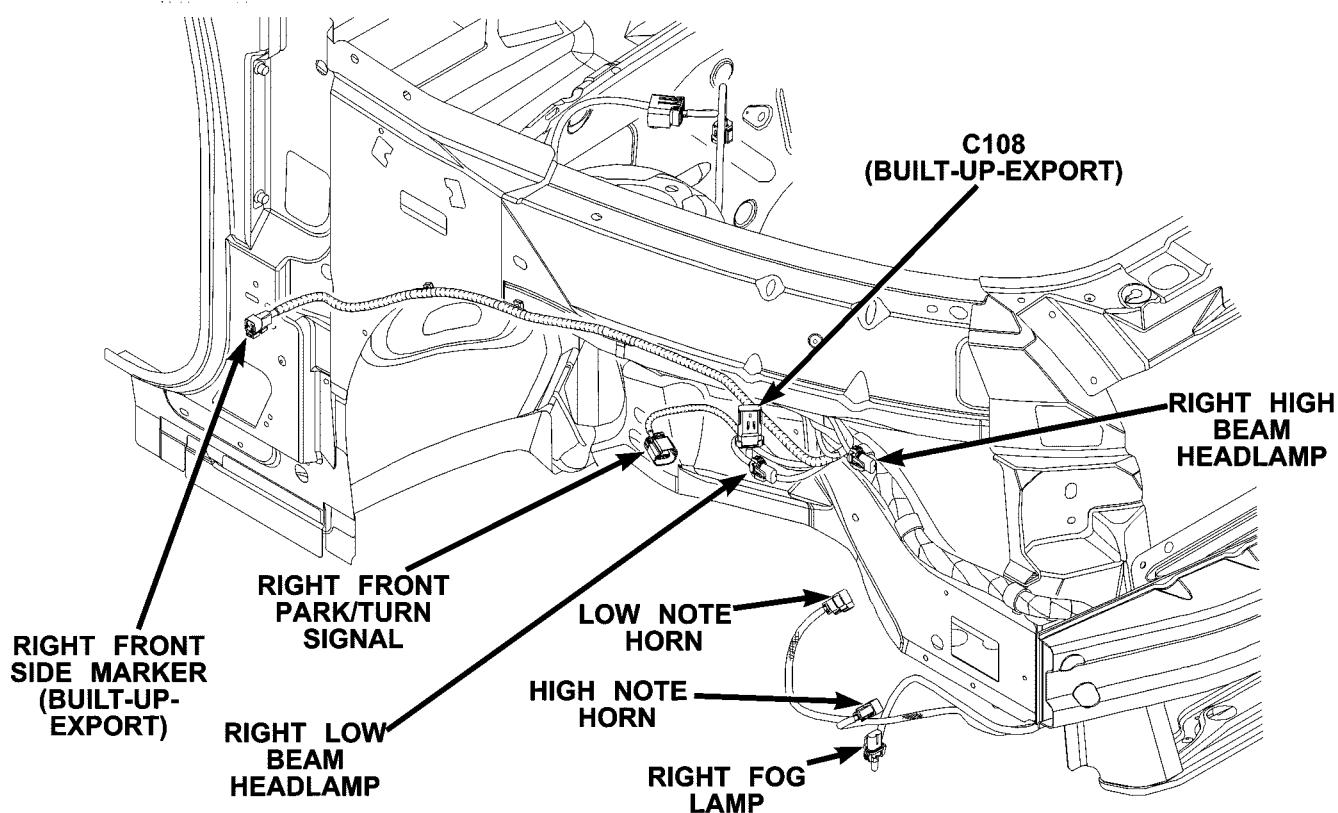


Fig. 8 RIGHT FRONT ENGINE COMPARTMENT (1.6L)


80e6dde4

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

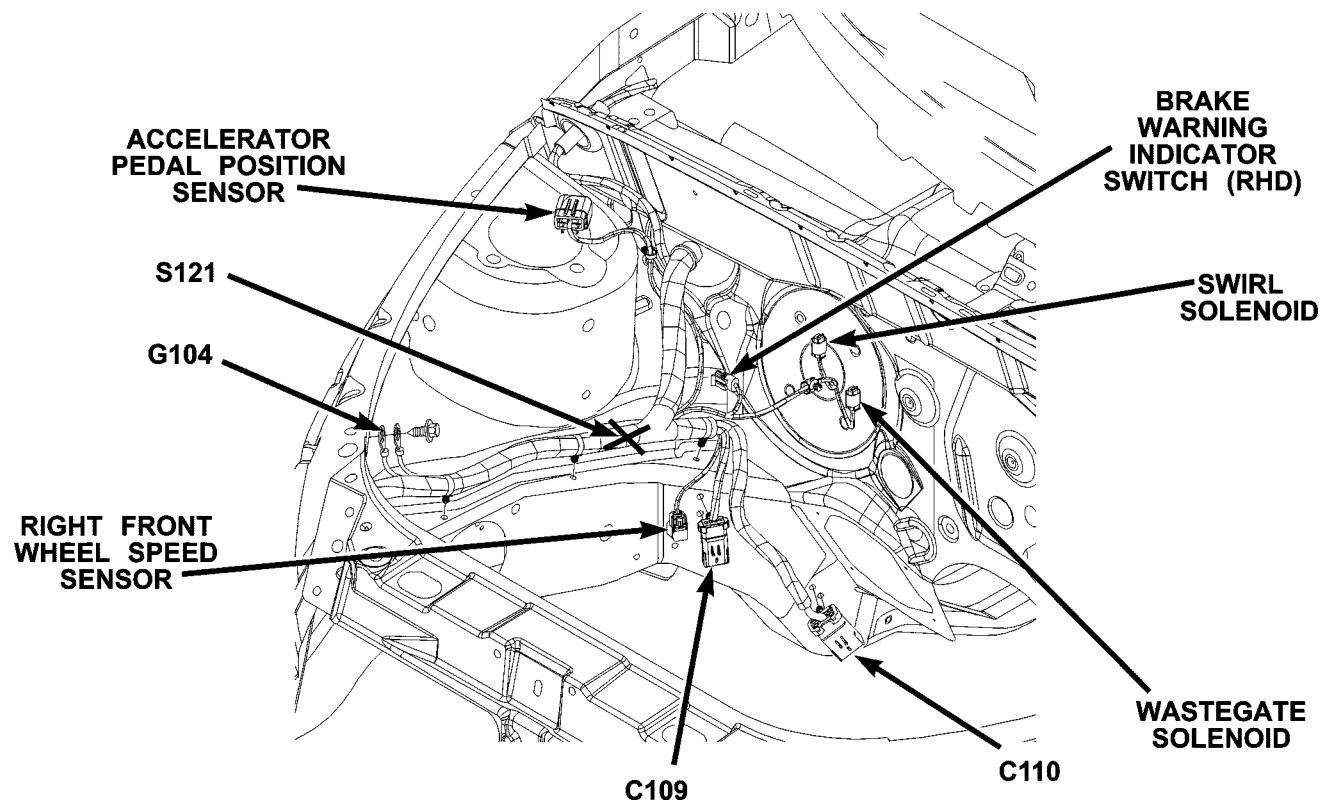


80e6ddf2

Fig. 9 RIGHT SIDE ENGINE COMPARTMENT (DIESEL RHD)

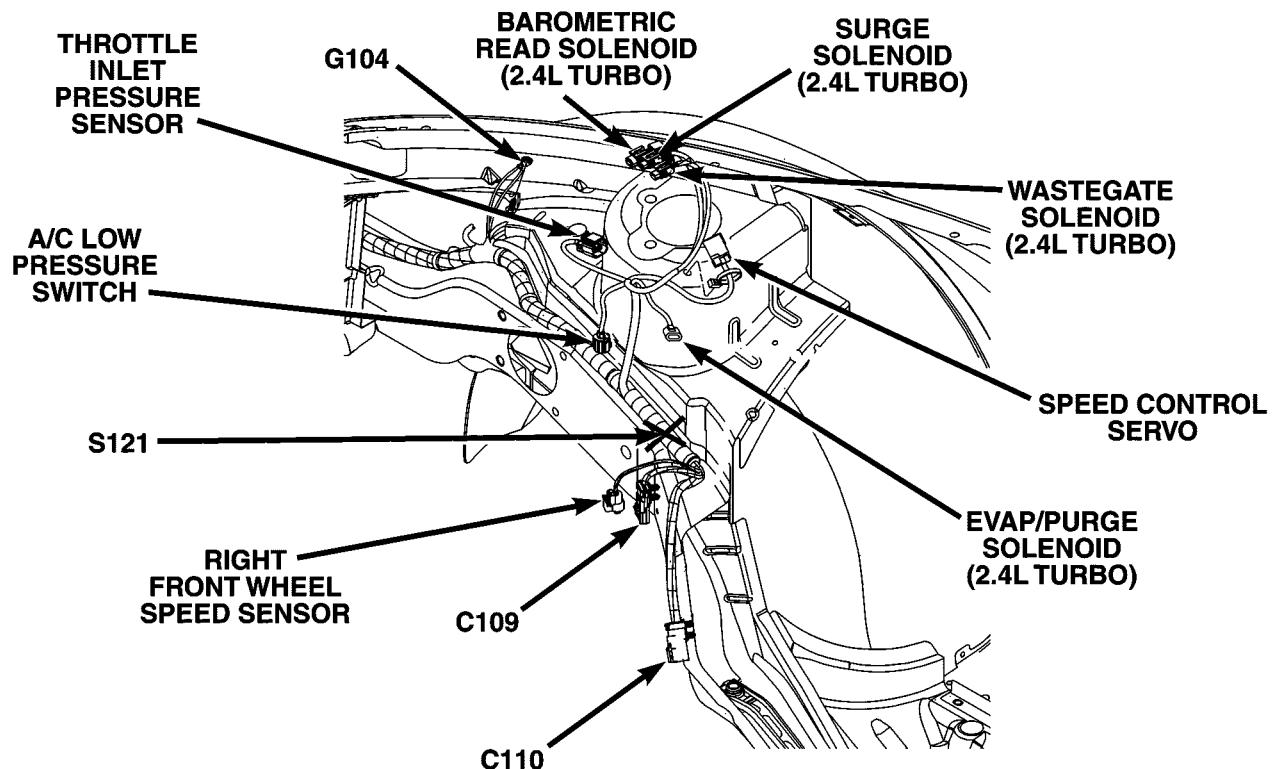

80f5a086

Fig. 10 RIGHT REAR ENGINE COMPARTMENT (2.0L/2.4L)

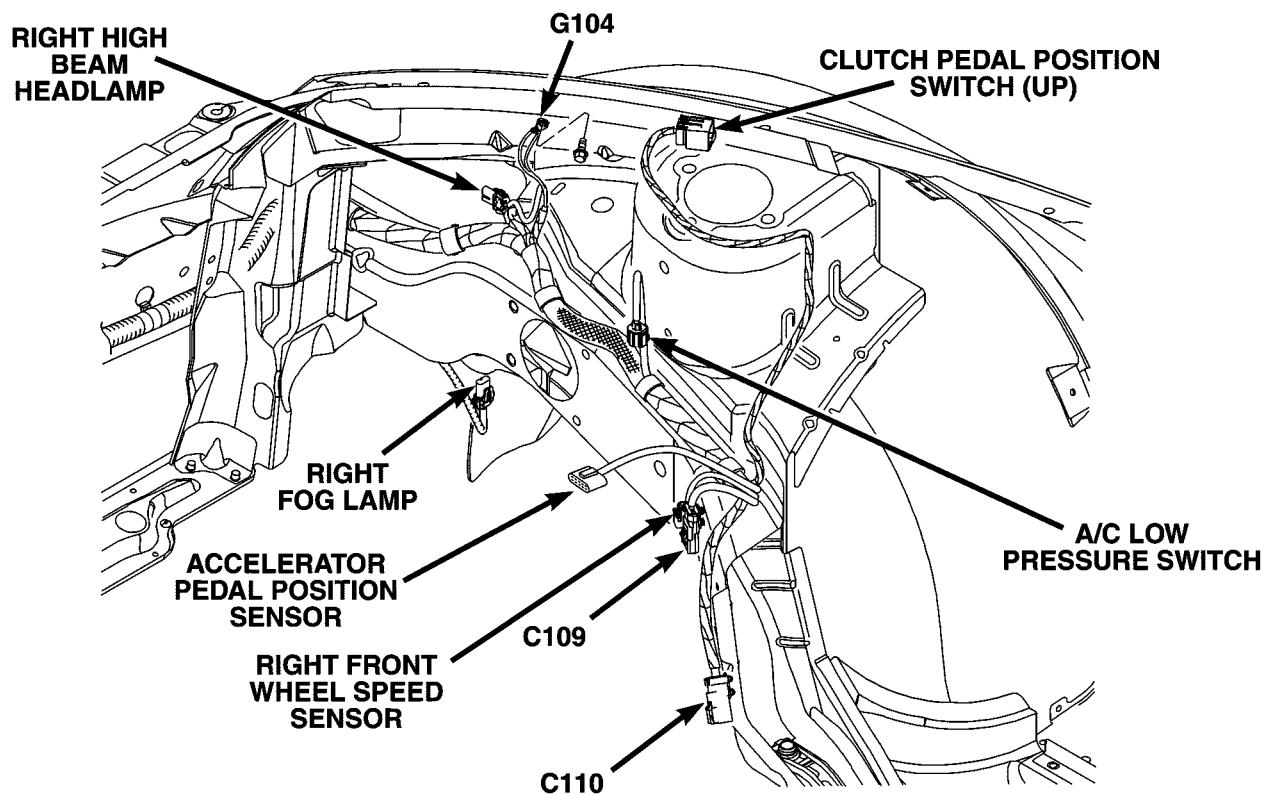

80f5a0a2

Fig. 11 RIGHT REAR ENGINE COMPARTMENT (1.6L)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

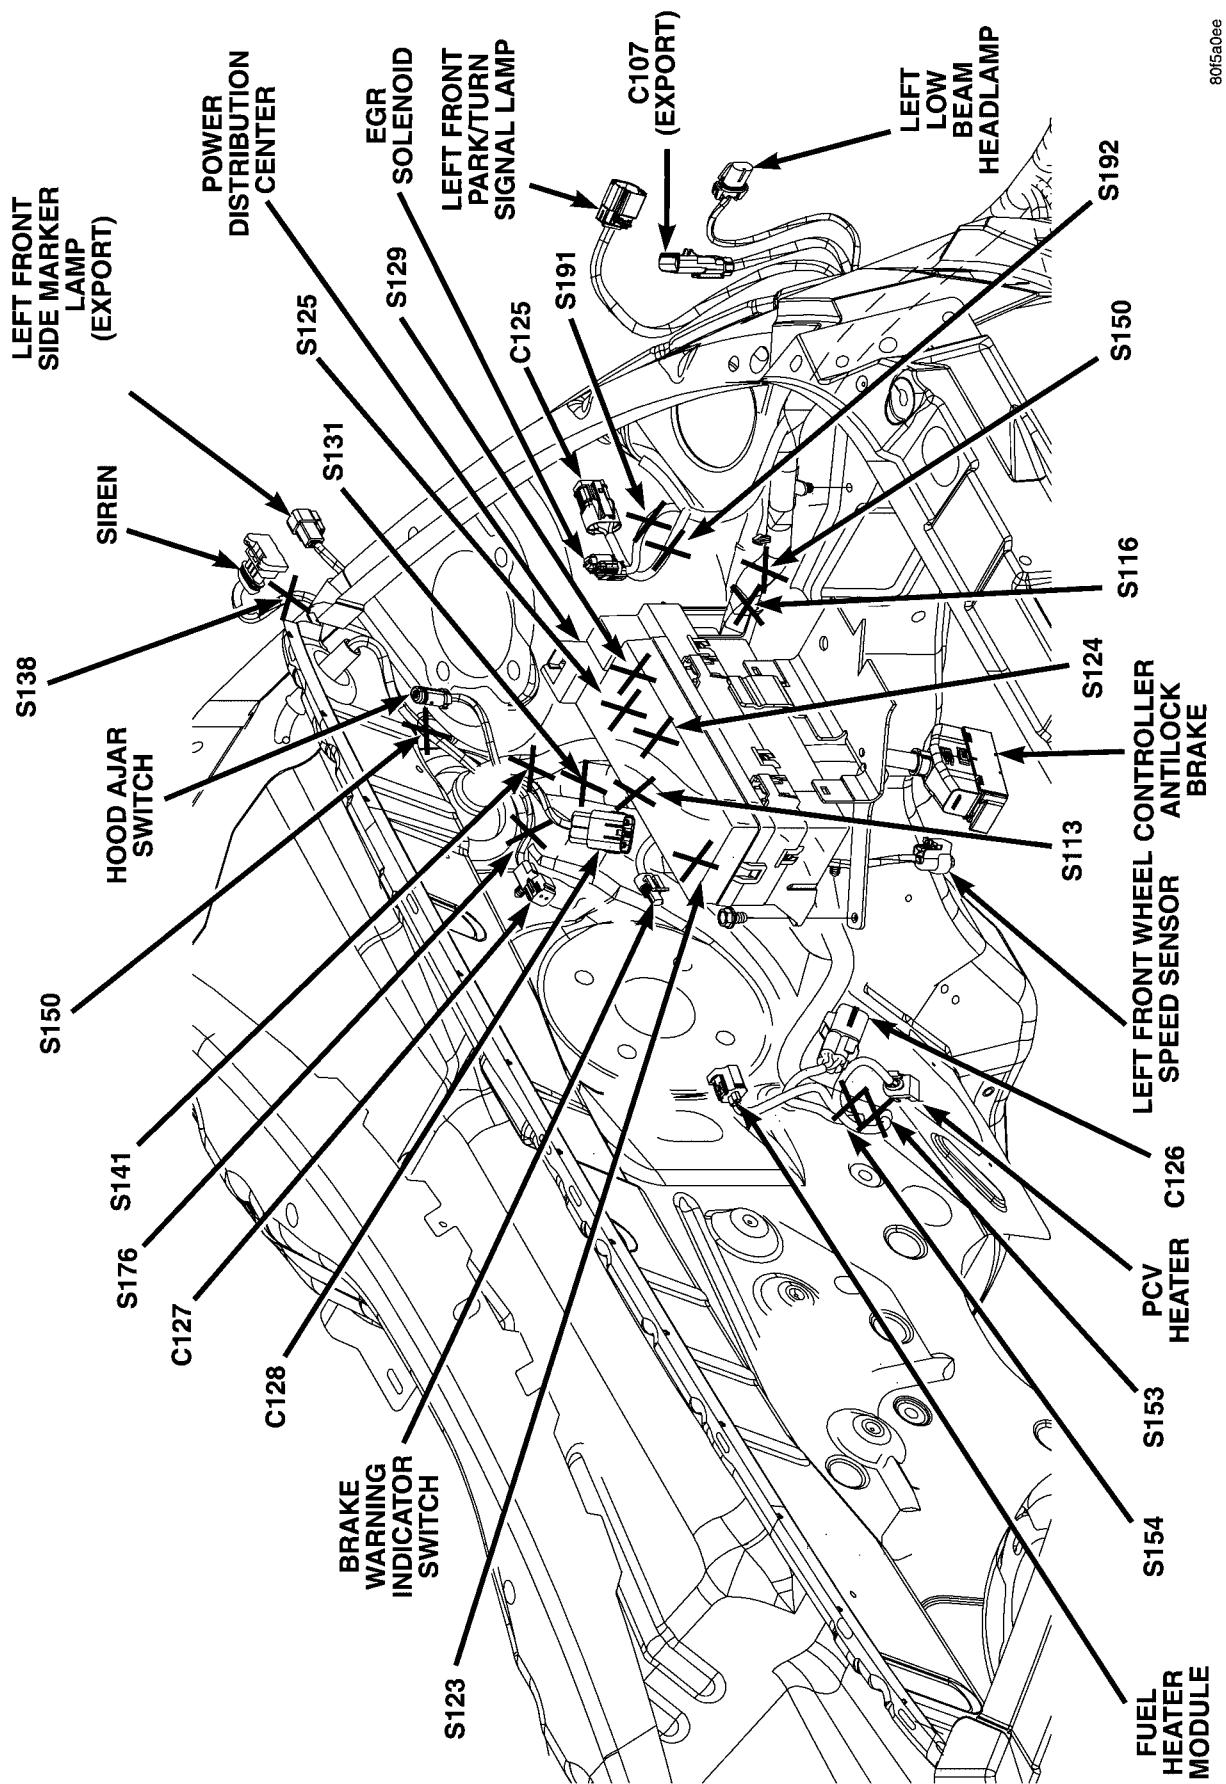


Fig. 12 REAR ENGINE COMPARTMENT (LHD DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

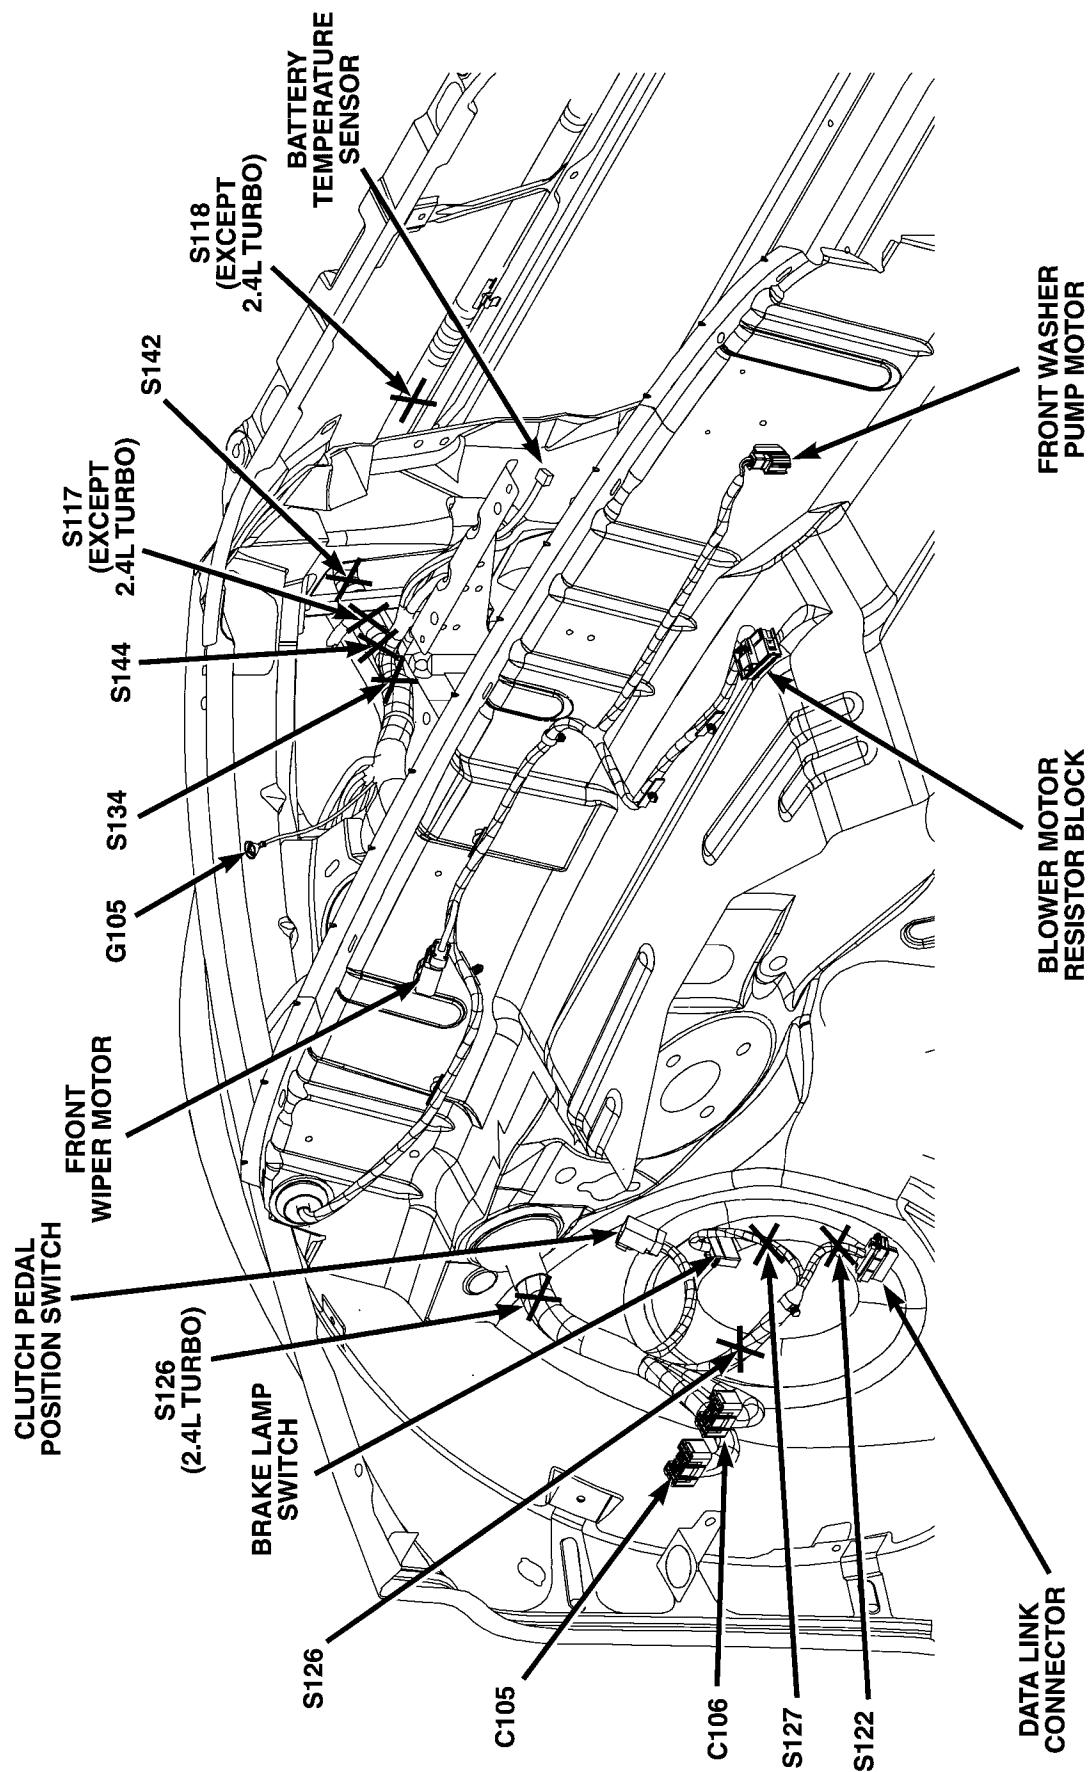


Fig. 13 LEFT SIDE COWL PANEL (GAS)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066de26

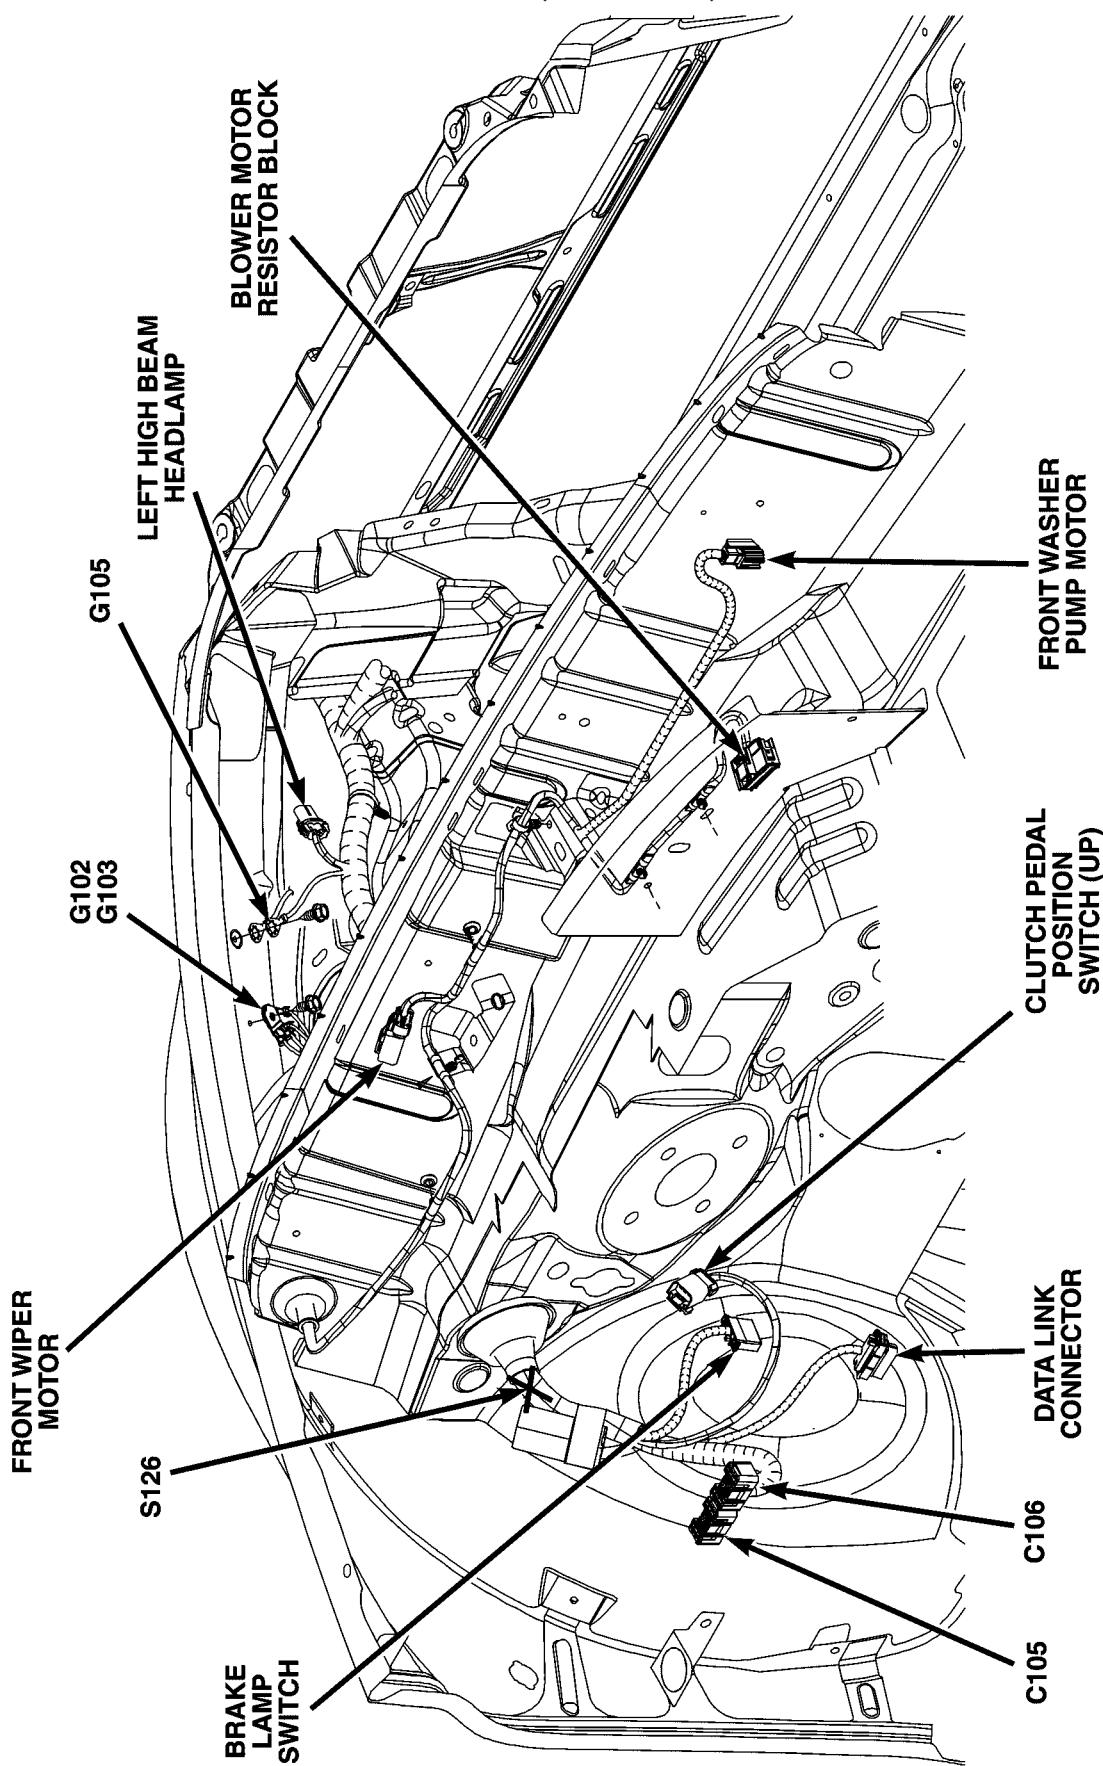


Fig. 14 LEFT SIDE COWL PANEL (LHD DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)


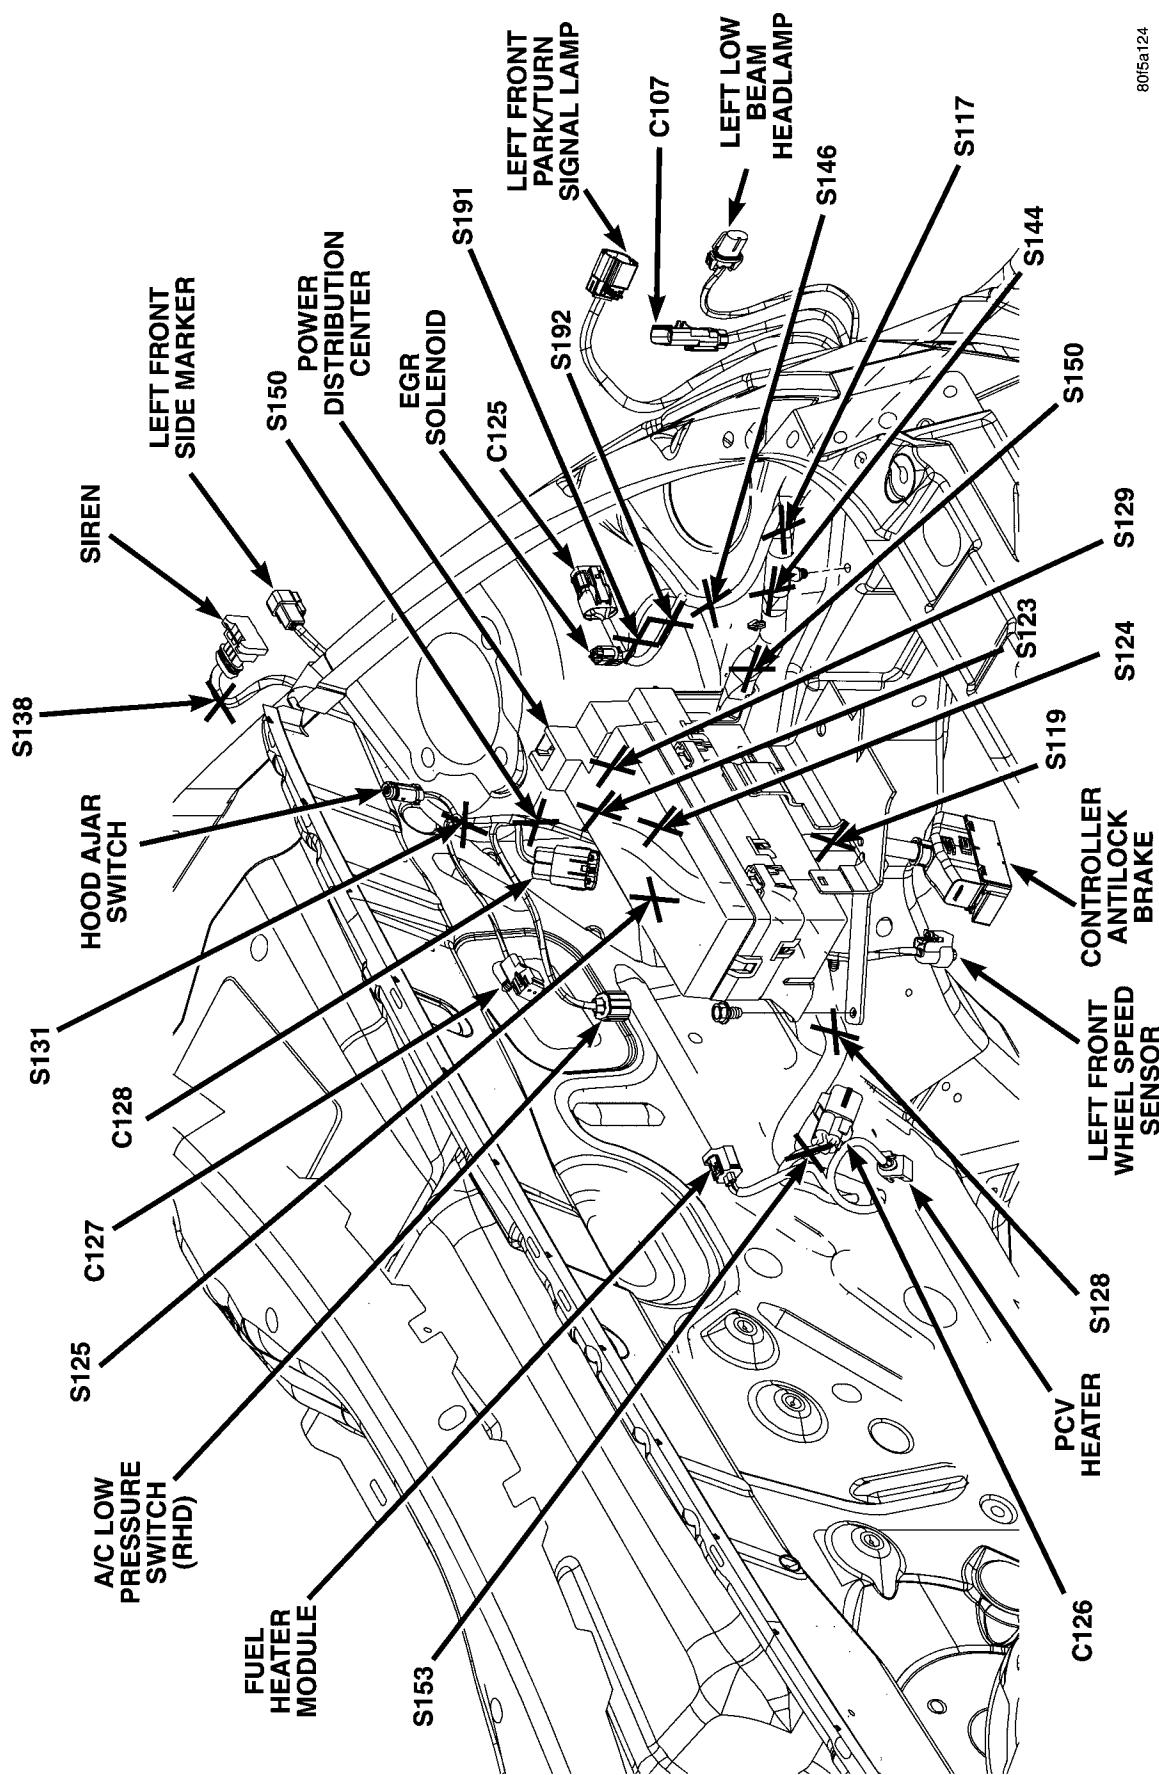


Fig. 15 REAR ENGINE COMPARTMENT (RHD DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

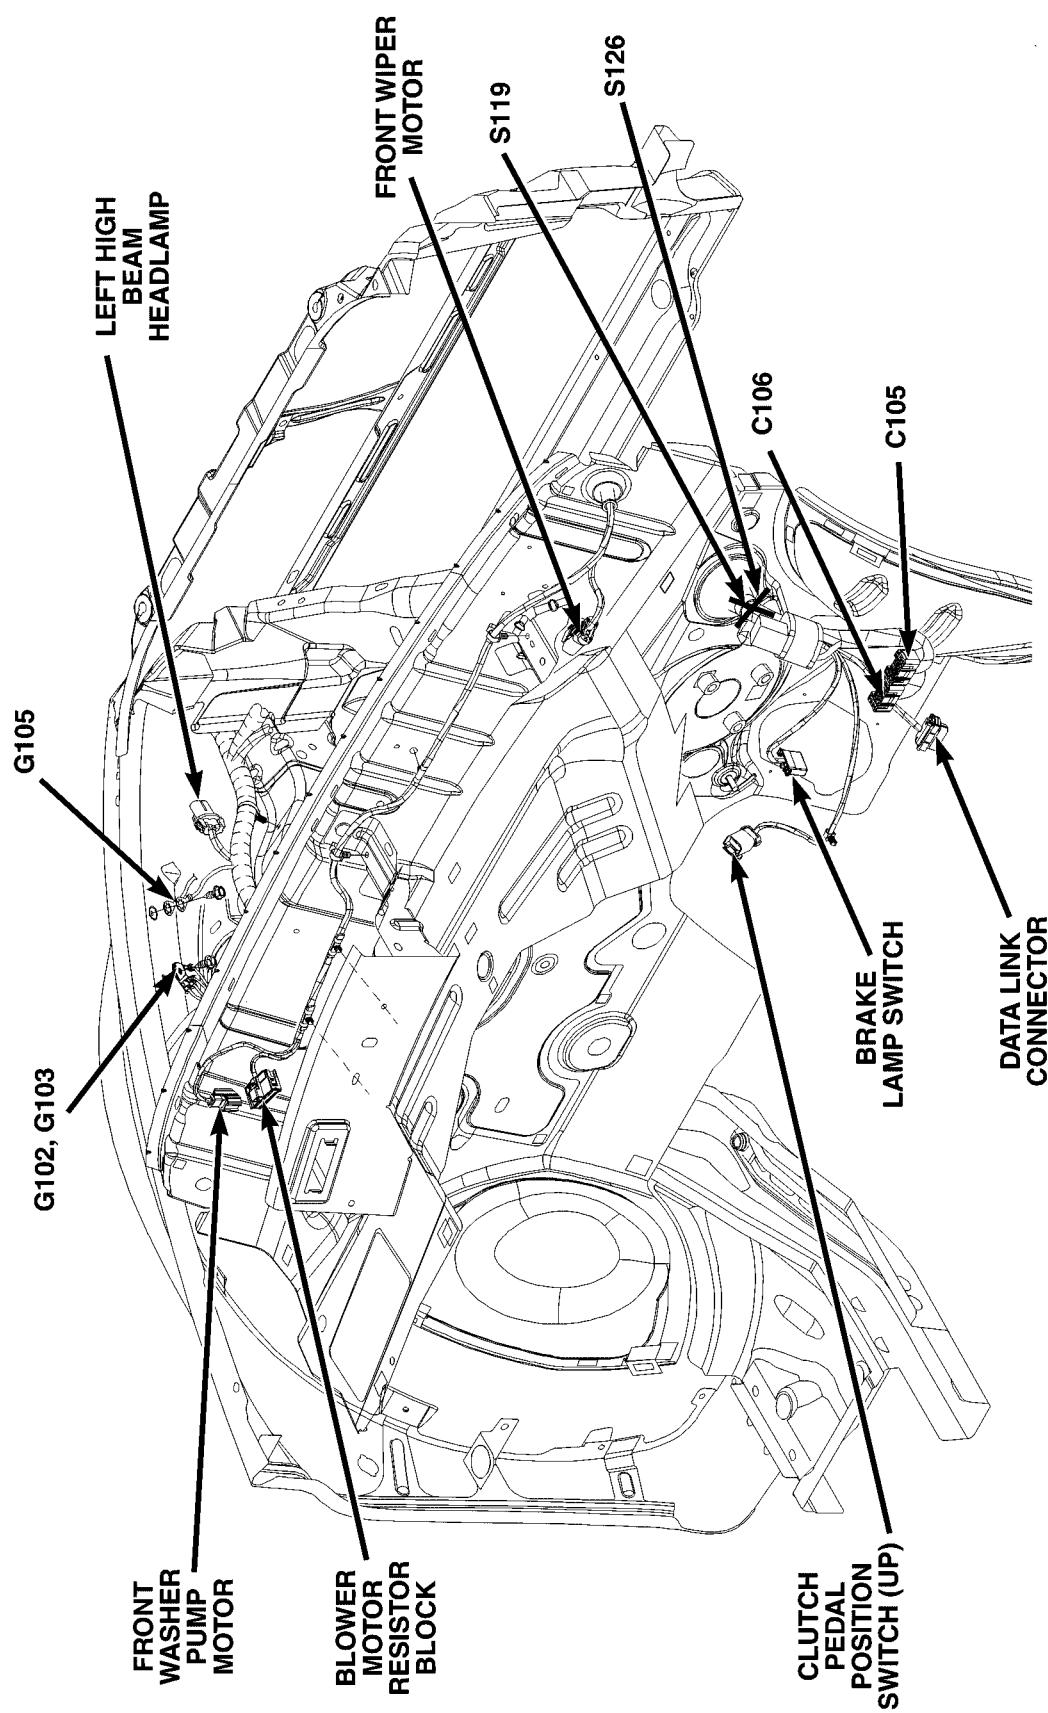

80e6de21new

Fig. 16 RIGHT SIDE COWL PANEL (DIESEL RHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8086de33

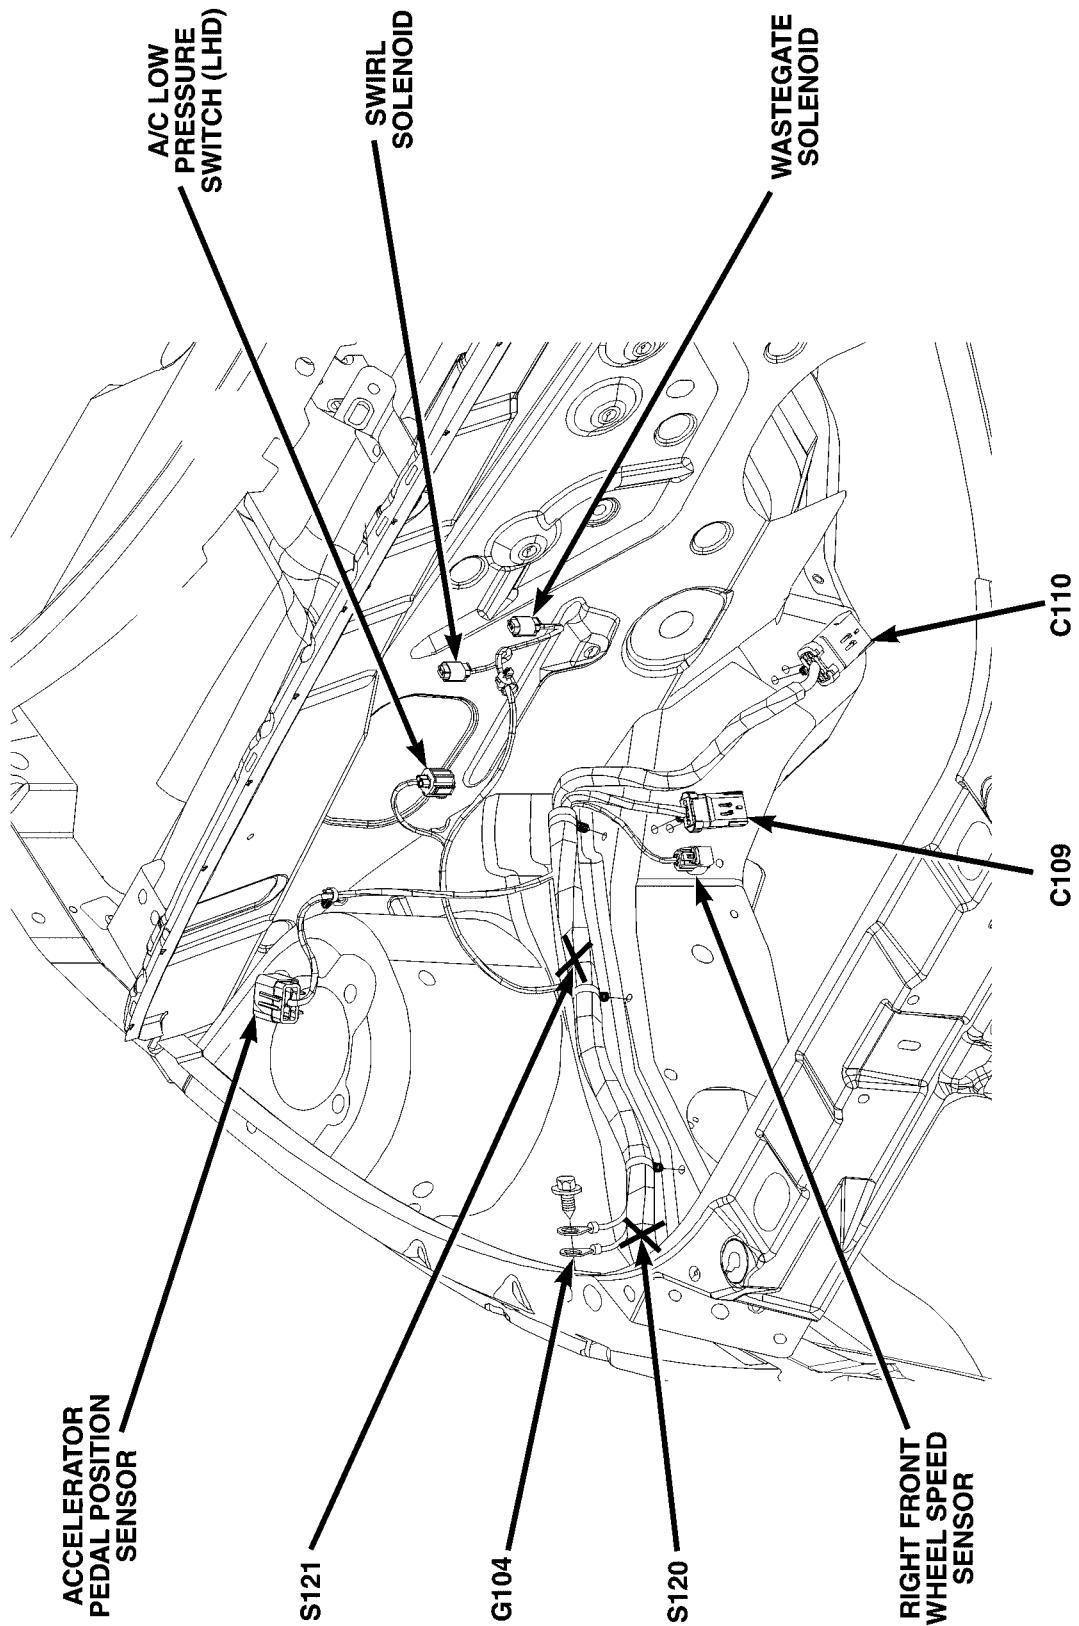


Fig. 17 RIGHT REAR ENGINE COMPARTMENT (DIESEL LHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

806564e

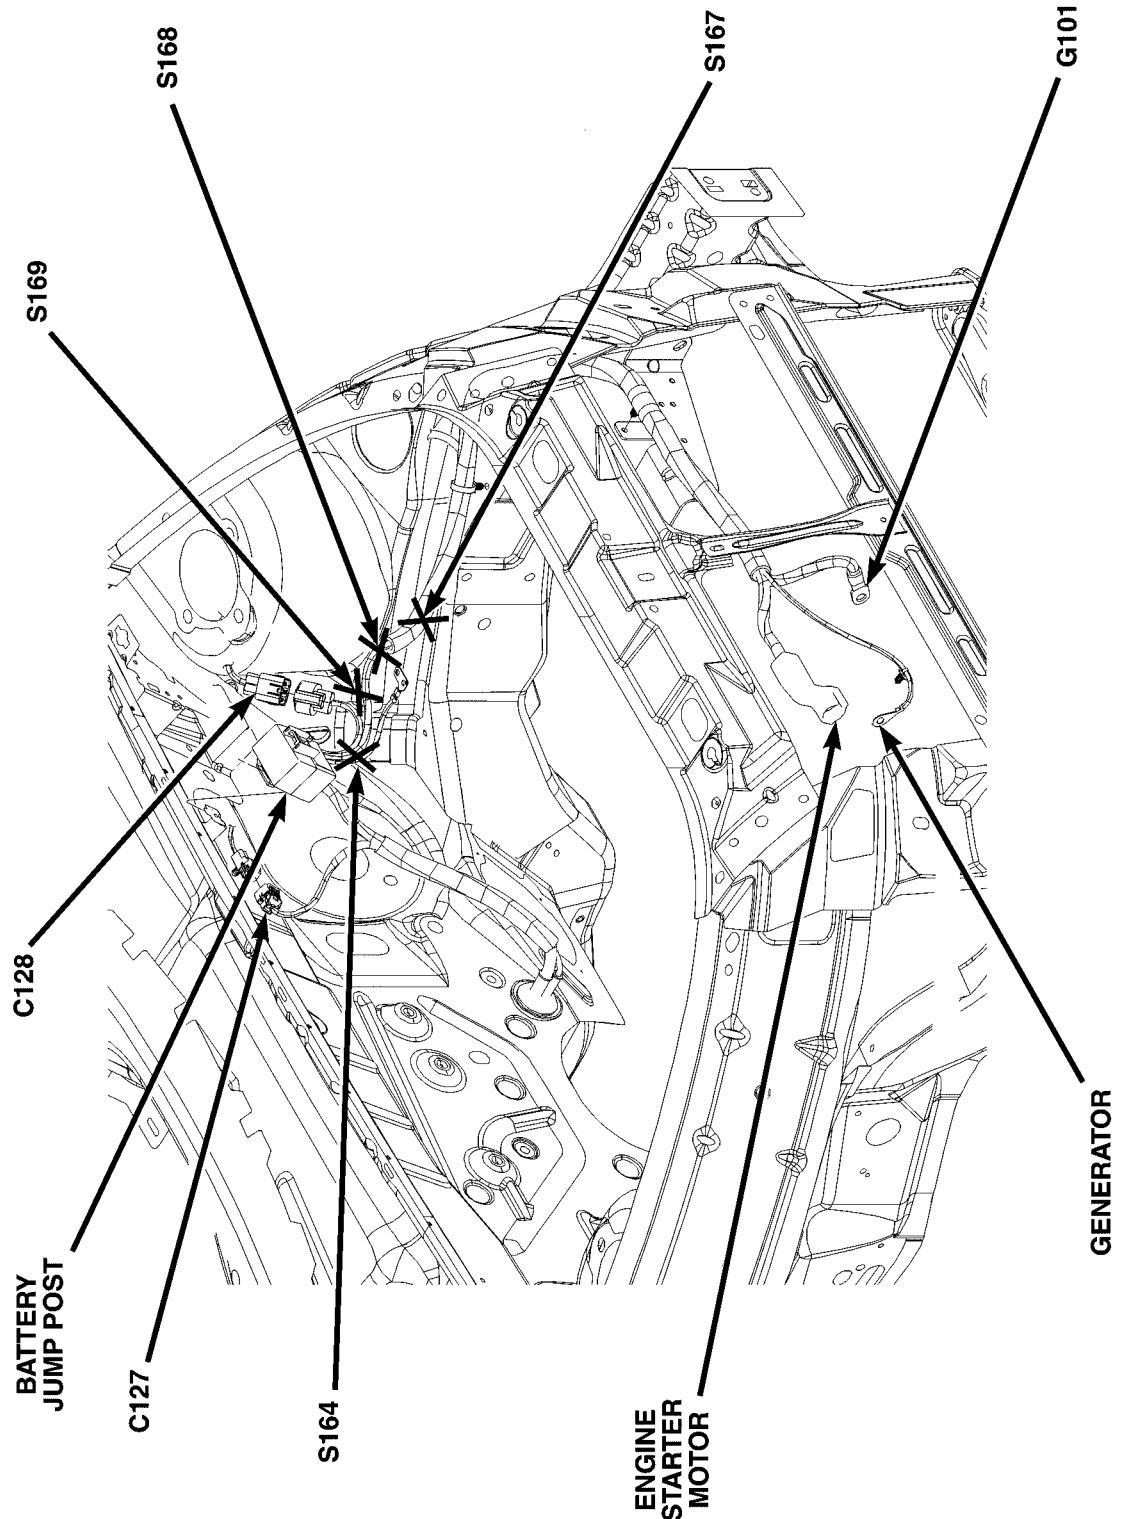


Fig. 18 ENGINE COMPARTMENT (DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

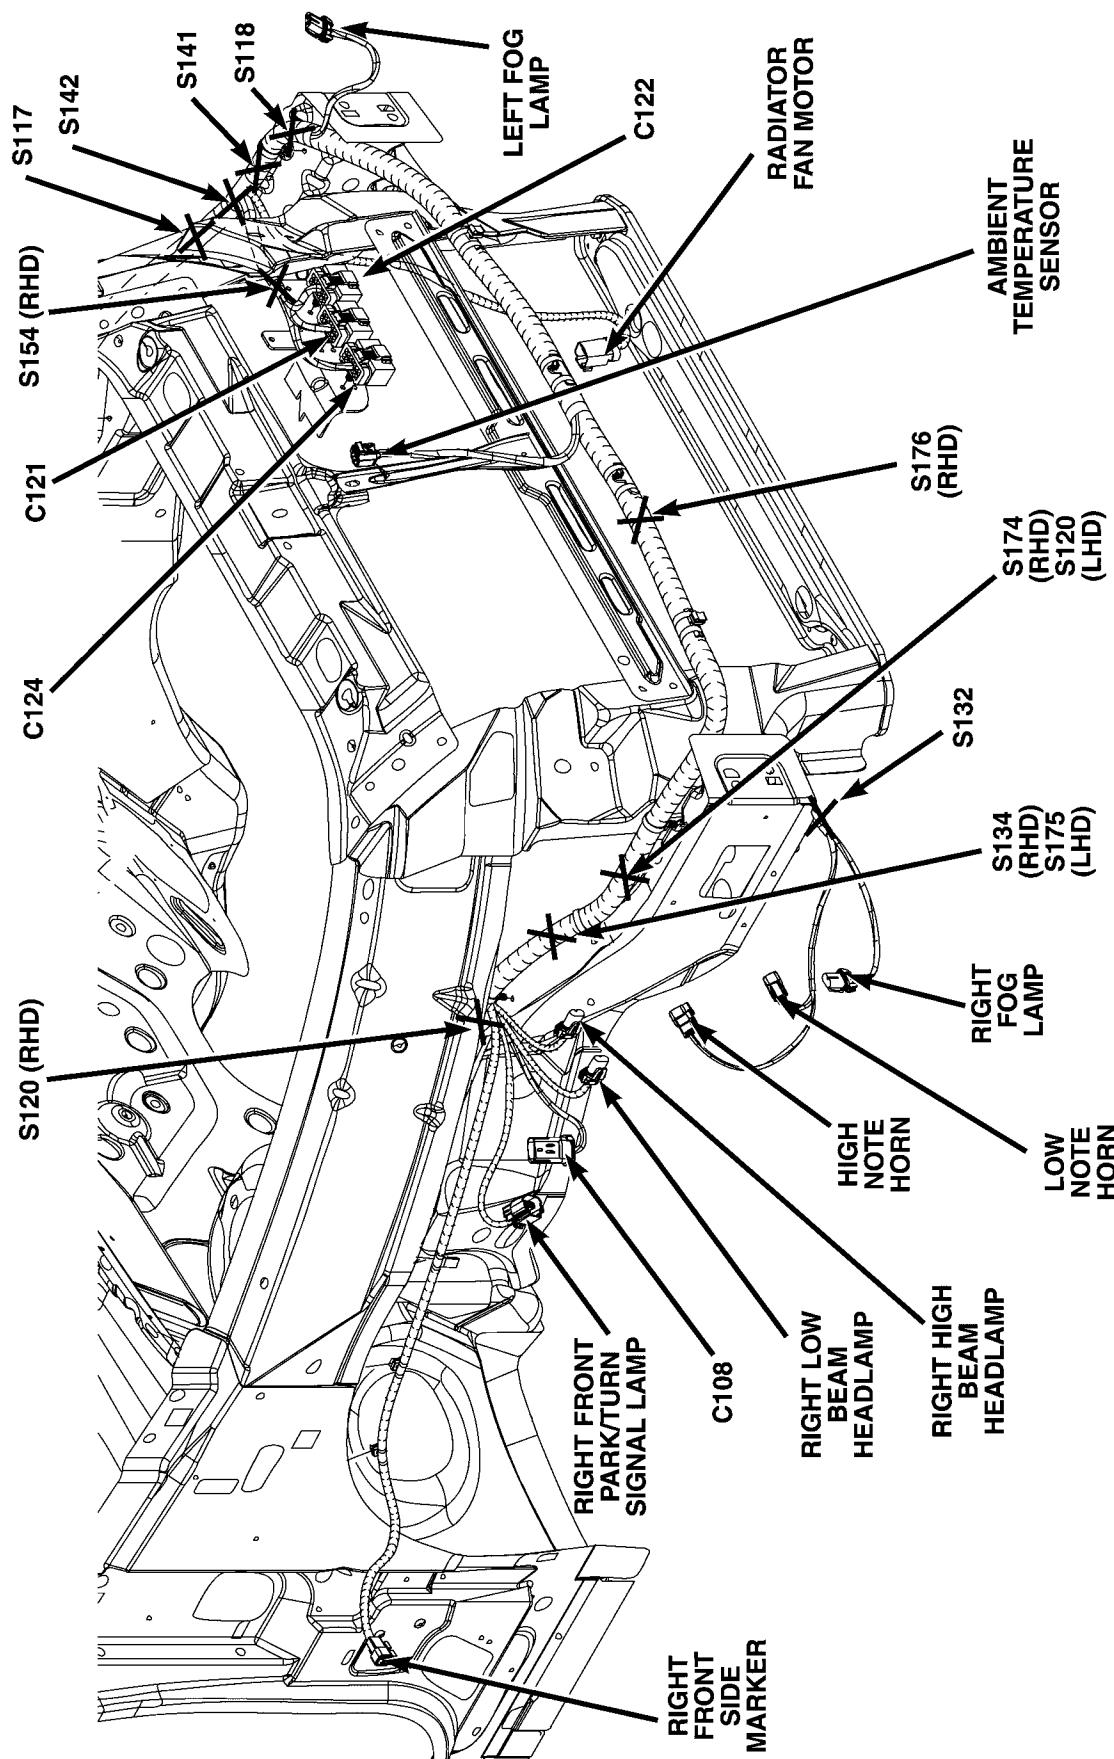


Fig. 19 RIGHT FRONT SIDE ENGINE COMPARTMENT (DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6de60

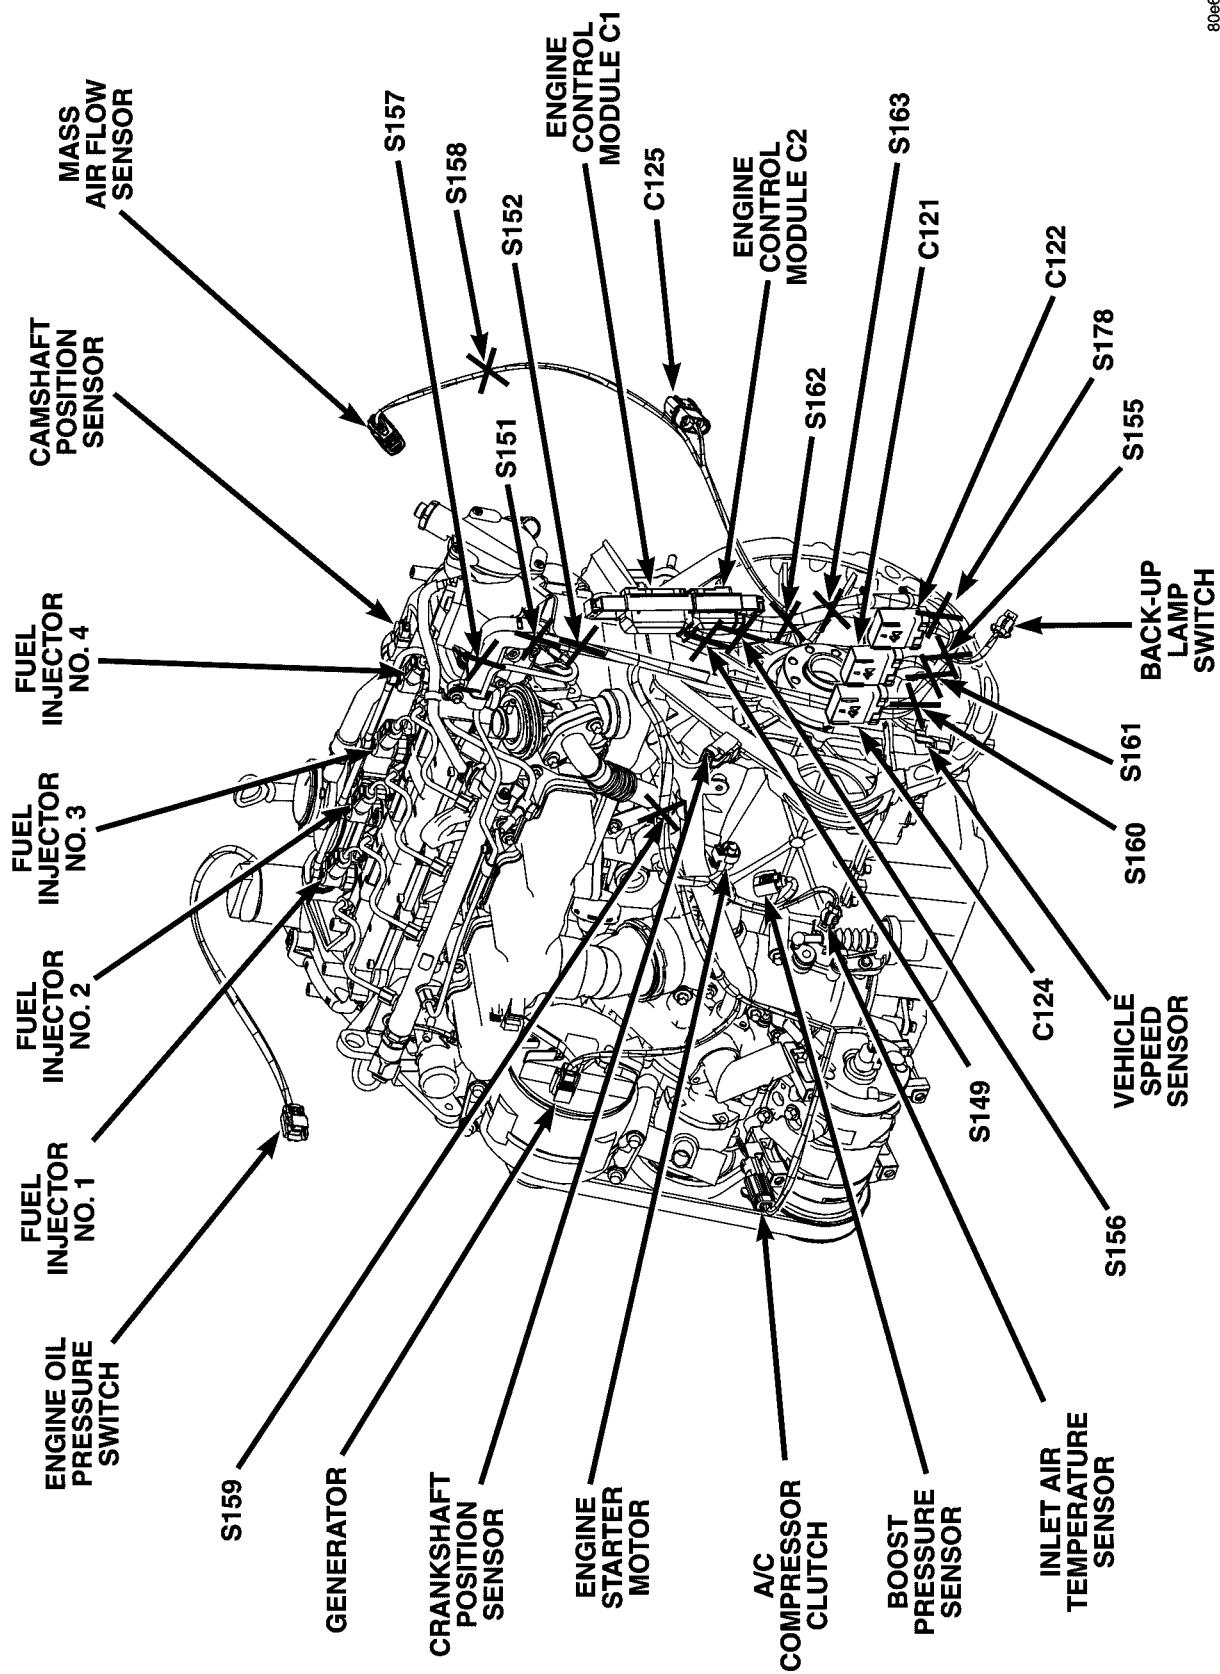


Fig. 20 DIESEL ENGINE

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e66de80

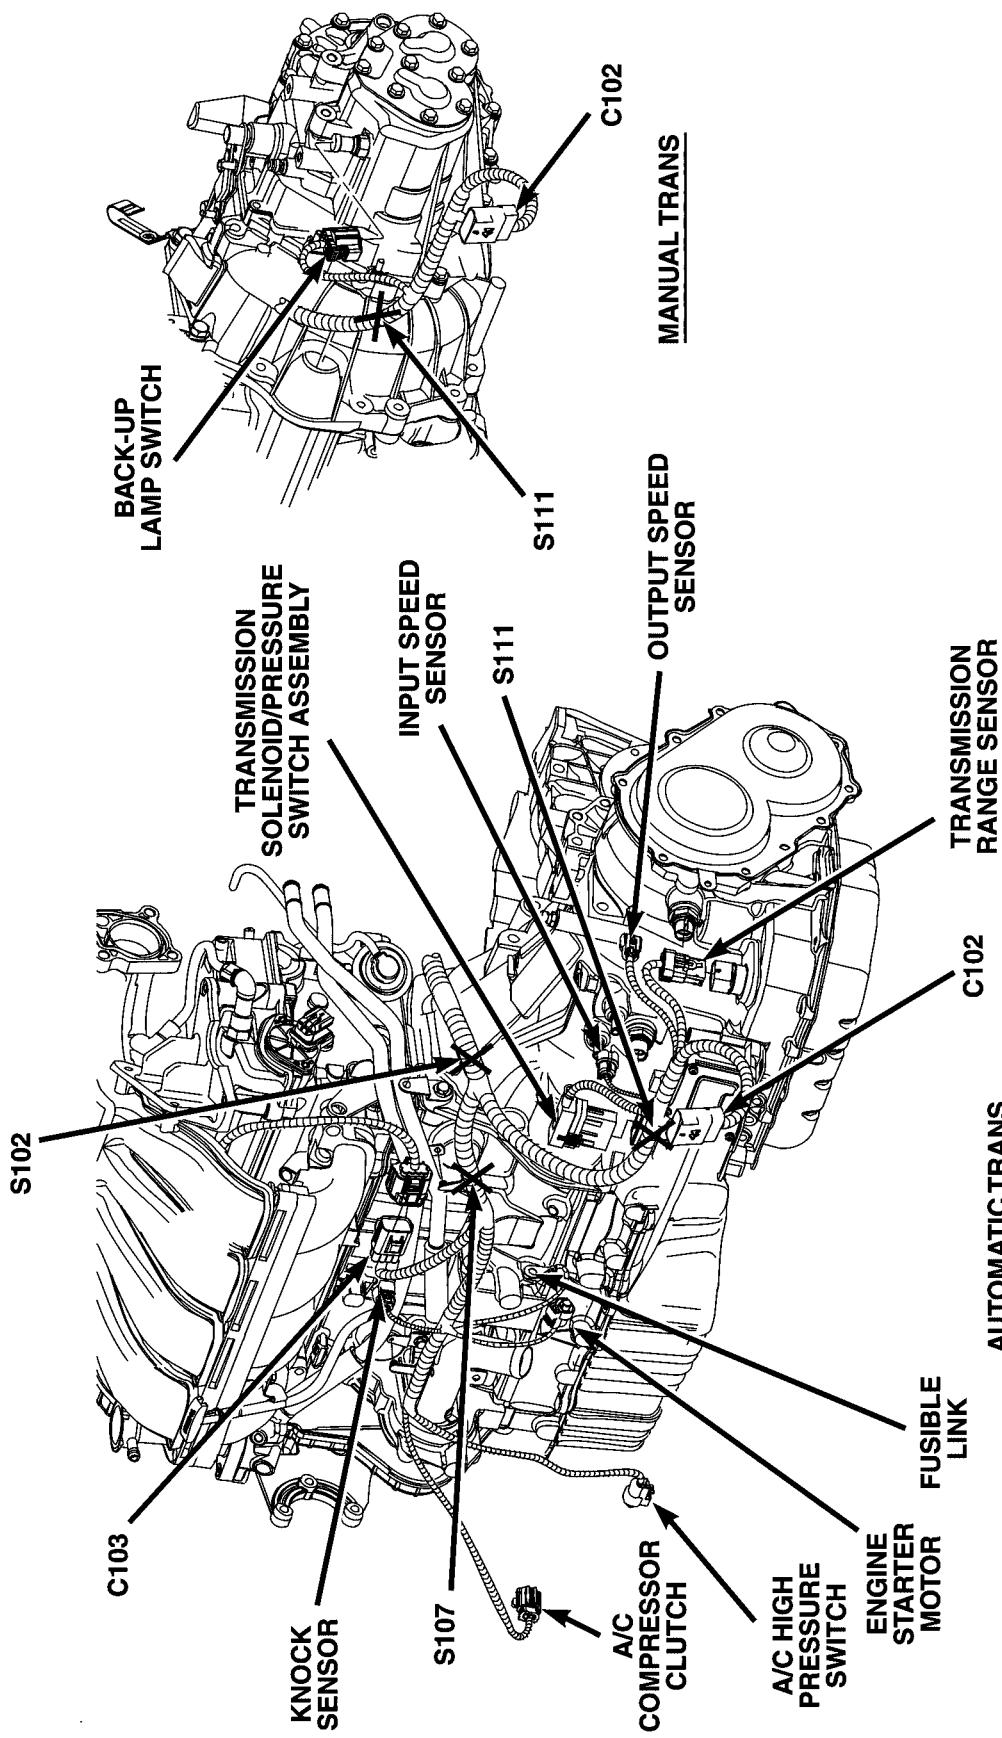


Fig. 21 2.0L/2.4L ENGINE /TRANSMISSION ASSEMBLY

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6de87

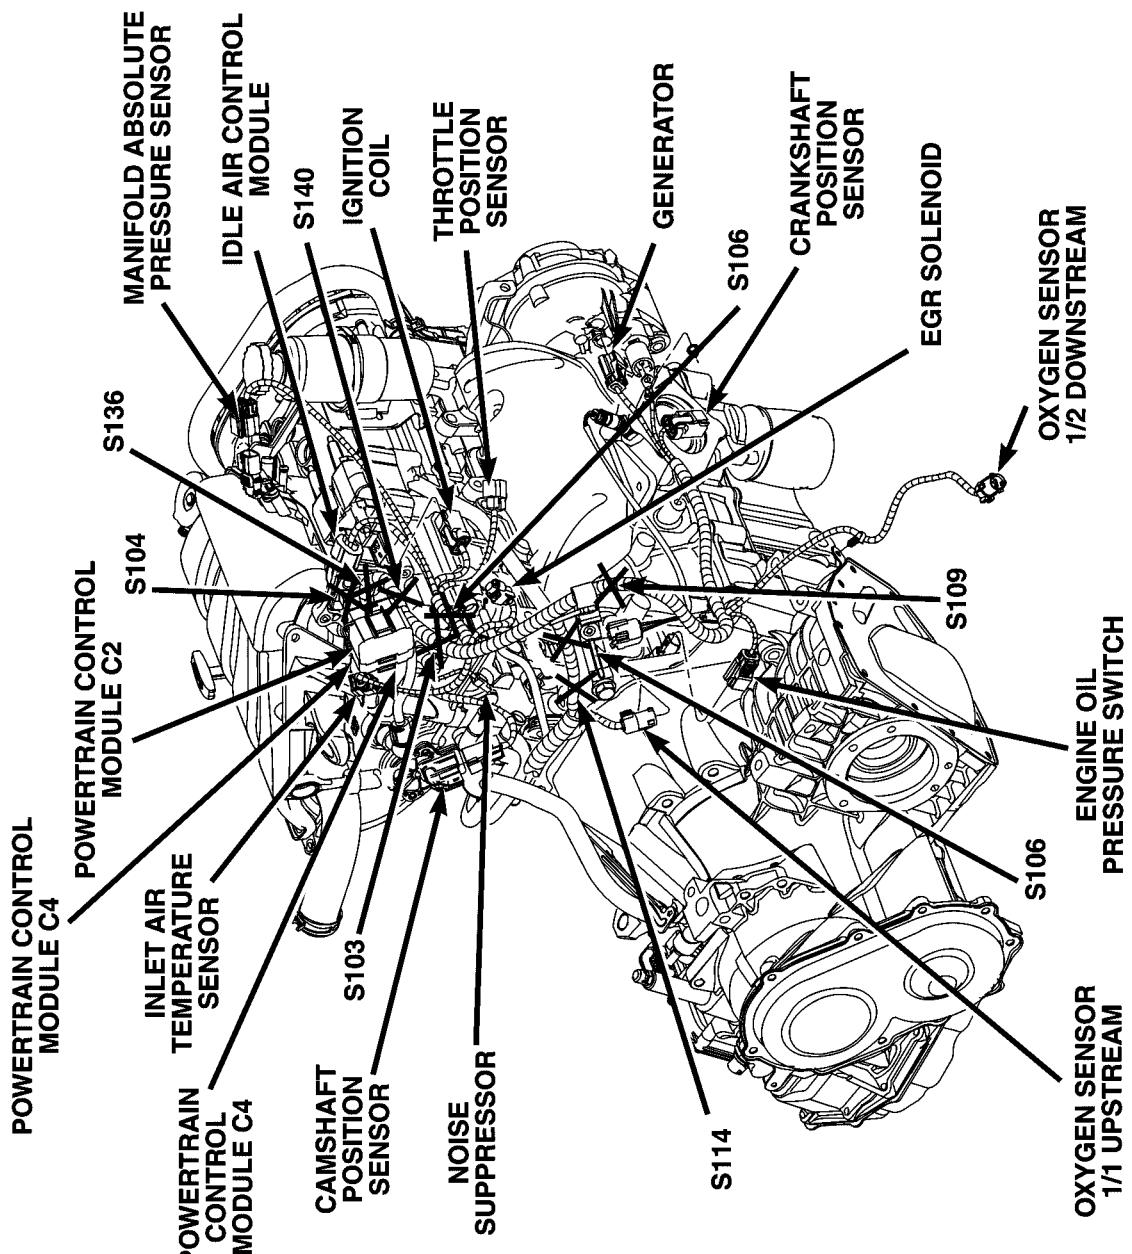


Fig. 22 2.0L/2.4L ENGINE

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

807429

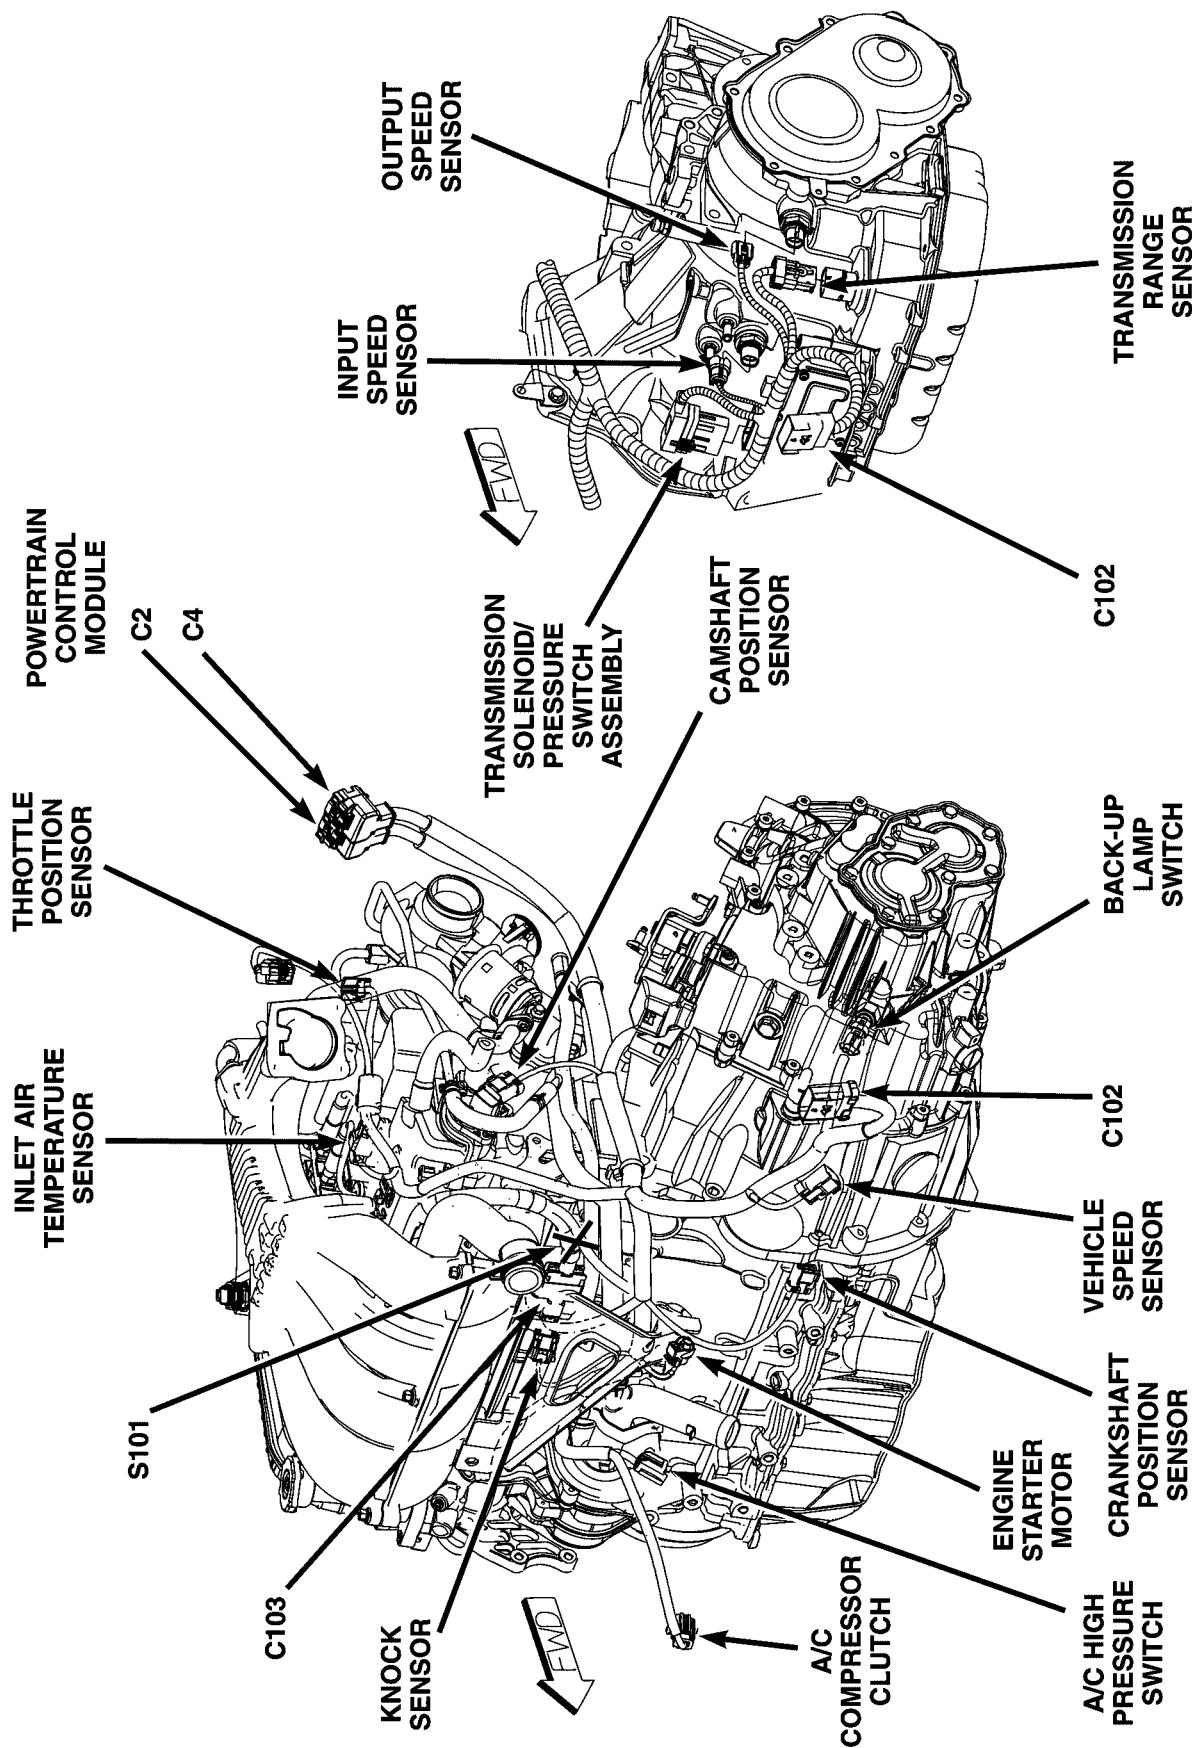


Fig. 23 2.4L TURBO ENGINE (LEFT)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

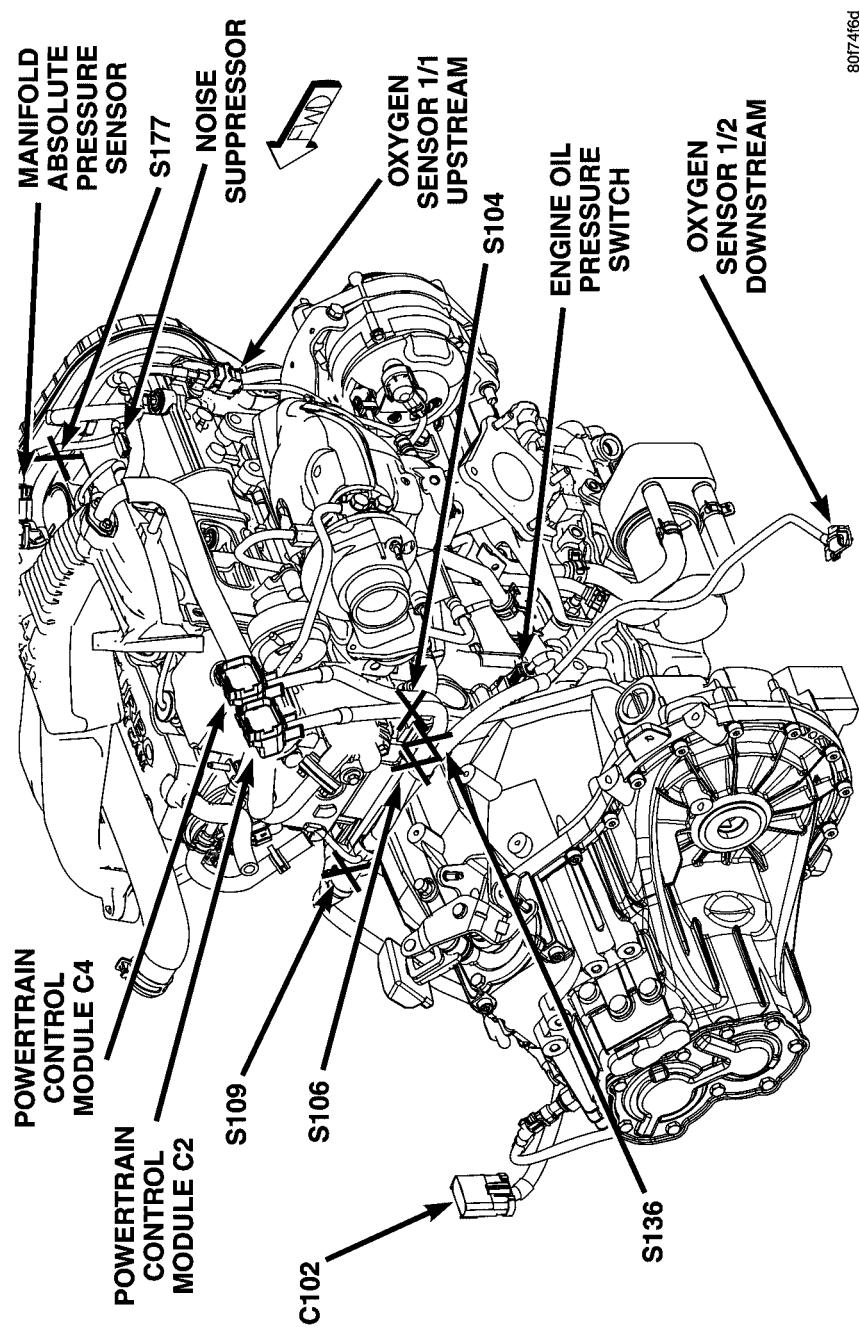


Fig. 24 2.4L TURBO ENGINE (REAR)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)


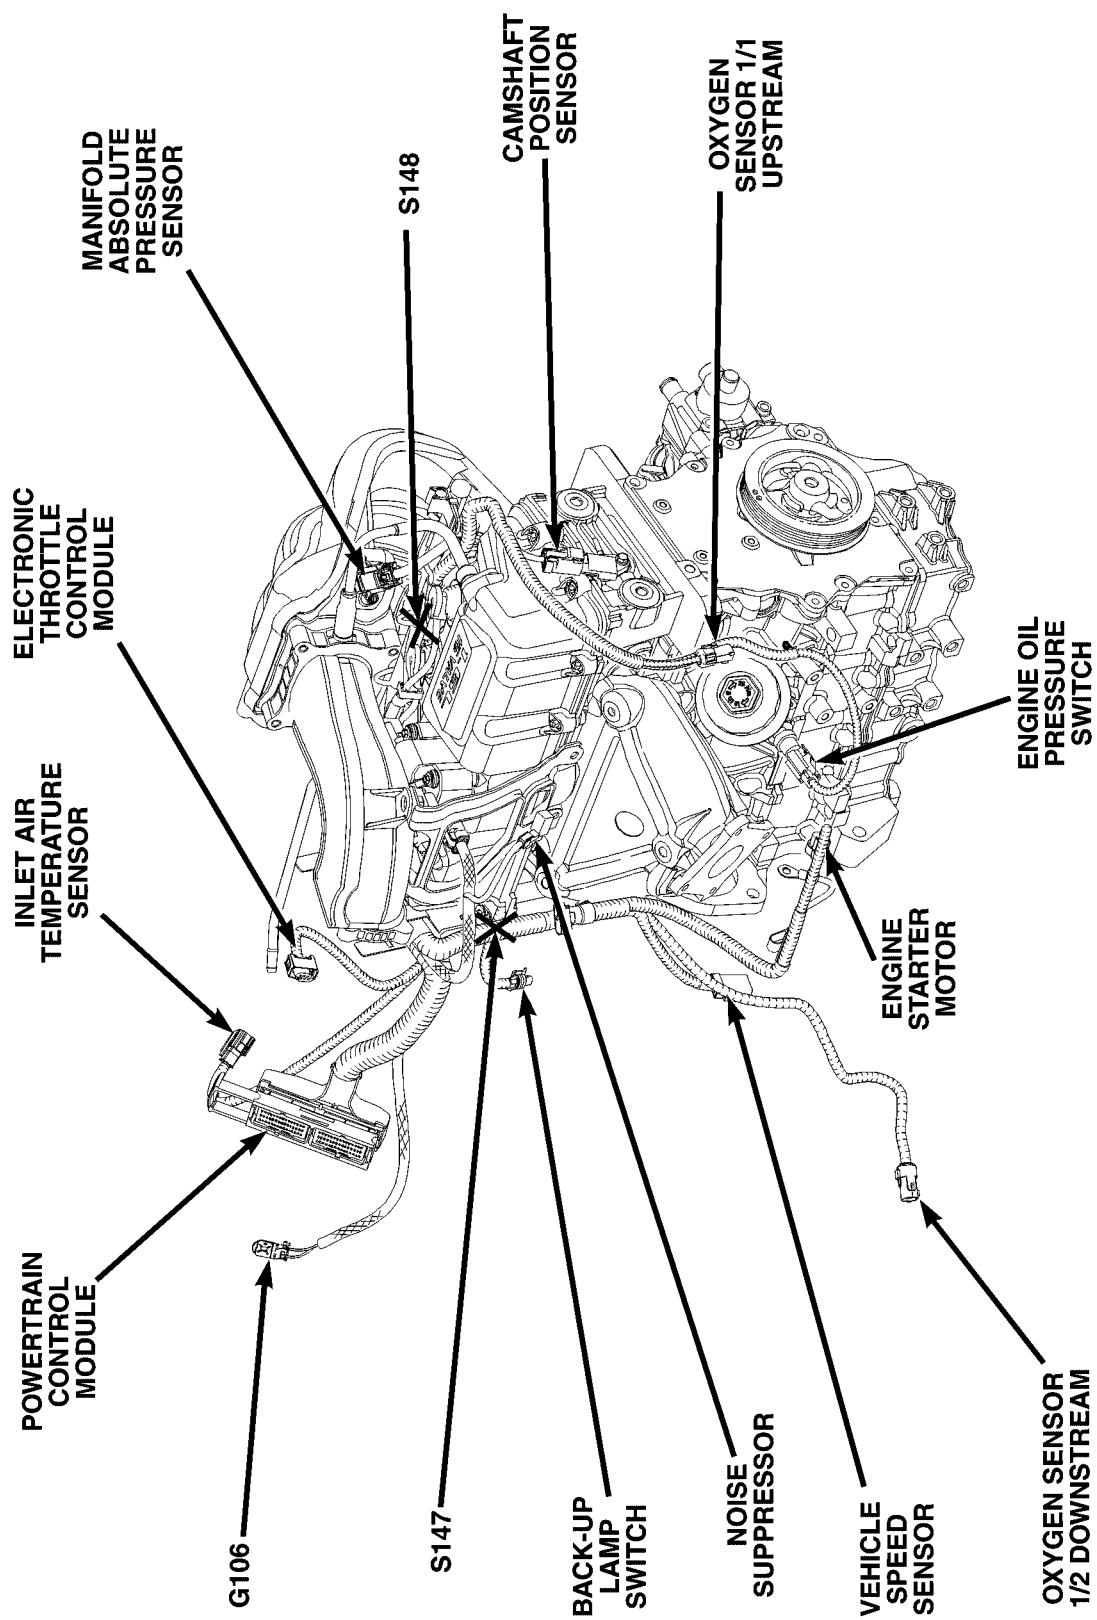


Fig. 25 ENGINE 1.6L (RIGHT SIDE)

80e6de8bNEW

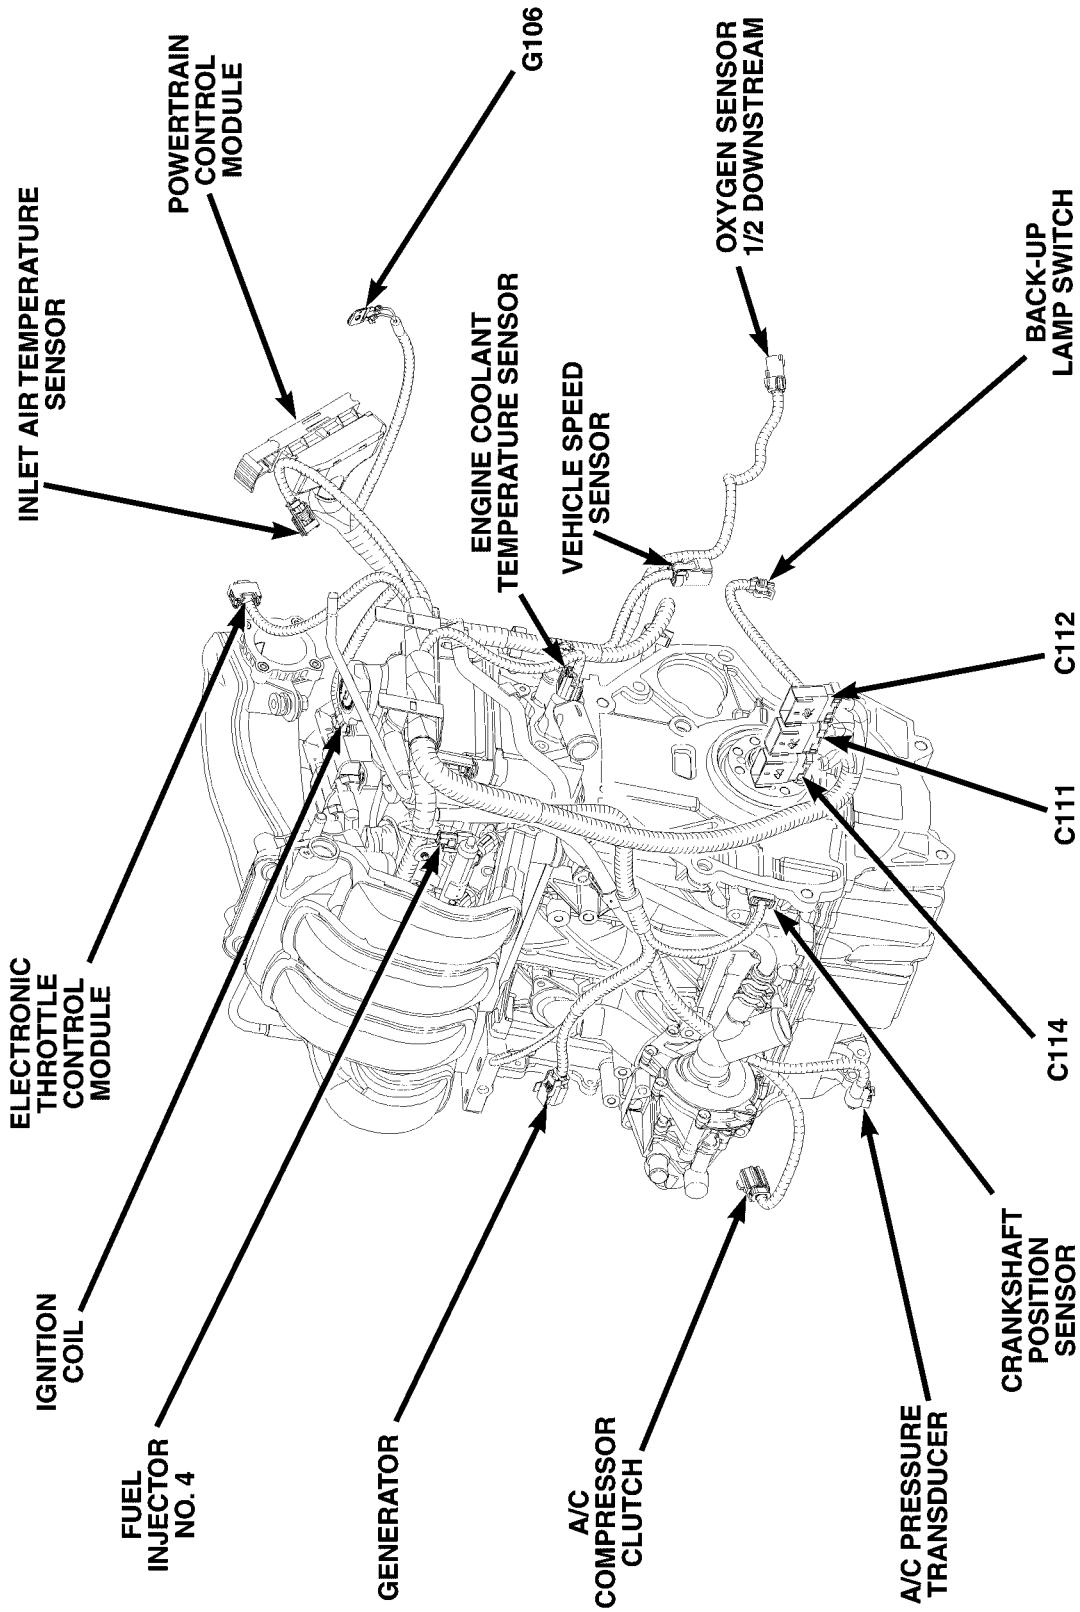

80066de90NEW

Fig. 26 ENGINE 1.6L (LEFT SIDE)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6dea4


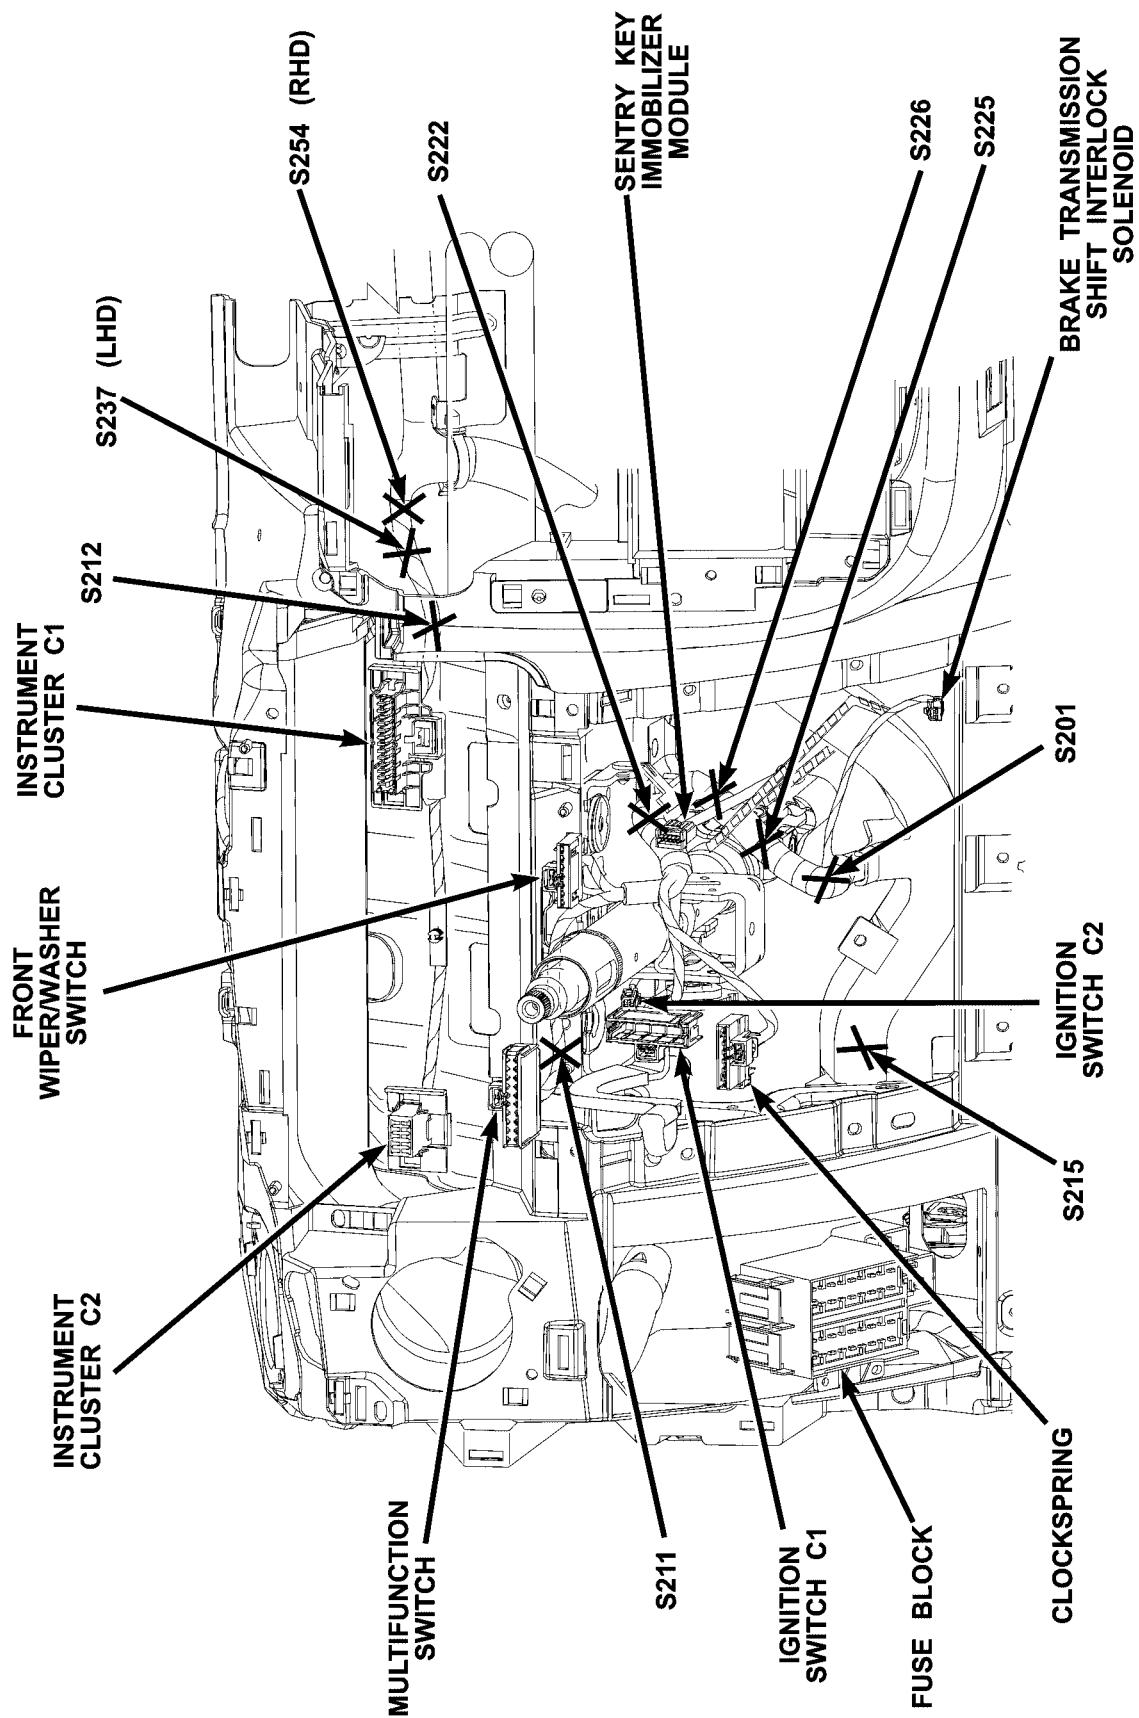


Fig. 27 LEFT SIDE INSTRUMENT PANEL (LHD) (RHD TYPICAL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

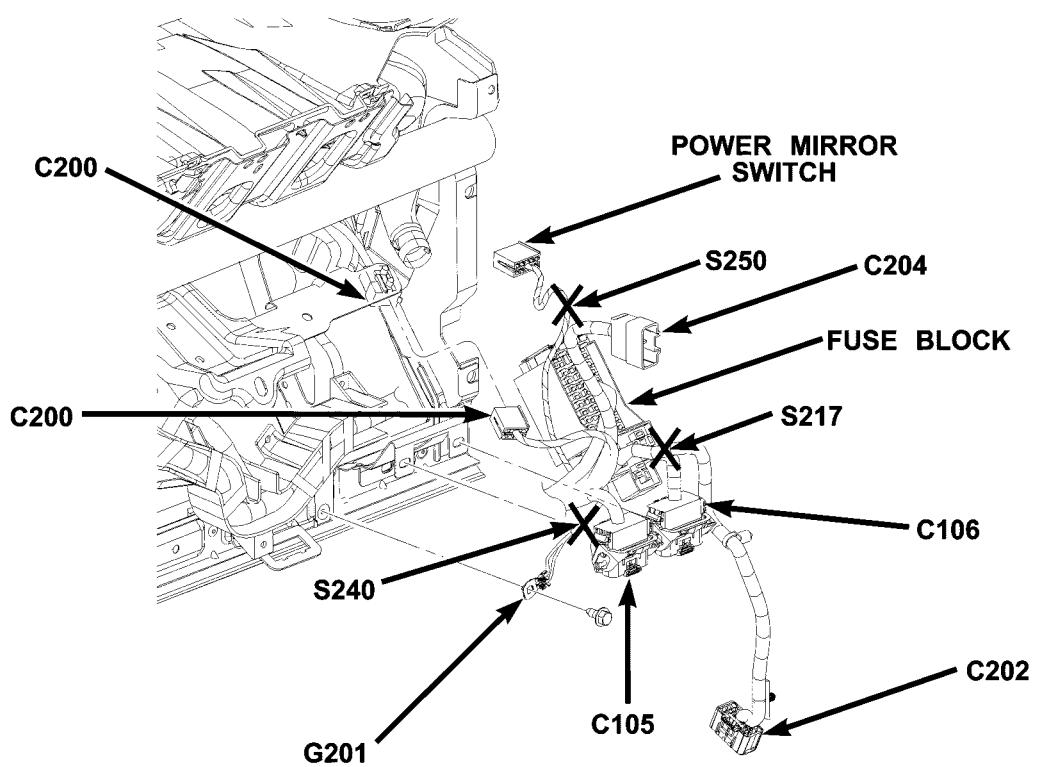

80e6deae

Fig. 28 LEFT REAR INSTRUMENT PANEL (LHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6deb4

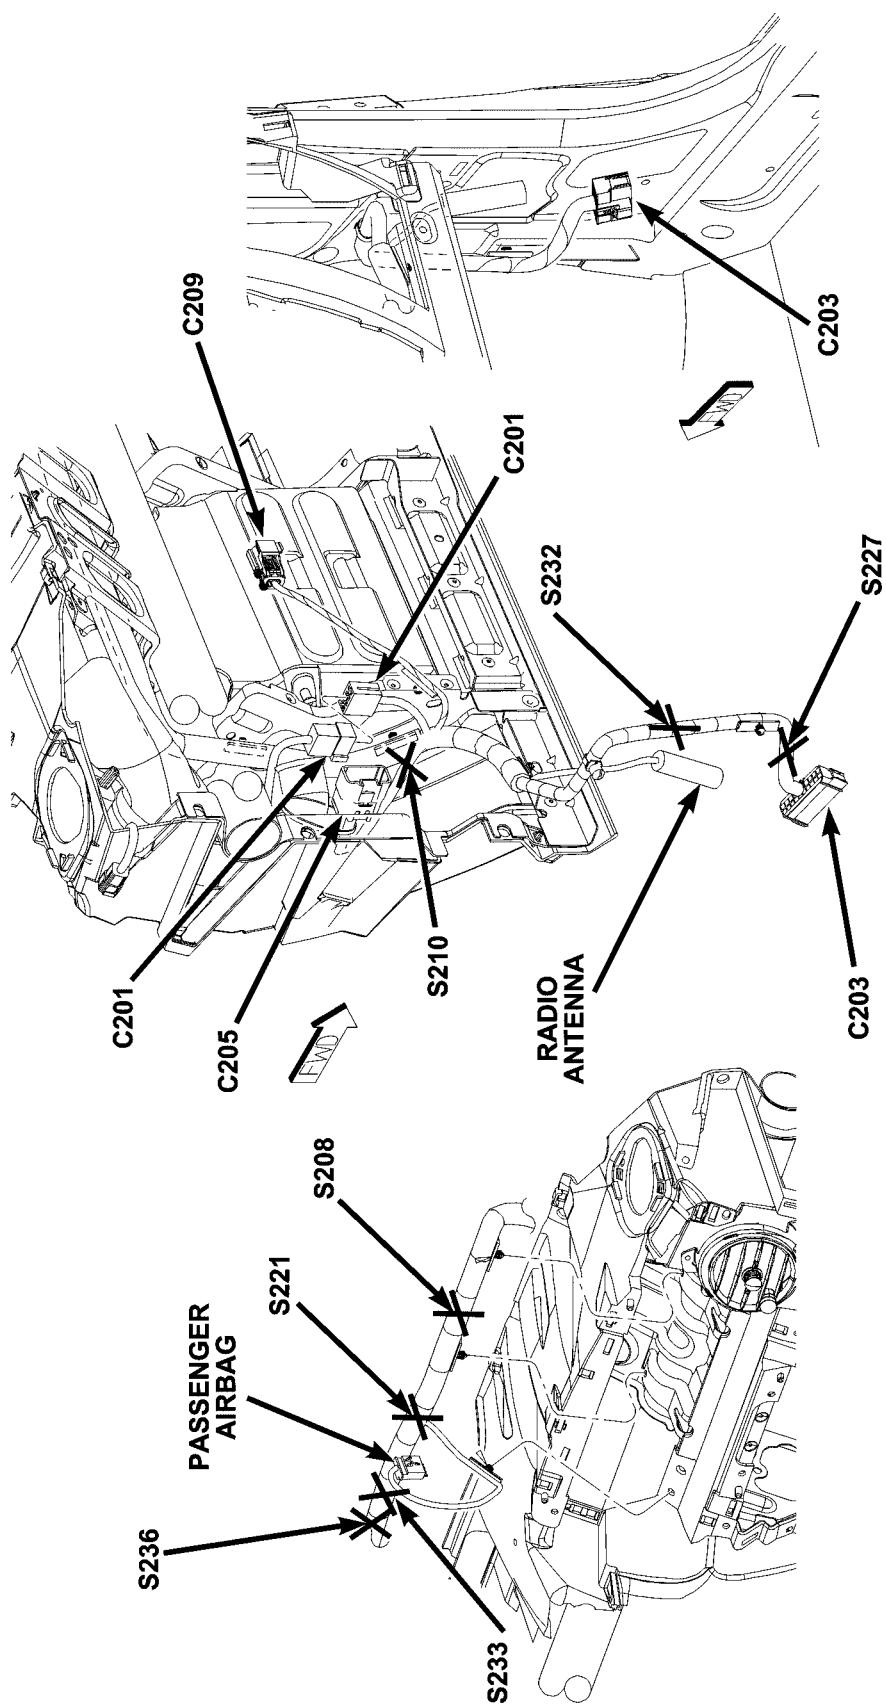


Fig. 29 RIGHT REAR INSTRUMENT PANEL (LHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066deb9

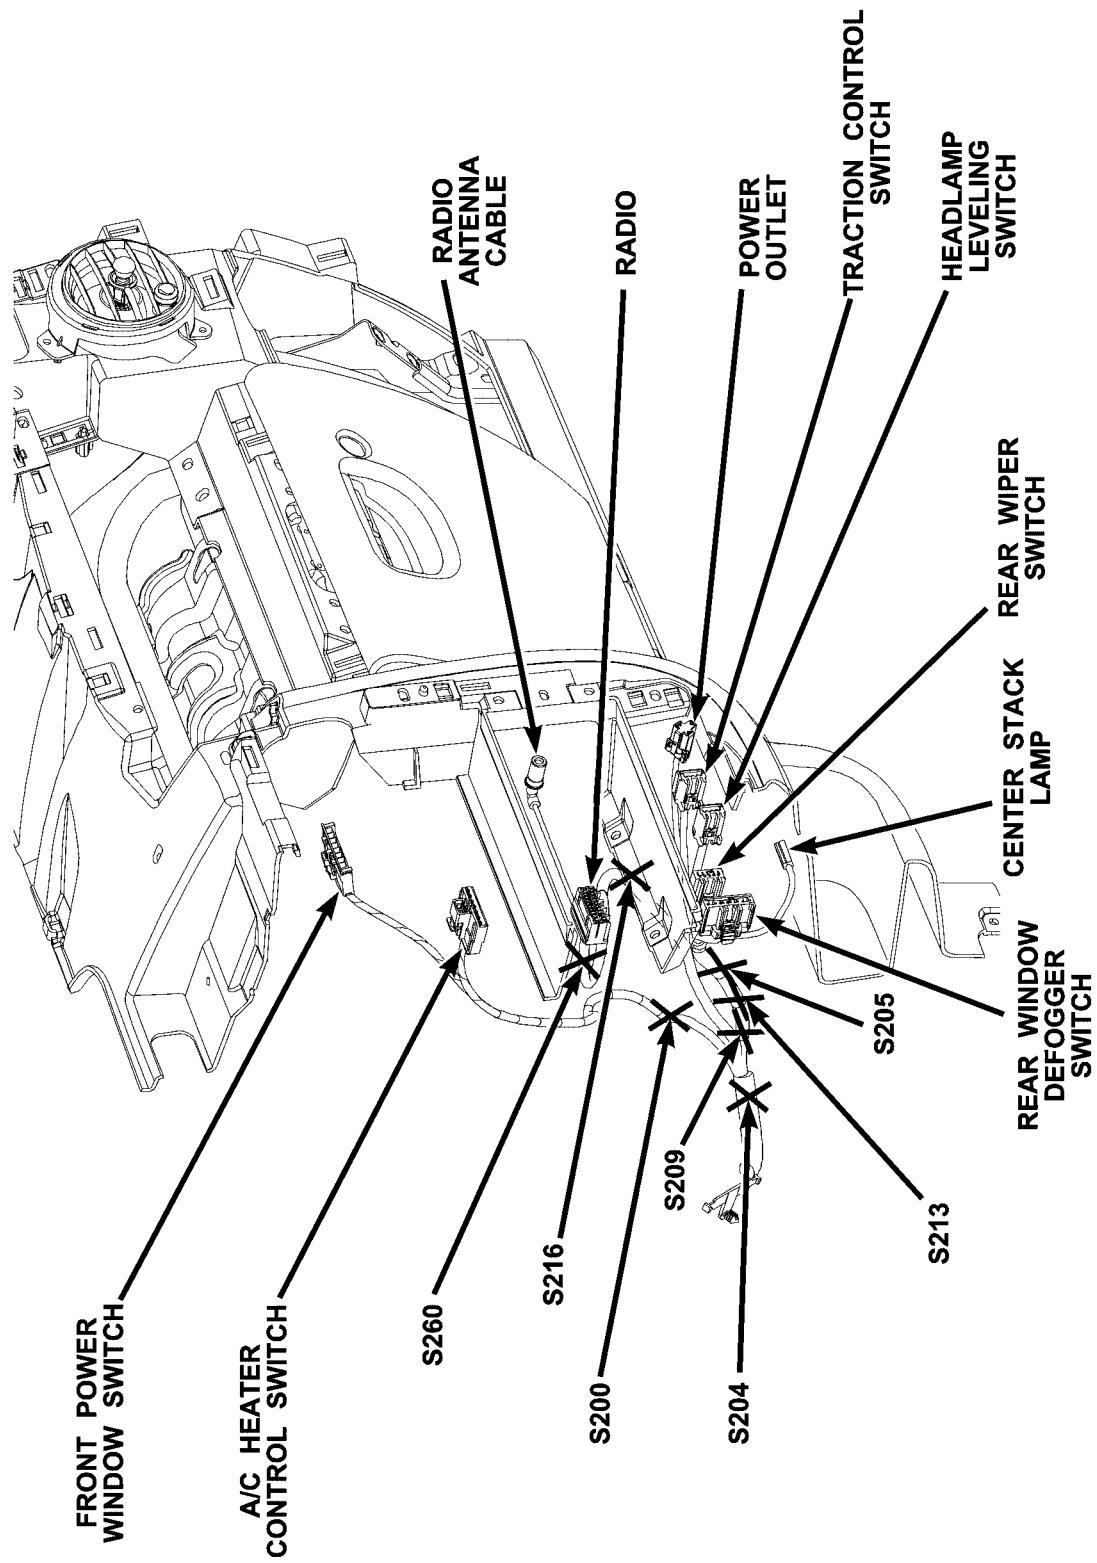


Fig. 30 CENTER INSTRUMENT PANEL

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066d153

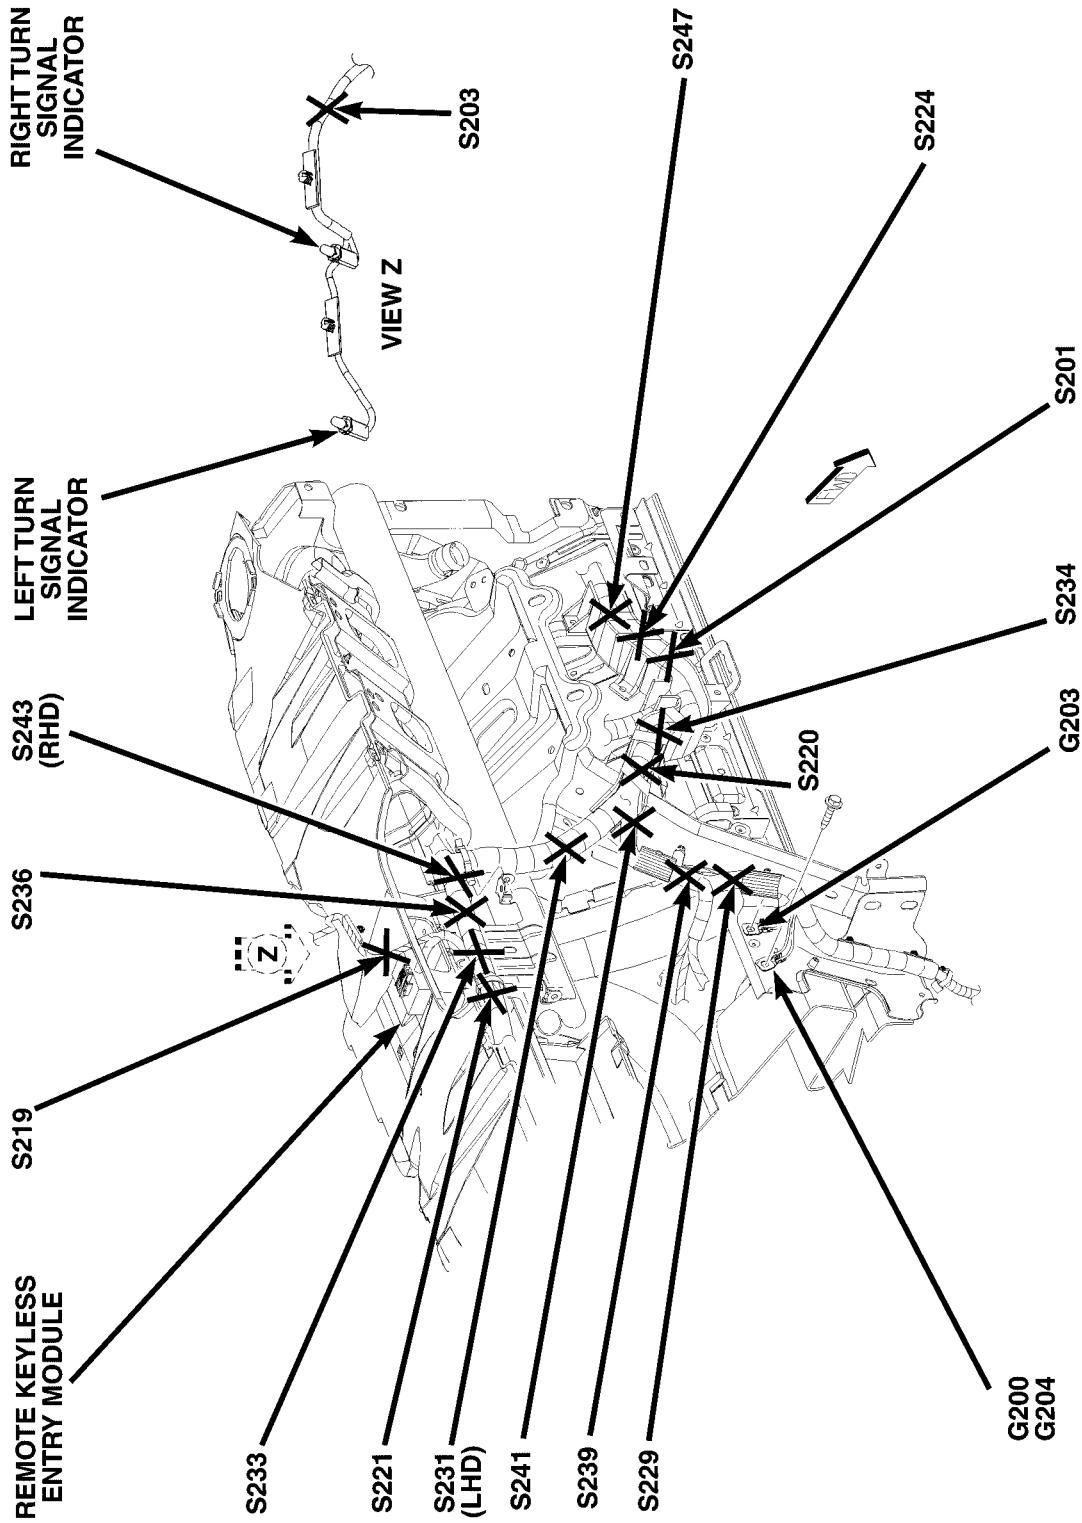


Fig. 31 REAR CENTER INSTRUMENT PANEL LHD (RHD TYPICAL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6df65

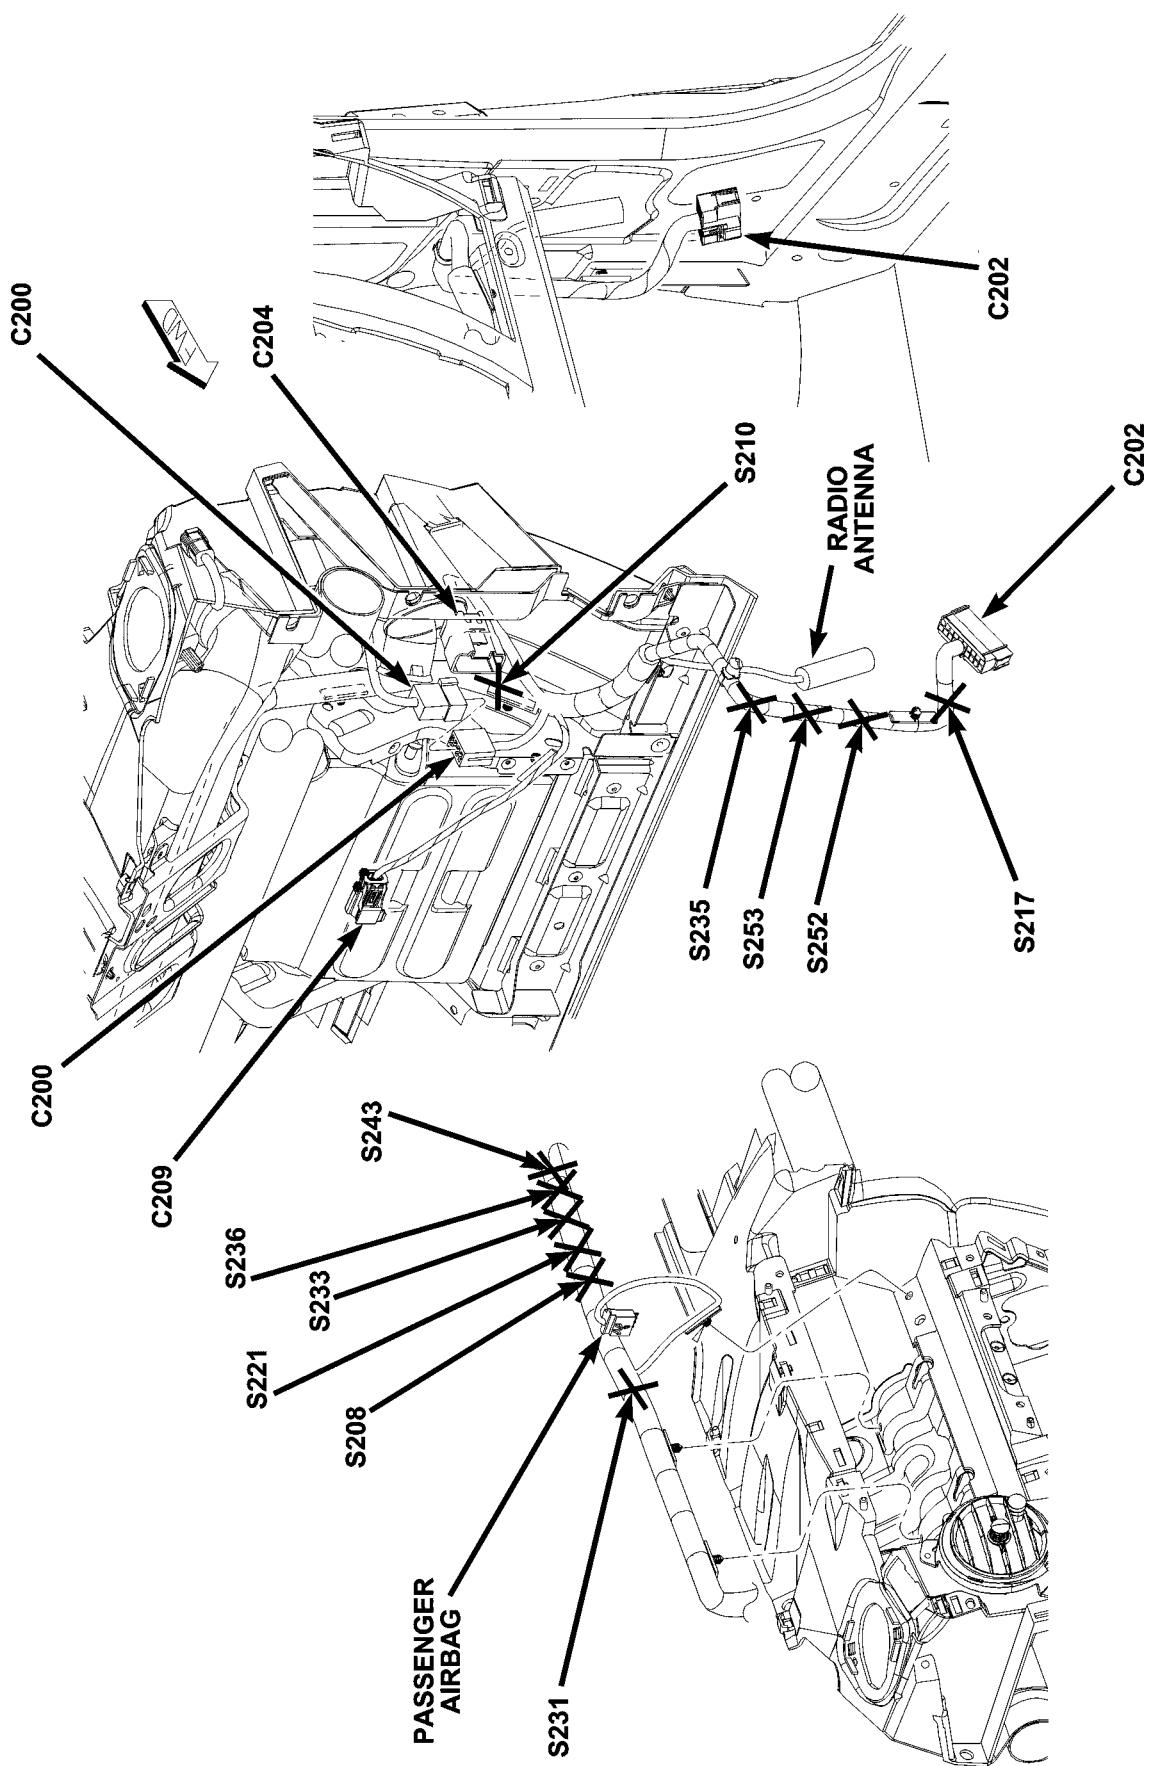


Fig. 32 LEFT REAR INSTRUMENT PANEL (RHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6df78

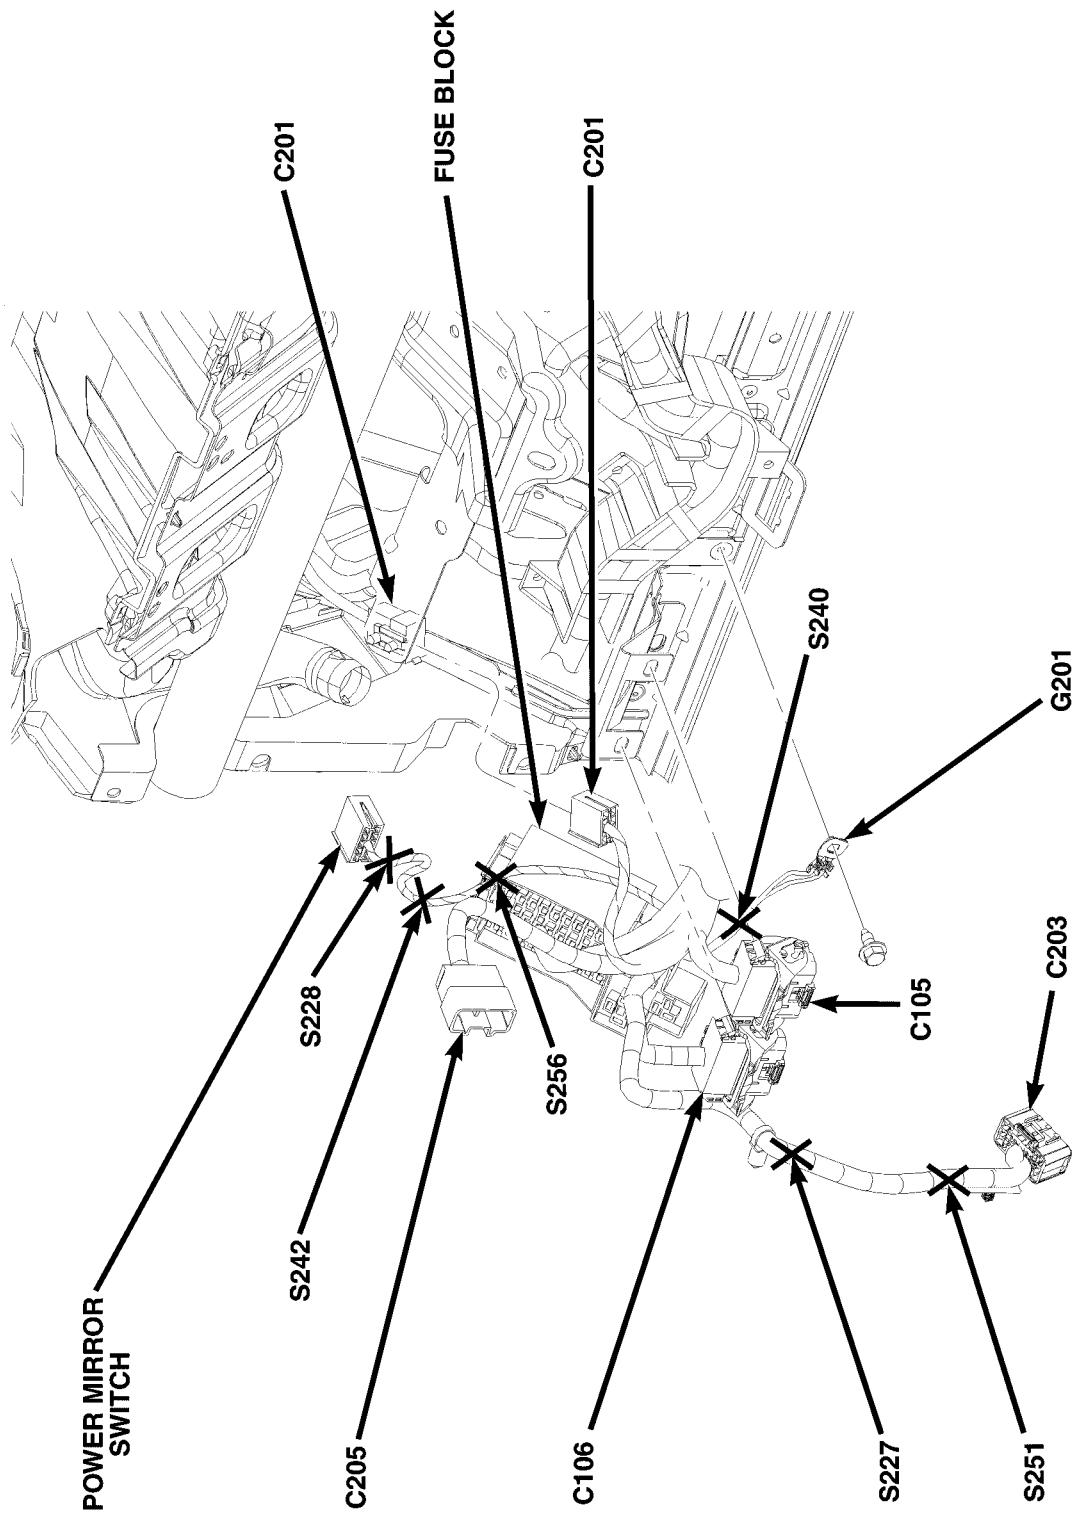


Fig. 33 RIGHT REAR INSTRUMENT PANEL (RHD)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066fffb

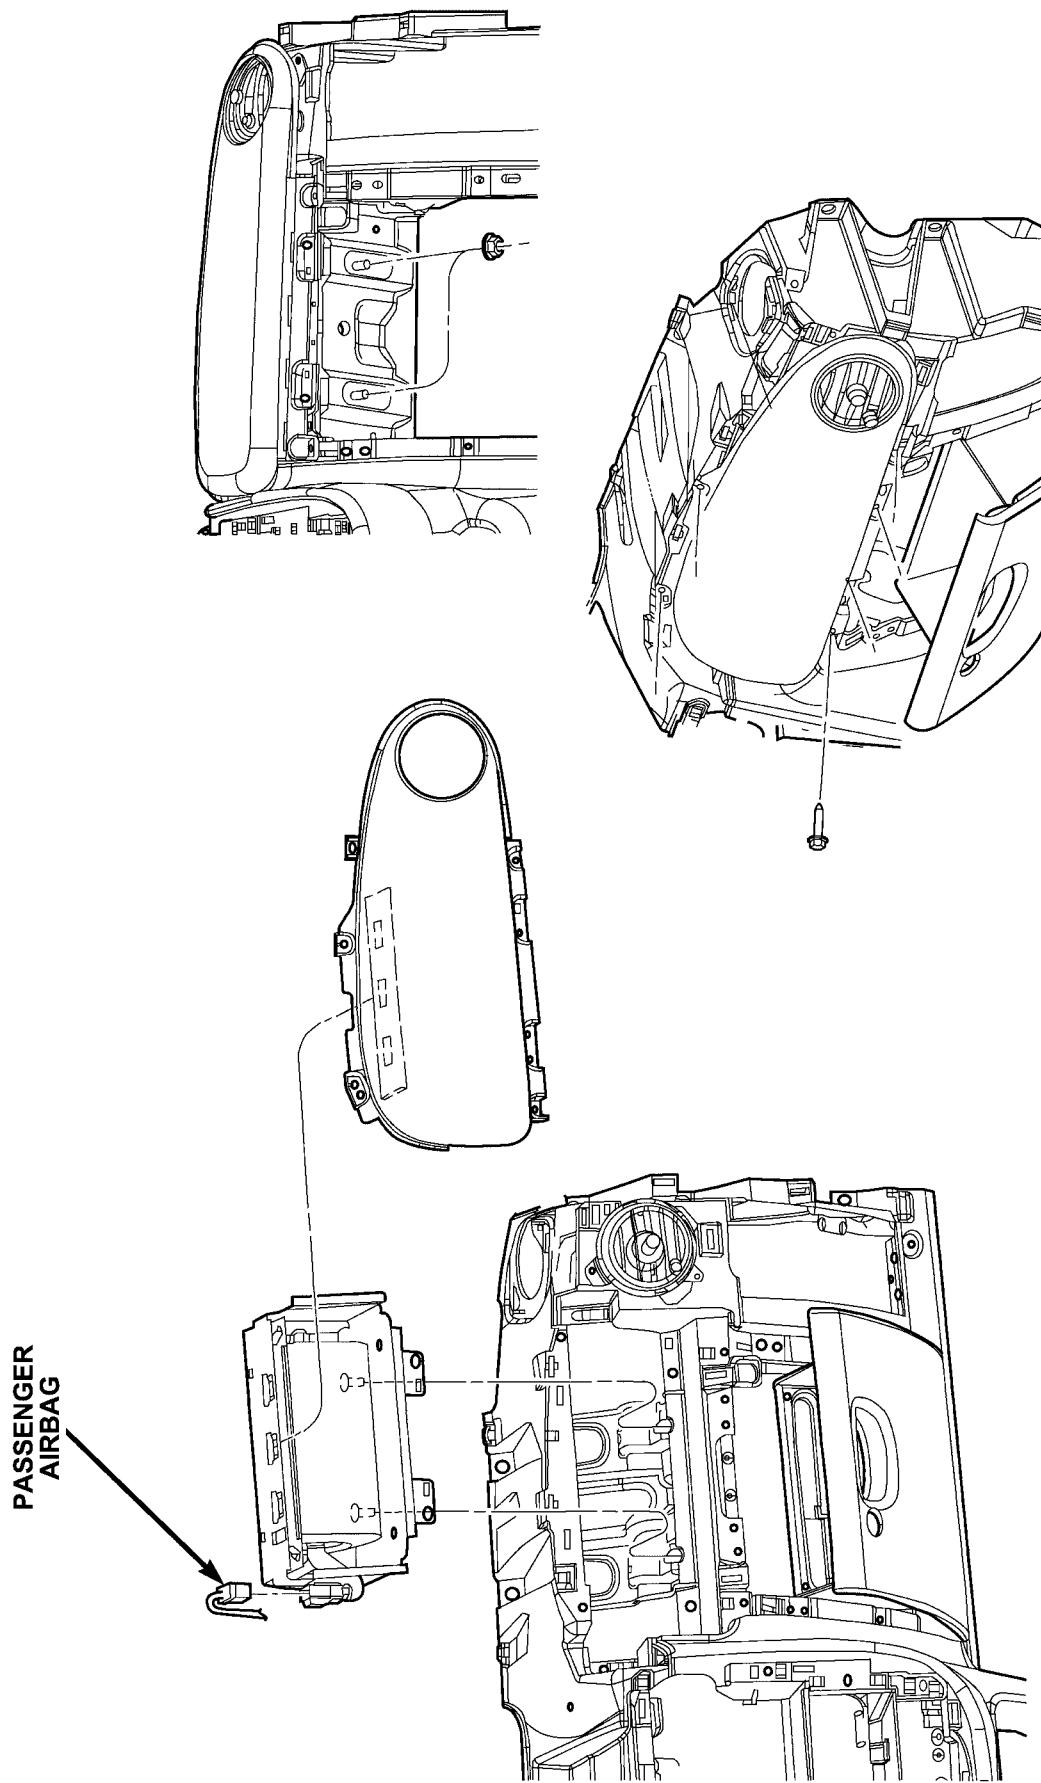


Fig. 34 PASSENGER SIDE AIRBAG

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

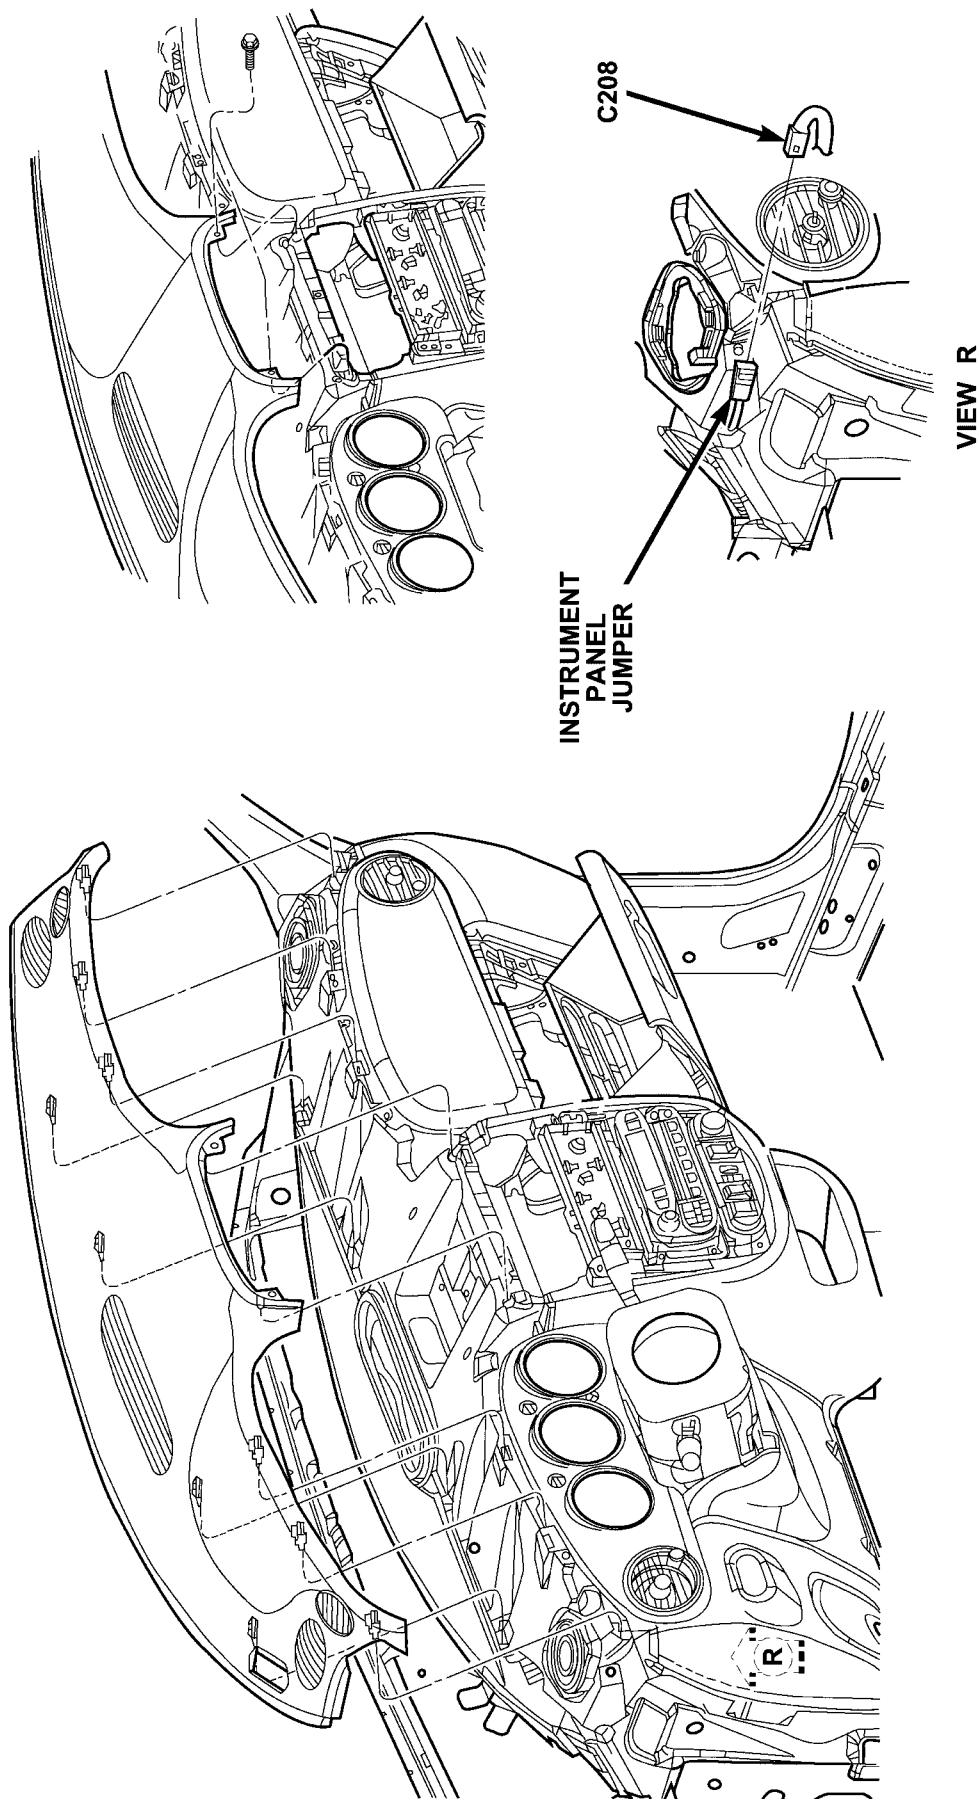


Fig. 35 INSTRUMENT PANEL JUMPER

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6e052

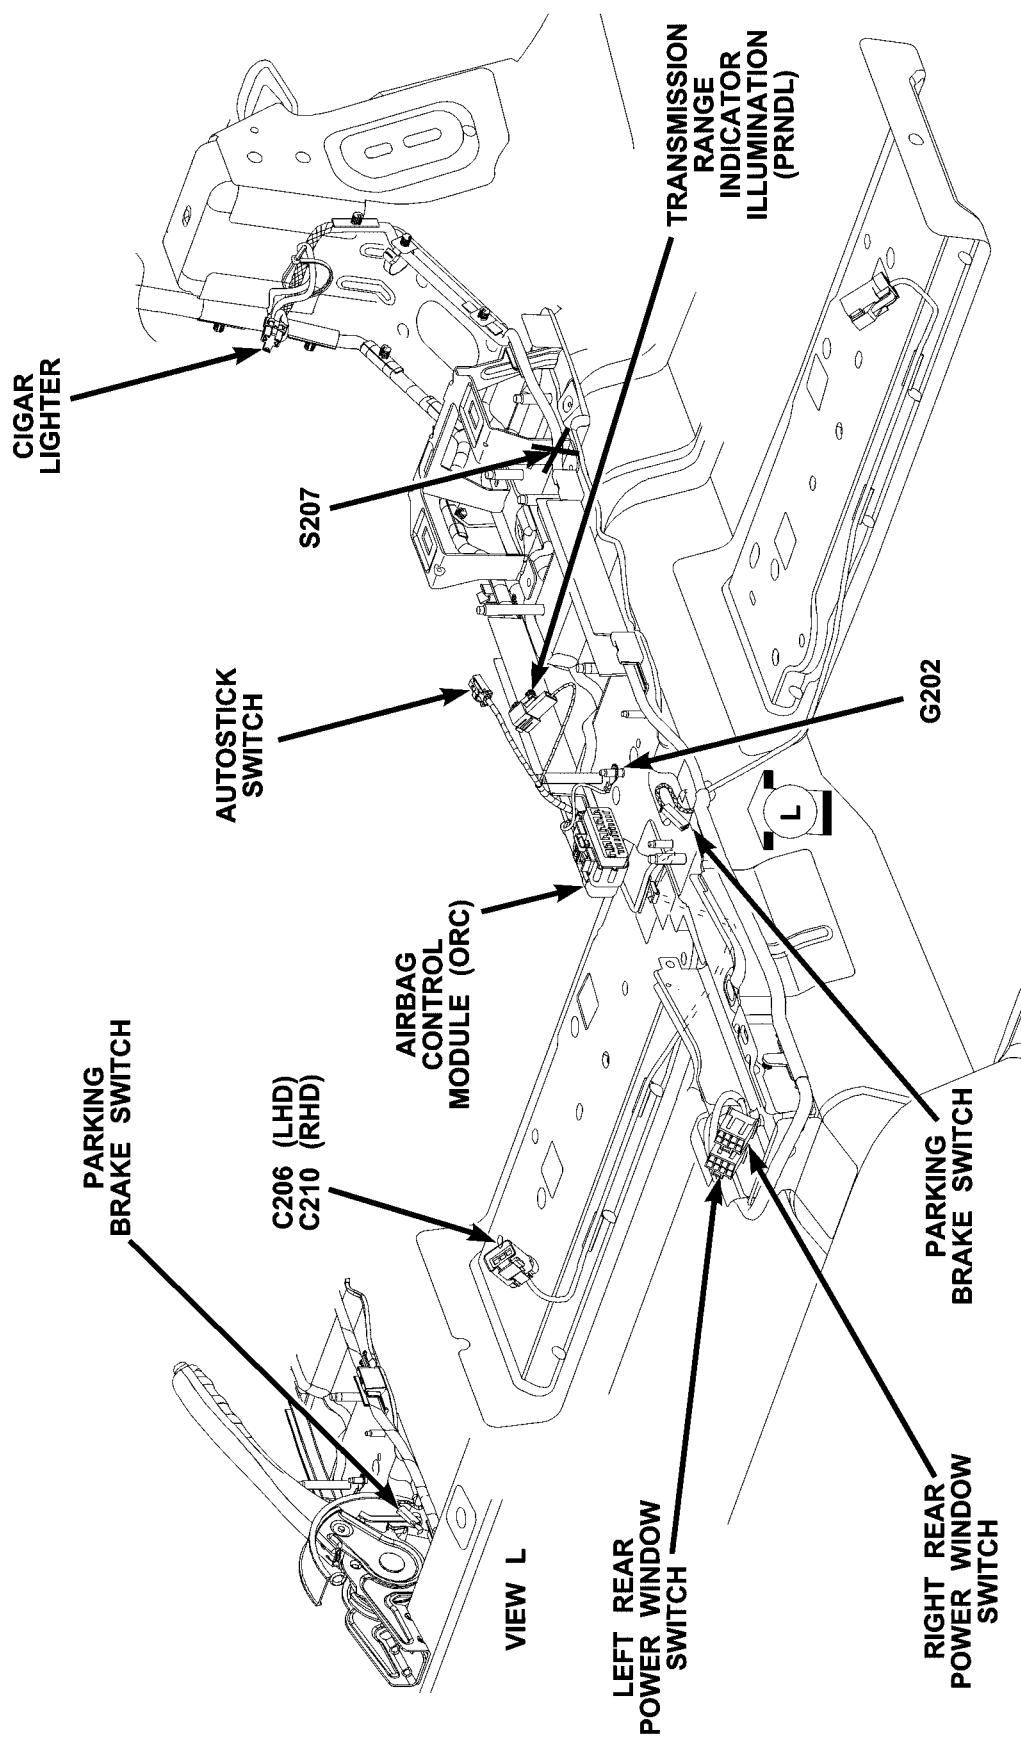


Fig. 36 CENTER CONSOLE

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80066077

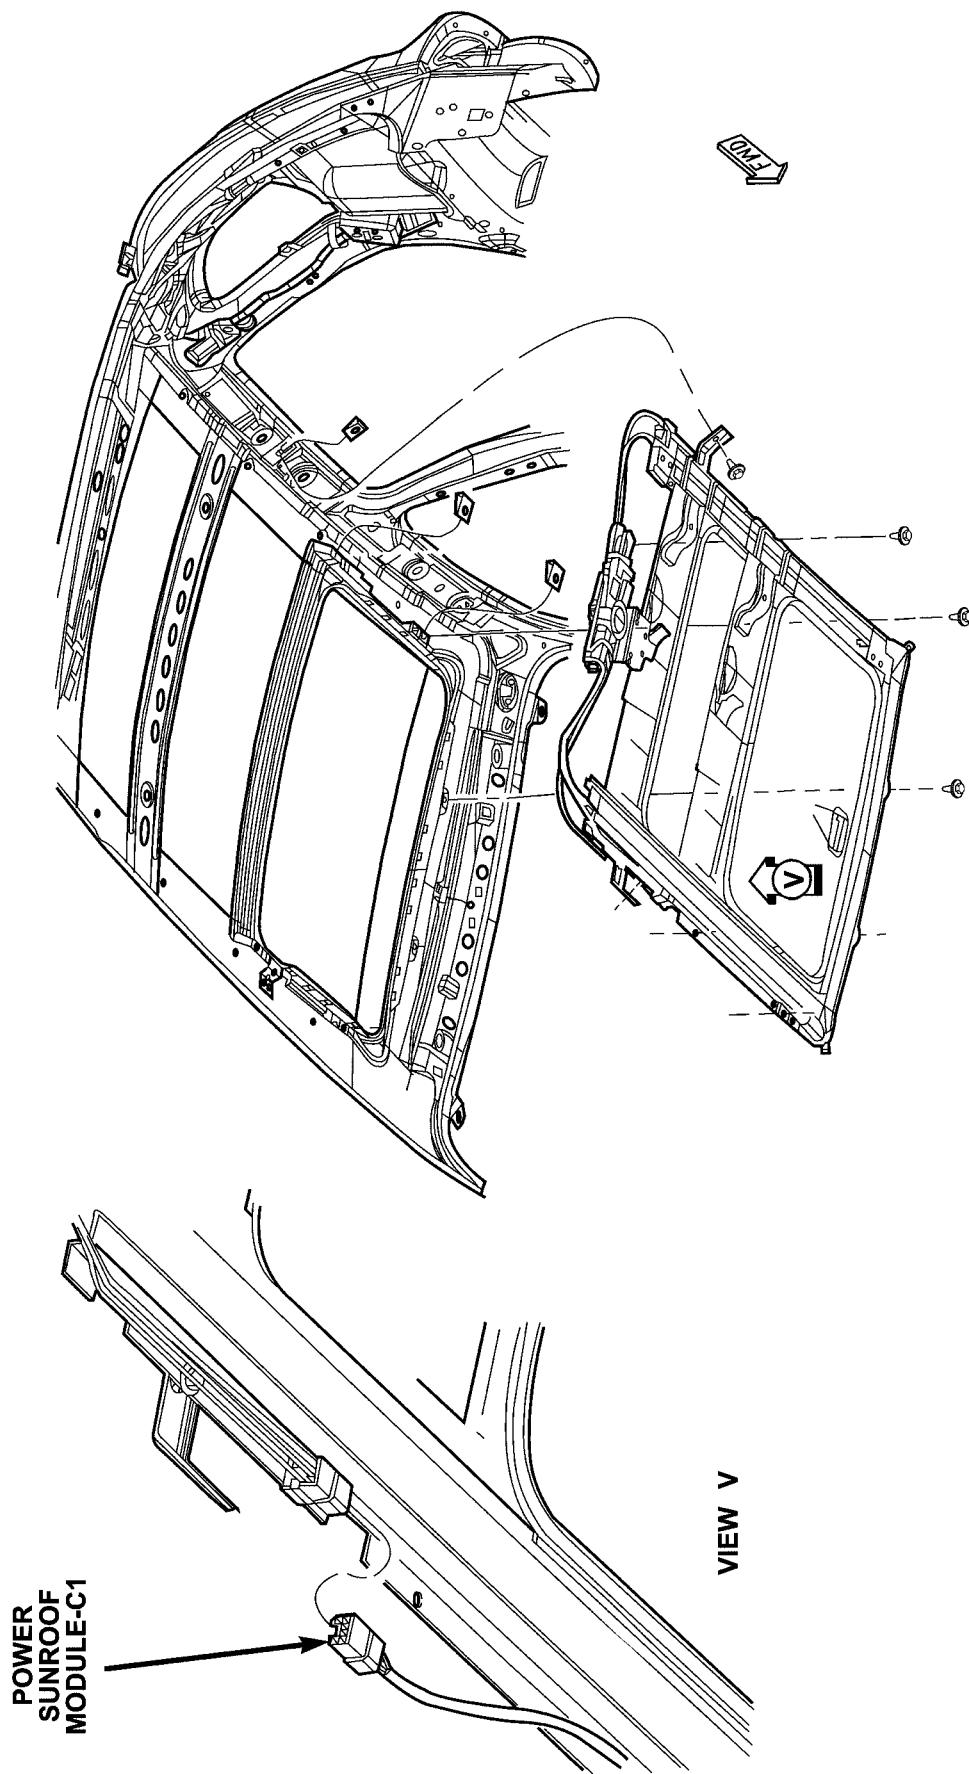


Fig. 37 SUNROOF

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066e0f6

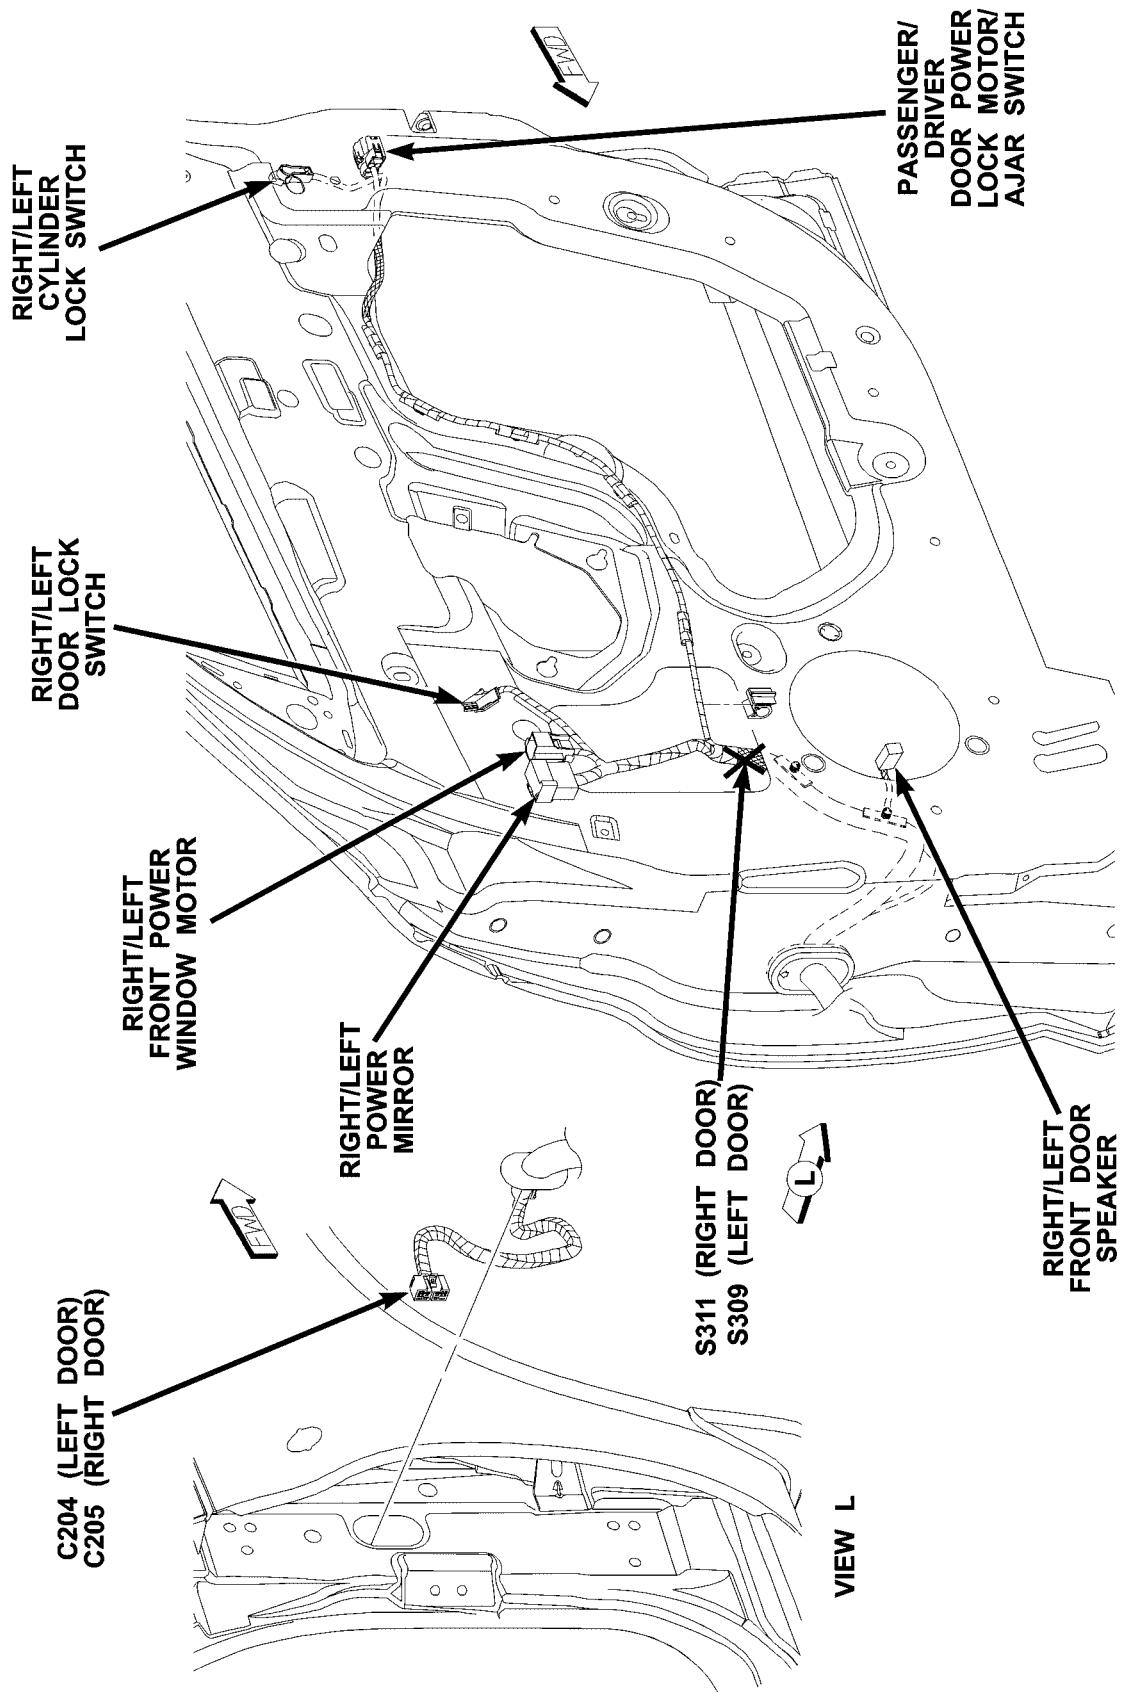


Fig. 38 FRONT DOOR (EXCEPT EXPORT)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

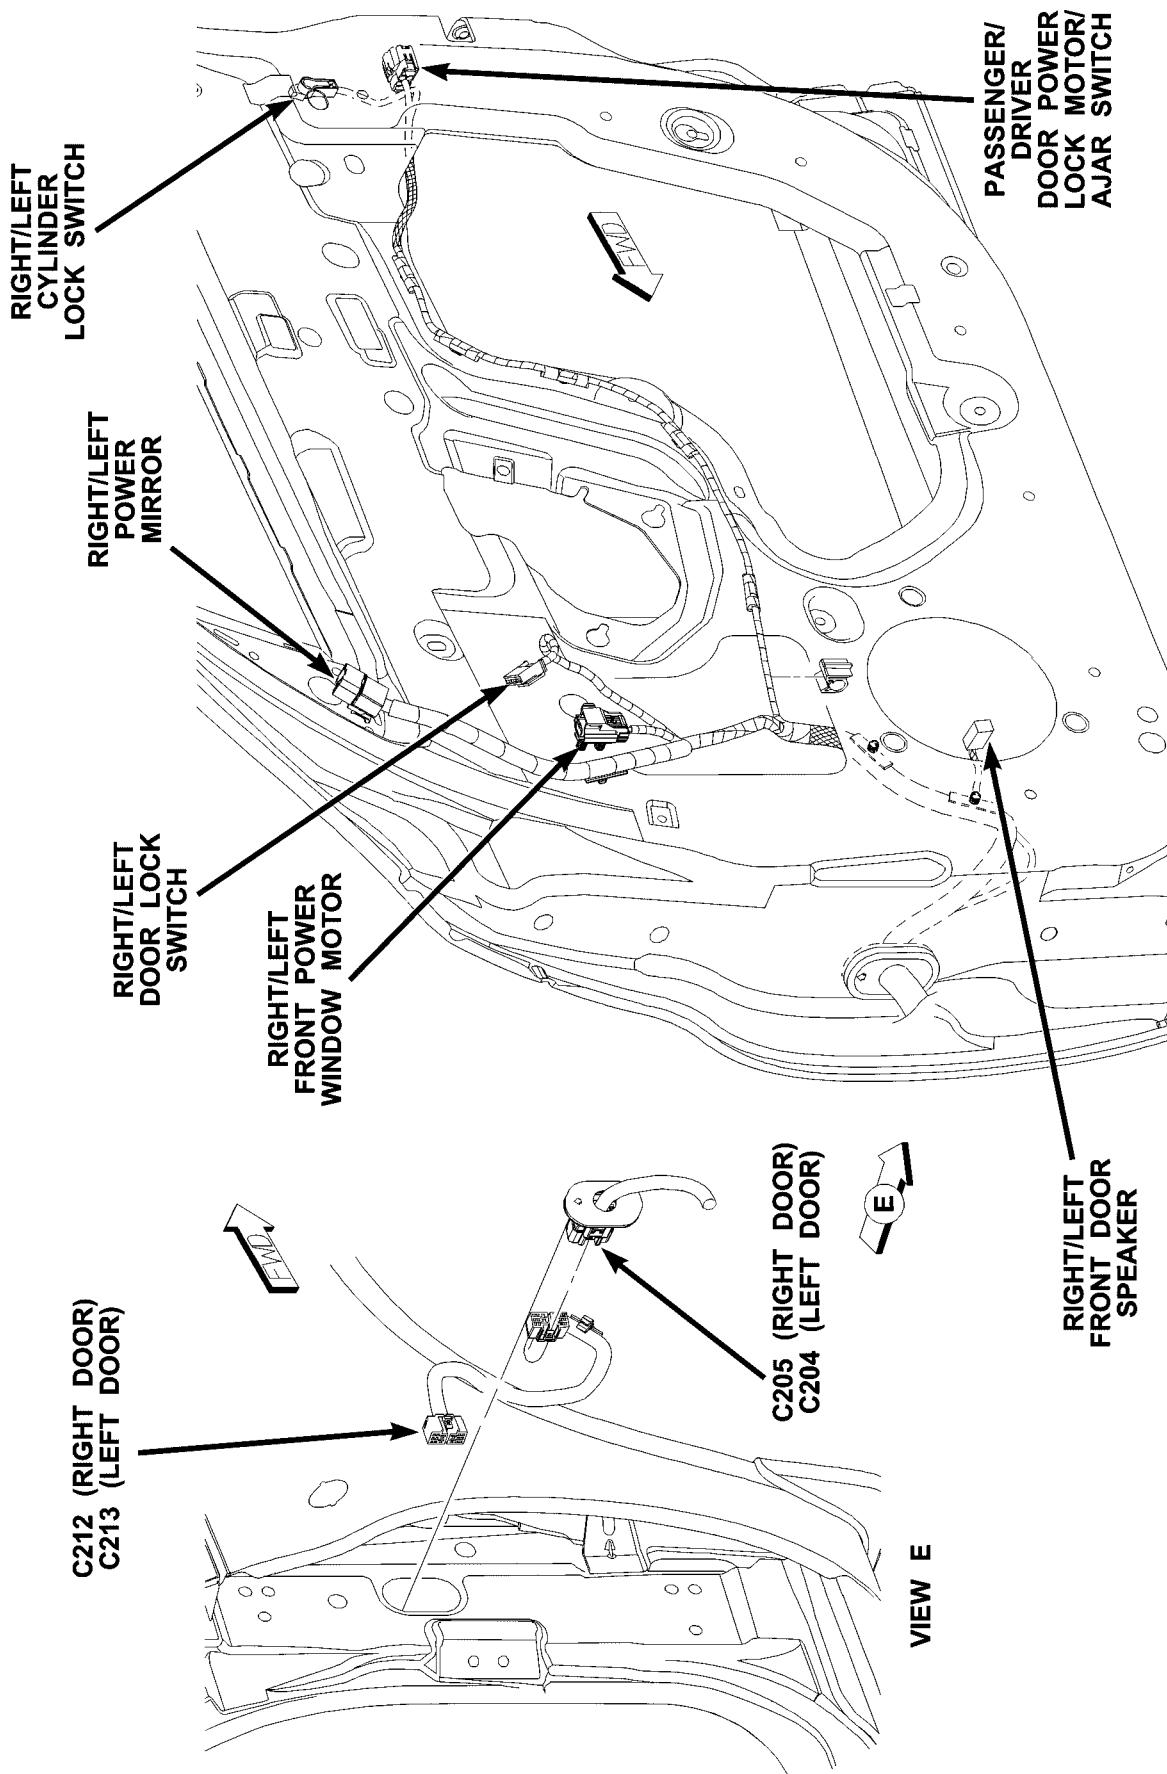


Fig. 39 FRONT DOOR (EXPORT)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6e143

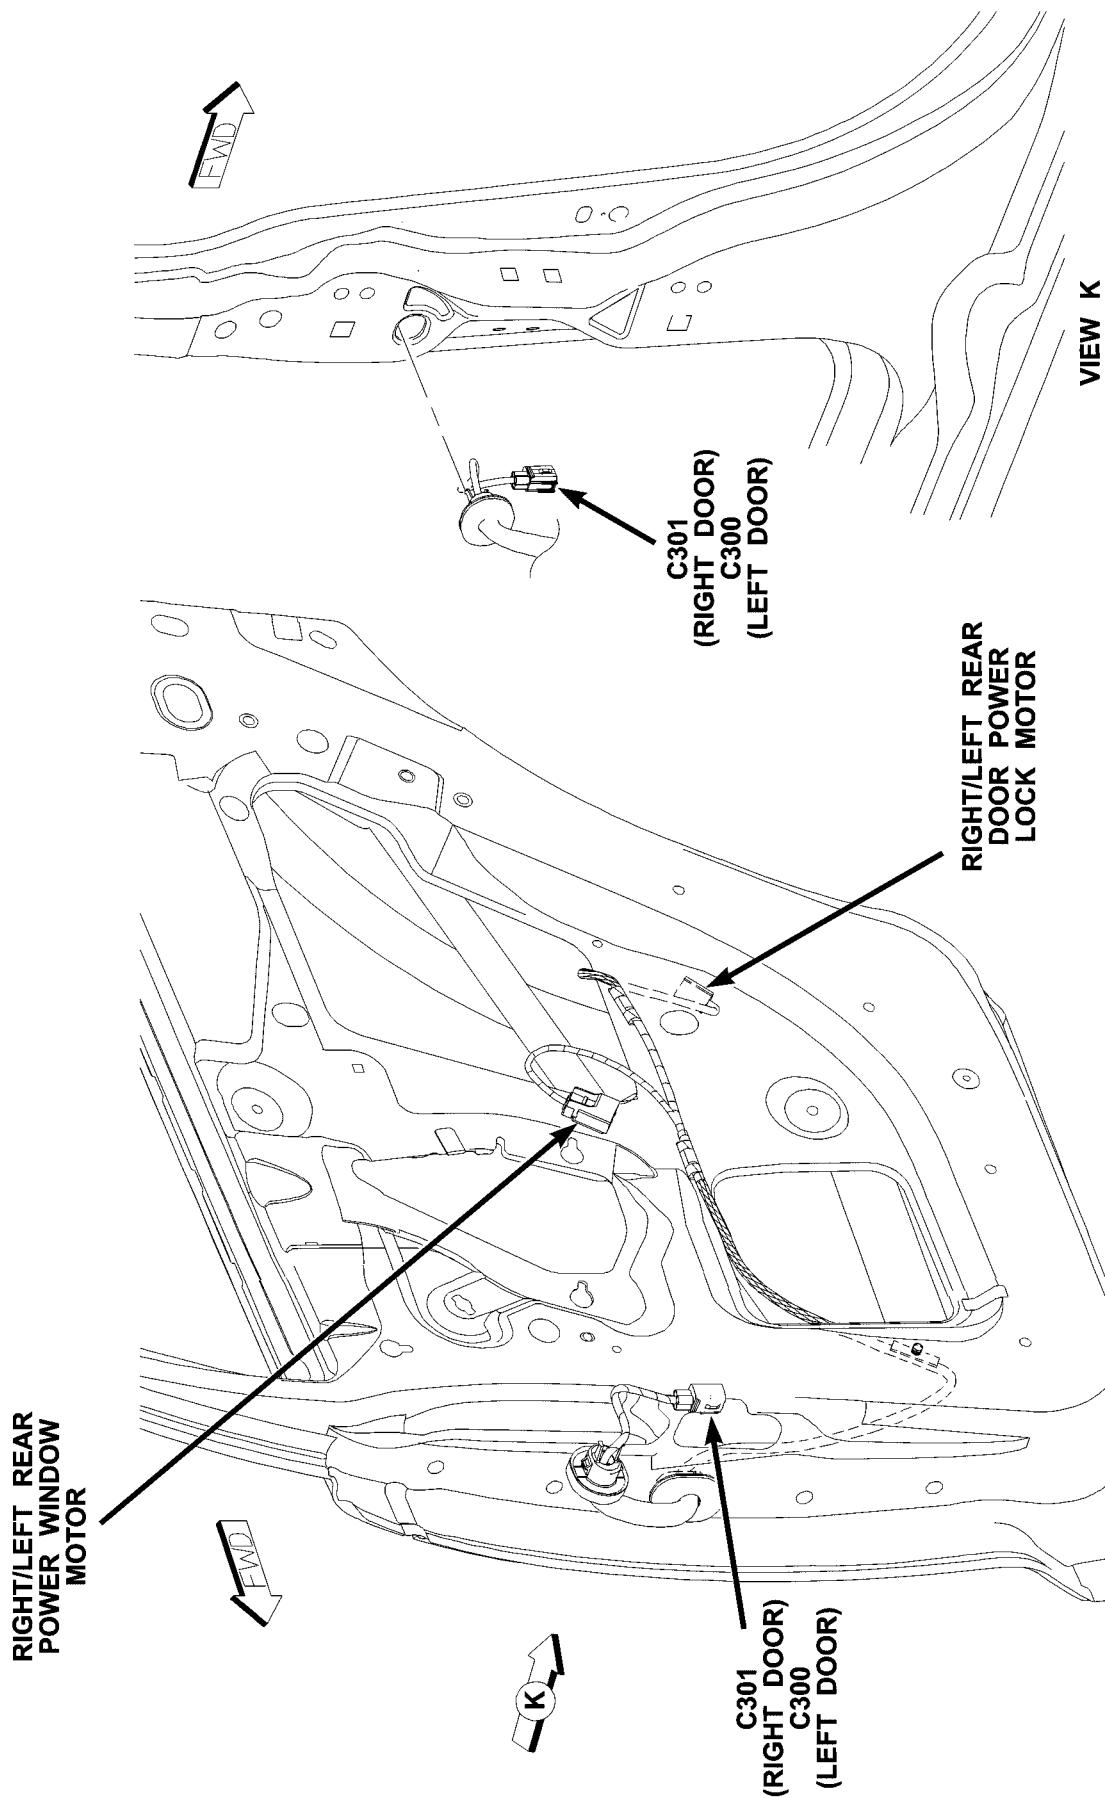


Fig. 40 REAR DOOR

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6e19a

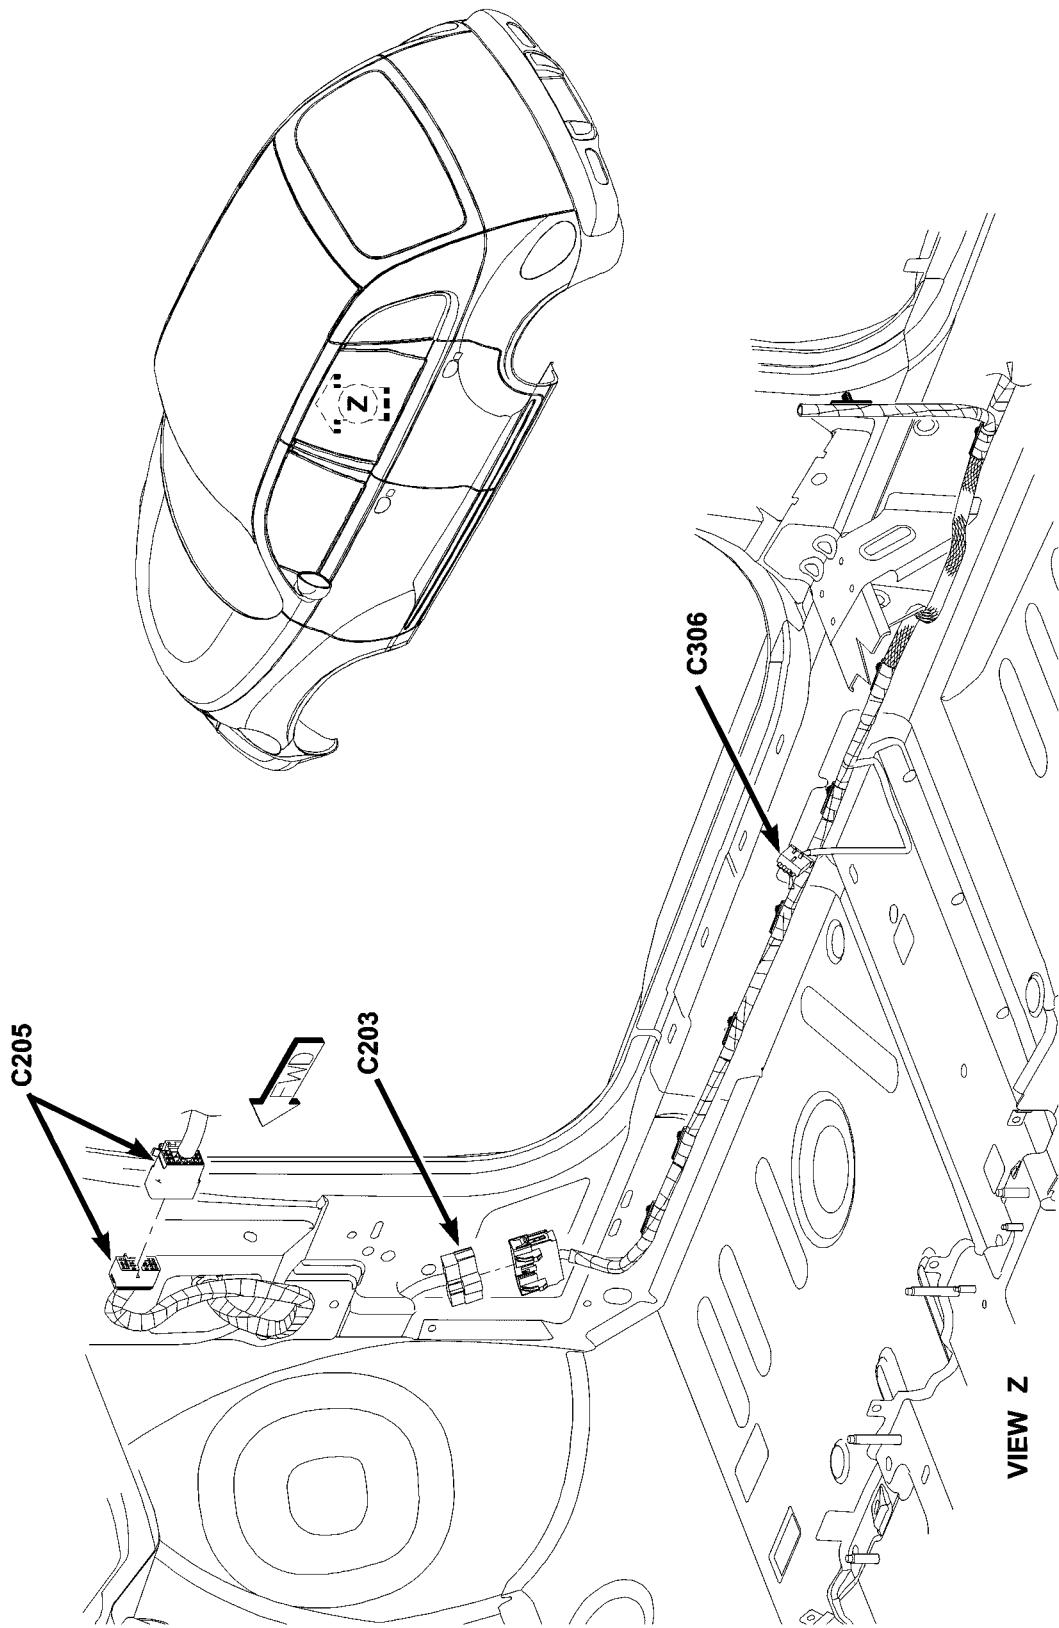


Fig. 41 RIGHT FRONT BODY

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80e6e203

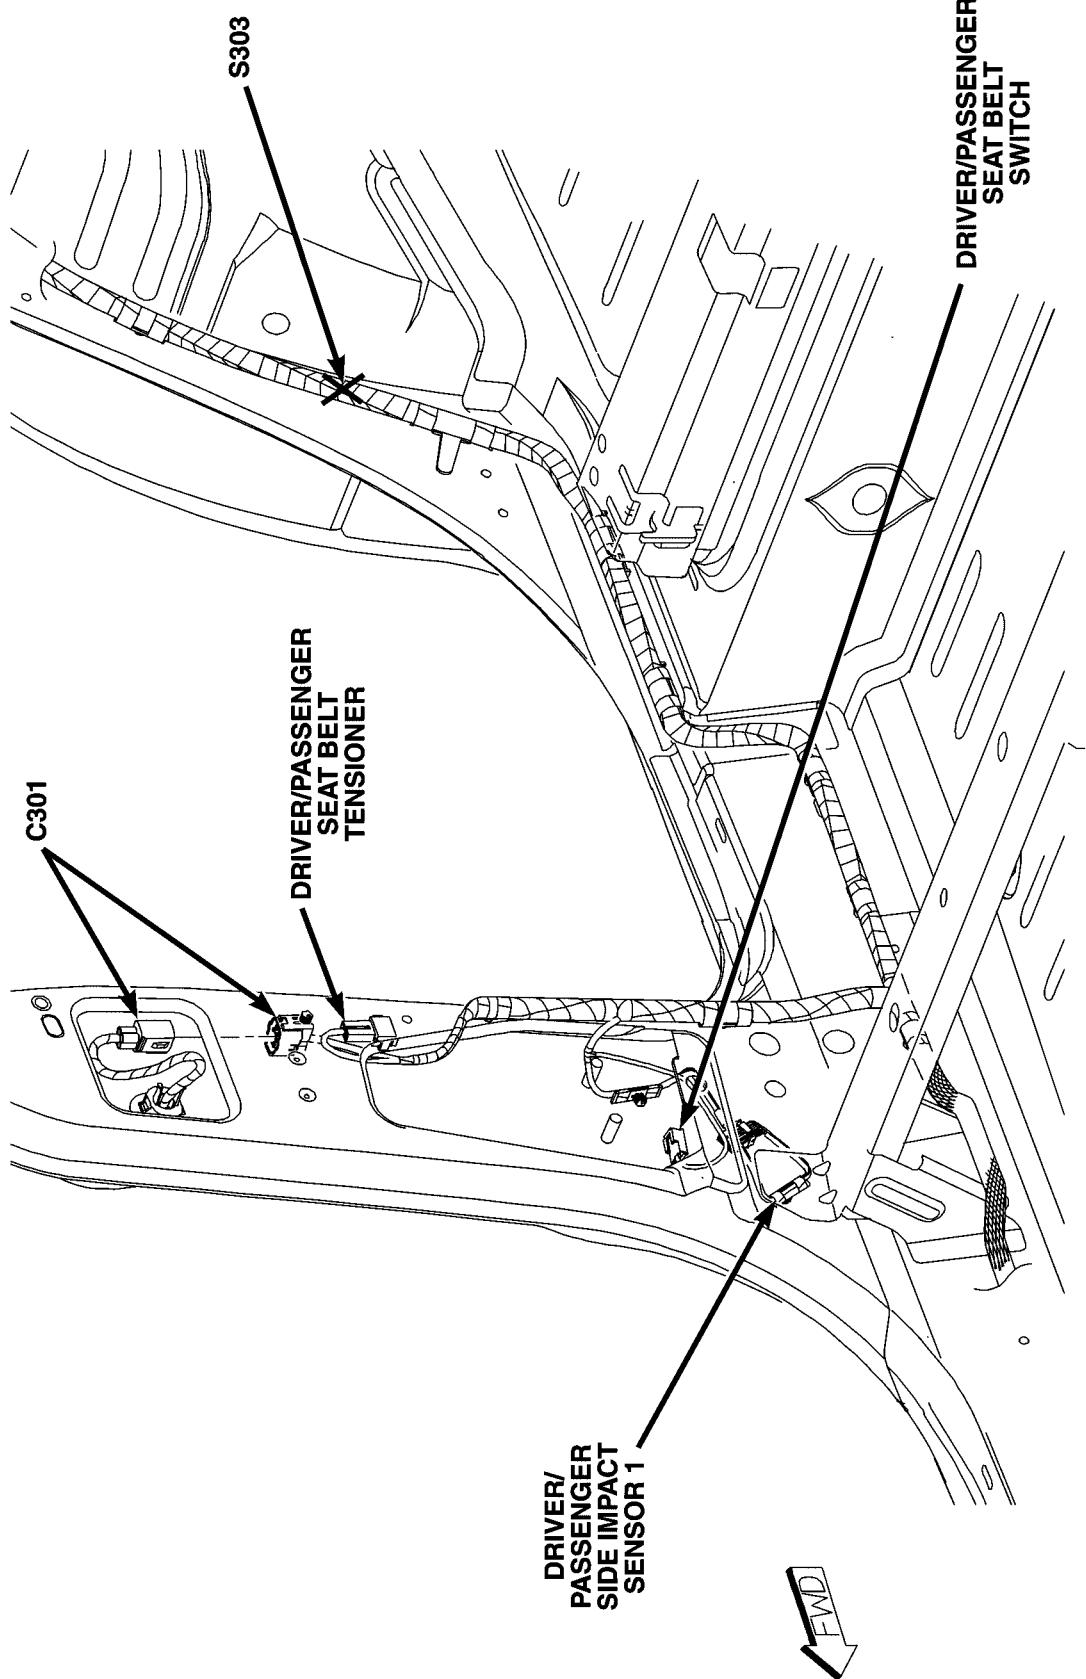


Fig. 42 RIGHT REAR BODY

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

8066e210


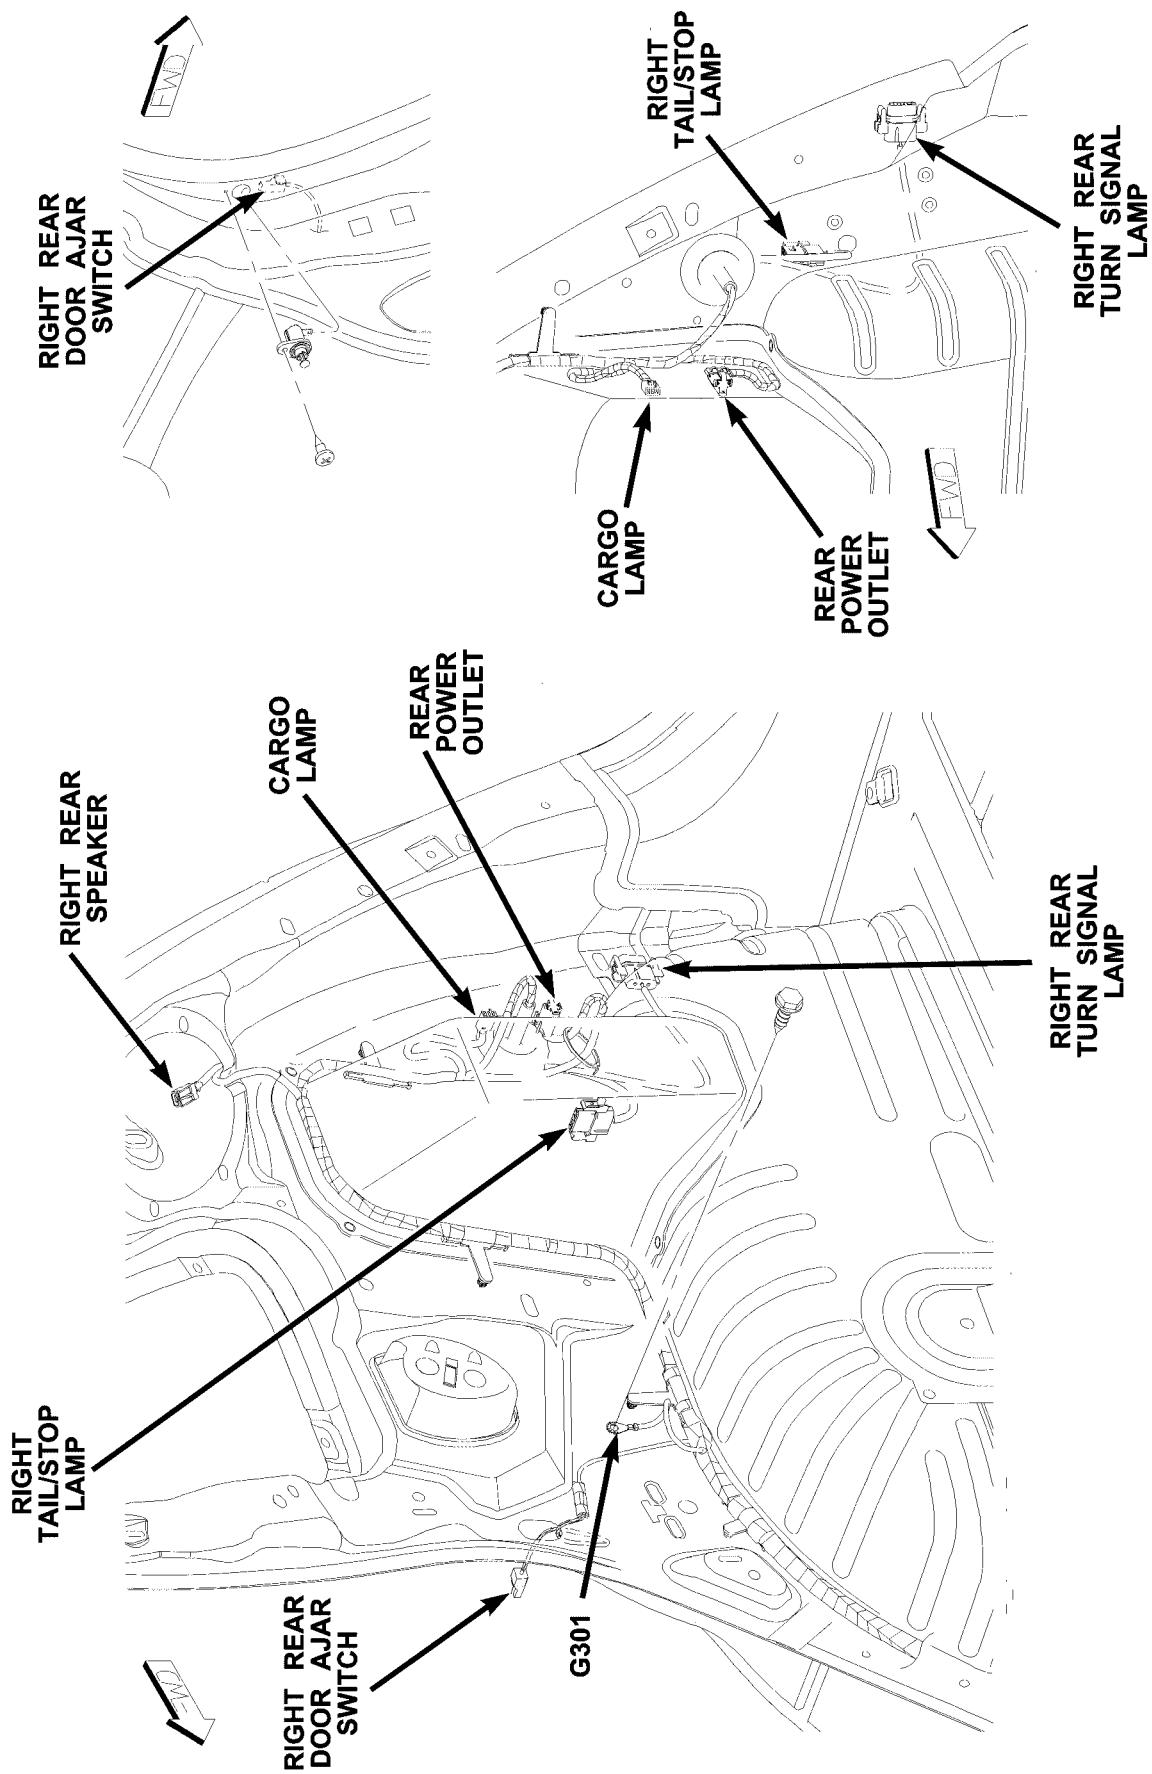



Fig. 4.3 RIGHT REAR QUARTER

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

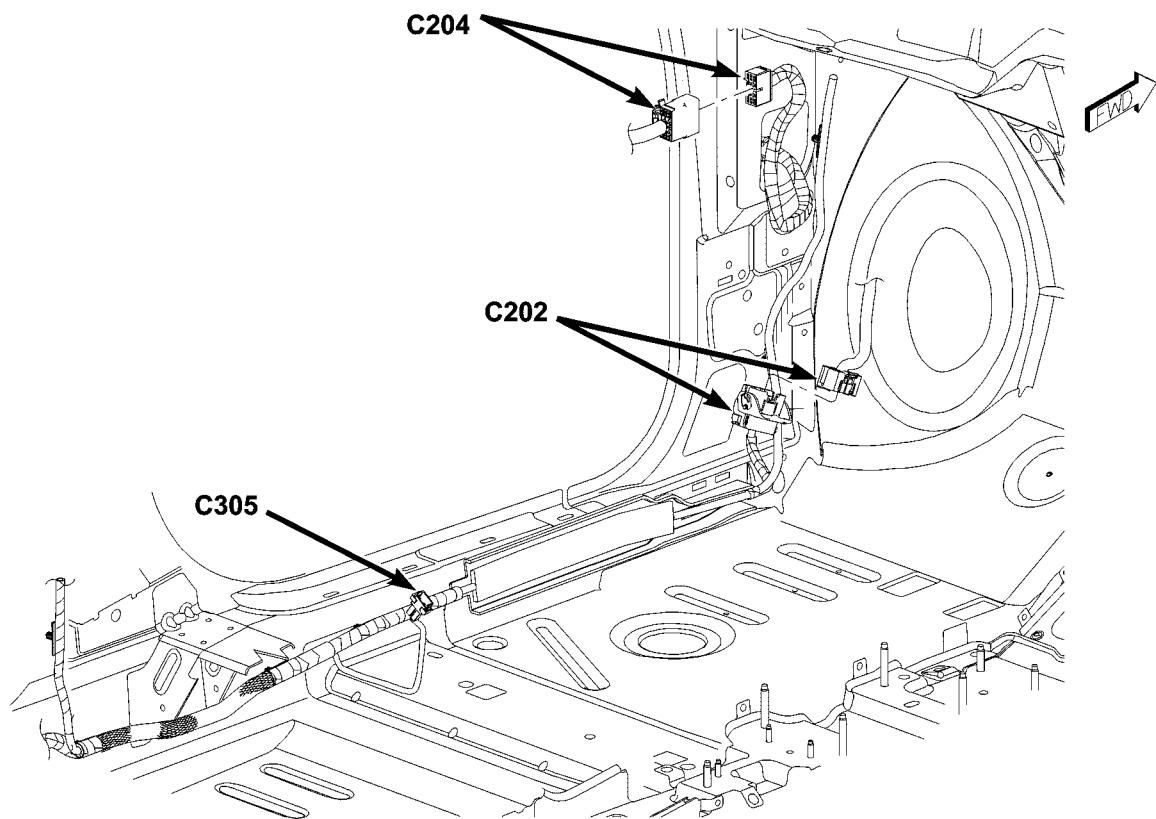

80e6e25b

Fig. 44 LEFT FRONT BODY

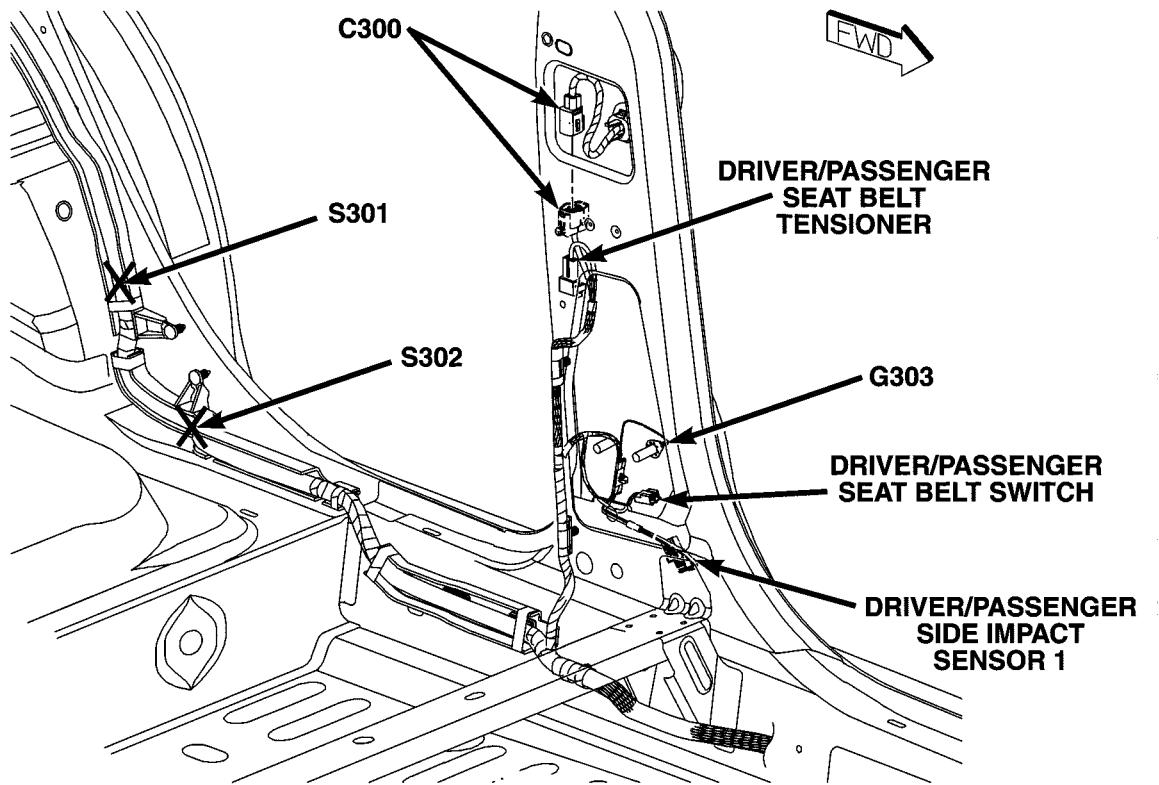

80e6e26d

Fig. 45 LEFT SIDE BODY

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

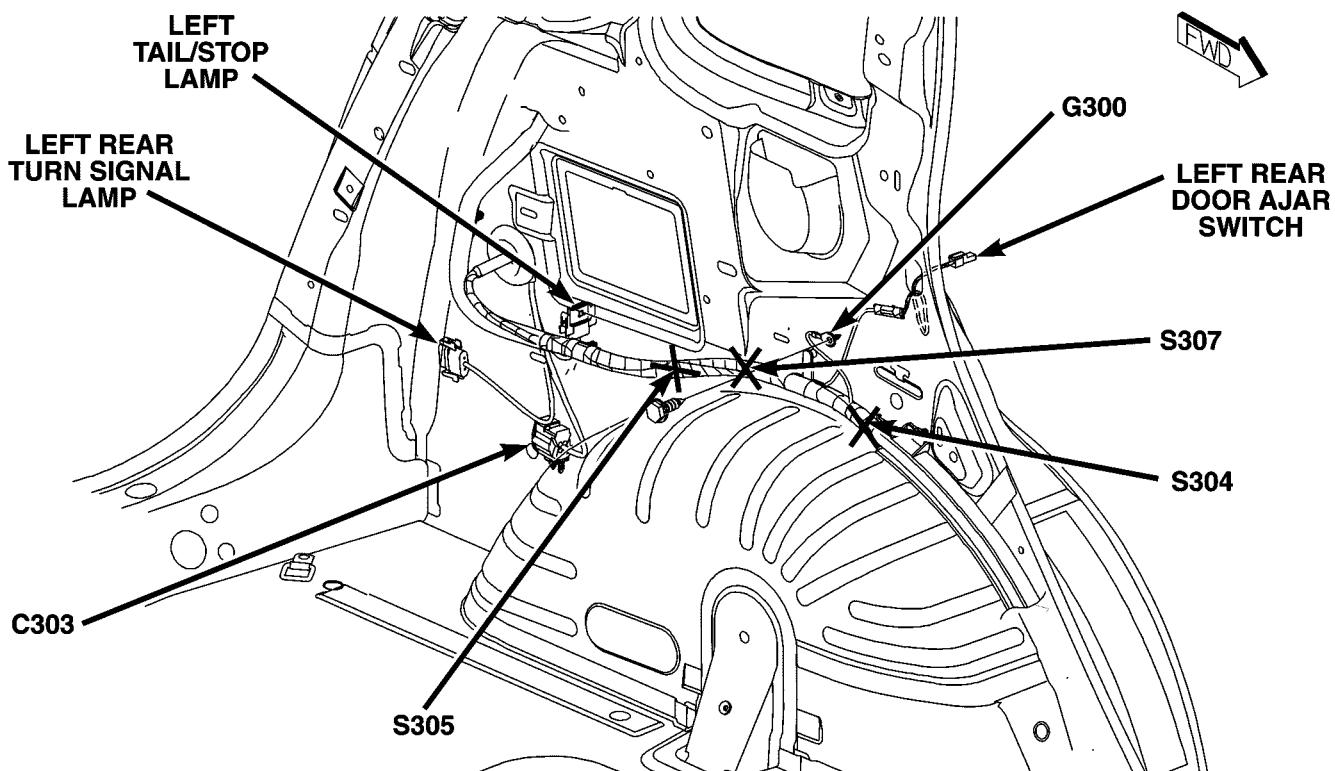


Fig. 46 LEFT REAR QUARTER

80f5a1cb

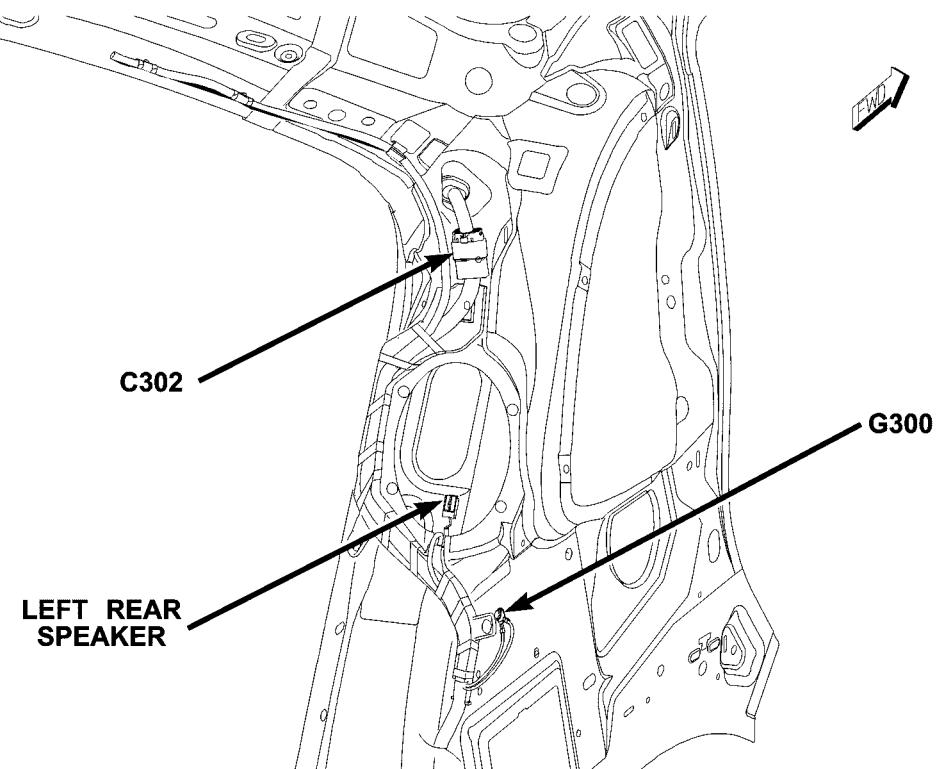


Fig. 47 LEFT REAR SPEAKER

80e6e299

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

80f5a1f0

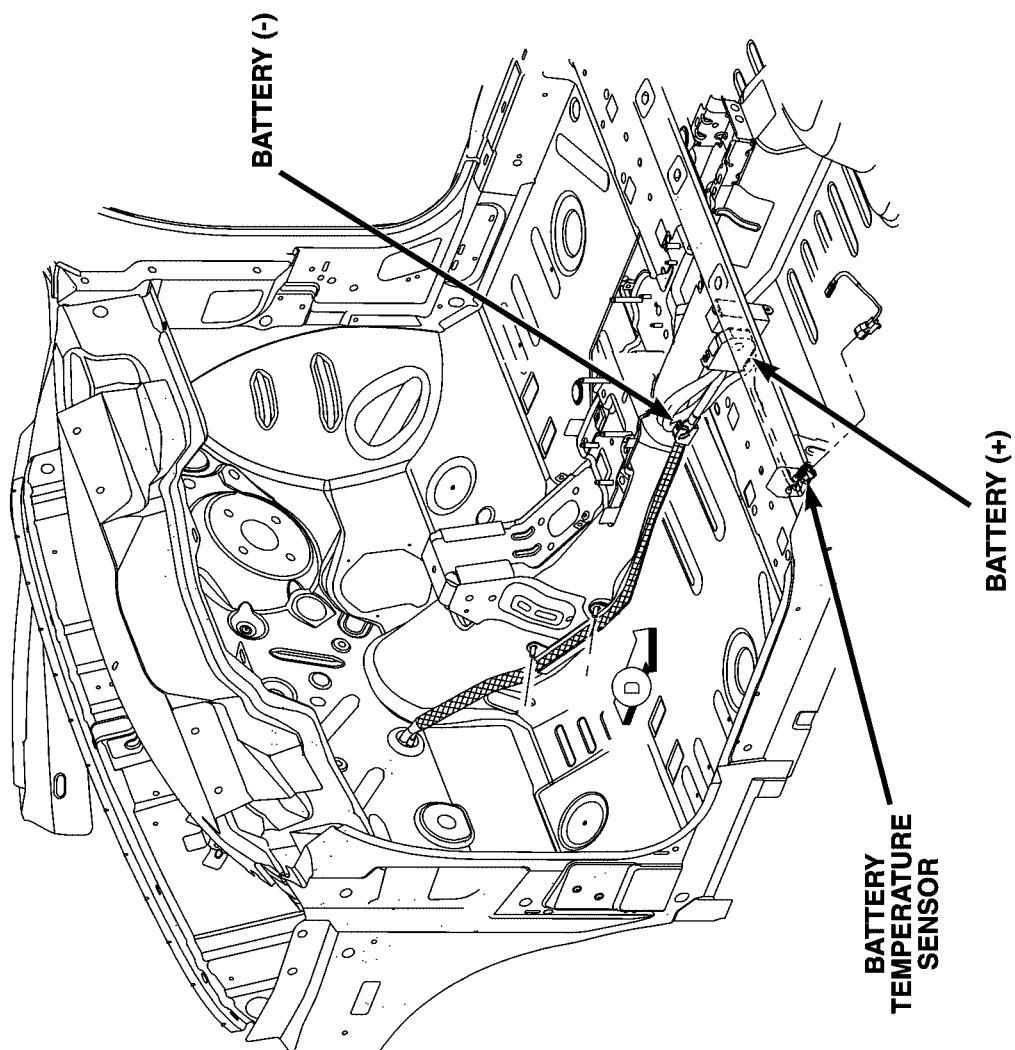
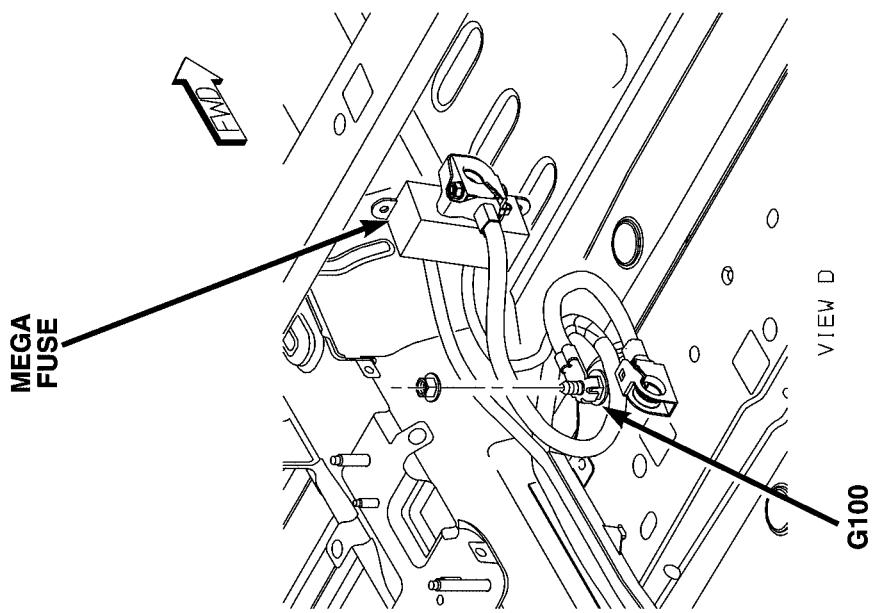


Fig. 48 BATTERY (DIESEL)

CONNECTOR/GROUND/SPLICE LOCATION (Continued)

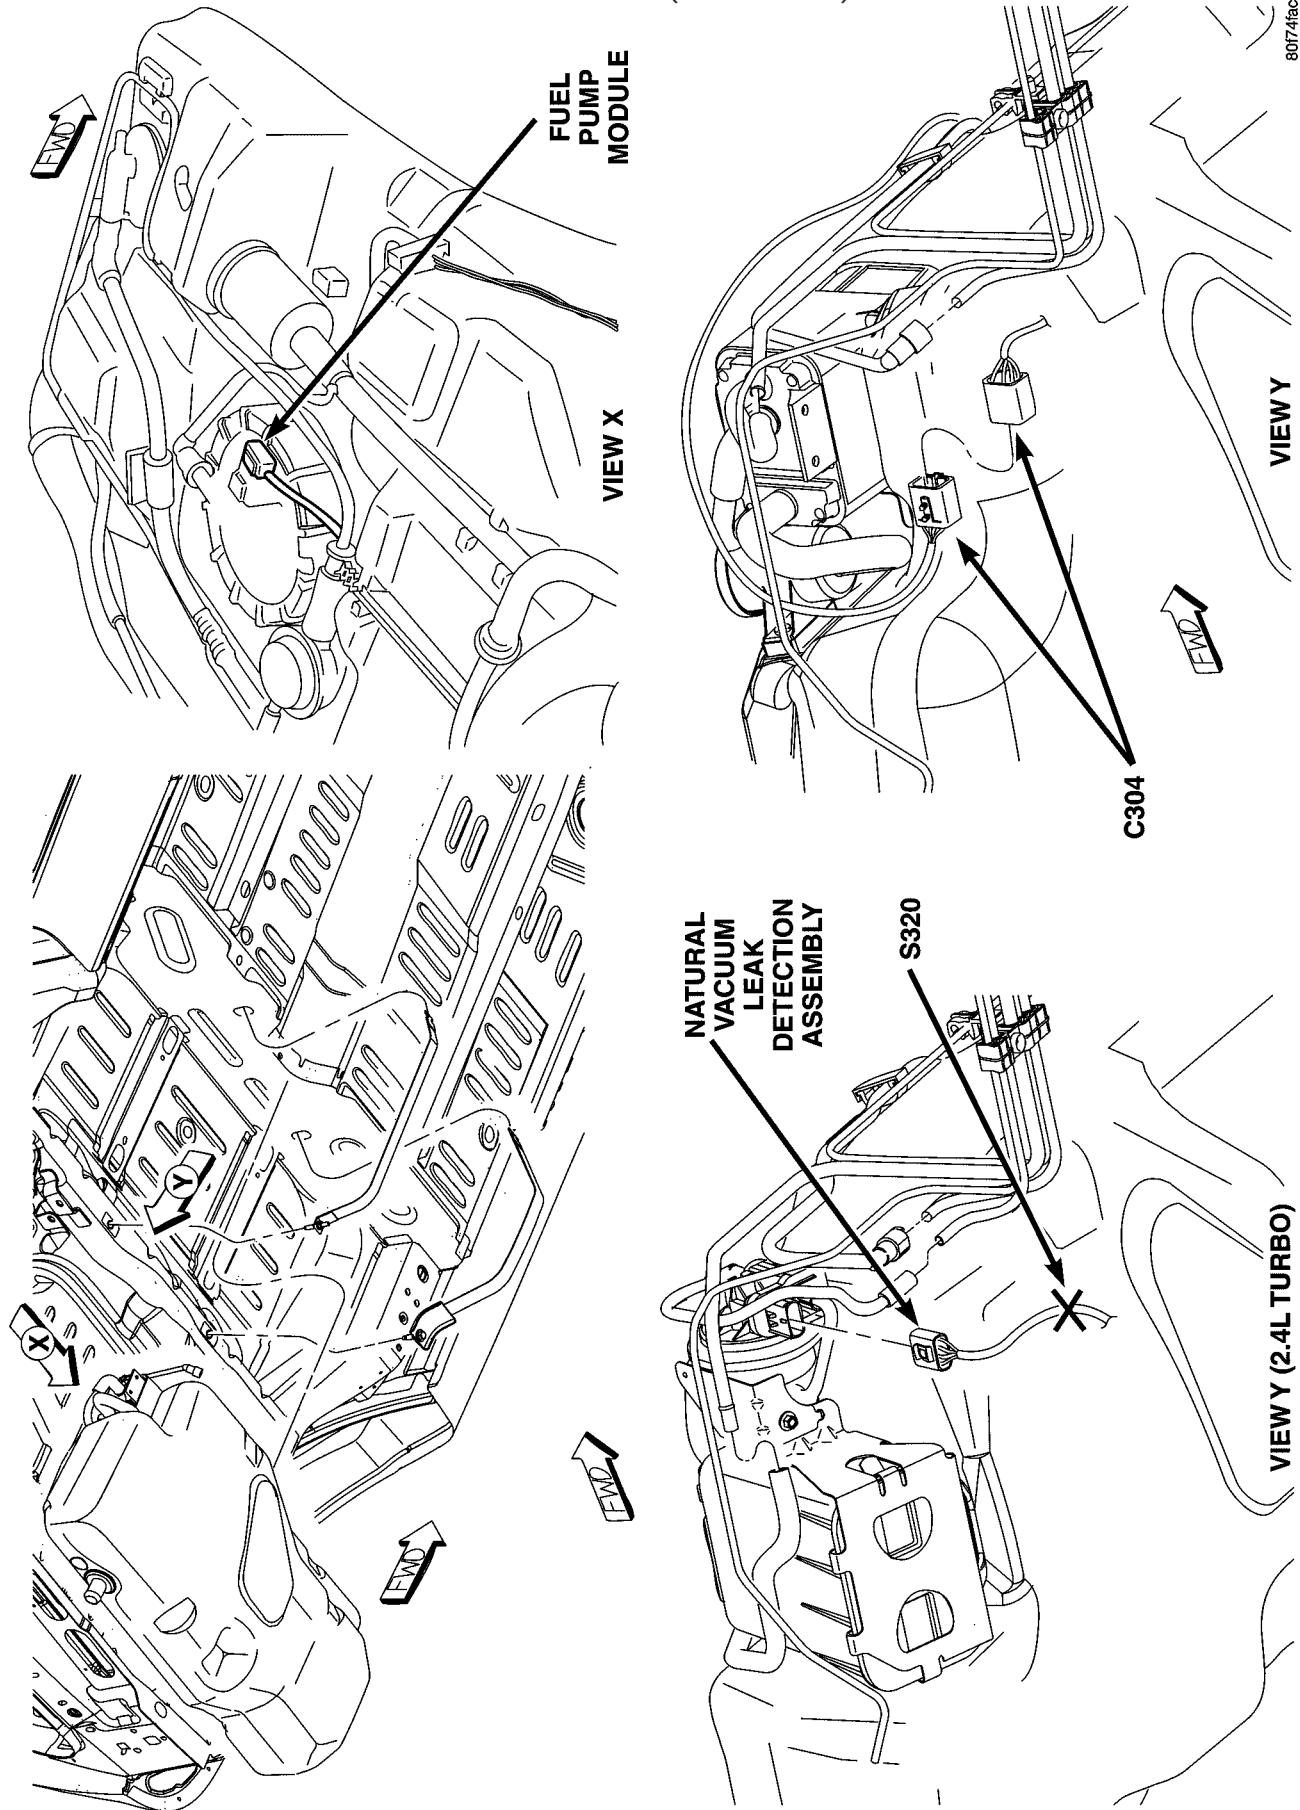


Fig. 49 FUEL TANK

CONNECTOR/GROUND/SPICE LOCATION (Continued)

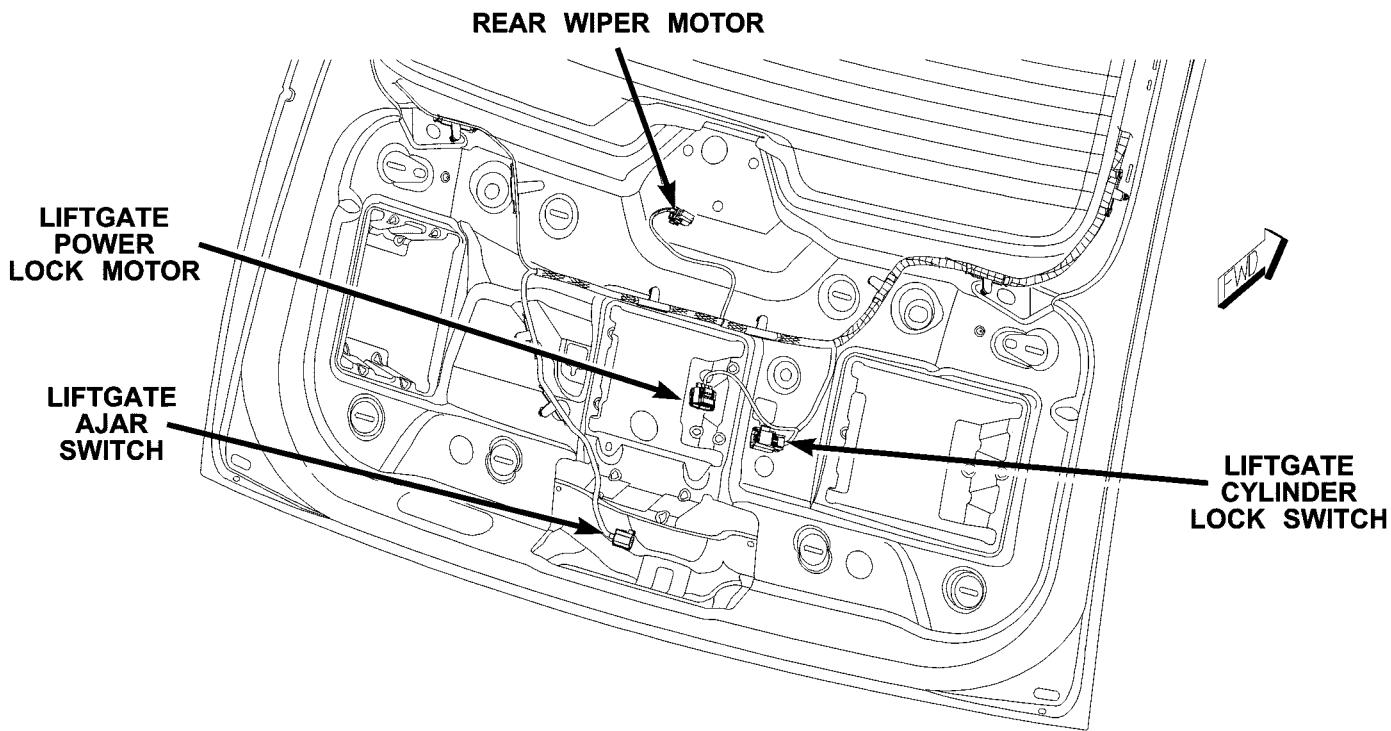


Fig. 50 LOWER LIFTGATE

80e6e2ce


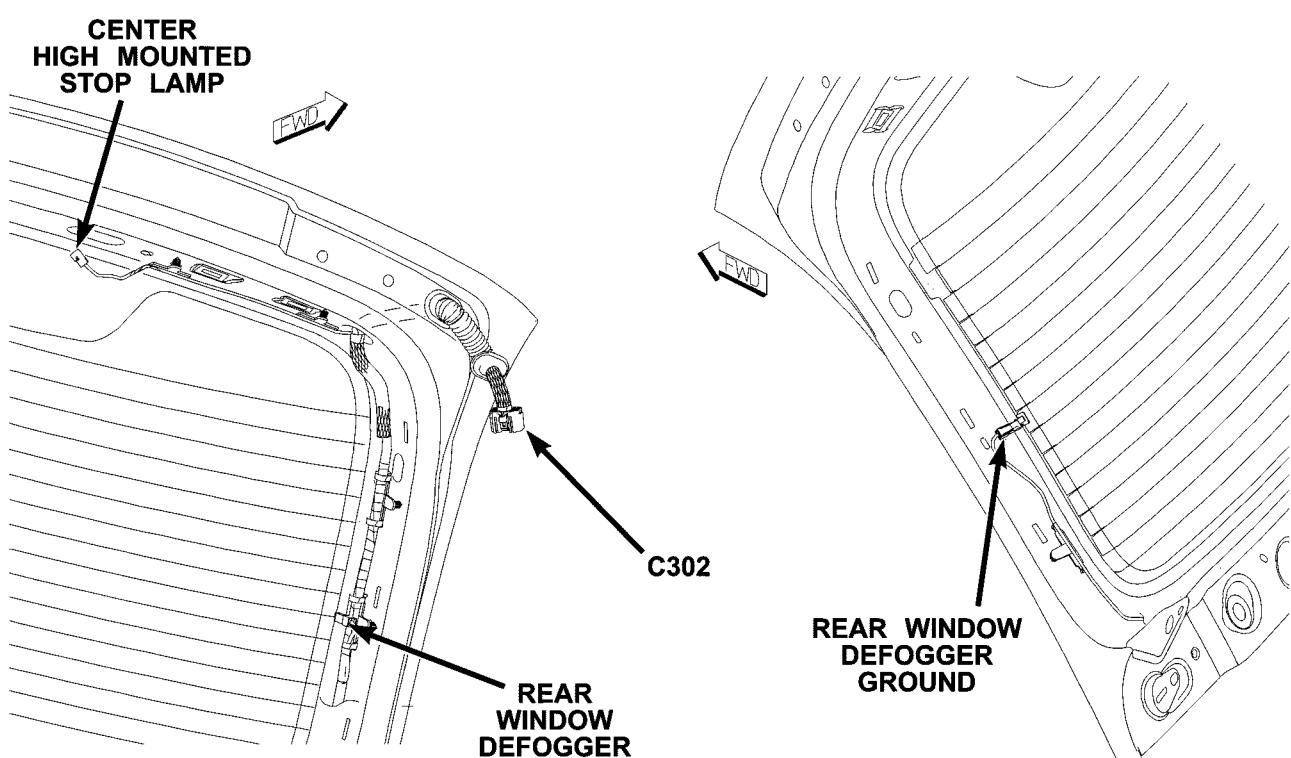



Fig. 51 HEATED REAR WINDOW

80e6e2d6

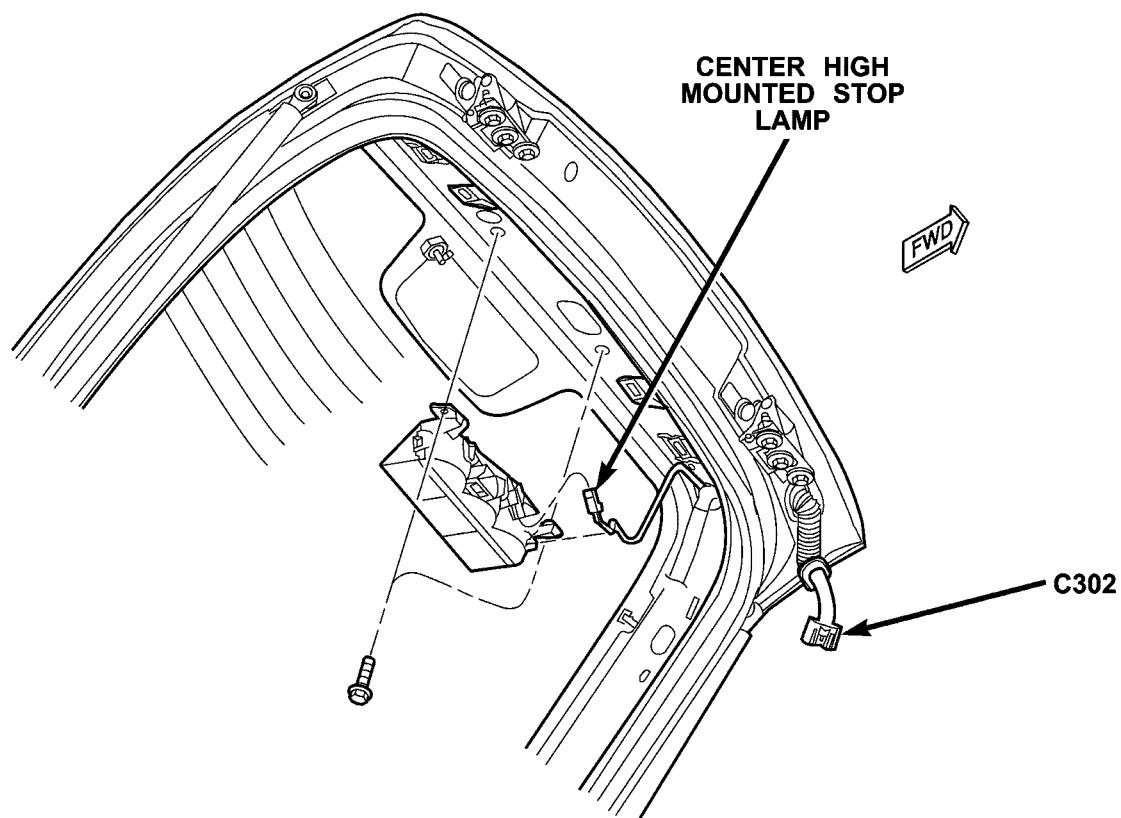

80e6e30c

Fig. 52 CENTER HIGH MOUNTED STOP LAMP

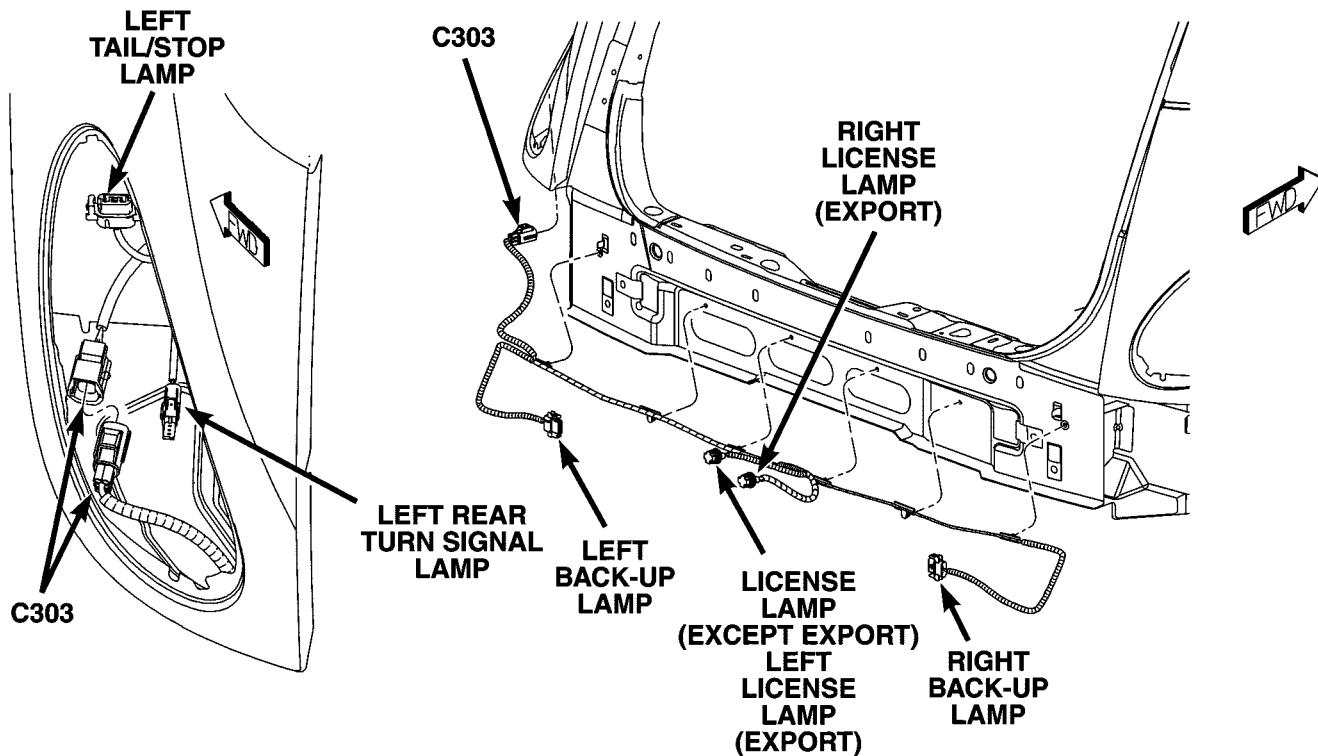

80e6e313

Fig. 53 BACK-UP LAMPS