



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



COOLANT FILLING



Fill the coolant tank with the engine off and wait for the engine to completely cool down. The cooling circuit is under pressure! Do not open the coolant tank cap with the engine boiling hot: risk of burns!

1. Unscrew the plug (A-Fig.1) of the expansion tank and top up with the prescribed type of coolant (**000300**) up to 50 ÷ 60 mm from the base of the cap.
2. Start the engine and run it at idle speed for some minutes leaving the radiator expansion tank plug open.
3. Adjust the air conditioner control to maximum heat and maximum fan speed (B-Fig.2); stop the engine and check the coolant level through the radiator expansion tank plug; top up with coolant if necessary.
4. Close the cap
5. Wait for the engine to cool down (to below 80°C) and top up the coolant tank (Nourice) with the missing coolant.
6. Then tighten the radiator expansion tank plug.



Fig.1



Fig.2