

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



Bleeding the e-gear clutch



Bleeding the e-gear clutch only if the THRUST BEARING HAS BEEN REPLACED or, in any case, if the HYDRAULIC CIRCUIT HAS OPENED UP.

Preliminary operations

- Remove the engine compartment rear panel (081303).
- Remove the air filter cartridges (013303).

Bleeding the clutch

1. Remove the cap that protects the bleed screw (A-Fig.1) on the gearbox.
2. After the clutch has been assembled, initialize the e-gear using the LaRa-AS "Basic setting" (109000):
 - A. **basik "6"**
automatic bleed, approximately 30 openings/closings
 - B. **basik "5"**
empties the circuit and checks the level
3. Check the S-CAM oil level (014201).



Fig.1

www.car60.com