

**® Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.


**Replacing the engine oil**

- When the engine is cold (**oil temperature > 70°C**), lift the vehicle on the car lift (**000000**).
- Remove the rear left and center car floors (**082503**).
- Set up a suitable system for collecting the engine oil (**Fig.1**).

1. Unscrew the tank plug (**A-Fig.1**) and allow the oil to drain out of the oil tank drain hole: then clean the plug and tighten it.  
**Plug attachment: tightening torque (000800-21a).**
2. Unscrew the plug (**B-Fig.2**) on the oil pan and allow the oil left in the engine to drain out: then clean the plug and tighten it.  
**Plug attachment: tightening torque (000800-16a).**

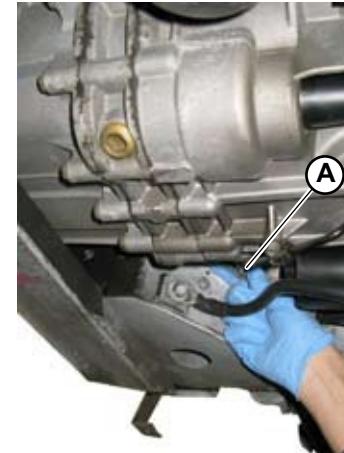


Fig.1

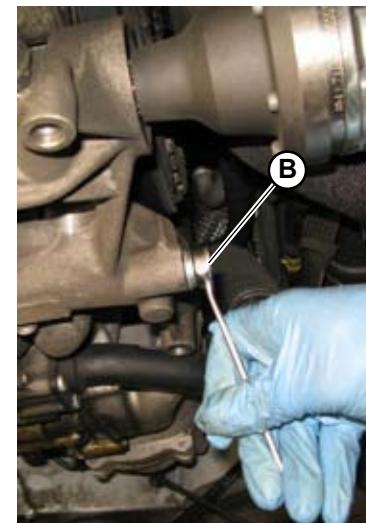


Fig.2


**CAUTION!**

During these operations be aware of high temperatures: Risk of burning.


**For respect of the environment**

Dispose of the engine oil according to current laws.