

**® Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains the following disassembly procedures:

- A) Disassembling the rear hub housing**
- B) Disassembling the rear wheel bearing**
- C) Disassembling the rear wheel hub**

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



A) Disassembling the rear hub housing

Preliminary operations

- Raise the vehicle on the car lift (000000).
- Remove the rear wheel (060103).
- Disassemble the rear wheel arch (082103).
- Remove the rear suspension (051103).

Disassembling the rear hub housing

1. Unscrew the fixing nut (A-Fig.1) and extract the rear suspension upper arm from the hub housing.
2. Unscrew the fixing nut (B-Fig.1) and extract the rear suspension lower arm from the hub housing.
3. Unscrew the fixing nut (C-Fig.1) and extract the connecting rod from the hub housing.






® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. Unscrew the fixing nut (D-Fig.4) and extract the rear axle shaft from the hub housing.

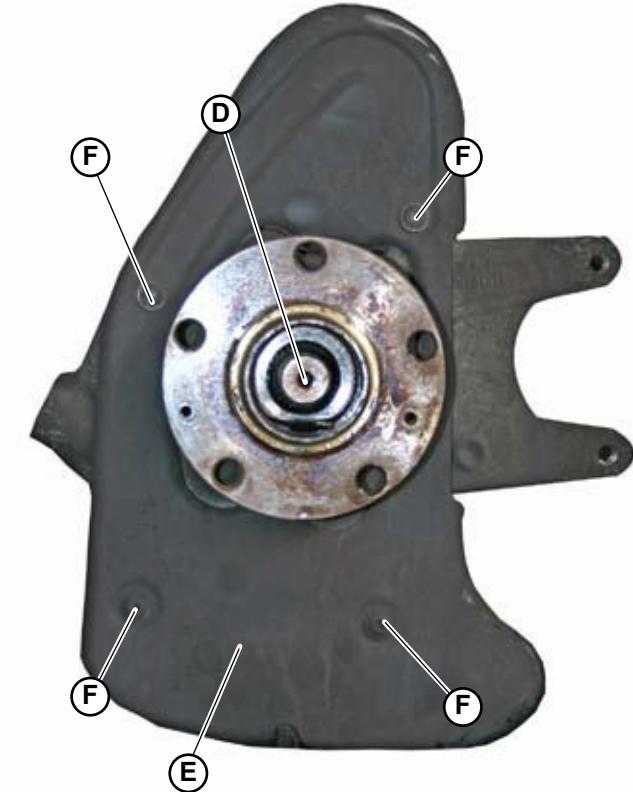

5. To remove the hub housing bulkhead (E-Fig.4), loosen the four screws (F-Fig.4).

Fig.2

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.


B) Disassembling the rear wheel bearing
Preliminary operations

- Raise the vehicle on the car lift (000000).
- Remove the rear wheel (060103).
- Disassemble the rear wheel arch (082103).
- Remove the rear suspension (051103).
- Remove the rear hub housing (050703).

Disassembling the rear wheel hub

1. Loosen the 4 screws (A-Fig.3) securing the wheel bearing to the hub housing.
2. Knock gently from behind to extract the wheel hub together with the rear wheel bearing (B-Fig.3).

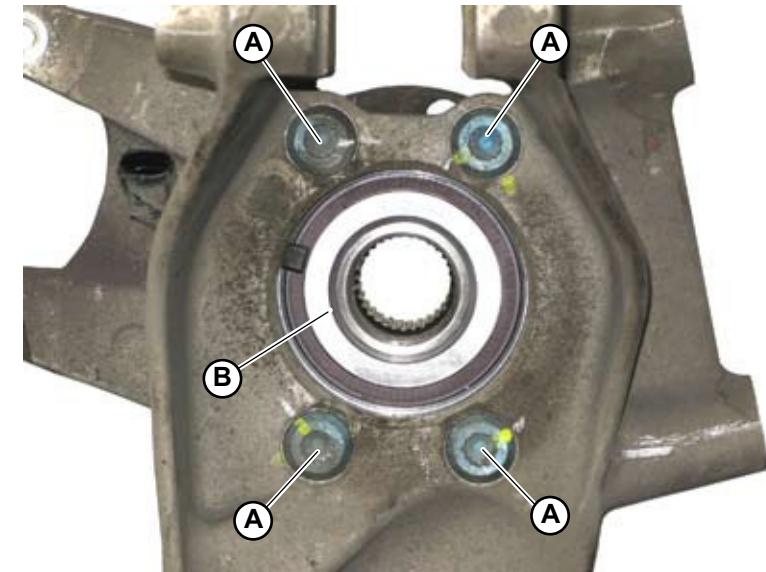


Fig.3

www.Car60.com



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



C) Disassembling the rear wheel hub

Preliminary operations

- Raise the vehicle on the car lift (000000).
- Remove the rear wheel (060103).
- Disassemble the rear wheel arch (082103).
- Remove the rear suspension (051103).
- Disassemble the hub housing and the rear wheel hub (050703).

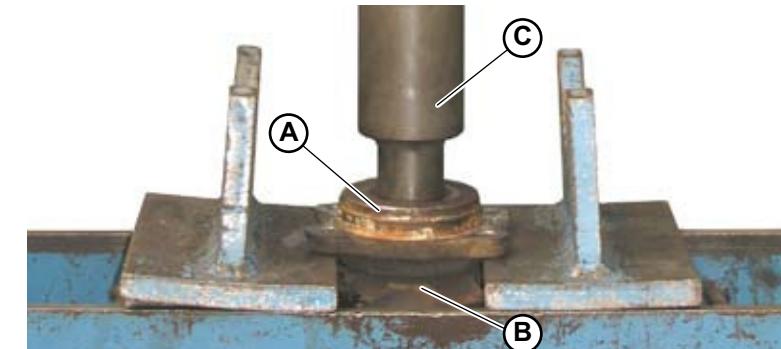


Fig.4

Disassembling the rear wheel bearing

1. Place the bearing (A-Fig.4) and the rear wheel hub (B-Fig.4) under a press (C-Fig.4) and exercise enough pressure to detach the two components.



Using a press during the disassembly process will break the rear wheel bearing making it impossible to reuse.

2. Manually remove the remains of the wheel bearing (D-Fig.4).



Fig.5

3. Using an appropriate tool (E-Fig.4), exercise enough pressure to remove the remaining residues of the wheel bearing.

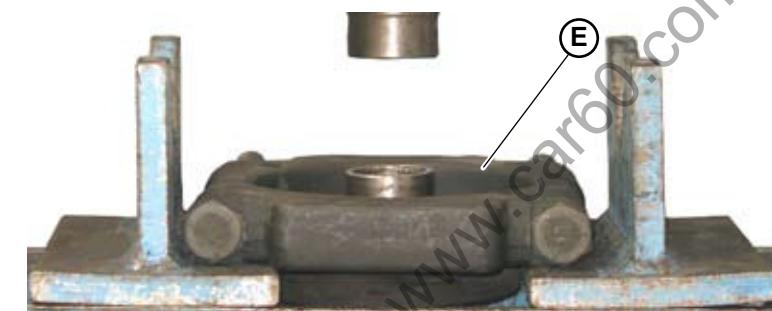


Fig.6