



## ® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



### Brake switch adjustment

It is located inside the passenger compartment, where it is mounted on to the pedal cluster on a bracket. The adjustment of this component is critical, ensure that the switch is open when the pedal is at rest position. Simply check whether or not the brake lights are on.

If the switch is incorrectly adjusted or damaged, the control unit acknowledges the situation by generating the relative error message: stuck or inoperative brake switch.

#### Brake switch (Fig.1)

- A. Brake/ABS switch
- B. Pedal

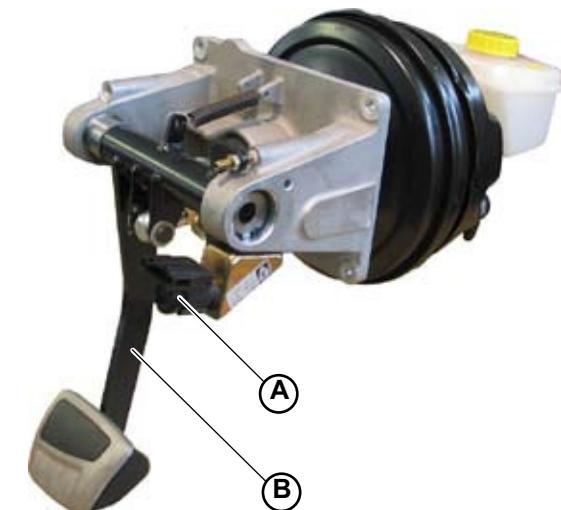


Fig.1

### Checking procedure

See chapter (080201) for pedal adjustment and (092702) for switch adjustment



If the adjustment is not carried out properly, the e-gear system does not work.

www.Car60.com