

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

### Disassembling the lever control e-gear

#### Preliminary operations

- Disconnect the battery (091500).
- Disassemble the driver side airbag module (088003).
- Disassemble the steering wheel (087503).
- Disassemble the steering wheel cover (087503).

#### Disassembling the lever control

1. Unscrew the 4 screws (A-Fig.1) that secure the lever control.
2. Disconnect the connector (B-Fig.1).
3. Remove the lever control (C-Fig.1).

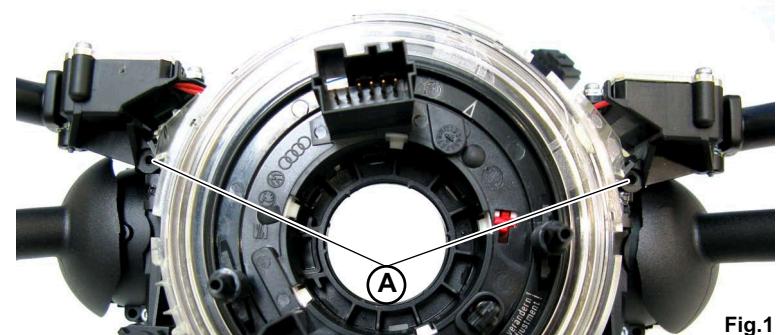
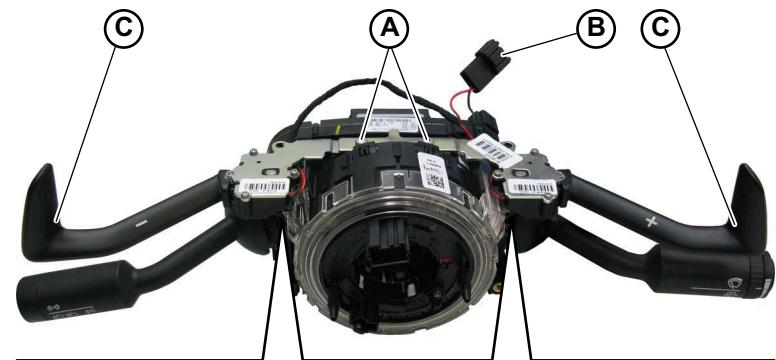


Fig.1