

**® Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to disassemble:

- A) Internal door guard
- B) Internal door handle
- C) Power window motor
- D) Door seal
- E) Front window guide
- F) Weatherstrip
- G) Power window assembly
- H) Lock
- I) External door handle



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



A) Internal door guard

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).

Disassembling the internal door guard

1. Detach the internal guard (A-Fig.1) so that its adhesive (B-Fig.2) separates from the door.

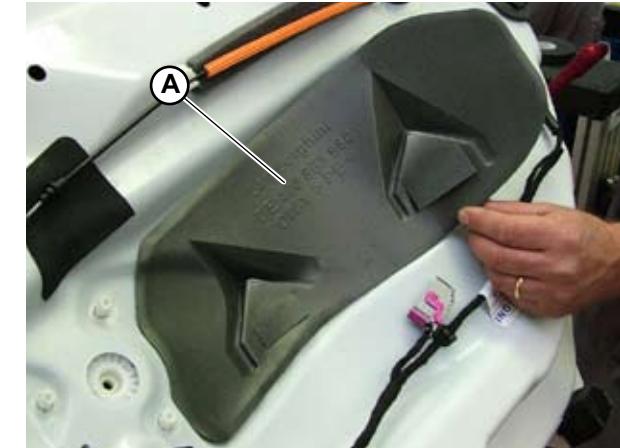


Fig.1



Fig.2



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B) Disassembling the internal door handle

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).

Disassembling the handle

1. Disconnect the cable (A-Fig.3) for opening the lock.
2. Disconnect the connection (B-Fig.4).
3. Unscrew the screw (C-Fig.4) securing the internal door handle.
4. Remove the internal door handle (D-Fig.3).

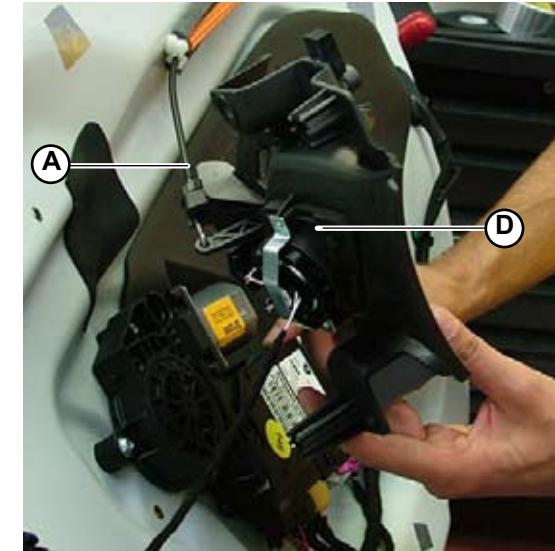


Fig.3

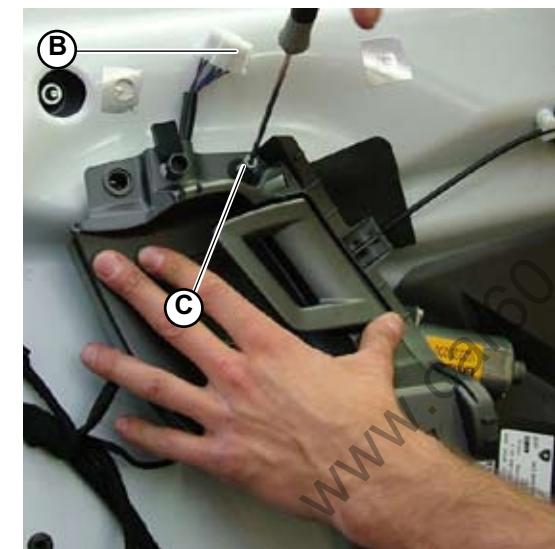


Fig.4



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



C) Disassembling the power window motor

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Disassemble the internal door handle (Point B)

Disassembling the motor

1. Disconnect the 4 connections (A-Fig.5).
2. Unscrew the 3 screws (B-Fig.5) securing the power window motor to the door.
3. Remove the power window motor (C-Fig.5).

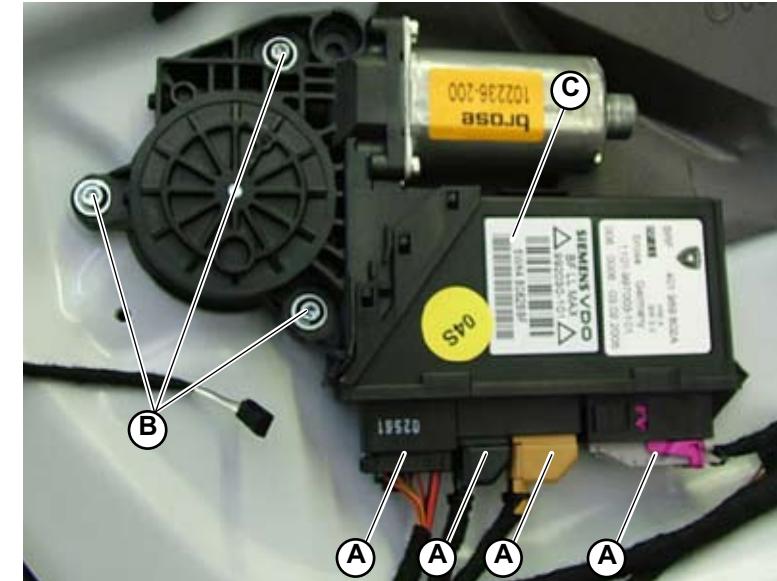


Fig.5

www.Car60.com



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



D) Disassembling the door seal

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).

Disassembling the seal

1. Pull on the seal (A-Fig.6) so that the finned anchors (B-Fig.7) come out of their couplings (C-Fig.7) on the door (D-Fig.6).

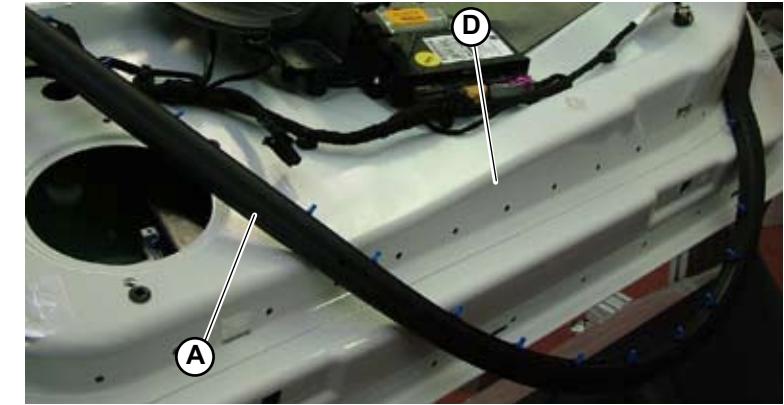


Fig.6

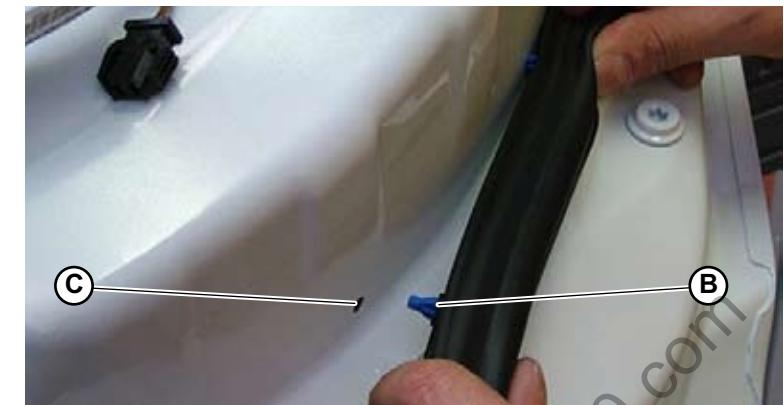


Fig.7



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



E) Disassembling the front window guide

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Detach the door seal (Point D).
- Disassemble the side window (084703).

Disassembling the guide

1. Unscrew the screw (A-Fig.8) securing the guide to the bottom part of the door.
2. Unscrew the bolt (B-Fig.9) at the top of the guide.
3. Remove the guide (D-Fig.10).

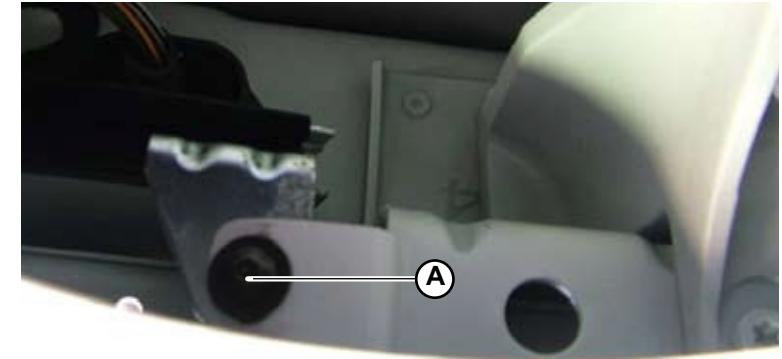


Fig.8

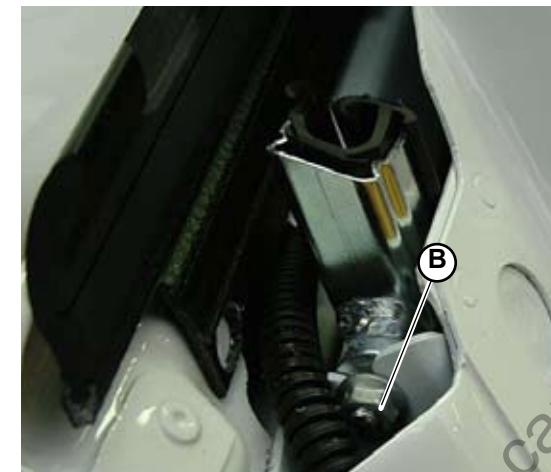


Fig.9

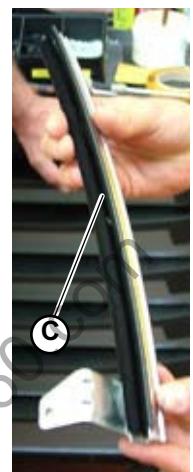


Fig.10



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



F) Disassembling the weatherstrip

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Disassemble the door seal (Point D).
- Disassemble the side window (084703).

Disassembling the weatherstrip

1. Unscrew the 2 screws securing the weatherstrip to the 2 ends, front (A-Fig.11) and rear (B-Fig.12).
2. Release the clips (C-Fig.13) that secure the weatherstrip to the door.
3. Remove the weatherstrip (D-Fig.14).



Fig.11

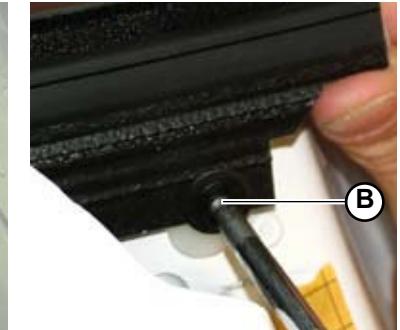


Fig.12

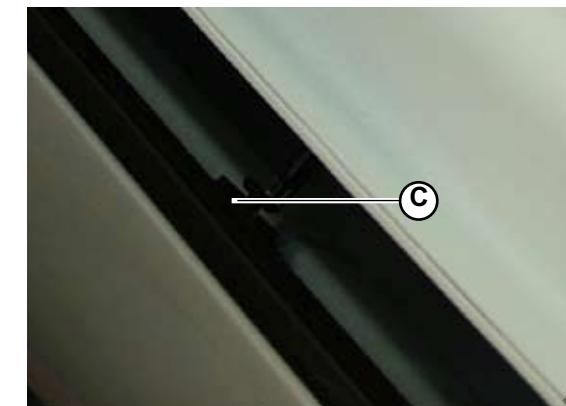


Fig.13



Fig.14



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



G) Disassembling the power window assembly

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Disassemble the internal door handle (Point B).
- Disassemble the power window motor (Point C).
- Disassemble the front window guide (Point E).
- Disassemble the door seal (Point D).
- Disassemble the internal door guard (Point A).
- Extract the side window (084703).

Disassembling the power window assembly

1. Unscrew the 4 screws securing the power window assembly to the 4 ends, 2 at the top (A-Fig.15/16) and 2 at the bottom (B-Fig.17/18).
2. Extract the power window assembly (C-Fig.19).

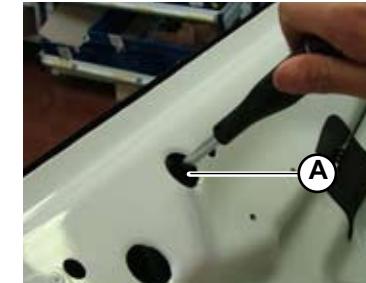


Fig.15



Fig.16

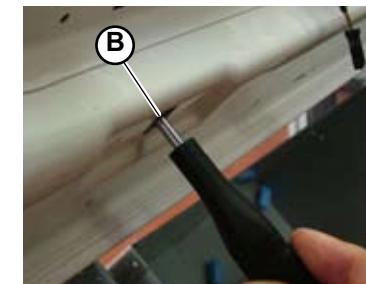


Fig.17

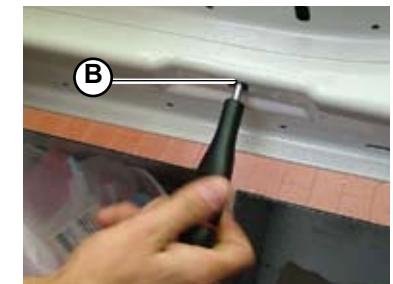


Fig.18



Fig.19



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



H) Disassembling the lock

Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Disassemble the internal door handle (Point B).
- Disassemble the power window motor (Point C).
- Disassemble the front window guide (Point E).
- Disassemble the door seal (Point D).
- Disassemble the internal door guard (Point A).
- Extract the side window (084703).
- Disassemble the power window assembly (Point G).

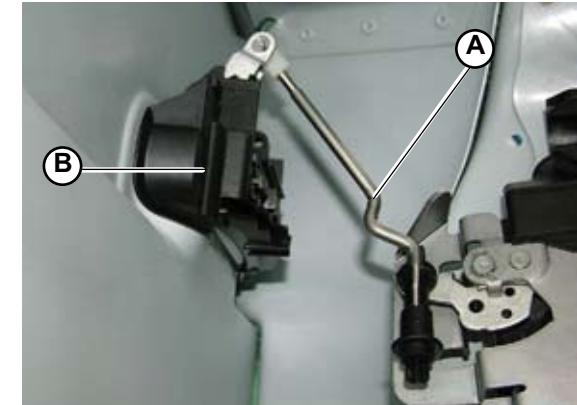


Fig.20

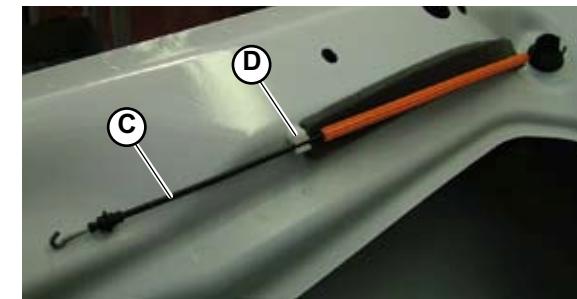


Fig.21

Disassembling the lock

1. Disconnect the linkage (A-Fig.20) that unites the lock with the external door handle (B-Fig.20).
2. Remove the cable (C-Fig.21) connecting to the internal handle of the clip (D-Fig.21).
3. Disconnect the connector (E-Fig.22).

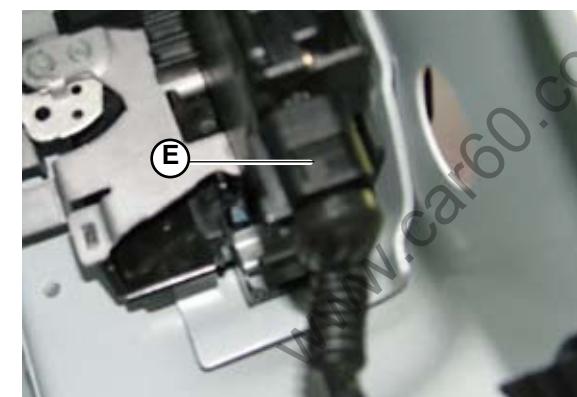


Fig.22



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. Unscrew the 2 screws (F-Fig.23) securing the lock to the door.
5. Remove the lock (G-Fig.24).

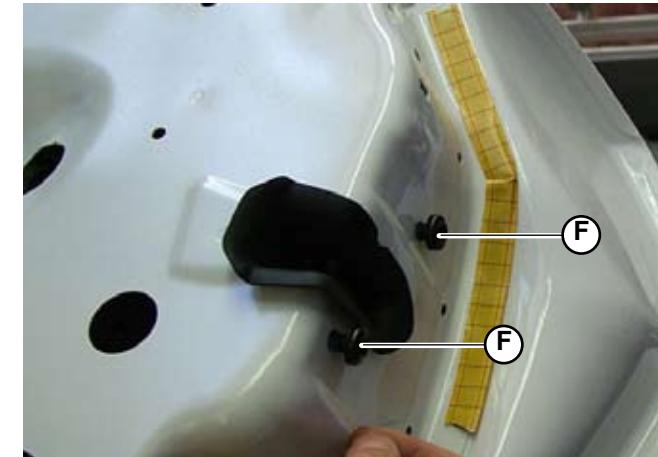


Fig.23

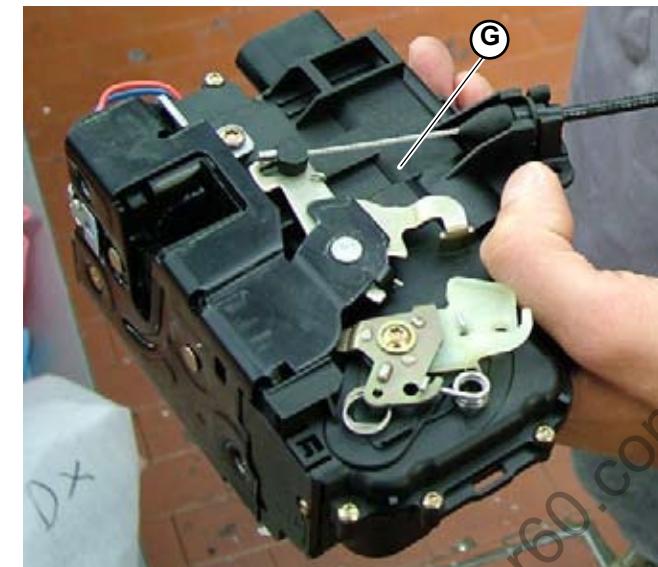


Fig.24

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.


I) Disassembling the external door handle
Preliminary operations

- Remove the car hi-fi system loudspeaker (097503).
- Disassemble the door cover (086803).
- Disassemble the internal door handle (Point B).
- Disassemble the power window motor (Point C).
- Disassemble the front window guide (Point E).
- Disassemble the door seal (Point D).
- Disassemble the internal door guard (Point A).
- Extract the side window (084703).
- Disassemble the power window assembly (Point G).

Disassembling the external handle

1. Remove the mounting rod (A-Fig.25) and detach the handle plate (B-Fig.25).
2. Remove the clip that secures the linkage (C-Fig.26), the linkage that connects the lock (D-Fig.27) and the linkage coupling (E-Fig.28).

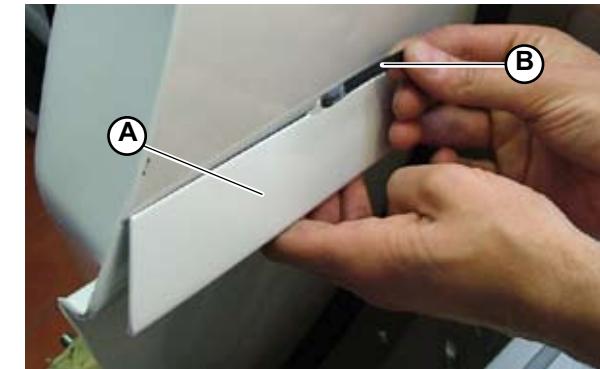


Fig.25



Fig.26

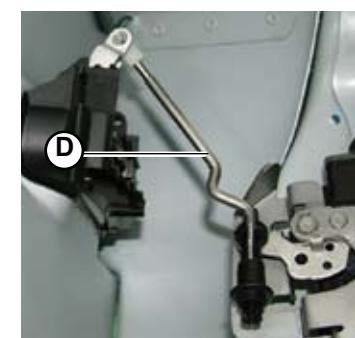


Fig.27

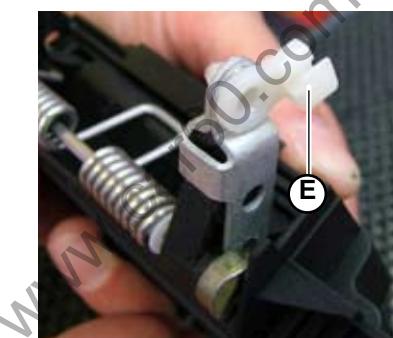


Fig.28



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

3. Remove the tab (F-Fig.29) that unites the 2 external door handle components.
4. Remove the 2 external door handle elements (G-Fig.30).

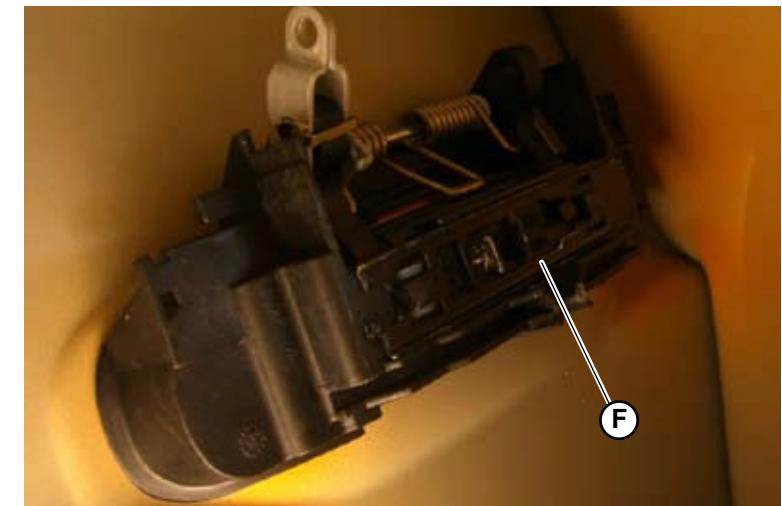


Fig.29

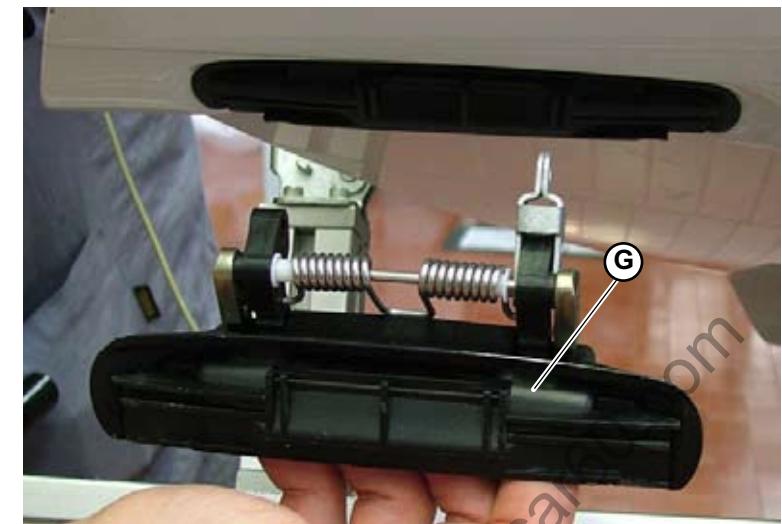


Fig.30