

**® Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



### Disassembling the SDM control unit

#### Preliminary operations

- Ensure that the system is deactivated by disconnecting the battery inside the front luggage compartment.

#### Disassembling the control unit

1. Remove the light push-button panel (BJA) (A-Fig.1) from its housing in the center console and disconnect the connectors (B-Fig.1).
2. Prise up the tunnel control panel (C-Fig.2) and disconnect the relative connectors.
3. Remove the bezel from the console.

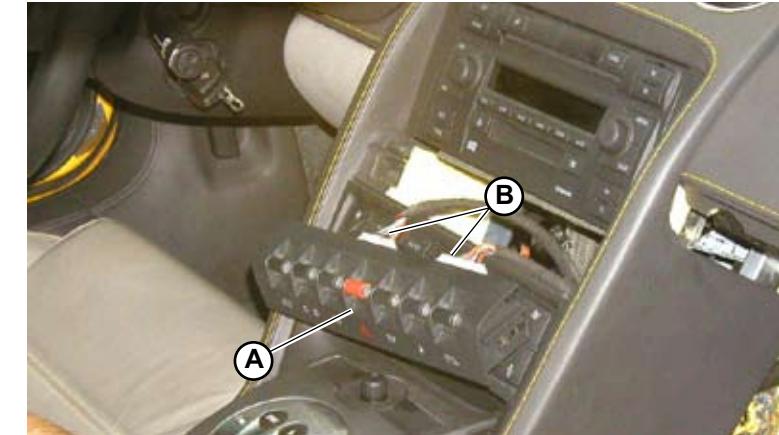


Fig.1



Fig.2


**® Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. Remove the two lower socket head screws (**D-Fig.3**) and release the two upper clips (**E-Fig.3**). Extract the air conditioner control unit.
5. Disconnect the air conditioner control unit connectors (**F-Fig.4**).
6. The airbag control unit (**G-Fig.5**) remains on the floor of the center console. Inside the air conditioner control unit compartment, remove the 3 screws that secure the airbag control unit.
7. Move the airbag control unit just enough to disconnect the connectors.
8. Remove the airbag control unit (**G-Fig.5**).



Fig.3

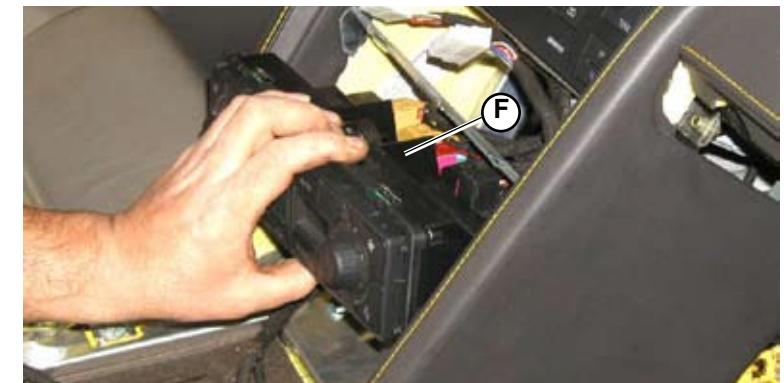


Fig.4

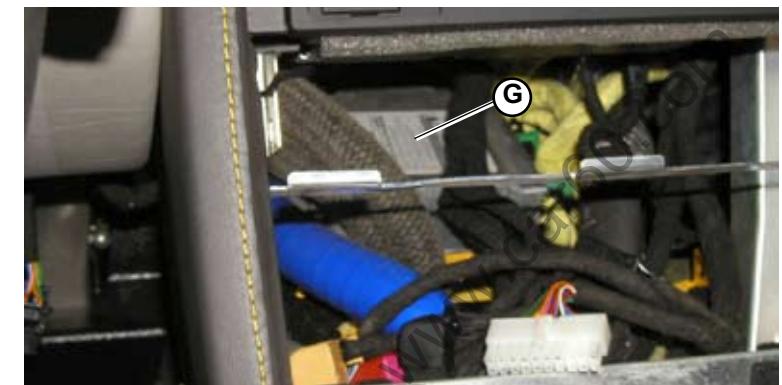


Fig.5