

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section describes the following disassembly operations:

- A. Clutch disassembly
- B. Clutch thrust bearing disassembly
- C. Disassembling the flywheel

Preliminary Operations

- To reach the clutch, remove the engine (010003) - gearbox assembly (030103) from the car.



A. Clutch disassembly

1. Unscrew the disk pusher socket screws (A-Fig.1).
2. Disassemble the disk pusher (B-Fig.1).

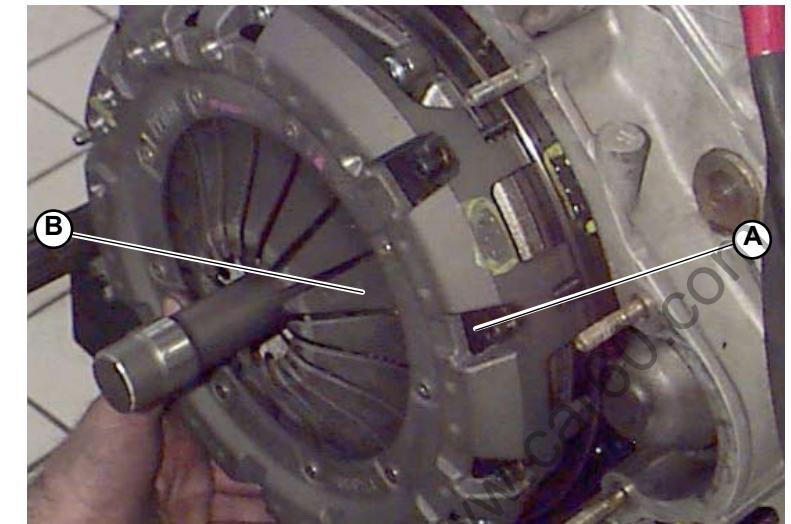


Fig.1

® Automobili Lamborghini S.p.A.


The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B. Clutch Thrust Bearing Disassembly

1. disconnect the clutch hydraulic pipe and close its end;
2. unscrew the anti-rotation bar hold and remove the clutch thrust bearing (C-Fig.2). Be careful not to lose the springs;

 Check the clutch sleeve: if the working surface is damaged, unscrew the three fastening screws and replace it. Replace the 3 underlying O-rings.

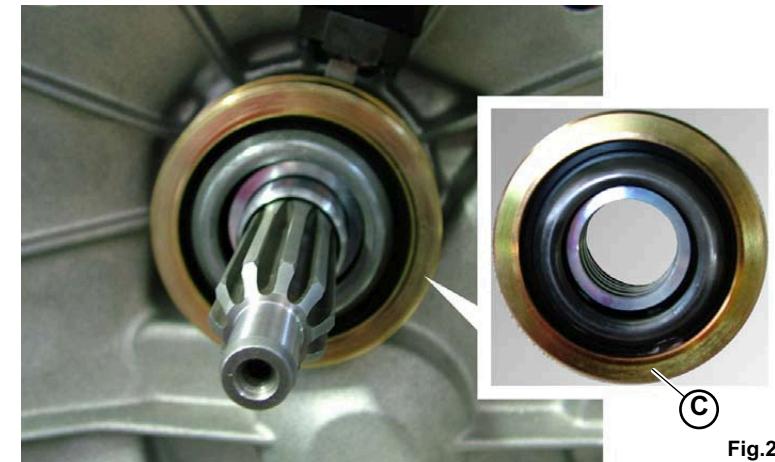

C. Disassembling the flywheel

1. Free the bolts from the sheet metal guards (D-Fig.3).
2. Unscrew the bolts (E-Fig.3) and remove the sheet metal guards.
3. Remove the flywheel (F-Fig.3).

