

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



### Disassembling the e-gear actuator

#### Preliminary operations

- Disassemble the gearbox (030103).

#### Disassembling the actuator

1. Disassemble the actuator by removing the lower screw (**A**-Fig.1) and the upper screw (**B**-Fig.2) that secure the actuator to the bracket (**C**-Fig.2).
2. Remove the screw (**D**-Fig.2) securing the actuator's joint (**E**-Fig.1).
3. Remove the actuator (**F**-Fig.1).

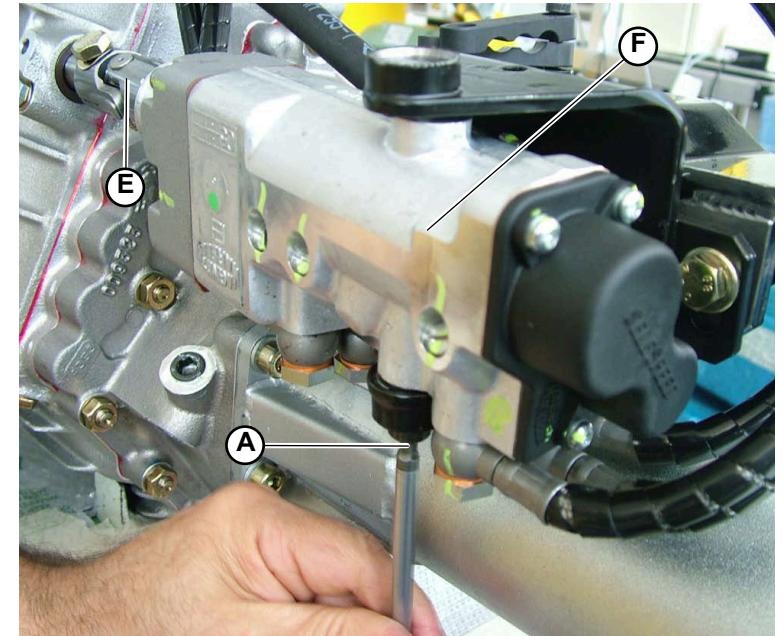


Fig.1

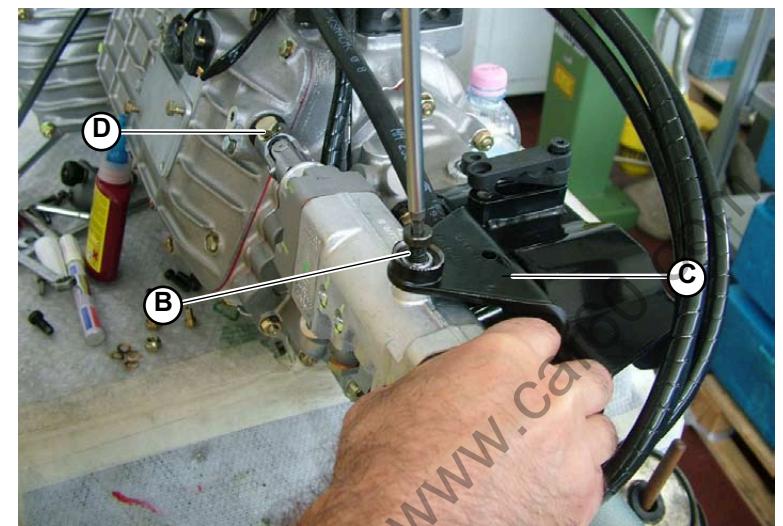


Fig.2