

**© Automobili Lamborghini S.p.A.**

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

**Lifting System oil level check****CAUTION**

The oil level check must be performed with the lifting system deactivated.

The oil level must always be within “min” and “max.” notches on the float in the tank. Top up with the recommended oil if necessary (000300).



The oil tank is the same of the lifting system and power steering