

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to assemble:

- A) Hub assembly
- B) Bearing assembly



A) Hub assembly

1. Position the steering joint (A-Fig.1) and tighten the nut (B-Fig.1).
2. Tighten the 2 nuts (C-Fig.2) and insert the 2 split pins (D-Fig.2)..
3. Position the phonic wheel (E-Fig.2) inside the hub carrier.

- Secure the shock absorber (041305).
- Secure the axle shaft (040105).
- Assemble the brake disk (061505).
- Assemble the brake caliper (060705).
- Assemble the front wheel (060105).



Carefully remove the hub without damaging the joint's guard on the suspension arm.

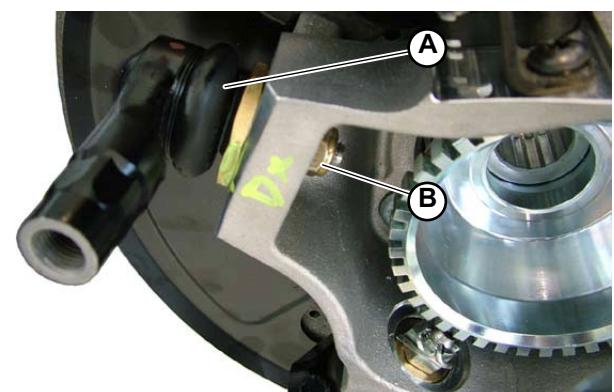


Fig.1

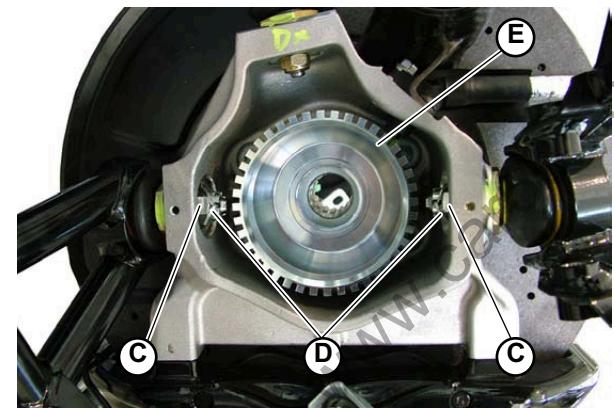


Fig.2

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B) Bearing assembly

1. Using a press, assemble the bearing (A-Fig.3) on the hub (B-Fig.3).

STOP It is absolutely forbidden to reassemble the removed bearing; always use a new bearing.

2. Position the hub carrier (C-Fig.4) and secure to the bearing using the 4 screws (D-Fig.4).
3. Position the phonic wheel (E-Fig.5) inside the hub carrier.

- Assemble the springs (041105).
- Secure the shock absorber (041305).
- Secure the axle shaft (040105).
- Assemble the brake disk (061505).
- Assemble the brake caliper (060705).
- Assemble the front wheel (060105).



The car must undergo a self-levelling test before returning to road use (001100).

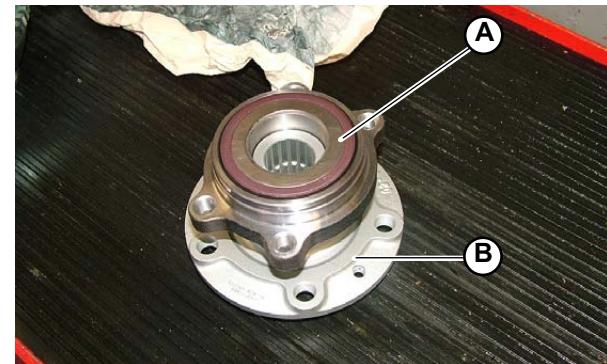


Fig.3

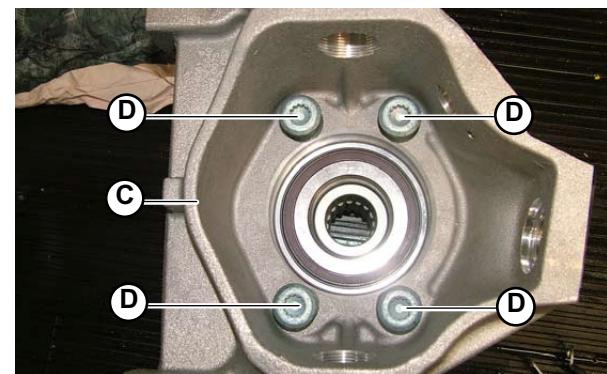


Fig.4



Fig.5