

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



### Disassemble the rear propeller shaft

#### Preliminary operations

- Remove the car engine (010003).
- Disassemble the gearbox (030103).

#### Disassemble the shaft

1. Open the gearbox housing.
2. Remove the snap ring positioned between the engine housing and the bearing.
3. Remove the rear propeller shaft (A-Fig.1) using an extractor.



Fig.1