

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



Disassembling the rear anti-roll bar

Preliminary operations

- Lift the vehicle on the car lift (000000).
- Remove both rear wheels (060103).

Disassembling the anti-roll bar

1. Remove the two mounting bolts (A-Fig.1).
2. Remove the bolt (B-Fig.1) and disassemble the connecting rod.



Repeat the two steps above on both sides (right/left) of the anti-roll bar.

3. Remove the anti-roll bar.

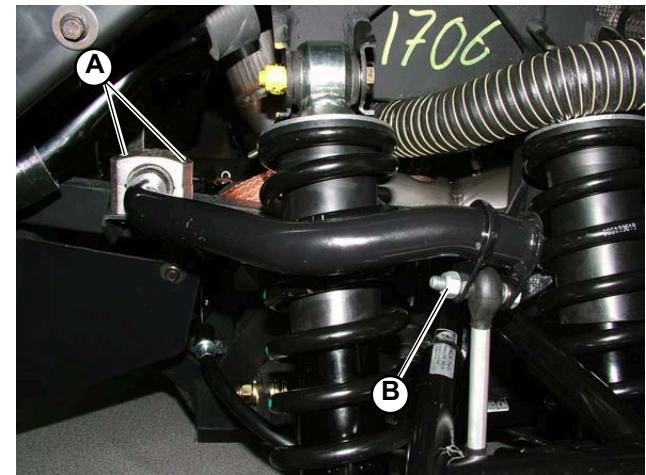


Fig.1

www.car60.com