



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to disassemble:

- A) Rear central grid
- B) Rear side grids
- C) Engine compartment side panels made of carbon.
- D) Petrol flap
- E) Fender cover
- F) Engine safety cover

www.car60.com



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



A) Disassembling the rear central grid

1. Unscrew the 6 screws (A-Fig.1) securing the rear central grid (B-Fig.1) to the body.
2. Disconnect the 2 number plate lights by unscrewing the 4 screws securing them to the grid (2 screws for each light).
3. Remove the rear central grid.

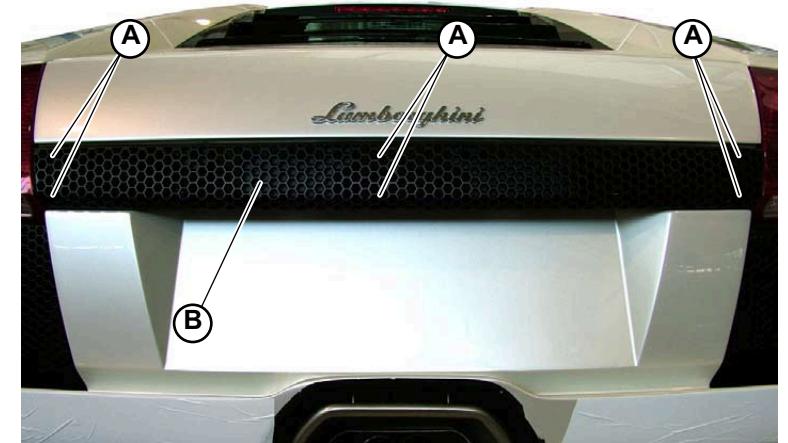


Fig.1



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B) Disassembling the rear side grids

1. Unscrew the 4 screws (A-Fig.2) securing the rear side grids (B-Fig.2) to the body.
2. Remove the 2 grids.



The car is equipped with 2 perfectly identical grids on the rear bumper (one on the right and one on the left). The disassembly sequence is the same for both.

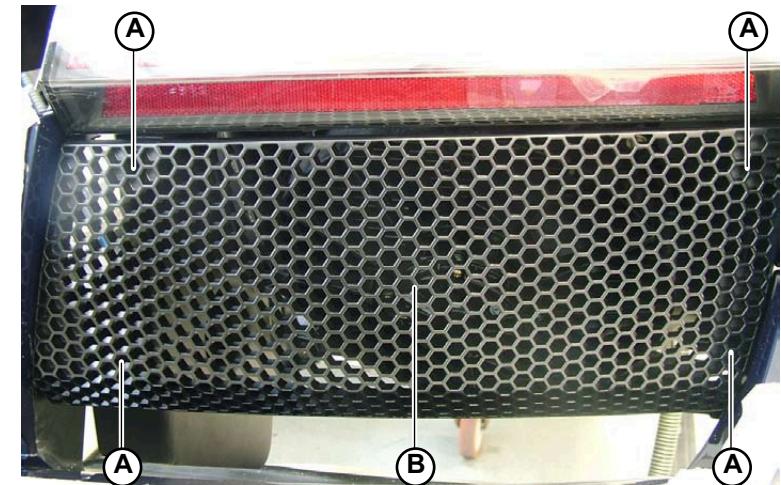


Fig.2



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



C) Disassembling the engine compartment side panels made of carbon.

Preliminary operations (valid for both the left and right side panels)

- Disassemble the 2 rear hood support pistons (082703).
- Remove the silencer safety grid (025103).

Left side panel

1. Unscrew the 4 top screws (A-Fig.3).
2. Detach the knob (B-Fig.3) by unscrewing the central screw (C-Fig.3).
3. Extract the panel by removing from the lower locking clips.

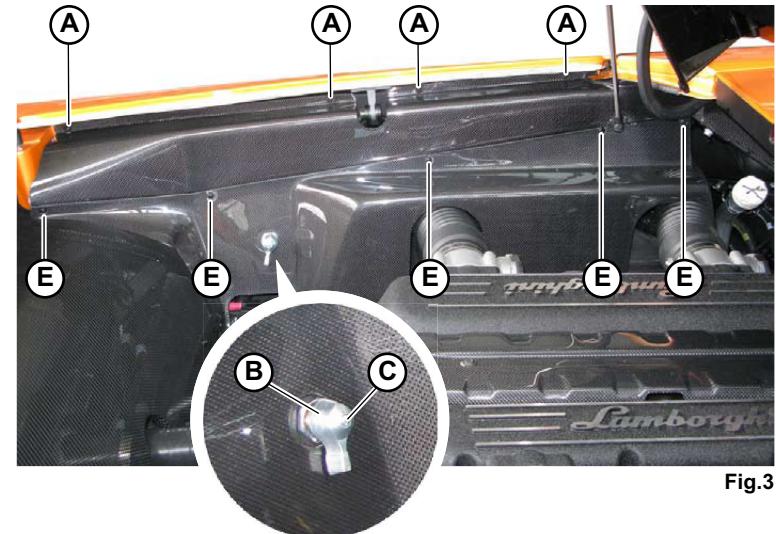


Fig.3

Right side panel

1. Unscrew the 4 top screws (D-Fig.4).
2. Extract the panel by removing from the lower locking clips.



Each of the 2 side panels is divided into two parts: an upper part and a lower part connected to each other with 4 screws (E-Fig.3/4).

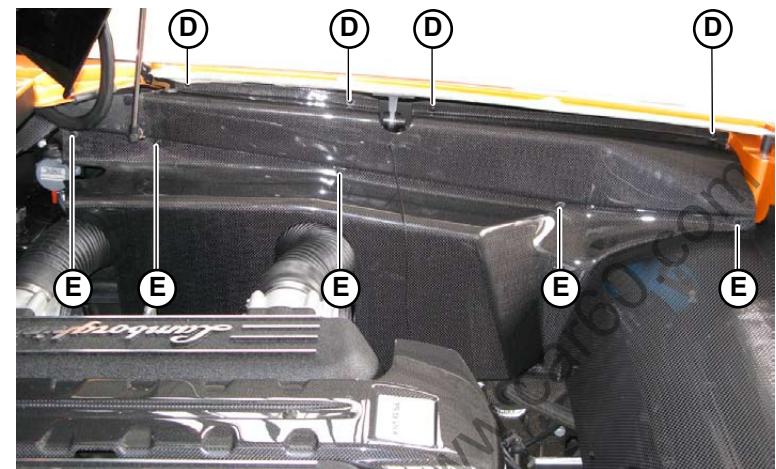


Fig.4

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



D) Disassembling the petrol filler, flap and petrol filler locking motor.

Preliminary operations

- Remove the silencer safety grid (025103).
- Remove the right side panel in the engine compartment (Point C).
- Remove the intake air filter assembly (013303).

Petrol filler disassembly

1. Disconnect the pipe connecting the fuel tank to the filler (A-Fig.5).
2. To disassemble the flap, unscrew the 2 screws (B-Fig.6).
3. To disassemble the actuator, unscrew the 2 screws (C-Fig.5).
4. To disassemble the filler, unscrew the 4 screws (D-Fig.5) and remove the gasket (E-Fig.5).

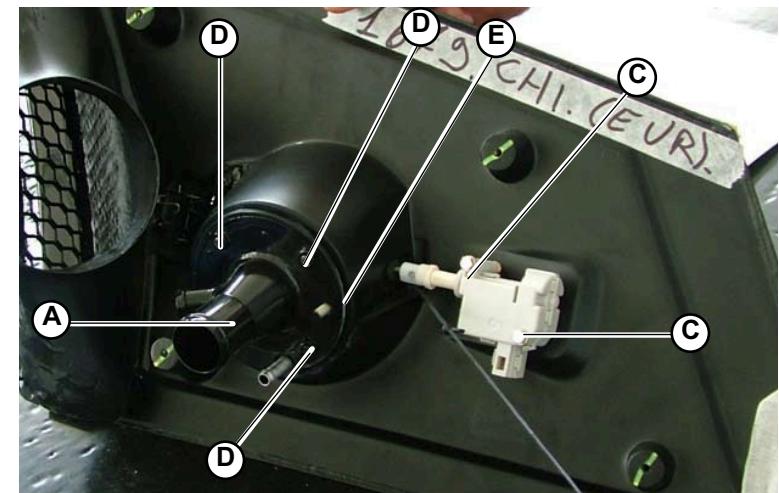


Fig.5

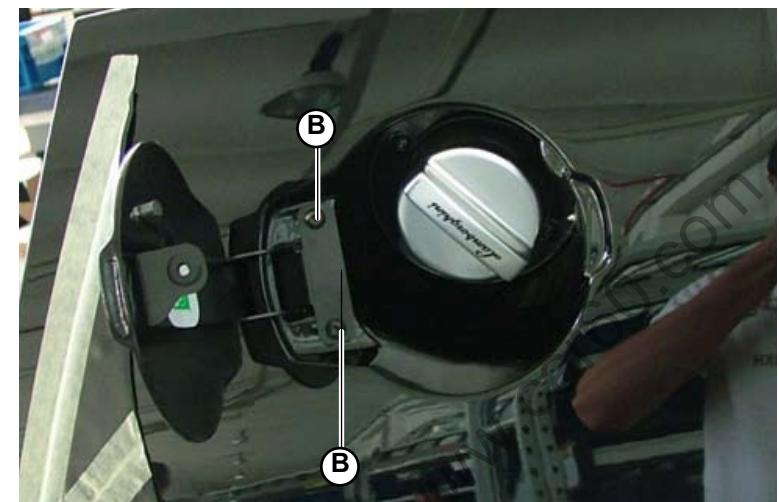


Fig.6

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



E) Disassembling the fender cover

Preliminary operations

- Remove the silencer safety grid (025103).
- Remove the right side panel in the engine compartment (**Point C**).
- Remove the intake air filter assembly (013303).

Cover disassembly

1. Disconnect the pipe connecting the fuel tank to the filler (**A-Fig.7**) (for right fender cover only).
2. Disassemble the cover by unscrewing the 4 nuts (**B-Fig.7**) securing the cover to the body.
3. Remove the cover (**C-Fig.7**).

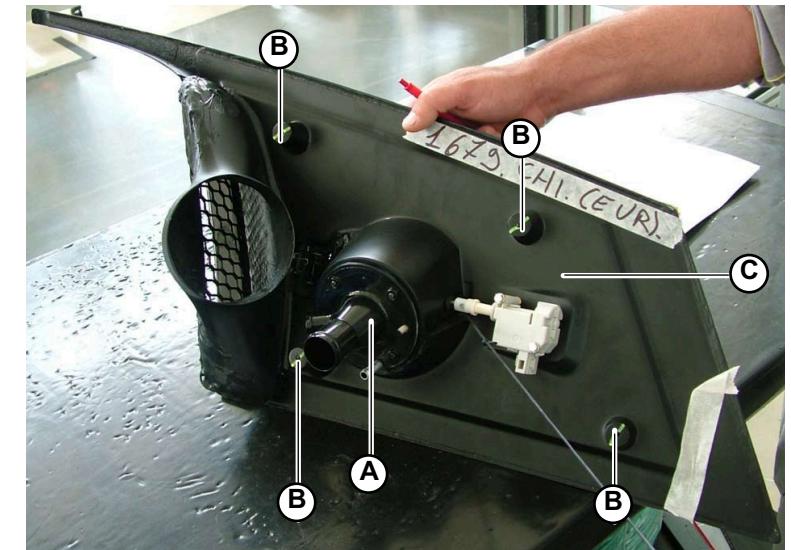


Fig.7



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



F) Disassembling the engine safety cover

1. Unscrew the 4 screws (A-Fig.8) securing the rear engine safety cover (B-Fig.8).
2. Remove the cover.

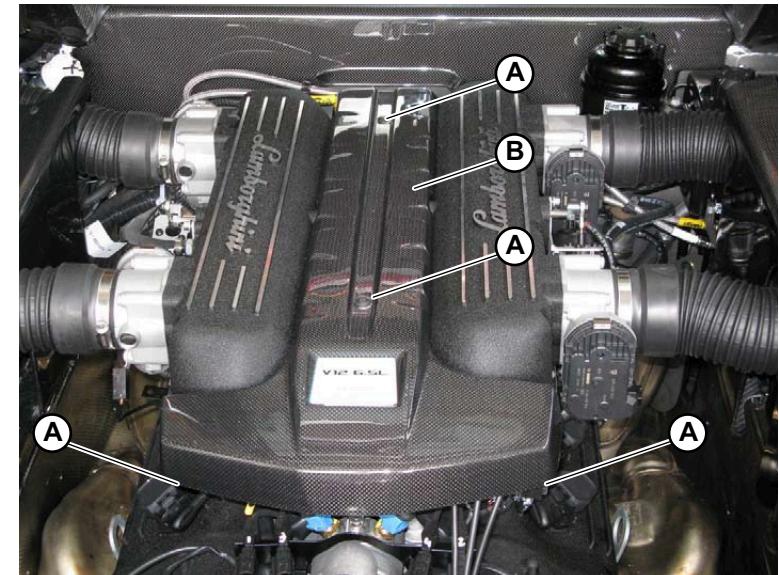


Fig.8